

Fenderwell

Front Inner Fender Replacement

Special Tools Required

Push pin puller 07AAC-SJAA100

NOTE:


- Use the special tool to remove the clips.
- Take care not to scratch the body.

1. Remove the front inner fender (A).

- 1 Remove the screws (B) and clips (C) from the rear of the front wheel arch, then remove the splash guard (D) (Canada models).
- 2 From under the front bumper (E), remove the bolts (F) securing the front bumper, splash shield (G), and the front inner fender. Remove the clip (H) securing the front bumper and the front inner fender.
- 3 From the wheel arch, remove the clips (I, J) and screw (K) securing the front inner fender (and splash shield) to the body.
- 4 Release the hook (L) of the splash shield, then remove the front inner fender.

Fastener Locations

B ► : Screw, 2 C ► : Clip, 2 F ► : Bolt, 2 H, J ► : Clip, 2 I ► : Clip, 9 K ► : Screw, 1

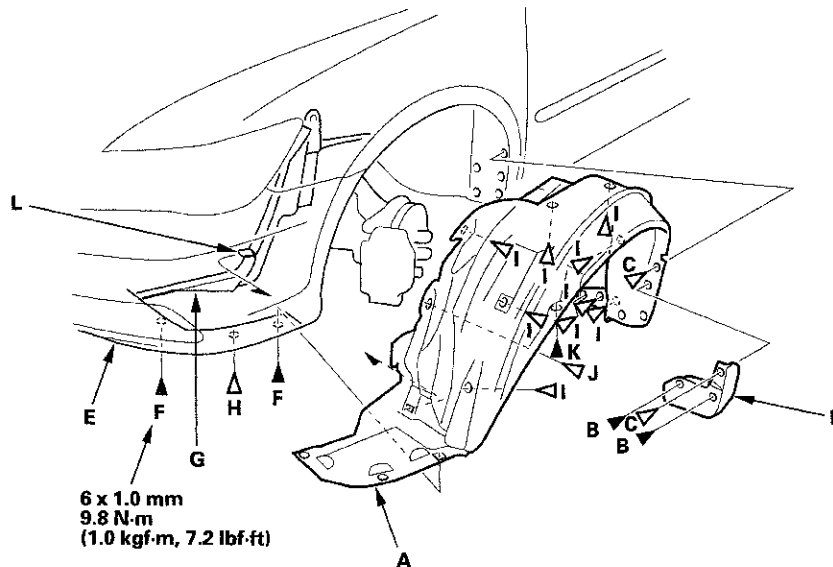

2. Install the inner fender in the reverse order of removal, and note these items:

- If the clips are damaged or stress-whitened, replace them with new ones.
- Push the clips into place securely.



Splash Shield Replacement

Special Tools Required

Push pin puller 07AAC-SJAA100

NOTE:


 
- Use the special tool to remove the clips.
- Take care not to scratch the body.

1. Remove the splash shield (A).

- 1 Remove the clips (B, C) that secure the front inner fender (D) and the splash shield to the body.
- 2 From under the front bumper (E), remove the bolts (F) (with engine undercover).
- 3 From under the body, remove the bolts (G) and the clips (H, I).
- 4 Release the hooks (J) of the splash shield, then pull the splash shield out.

Fastener Locations

B ▷ : Clip, 2 C, I ▷ : Clip, 4 F, G ▷ : Bolt, 5 H ▷ : Clip, 3

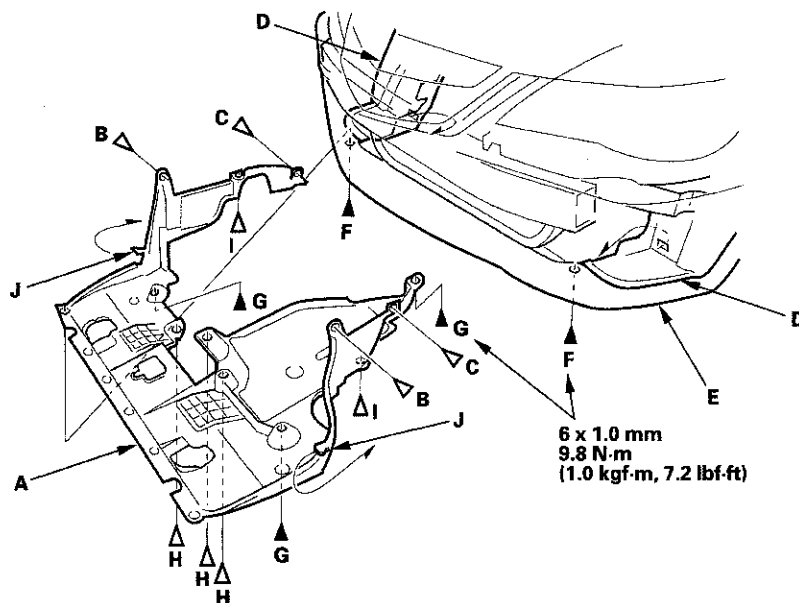

2. Install the splash shield in the reverse order of removal, and note these items:

- If the clips are damaged or stress-whitened, replace them with new ones.
- Push the clips into place securely.


 
Fenderwell

Front Fender Fairing Replacement

1. Remove the front inner fender as needed (see page 20-176).
2. Open the door, and remove the clips that secure the front fender fairing (A). Remove the upper clip (B) from outside the door, and the lower clip (C) from inside the door.

Fastener Locations


B ▷ : Clip, 1 C ▷ : Clip, 1

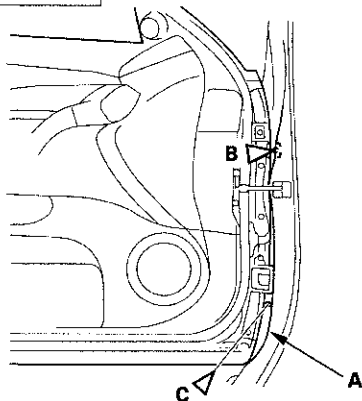

3. Release the clips (A, B) from the wheel arch.

Fastener Locations


A ▷ : Clip, 1 B ▷ : Clip, 1

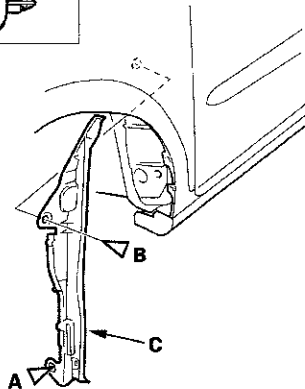

4. Remove the front fender fairing (C).

5. Install the fender fairing in the reverse order of removal, and note these items:

- If the clips are damaged or stress-whitened, replace them with new ones.
- Before installing the clips in the door opening area, install the front fender fairing (A) on the front fender (B) as shown.
- Push the clips into place securely.

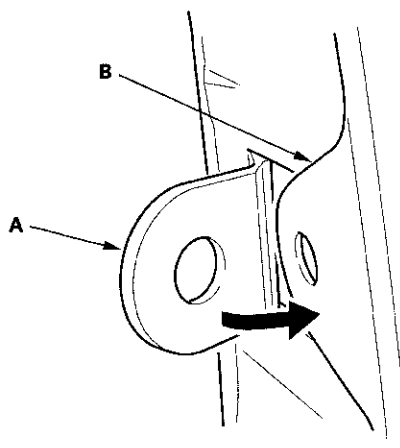



Rear Inner Fender Replacement

Special Tools Required

Push pin puller 07AAC-SJAA100

NOTE:


 
- Take care not to scratch the body.
- Use the special tool to remove the clips.

1. Remove the rear suspension damper unit (see page 18-38).
2. Remove the rear inner fender (A).
 - 1 Remove the screws (B) and the clip (C) from the rear bumper (D) and from the rear inner fender.
 - 2 Remove the clips (E, F).
 - 3 On the front of the rear wheel arch, remove the clips (G) securing the side sill (H) and rear inner fender.
 - 4 Pull out the rear inner fender.

NOTE: Left side shown, right side is similar.

Fastener Locations

B ► : Screw, 3 C ► : Clip, 1 E ► : Clip, 7 F ► : Clip, 1 G ► : Clip, 2

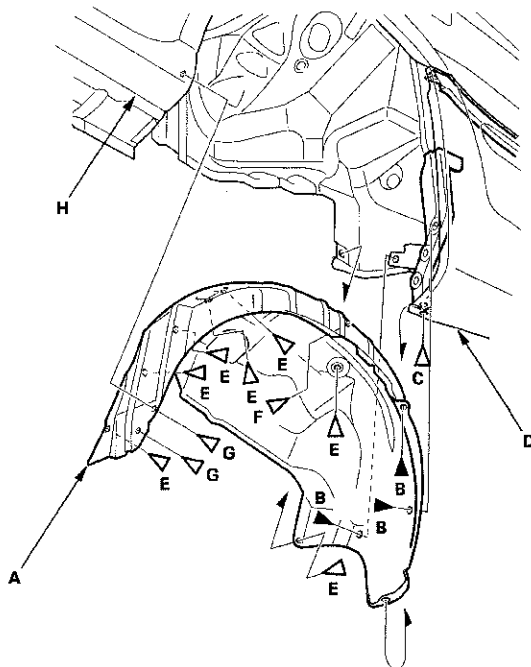

3. Install the inner fender in the reverse order of removal, and note these items:

- If the clips are damaged or stress-whitened, replace them with new ones.
- Push the clips into place securely.


Fenderwell

Rear Air Outlet Replacement


1. Remove the rear bumper (see page 20-153).
2. Remove the clips and the rear bumper side spacer (A).

Fastener Locations

▷ : Clip, 2

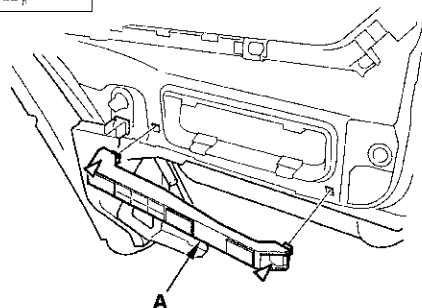


3. Detach the hooks (A), then remove the rear air outlet (B). Take care not to scratch the body.

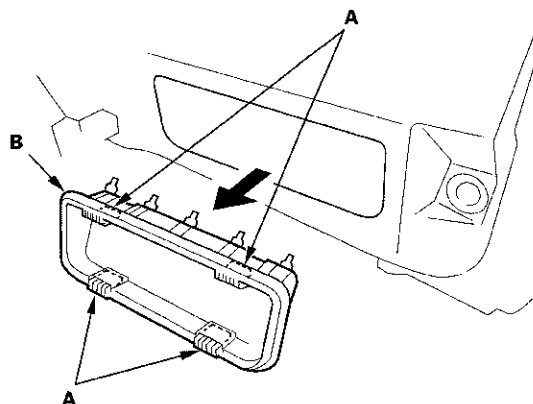

4. Install the air outlet by pushing on the hook portions until the hooks snap into place.

Rear Wheel Arch Protector Replacement

1. Remove the rear wheel arch protector (A) by pulling it away from the wheel arch.

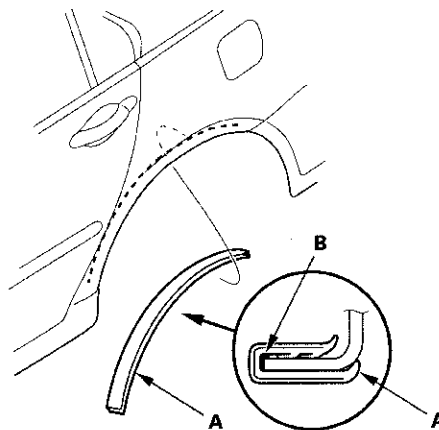

2. Apply clear weatherstrip sealant (B) into the channel of the wheel arch protector all the way around.
3. To reinstall the rear wheel arch protector, align it with the rear of the wheel arch, and then push it into place securely.



Side Undercarriage Cover Replacement

Special Tools Required

Push pin puller 07AAC-SJAA100


NOTE: Use the special tool to remove the clips.

1. Remove the side undercarriage covers (A).

- 1 Remove the clips (B) and the bolts (C).
- 2 Remove the bolts (D) securing the side undercarriage cover and the fuel tank cover (E).

Fastener Locations

B ▷ : Clip, 5 C ▷ : Bolt, 3 D ▷ : Bolt, 2

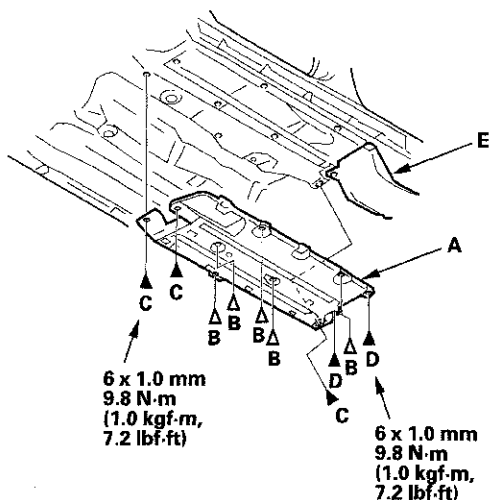

2. Install the cover in the reverse order of removal, and note these items:

- If the clips are damaged or stress-whitened, replace them with new ones.
- Push the clips into place securely.

Rear Undercarriage Cover Replacement

Special Tools Required


 
Push pin puller 07AAC-SJAA100

NOTE: Use the special tool to remove the clips.

1. Remove the clips (A) and the bolts (B), then remove the rear undercarriage cover (C). Take care not to scratch the rear bumper.

Fastener Locations

A ▷ : Clip, 3 B ▷ : Bolt, 2

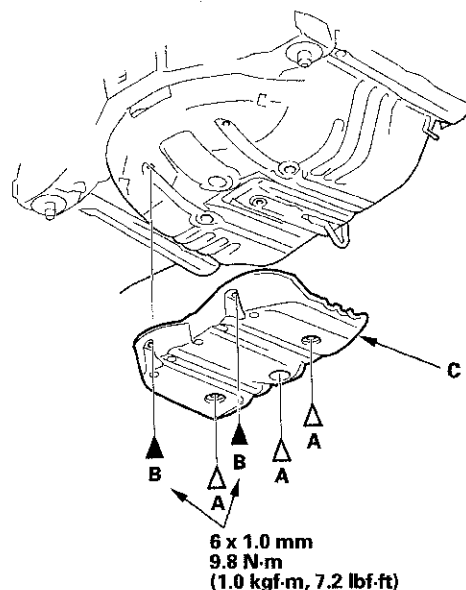

2. Install the cover in the reverse order of removal, and note these items:

- If the clips are damaged or stress-whitened, replace them with new ones.
- Push the clips into place securely.