

2 BODY DIMENSIONS

BODY DIMENSIONS AND MEASUREMENT METHODS		2-3
<3 Door>		
TYPE A (PROJECTED DIMENSIONS)		2-4
UNDER BODY		2-4
TYPE B (ACTUAL-MEASUREMENT DIMENSIONS)		2-6
UNDER BODY		2-6
FRONT BODY		2-8
SIDE BODY		2-10
REAR BODY		2-11
INTERIOR		2-12
<5 Door>		
TYPE A (PROJECTED DIMENSIONS)		2-14
UNDER BODY		2-14
TYPE B (ACTUAL-MEASUREMENT DIMENSIONS)		2-16
UNDER BODY		2-16
FRONT BODY		2-18
SIDE BODY		2-20
REAR BODY		2-22
INTERIOR		2-23

BODY DIMENSIONS AND MEASUREMENT METHODS

STANDARD DIMENSIONS INDICATIONS AND MEASUREMENT METHODS

(1) Type A (projected dimensions)
Indicates the dimension when a measurement location is projected onto a plane. The difference in height of the measurement points should be taken into consideration when measuring.

(2) Type B (actual-measurement dimensions)
Indicates the actual distance between the measurement points.
Measure using a tracking gauge or a measuring tape, etc.

NOTES

- Make the lengths of the tracking gauge probes the same ($A=A'$).
- Do not bend or twist the measuring tape.

(3) Insert the tracking gauge probes securely into the measurement holes.






(4) When the standard dimensions in the illustration are enclosed by $\square$, this indicates that the symmetrical left and right positions have the same dimensions.

(5) When using a notch for dimension measurement, make the measuring point at the centre of the notch.

(6) When measuring the suspension mounting arm or the link mounting position, use the suspension mounting bolt as the measuring point.

BODY CENTRE POINT

The body centre points are shown for the purpose of checking the position of the left and right symmetry locations.

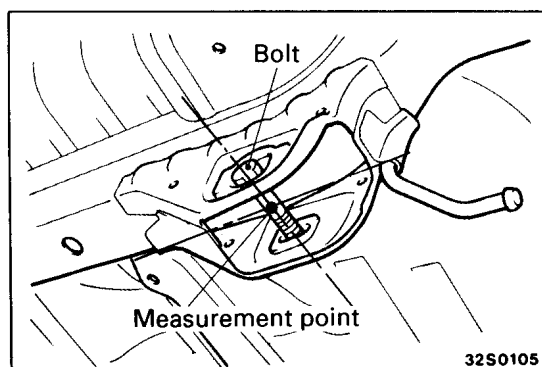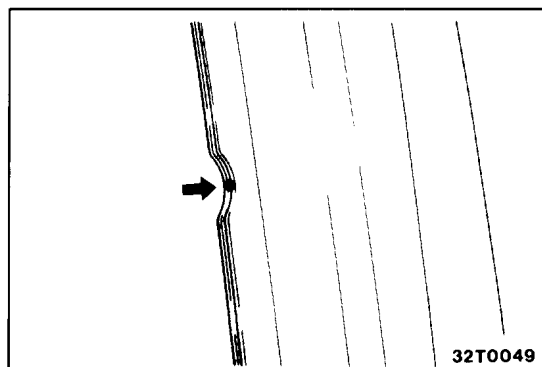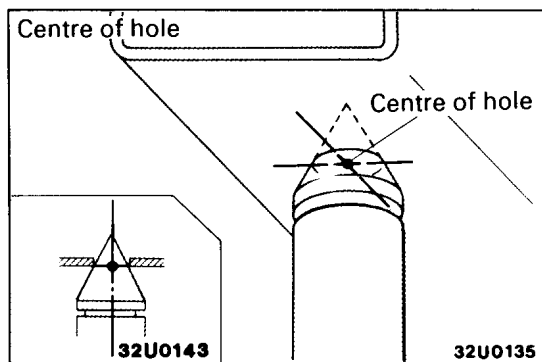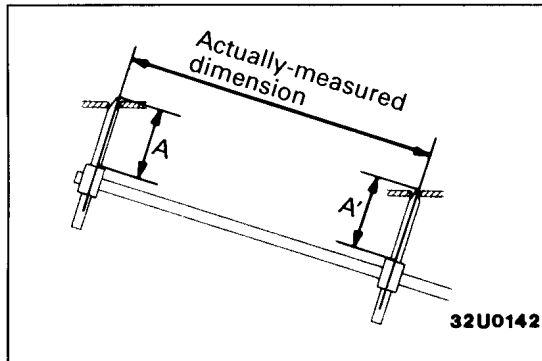
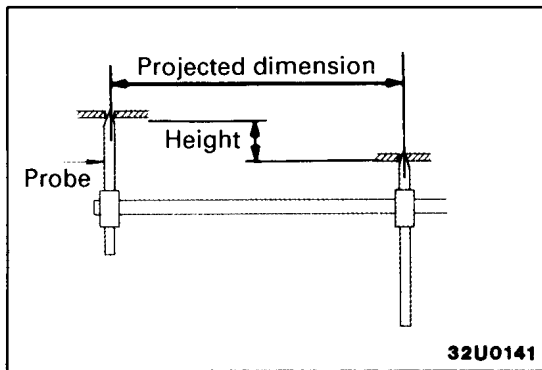


<3 Door>


TYPE A (PROJECTED DIMENSIONS)

mm

UNDER BODY

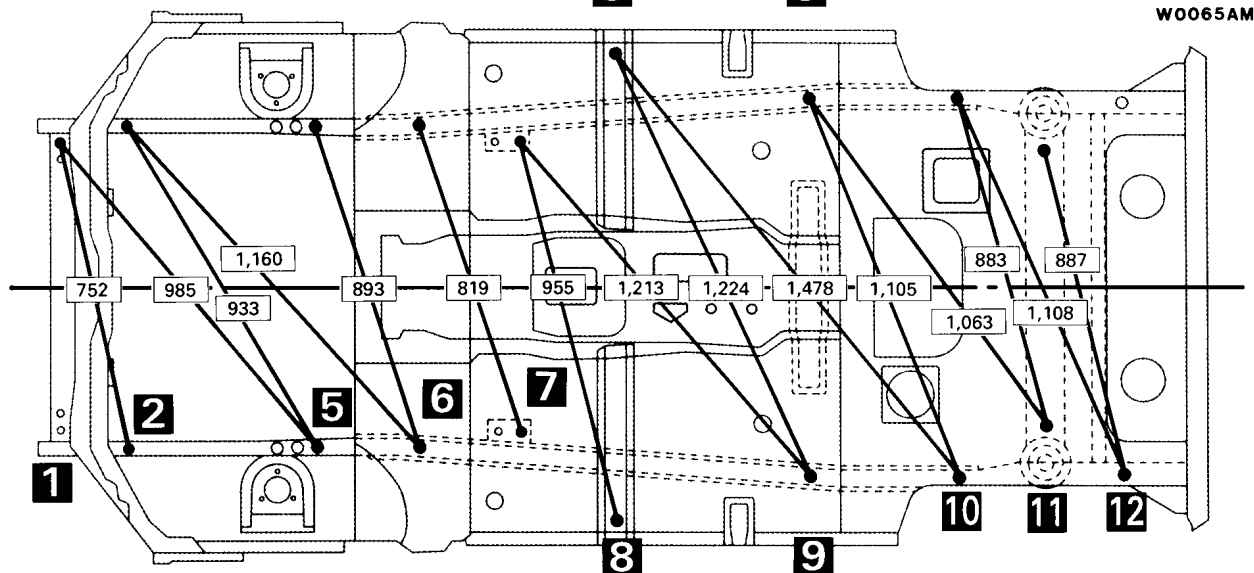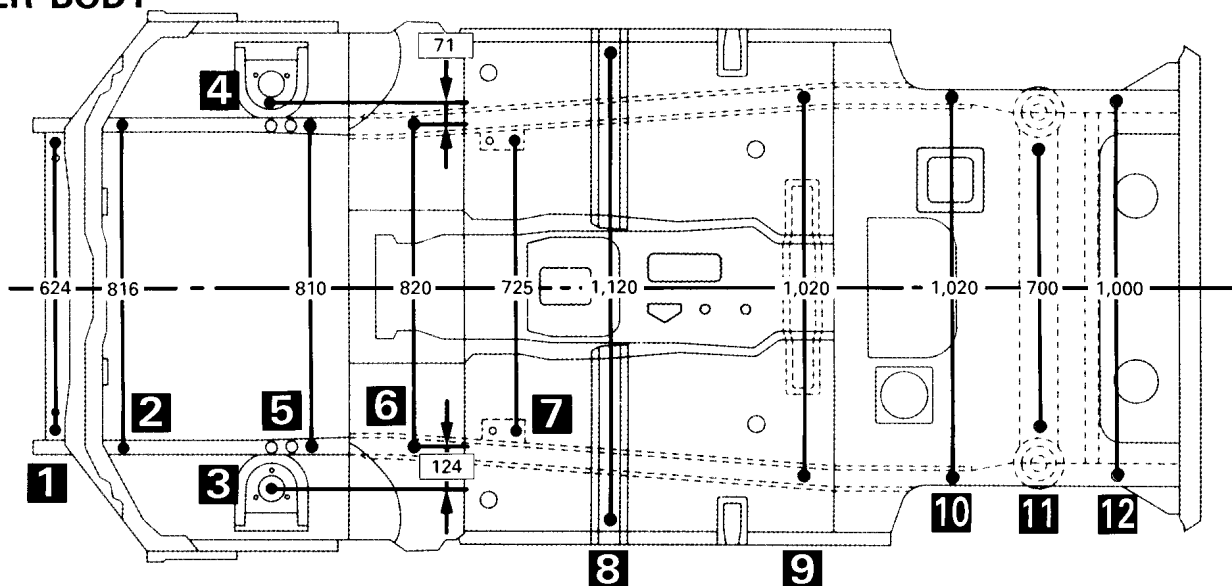

W0065AM









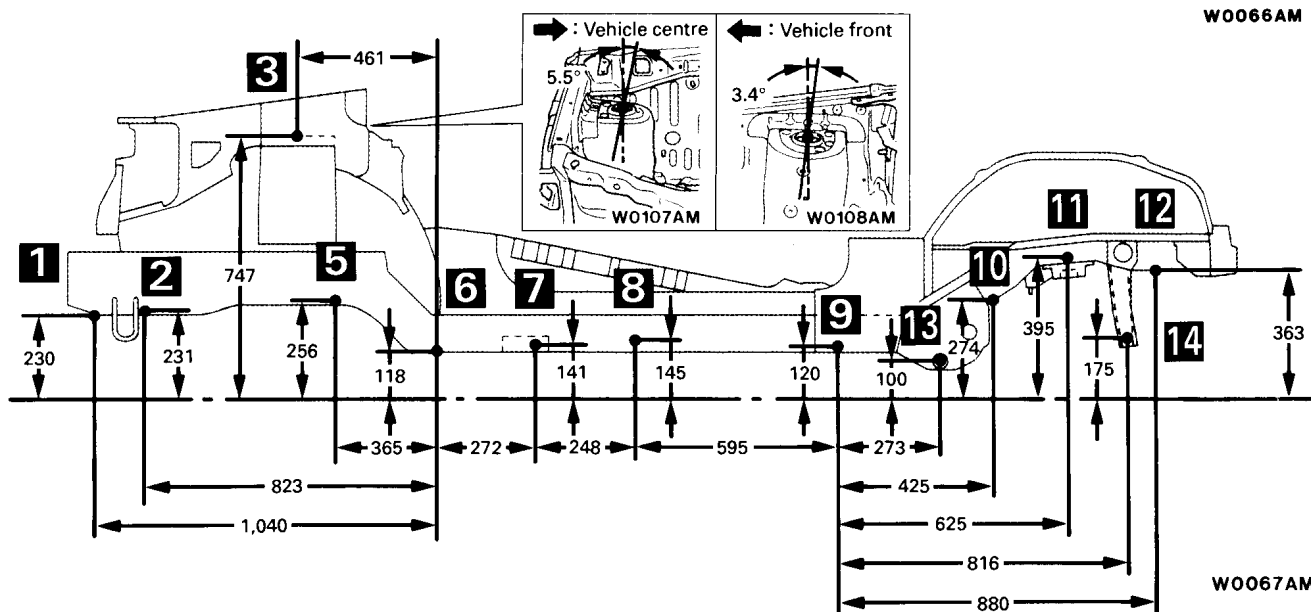


W0066AM

W0067AM

No.	Standard measurement point	Hole shape _ Size mm	No.	Standard measurement point	Hole shape _ Size mm
1	Centre of strut bar bracket mounting hole	○-10	8*	Centre of front floor centre brace drain hole	○-20
2*	Centre of strut bar bracket mounting hole	○- 9	9*	Centre of rear floor sidemember drain hole	○-25
3	Centre of front shock absorber mounting hole	○-77	10	Centre of rear floor sidemember drain hole	○-20
4	Centre of front strut mounting hole	○- 9	11	Centre of rear floor crossmember drain hole	○-20
5*	Centre of differential mount crossmember mounting hole	○-15	12*	Centre of rear floor sidemember drain hole	○-25
6*	Centre of front sidemember drain hole	○-20	13	Lower arm mounting position	—
7	Centre of transmission mount crossmember mounting hole	○-10	14	Lateral rod mounting position	—

NOTE: The * mark indicates the mounting position for the frame centering gauge.

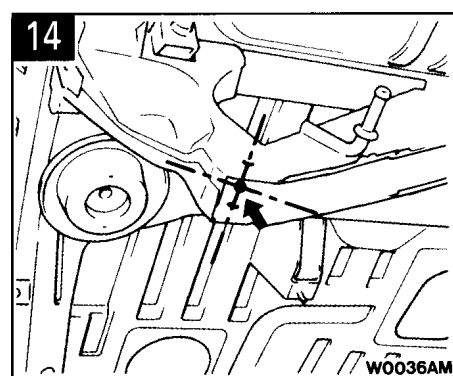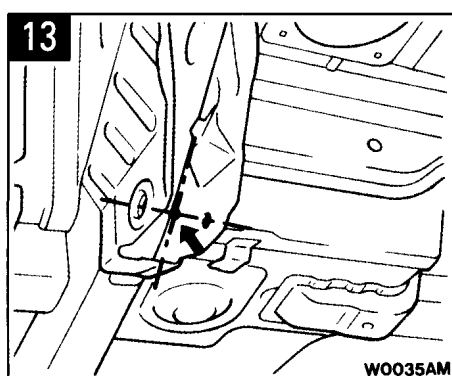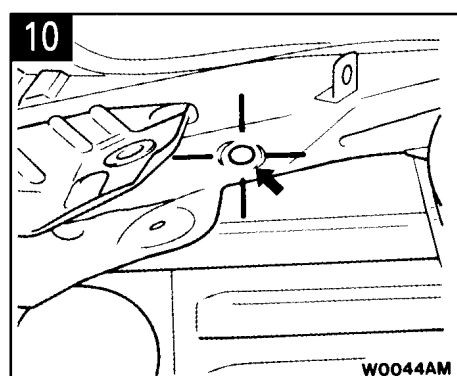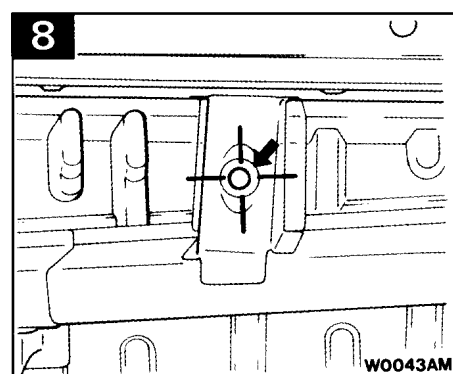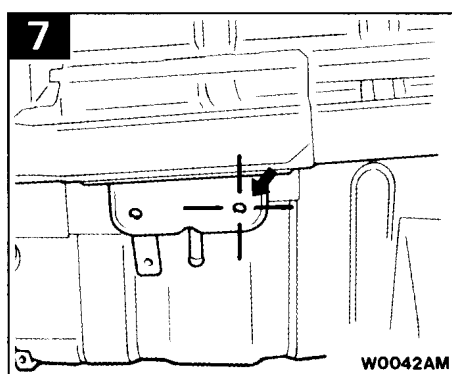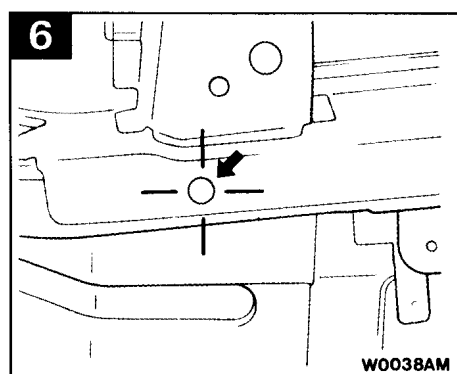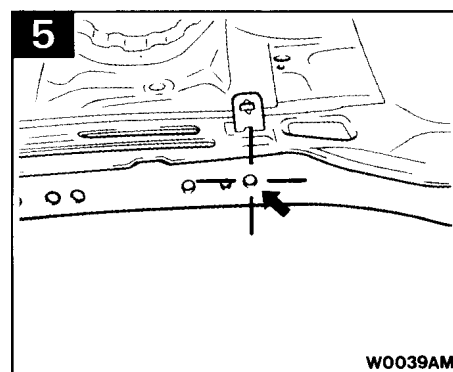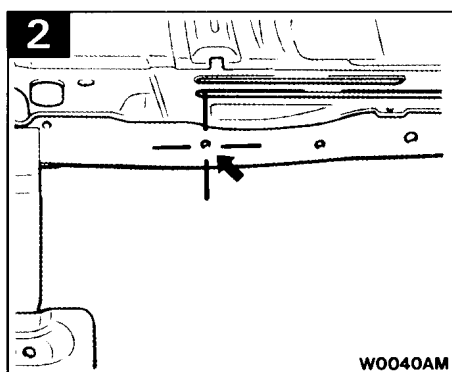
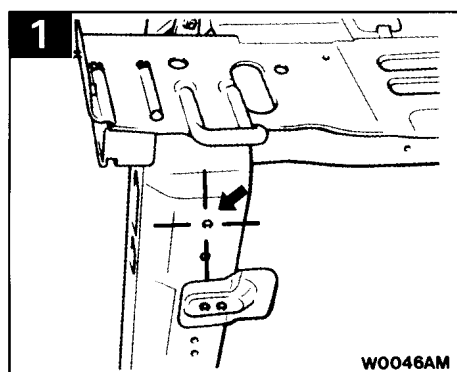


2-6 BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <3 Door>

TYPE B (ACTUAL-MEASUREMENT DIMENSIONS)










mm

UNDER BODY

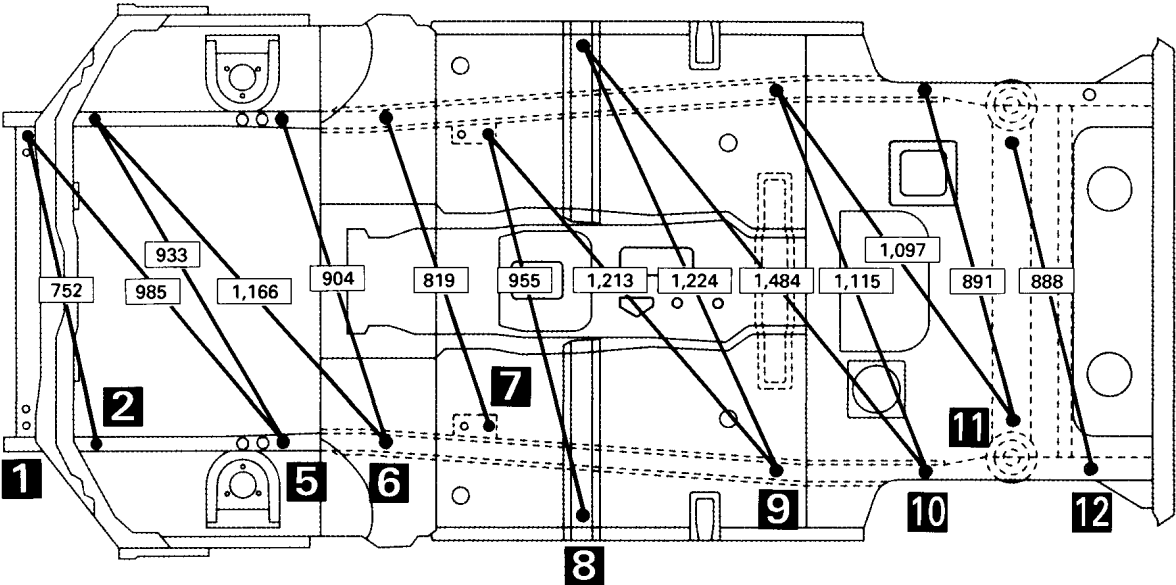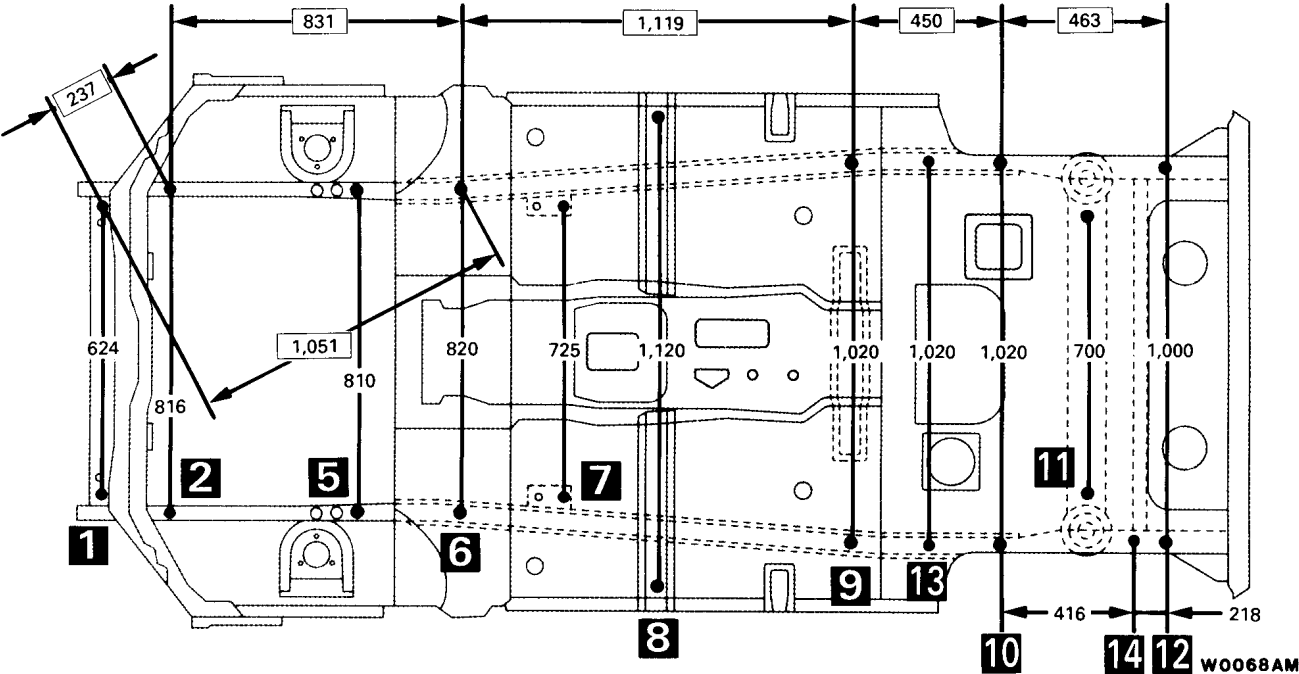

BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <3 Door> 2-7


No.	Standard measurement point	Hole shape Size mm	No.	Standard measurement point	Hole shape Size mm
1	Centre of strut bar bracket mounting hole	○-10	8	Centre of front floor centre brace drain hole	○-20
2	Centre of strut bar bracket mounting hole	○-9	9	Centre of rear floor sidemember drain hole	○-25
3	Centre of front shock absorber mounting hole	○-77	10	Centre of rear floor sidemember drain hole	○-20
4	Centre of front strut mounting hole	○-9	11	Centre of rear floor crossmember drain hole	○-20
5	Centre of differential mount crossmember mounting hole	○-15	12	Centre of rear floor sidemember drain hole	○-25
6	Centre of front sidemember drain hole	○-20	13	Lower arm mounting position	—
7	Centre of transmission mount crossmember mounting hole	○-10	14	Lateral rod mounting position	—

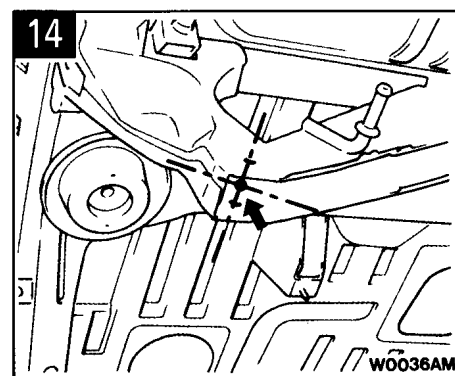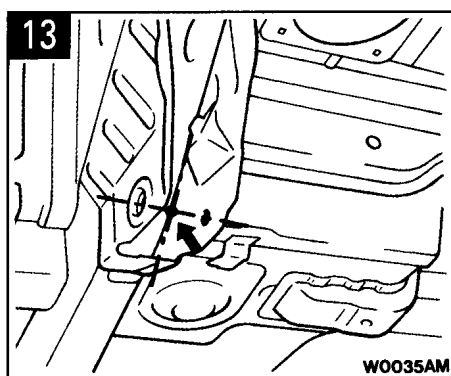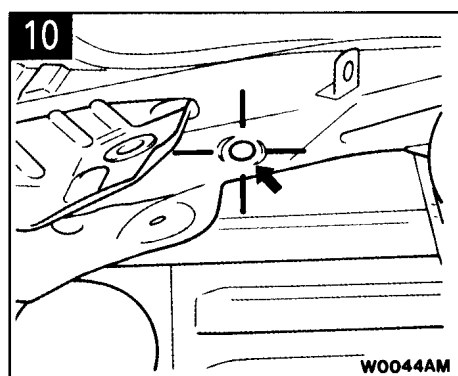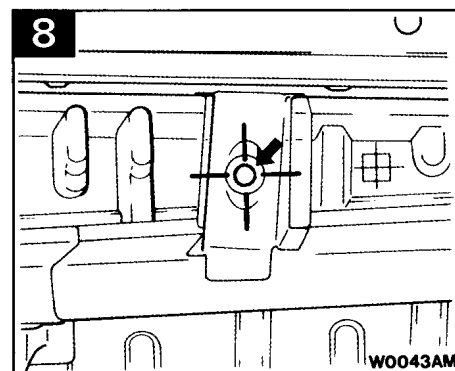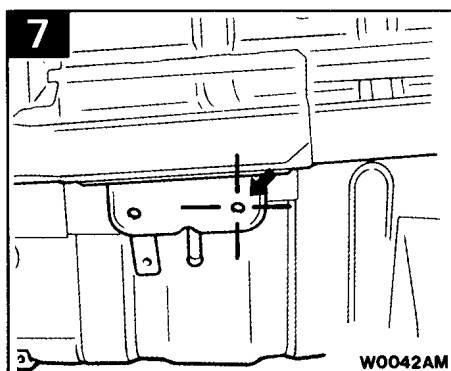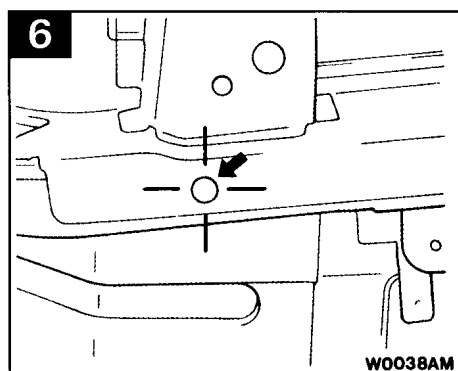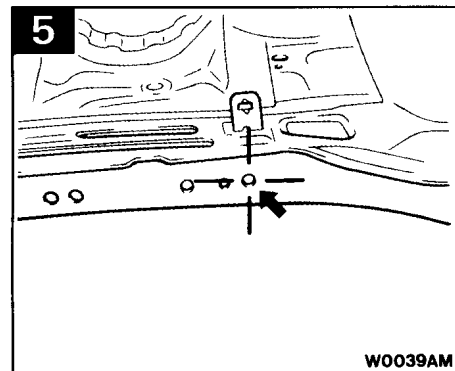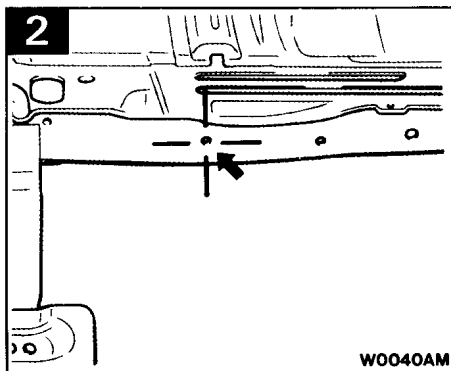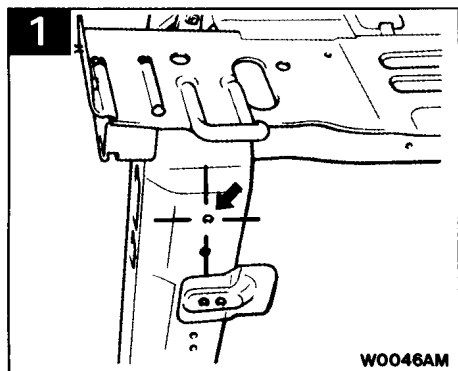


2-8 BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <3 Door>

FRONT BODY

mm

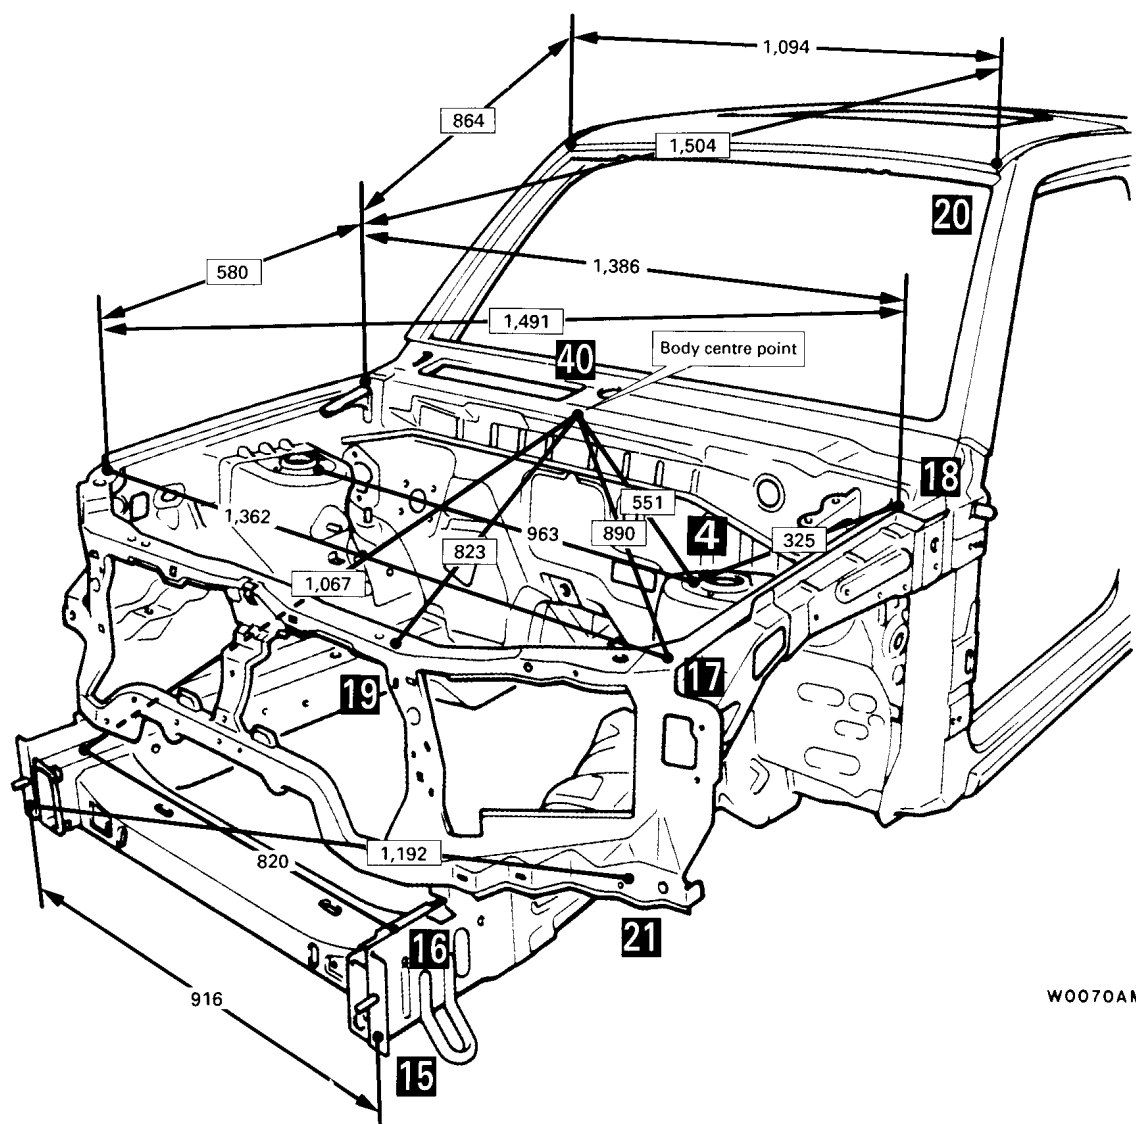










W0070AM

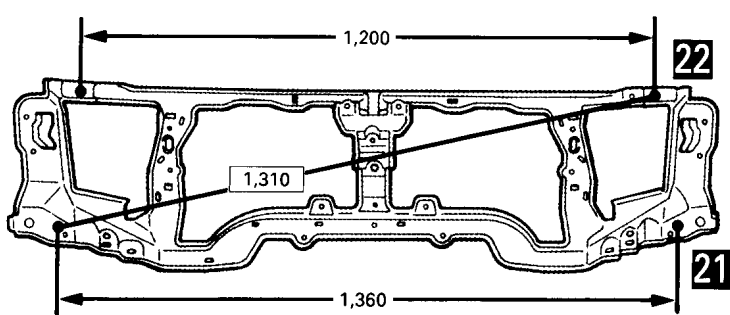

W0071AM

BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <3 Door> 2-9



No.	Standard measurement point	Hole shape – Size mm	No.	Standard measurement point	Hole shape – Size mm
4	Centre of front strut mounting hole	○– 9	19	Centre of radiator upper bracket mounting hole	○– 9
15	Centre of front bumper beam mounting hole	○– 9	20	Corner of roof panel	–
16	Centre of front bumper reinforcement mounting hole	○– 8	21	Centre of grille filler panel mounting hole	○–6.6
17	Centre of front fender mounting hole	○– 6	22	Centre of headlamp mounting hole	○–6.6
18	Centre of front fender mounting hole	○– 6	40	Centre of weatherstrip mounting hole (Body centre point)	○–5.2

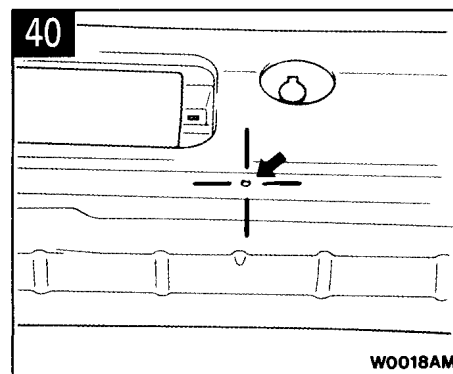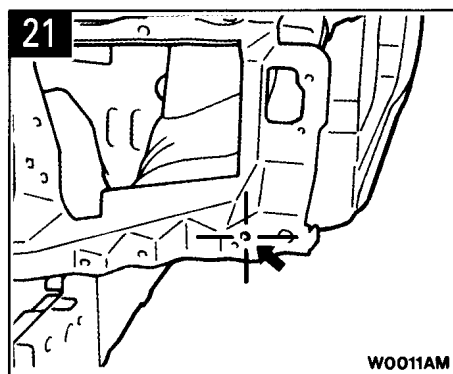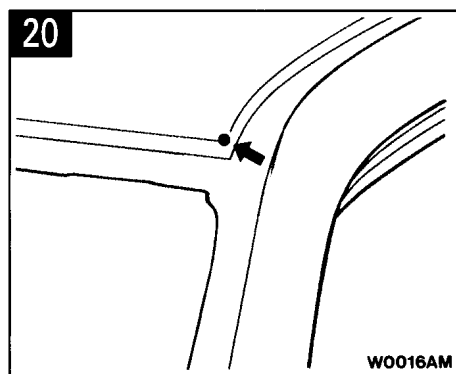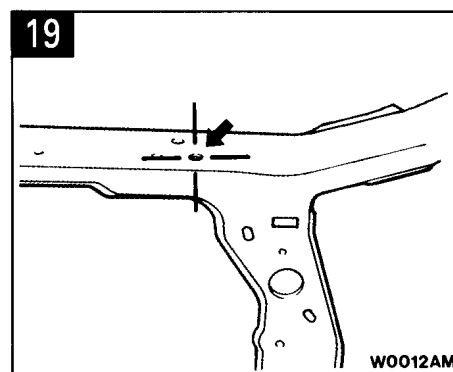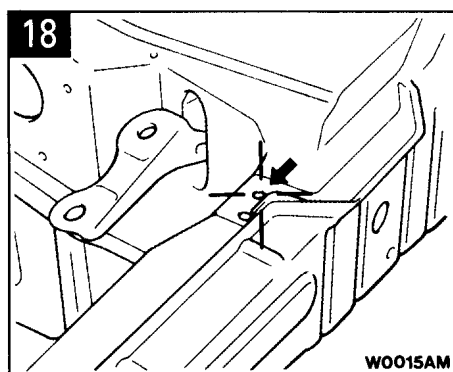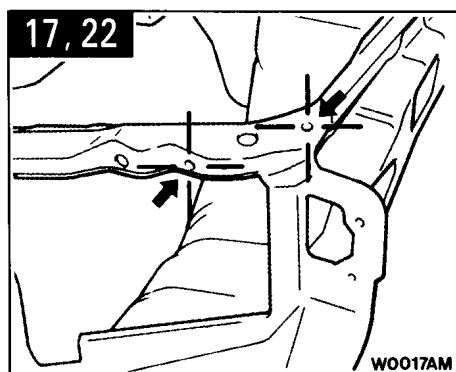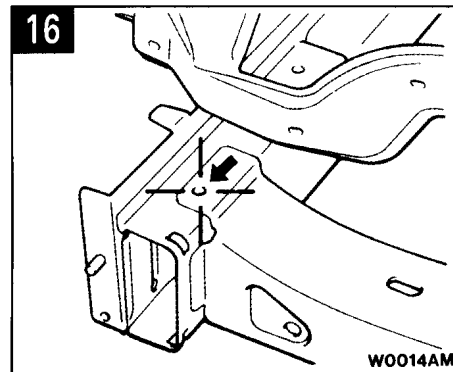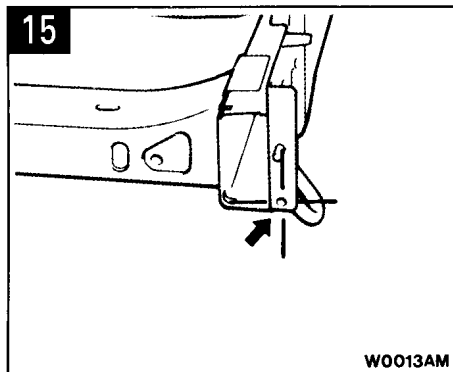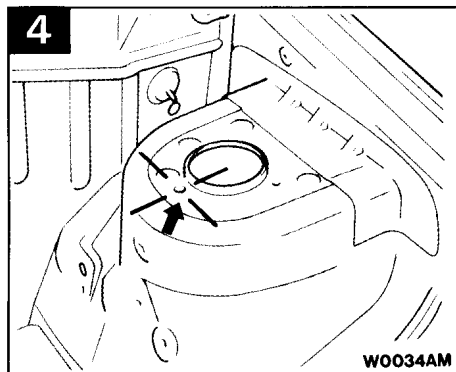




2-10 BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <3 Door>

SIDE BODY

mm

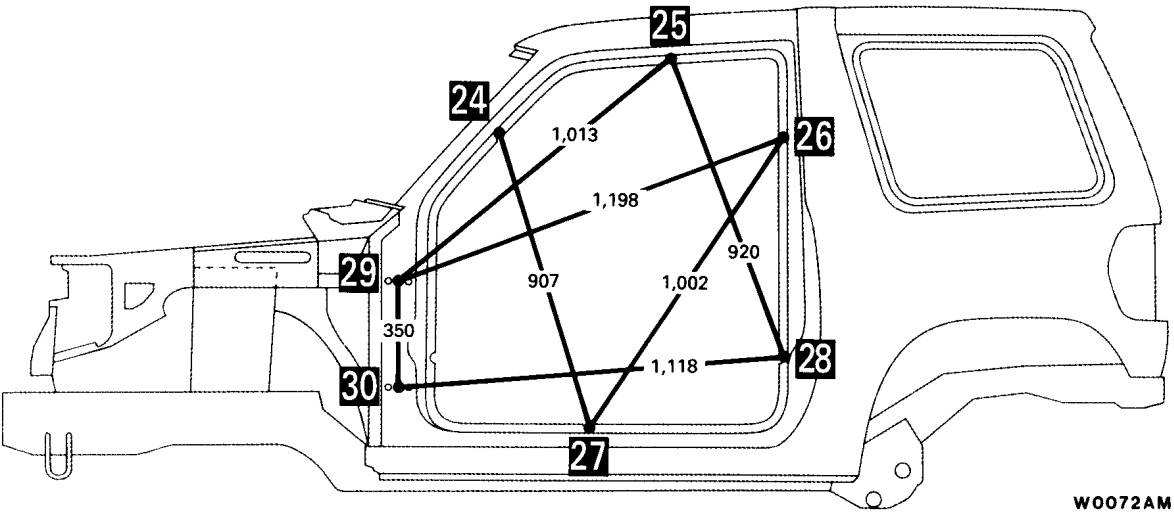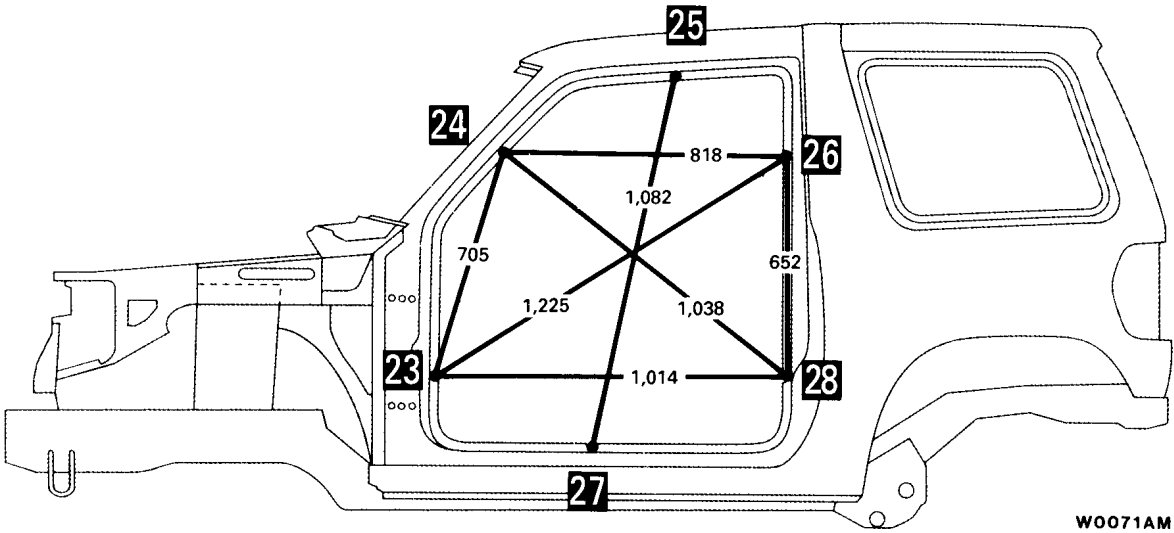


No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
23	Front pillar positioning notch (Lower section)	—	—	27	Side sill positioning notch	—	—
24	Front pillar positioning notch (Upper section)	—	—	28	Centre pillar positioning notch (Lower section)	—	—
25	Side roof rail positioning notch	—	—	29	Centre of front door hinge mounting hole (Upper section)	○	11
26	Centre pillar positioning notch (Upper section)	—	—	30	Centre of front door hinge mounting hole (Lower section)	○	11

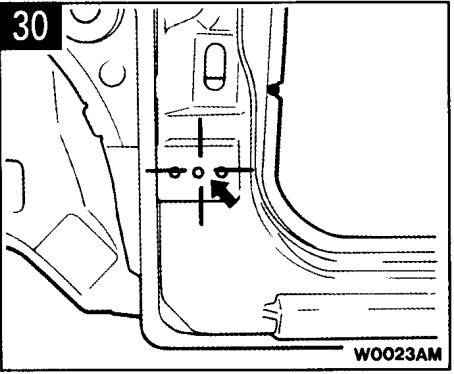
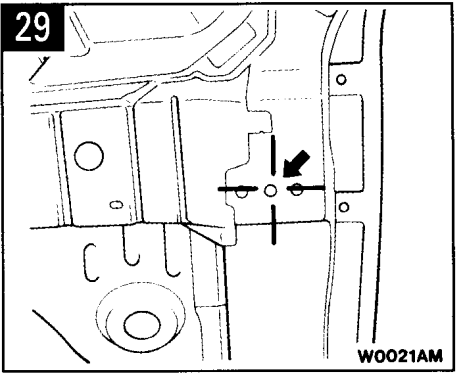
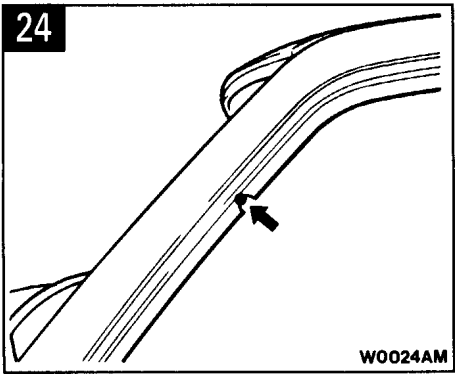


REAR BODY

mm

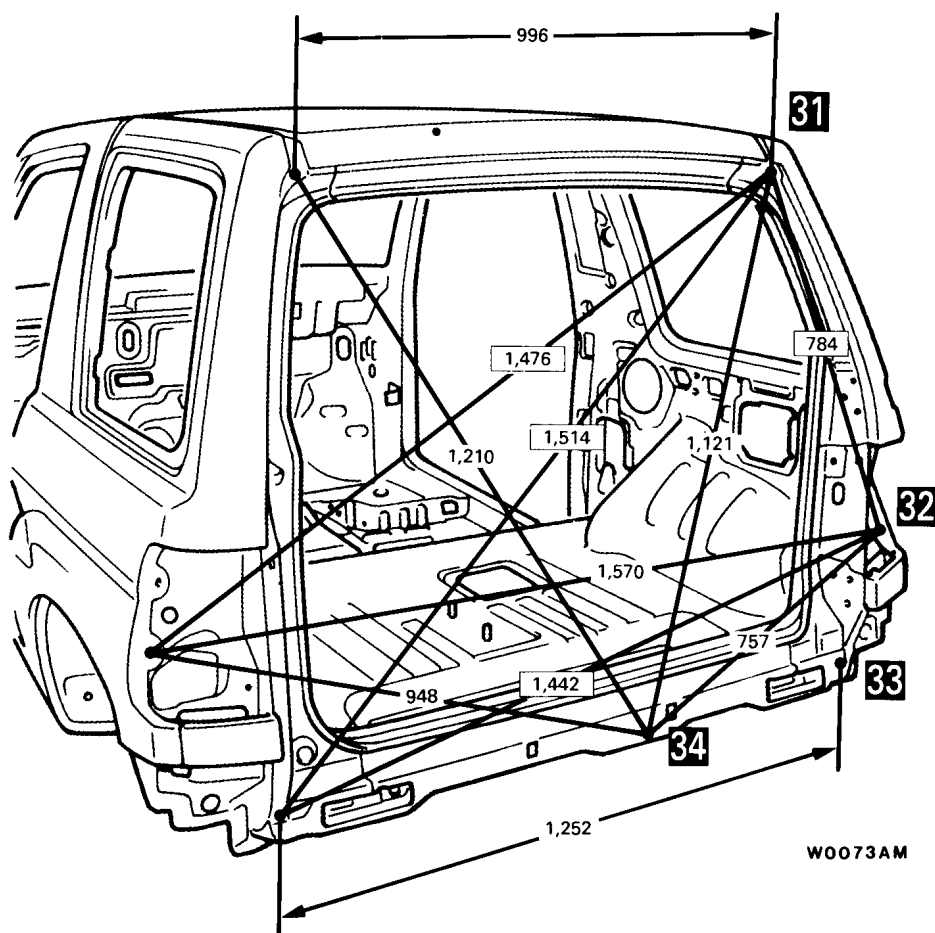


No.	Standard measurement point	Hole shape - Size mm	No.	Standard measurement point	Hole shape - Size mm
31	Centre of roof moulding mounting hole	□-7	33	Centre of rear end corner drain hole	○-7
32	Centre of rear combination lamp mounting hole	○-10	34	Centre of rear bumper bracket mounting hole	○-11

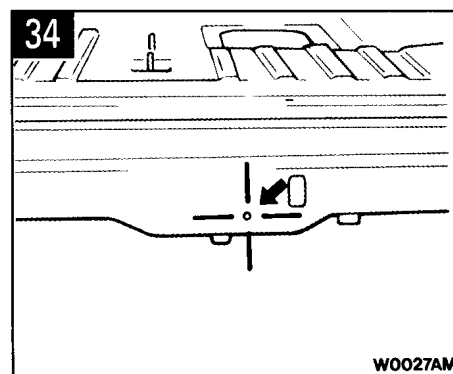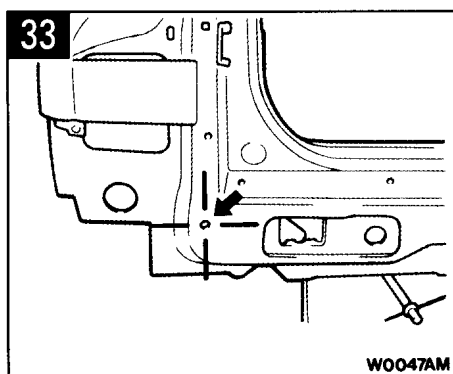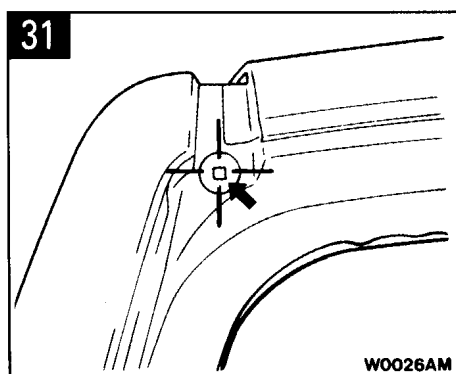







2-12 BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <3 Door>

INTERIOR

mm

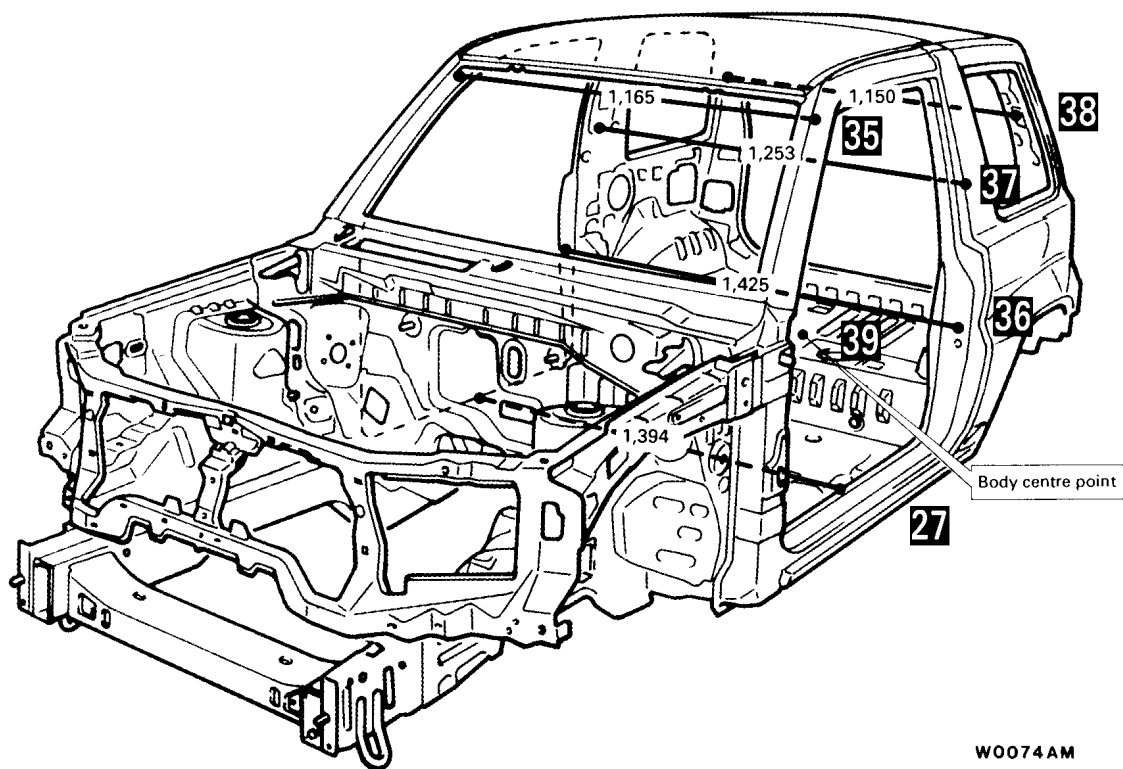

No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
27	Side sill positioning notch	—	—	37	Centre of front seat belt mounting hole	○	13
35	Centre of front assist grip mounting hole	○	8	38	Centre of rear seat belt mounting hole	○	14
36	Centre of front door striker mounting hole	○	8	39	Body centre point	—	—

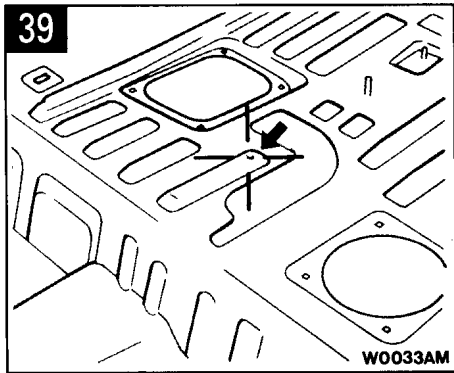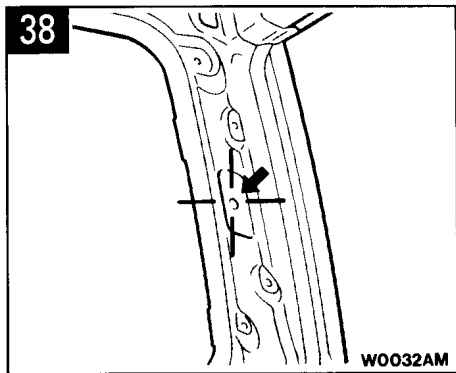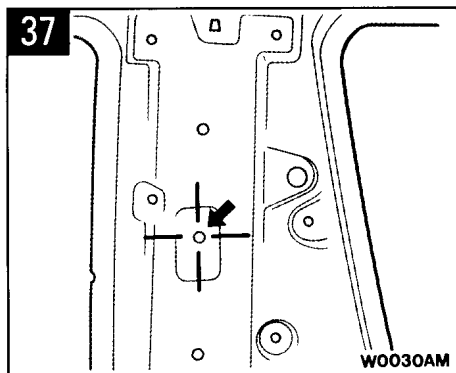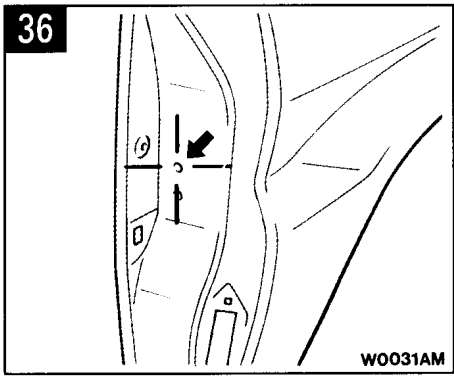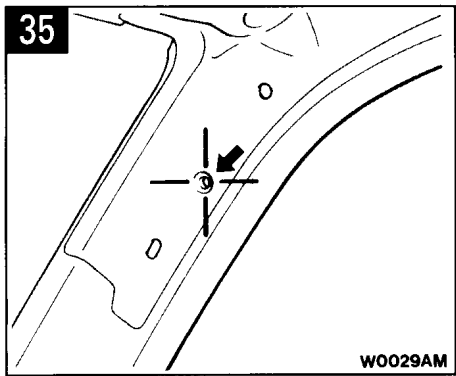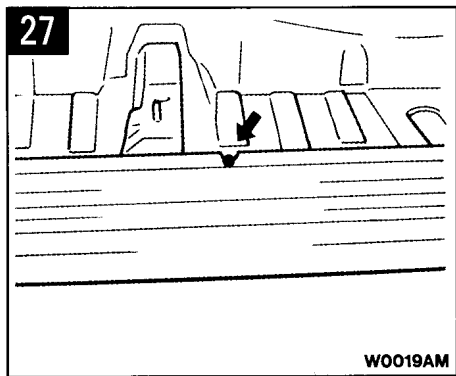




NOTES

<5 Door>

TYPE A (PROJECTED DIMENSIONS)










mm

UNDER BODY

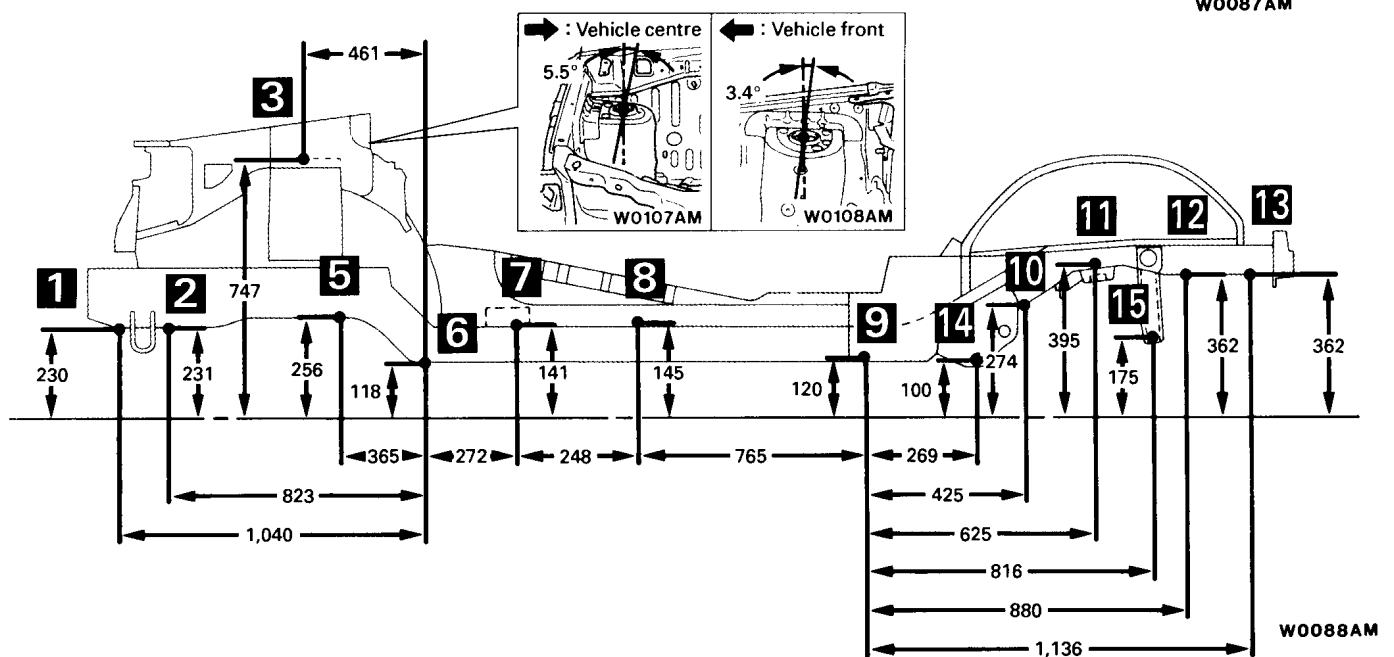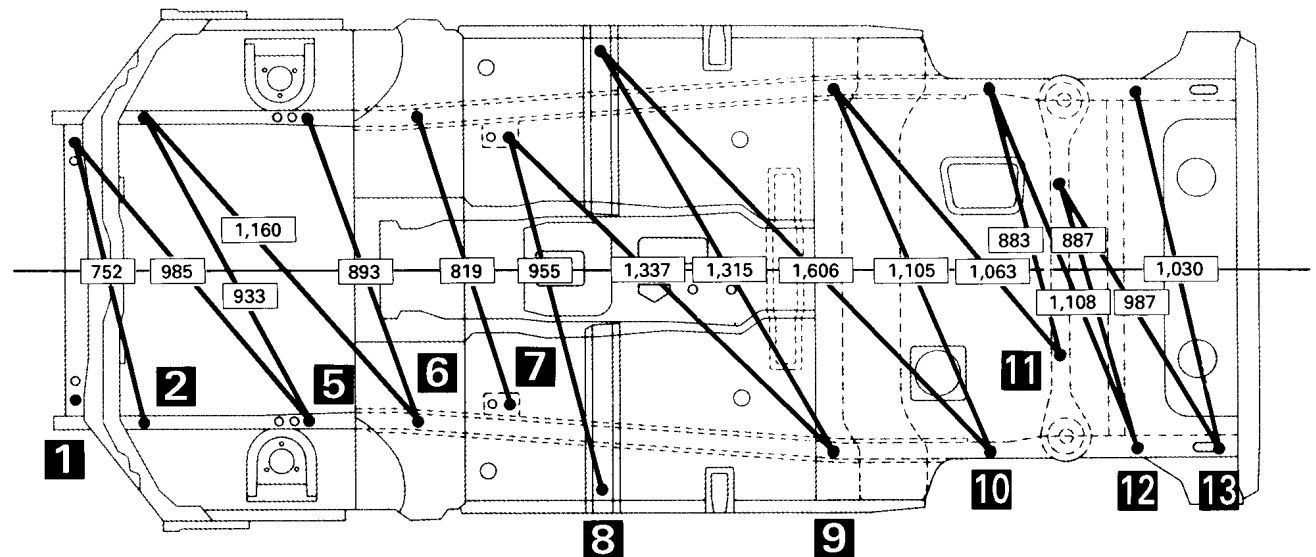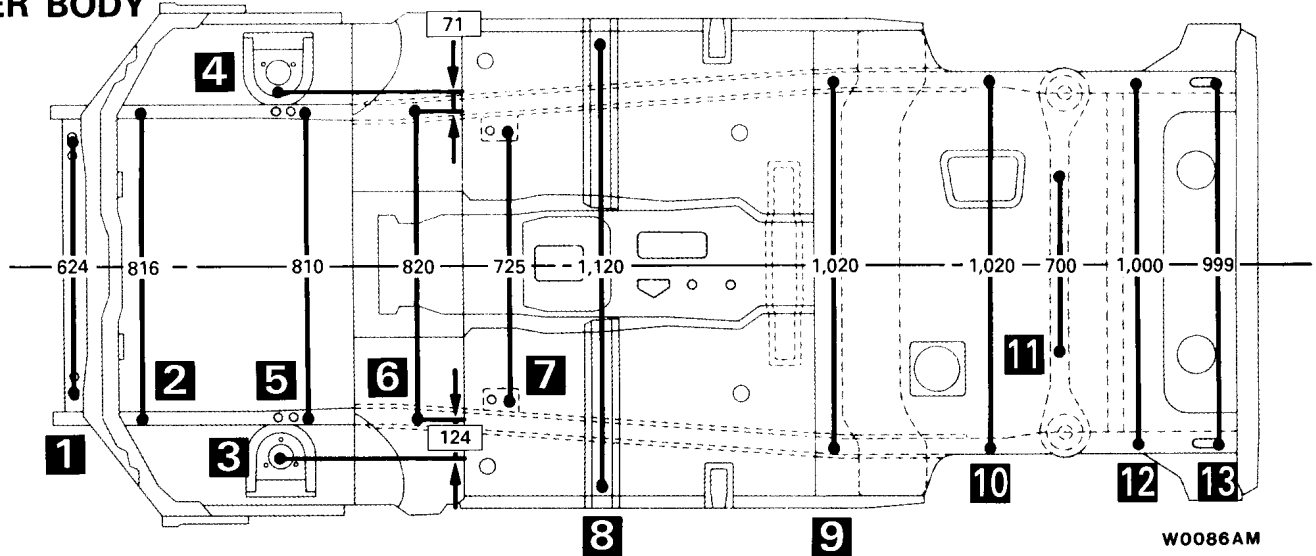

No.	Standard measurement point	Hole shape – Size mm	No.	Standard measurement point	Hole shape – Size mm
1	Centre of strut bar bracket mounting hole	○–10	9*	Centre of rear floor sidemember drain hole	○–25
2*	Centre of strut bar bracket mounting hole	○–9	10	Centre of rear floor sidemember drain hole	○–20
3	Centre of front shock absorber mounting hole	○–77	11	Centre of rear floor crossmember drain hole	○–20
4	Centre of front strut mounting hole	○–9	12*	Centre of rear floor sidemember drain hole	○–25
5*	Centre of differential mount crossmember mounting hole	○–15	13	Rear end of shipping hook mounting hole	○–20 × 74
6*	Centre of front sidemember drain hole	○–20	14	Lower arm mounting position	–
7	Centre of transmission mount crossmember mounting hole	○–10	15	Lateral rod mounting position	–
8*	Centre of front floor centre brace drain hole	○–20			

NOTE: The * mark indicates the mounting position for the frame centering gauge.

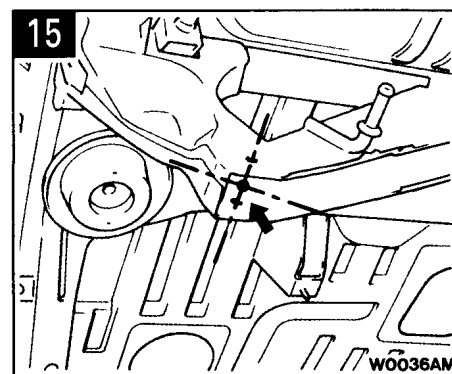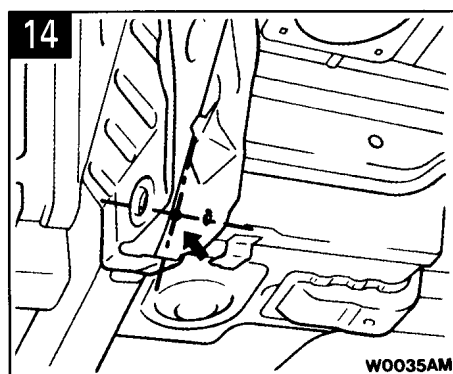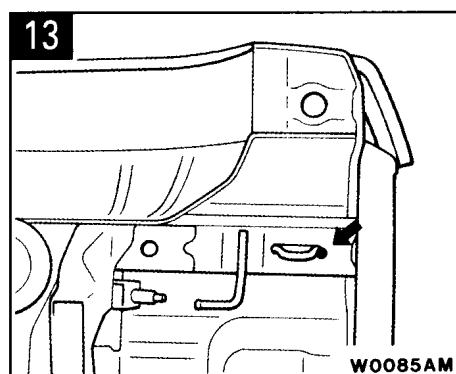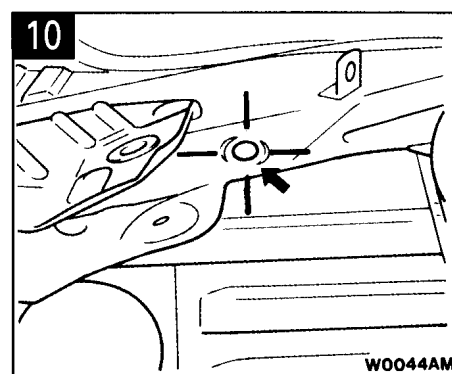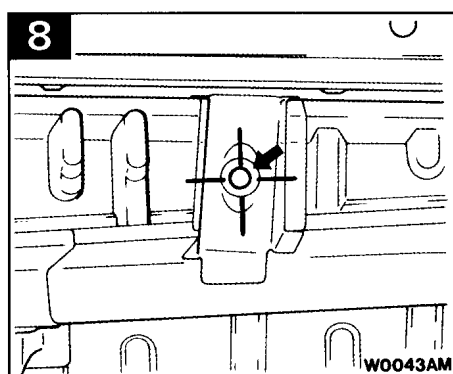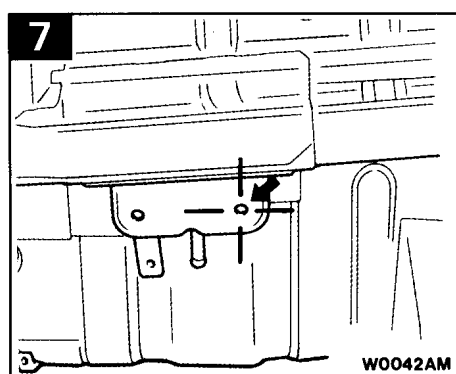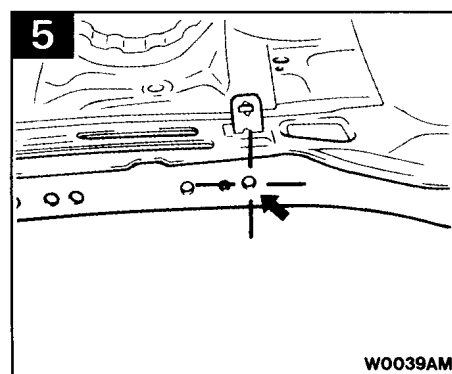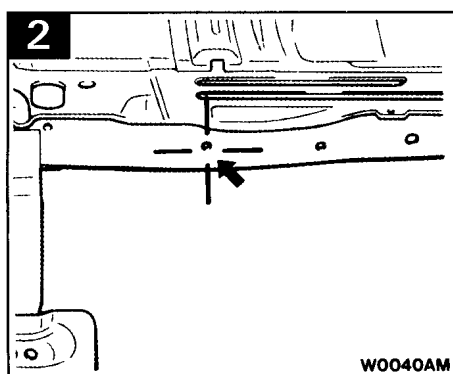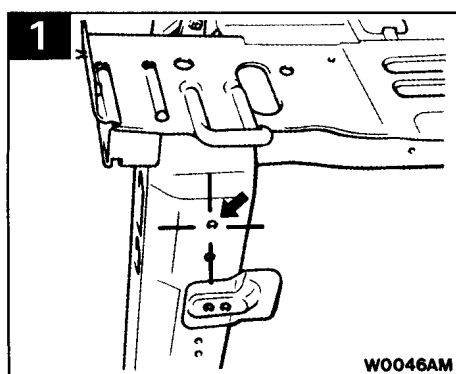


2-16 BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <5 Door>


TYPE B (ACTUAL-MEASUREMENT DIMENSIONS)

mm

UNDER BODY

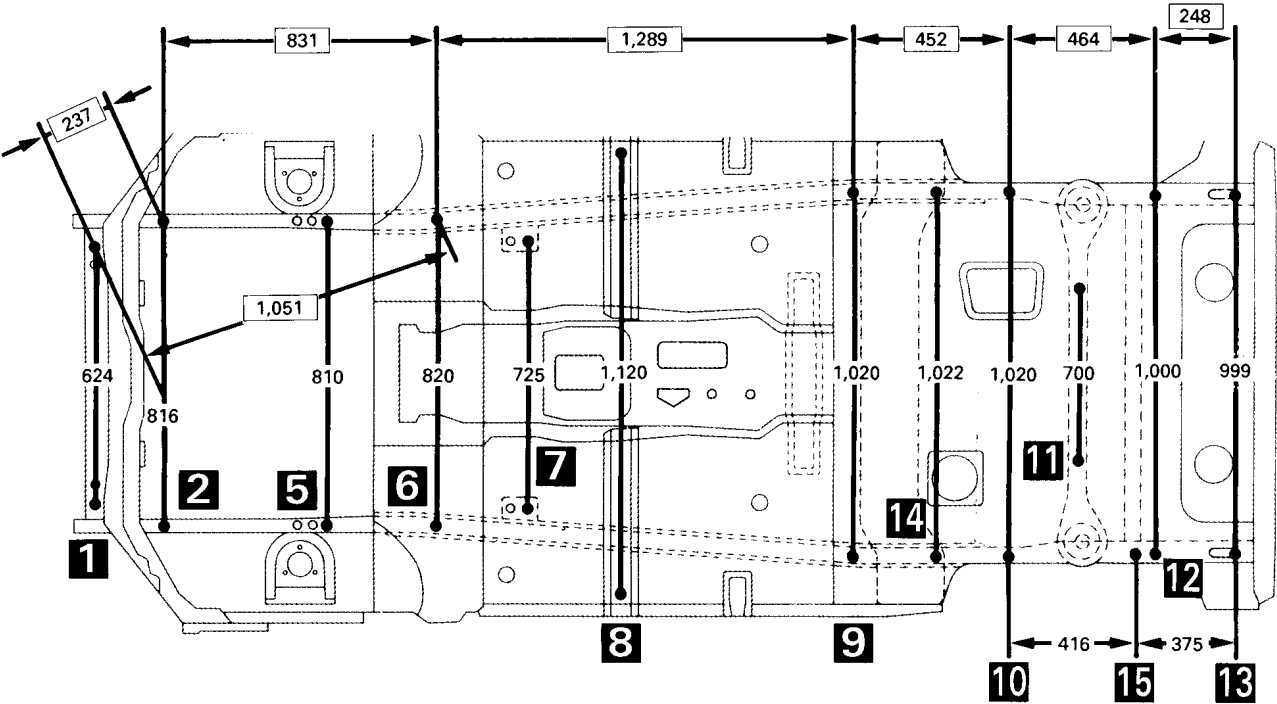










W0089AM

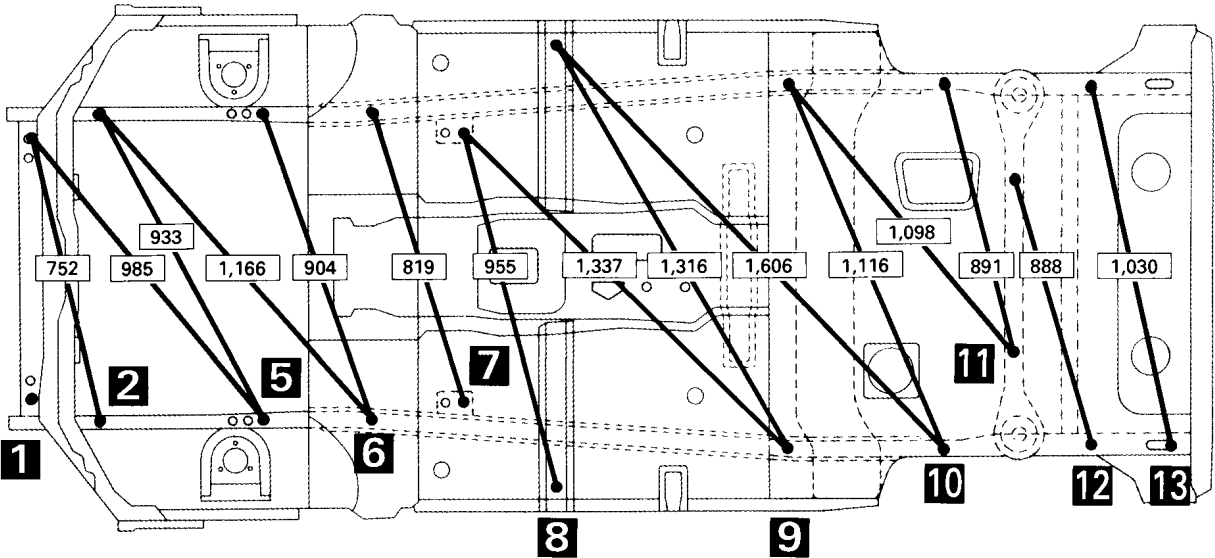

W0090AM

BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <5 Door> 2-17


No.	Standard measurement point	Hole shape - Size mm	No.	Standard measurement point	Hole shape - Size mm
1	Centre of strut bar bracket mounting hole	○-10	9	Centre of rear floor sidemember drain hole	○-25
2	Centre of strut bar bracket mounting hole	○-9	10	Centre of rear floor sidemember drain hole	○-20
3	Centre of front shock absorber mounting hole	○-77	11	Centre of rear floor crossmember drain hole	○-20
4	Centre of front strut mounting hole	○-9	12	Centre of rear floor sidemember drain hole	○-25
5	Centre of differential mount crossmember mounting hole	○-15	13	Rear end of shipping hook mounting hole	○-20 × 74
6	Centre of front sidemember drain hole	○-20	14	Lower arm mounting position	-
7	Centre of transmission mount crossmember mounting hole	○-10	15	Lateral rod mounting position	-
8	Centre of front floor centre brace drain hole	○-20			

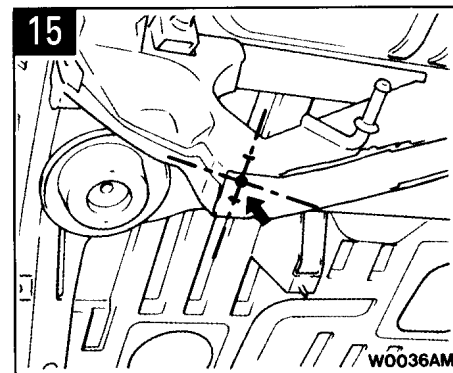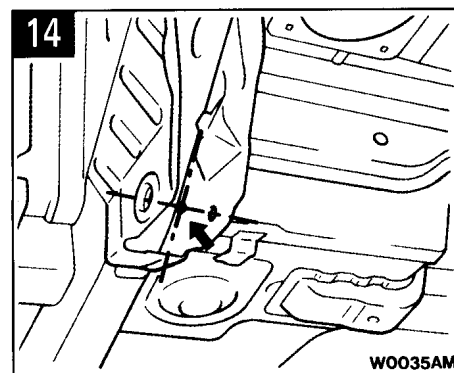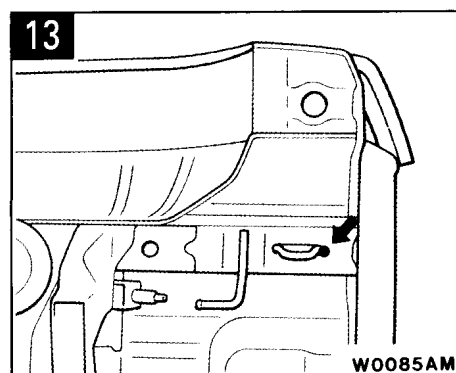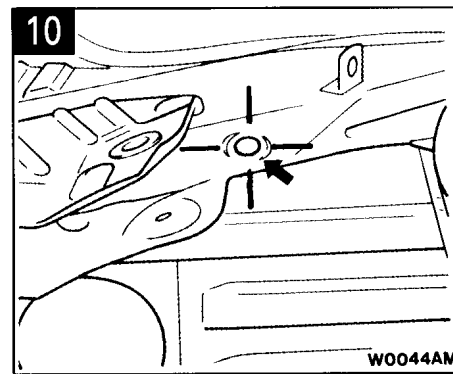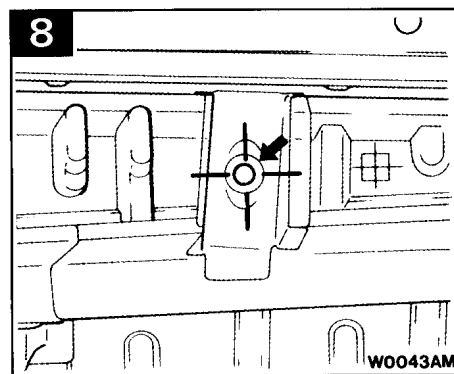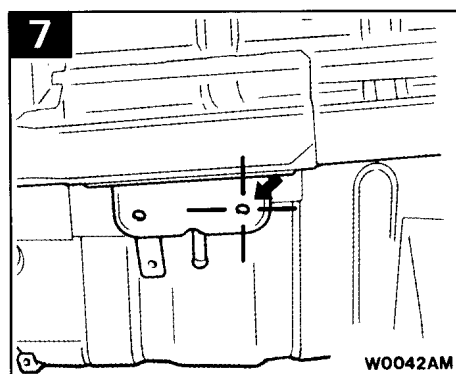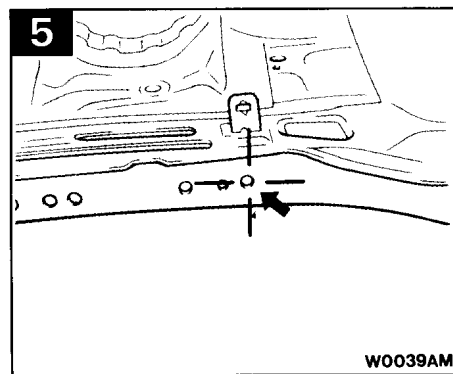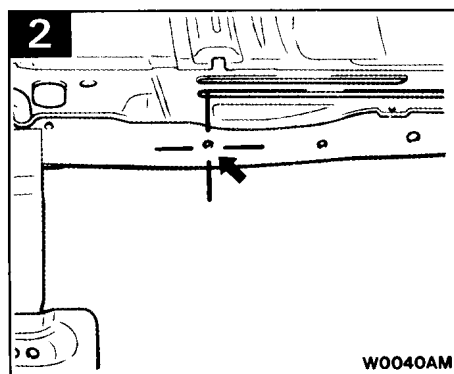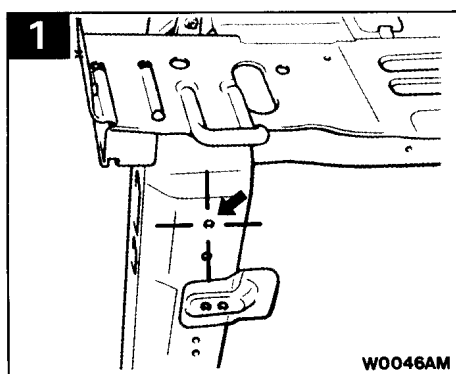


2-18 BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <5 Door>

FRONT BODY

mm

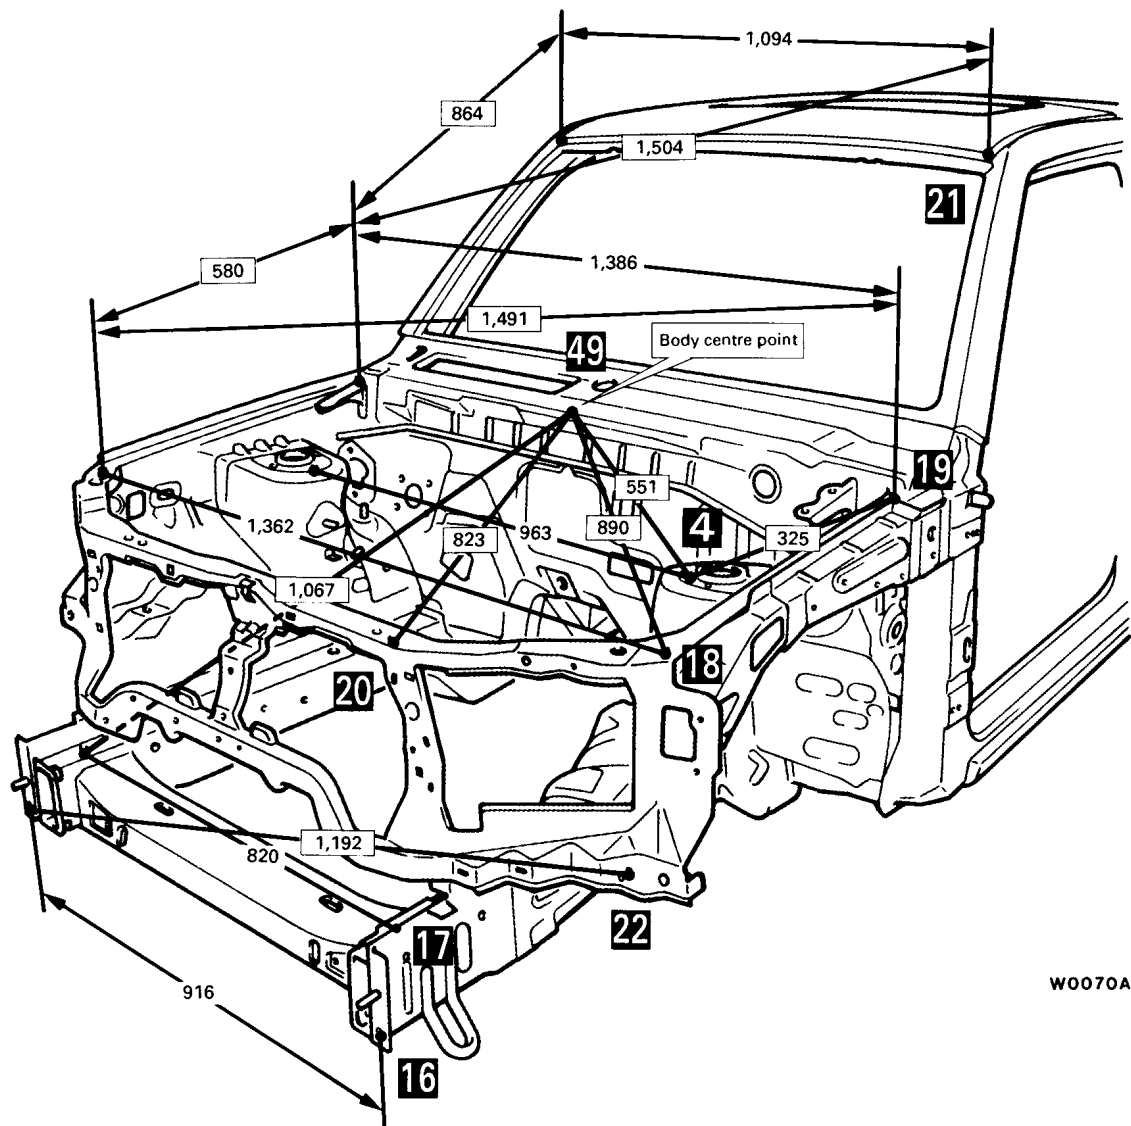










W0070AM

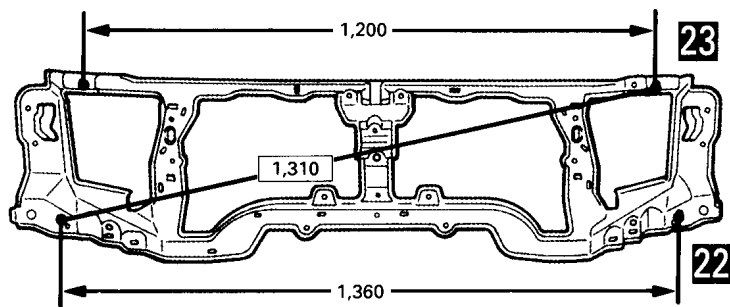

W0071AM

BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <5 Door> 2-19


No.	Standard measurement point	Hole shape – Size mm	No.	Standard measurement point	Hole shape – Size mm
4	Centre of front strut mounting hole	○– 9	20	Centre of radiator upper bracket mounting hole	○– 9
16	Centre of front bumper beam mounting hole	○– 9	21	Corner of roof panel	–
17	Centre of front bumper reinforcement mounting hole	○– 8	22	Centre of grille filler panel mounting hole	○–6.6
18	Centre of front fender mounting hole	○– 6	23	Centre of headlamp mounting hole	○–6.6
19	Centre of front fender mounting hole	○– 6	49	Centre of weatherstrip mounting hole (Body centre point)	○–5.2

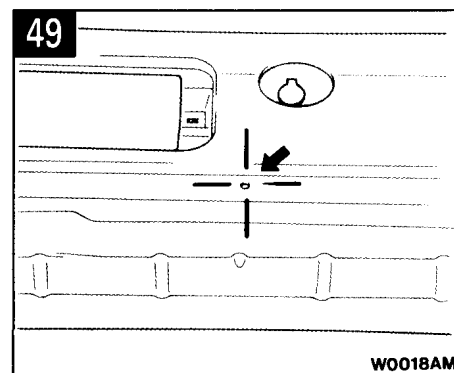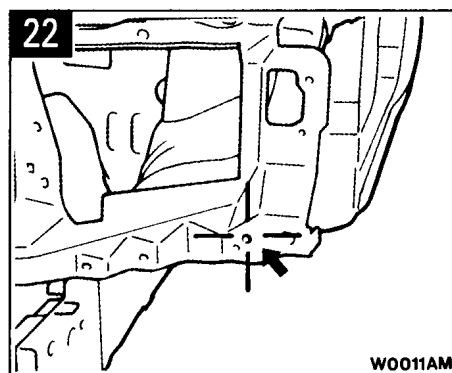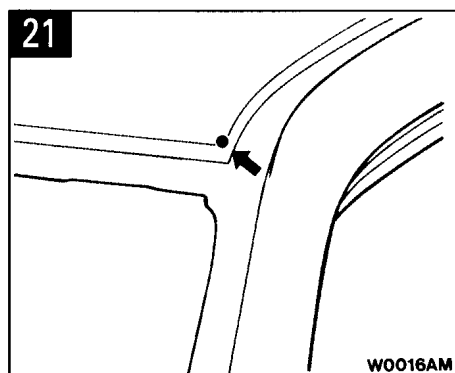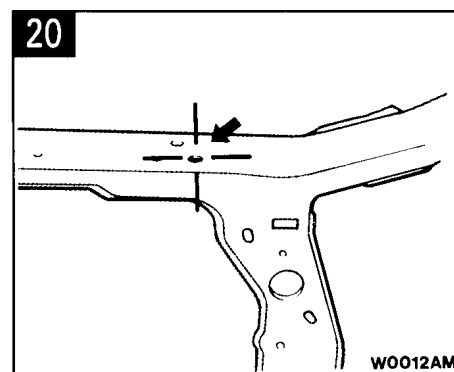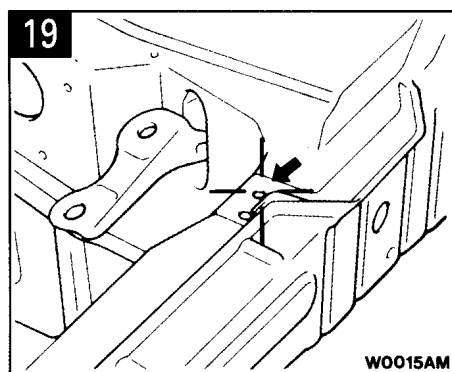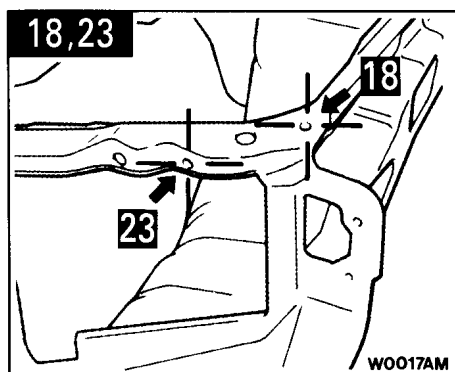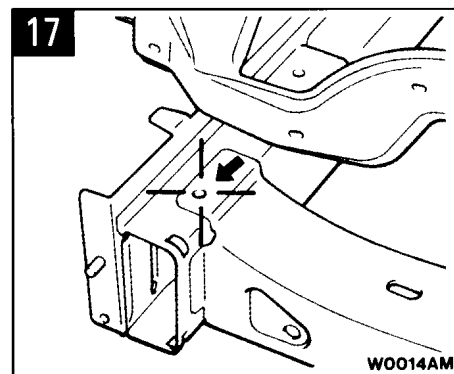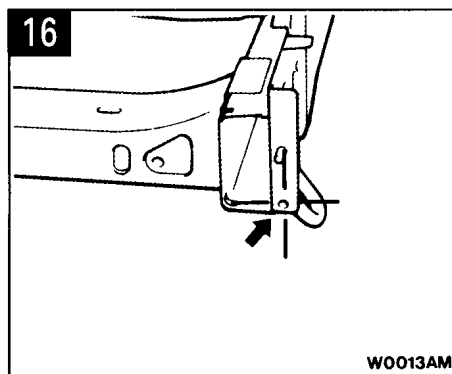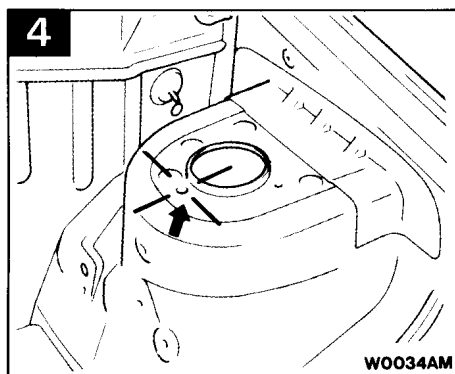


2-20 BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <5 Door>

SIDE BODY

mm






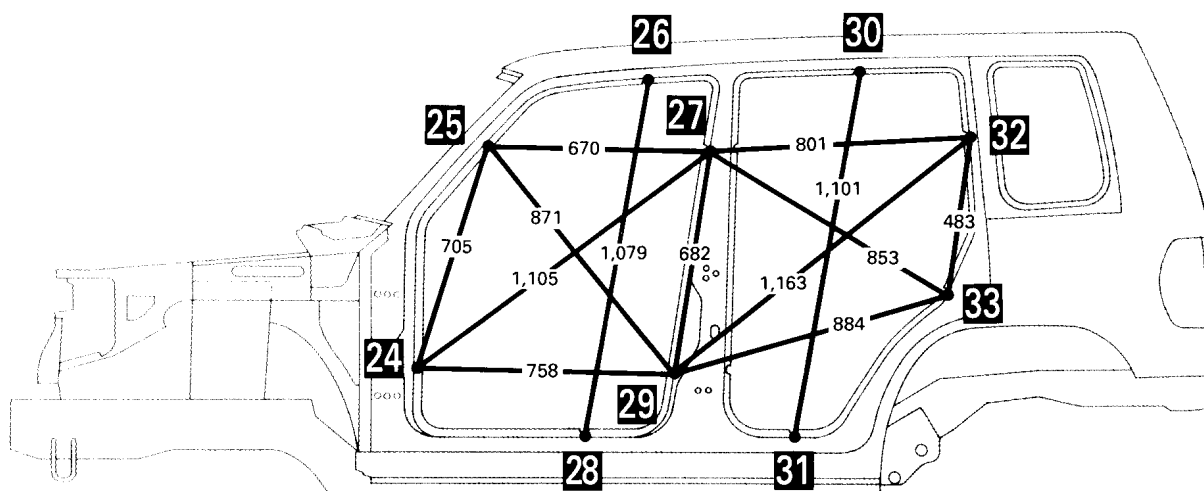


W0091AM

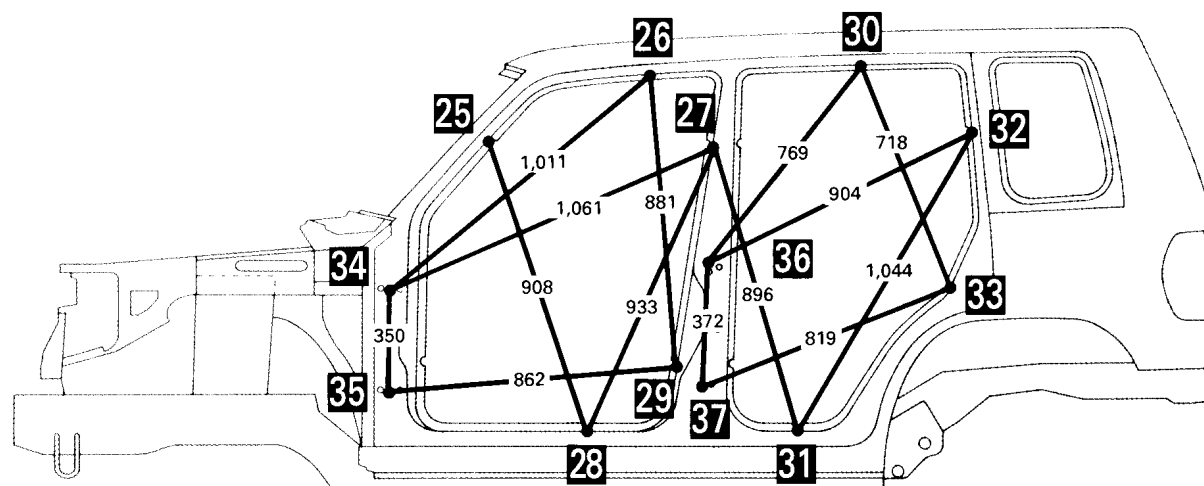

W0092AM


No.	Standard measurement point	Hole shape – Size mm	No.	Standard measurement point	Hole shape – Size mm
24	Front pillar positioning notch (Lower section)	–	31	Side sill positioning notch (Rear section)	–
25	Front pillar positioning notch (Upper section)	–	32	Quarter panel positioning notch (Upper section)	–
26	Side roof rail positioning notch (Front section)	–	33	Quarter panel positioning notch (Lower section)	–
27	Centre pillar positioning notch (Upper section)	–	34	Centre of front door hinge mounting hole (Upper section)	○–11
28	Side sill positioning notch (Front section)	–	35	Centre of front door hinge mounting hole (Upper section)	○–11
29	Centre pillar positioning notch (Lower section)	–	36	Centre of rear door hinge mounting hole (Upper section)	○–11
30	Side roof rail positioning notch (Rear section)	–	37	Centre of front door hinge mounting hole (Lower section)	○–11

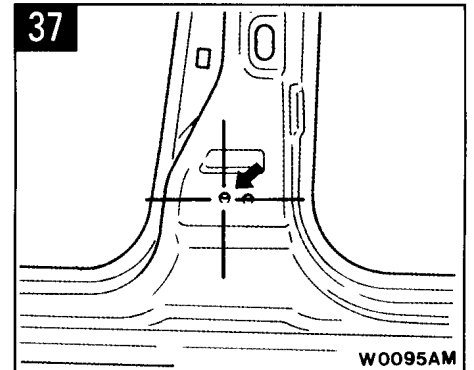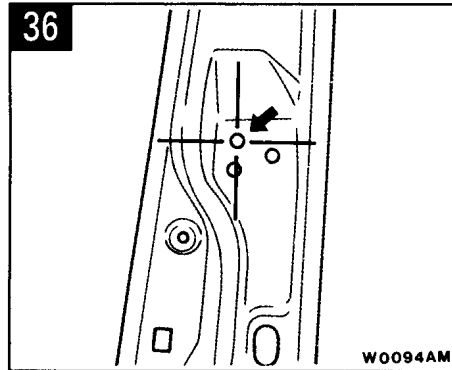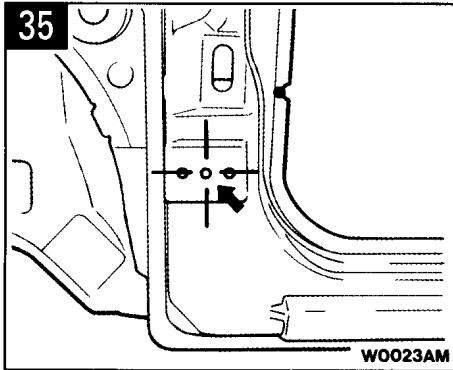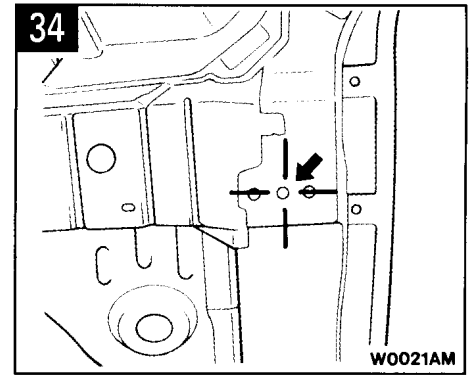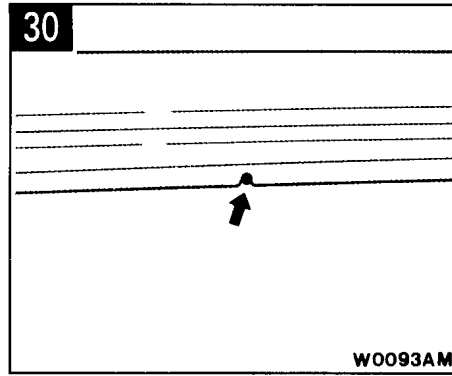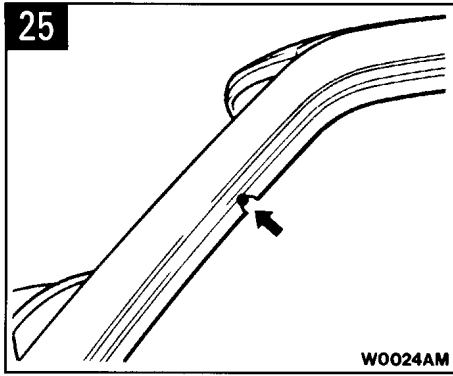




2-22 BODY DIMENSIONS – Type B (Actual-measurement Dimensions) <5 Door>

REAR BODY

mm

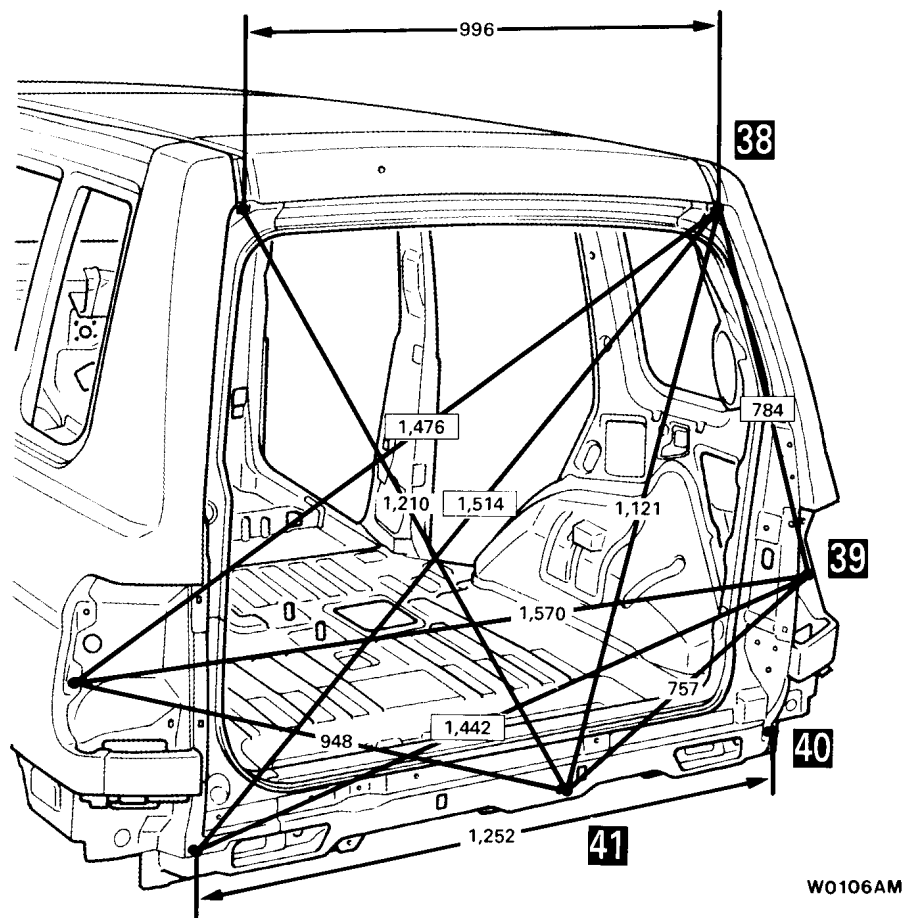


No.	Standard measurement point	Hole _ Size shape mm	No.	Standard measurement point	Hole _ Size shape mm
38	Centre of roof moulding mounting hole	□- 7	40	Centre of rear end corner drain hole	○- 7
39	Centre of rear combination lamp mounting hole	○-10	41	Centre of rear bumper bracket mounting hole	○-11

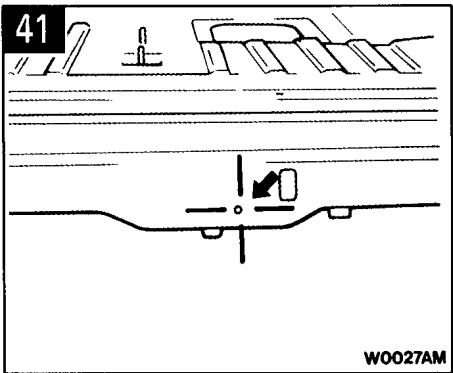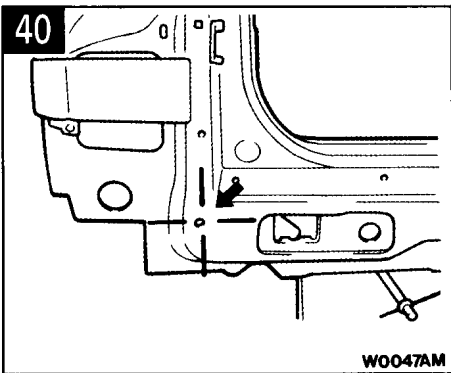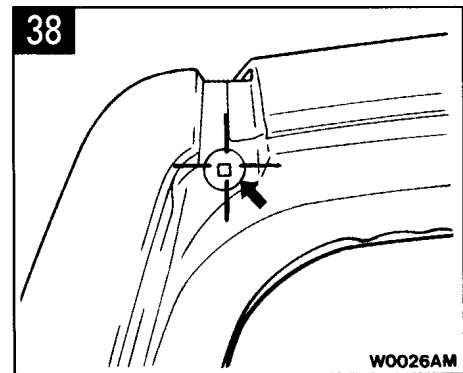

INTERIOR

mm

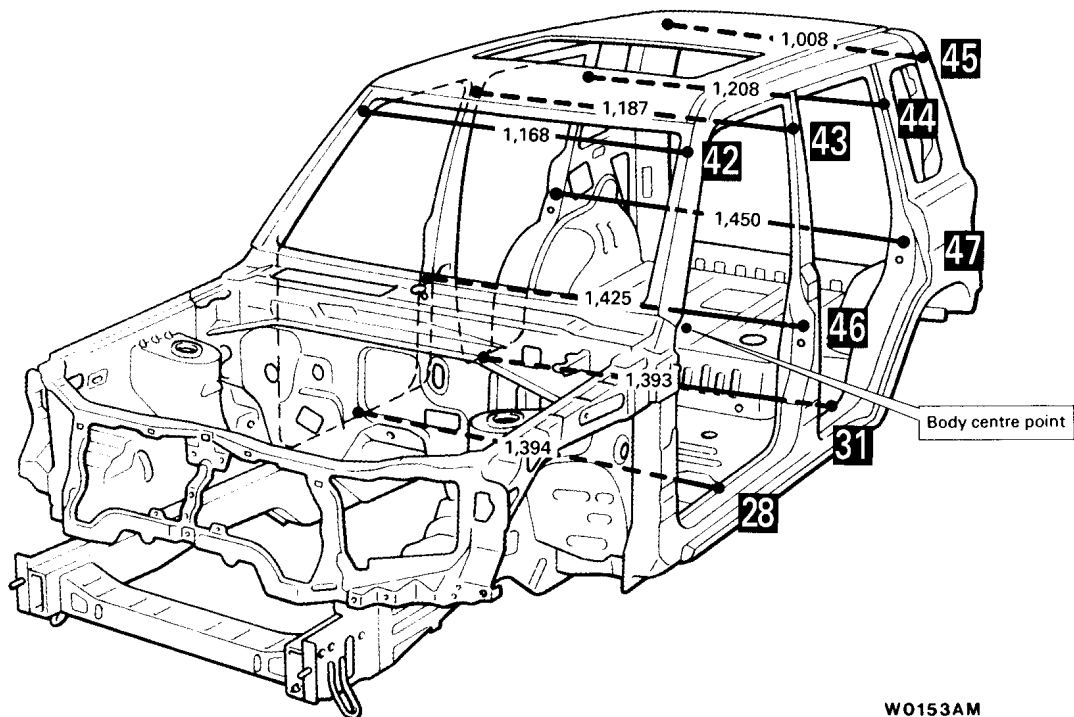

W0153AM

No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
28	Side sill positioning notch (Front section)	—	—	45	Centre of quarter trim mounting hole	○	8.5
31	Side sill positioning notch (Rear section)	—	—	46	Centre of front door striker mounting hole	○	12
42	Centre of front assist grip mounting hole	○	8	47	Centre of rear door striker mounting hole	○	12
43	Centre of front seat belt mounting hole	○	13	48	Body centre point	—	—
44	Centre of rear seat belt mounting hole	○	13				

