


Front Side Door Accessory Switch Mount Plate Replacement - Driver Side

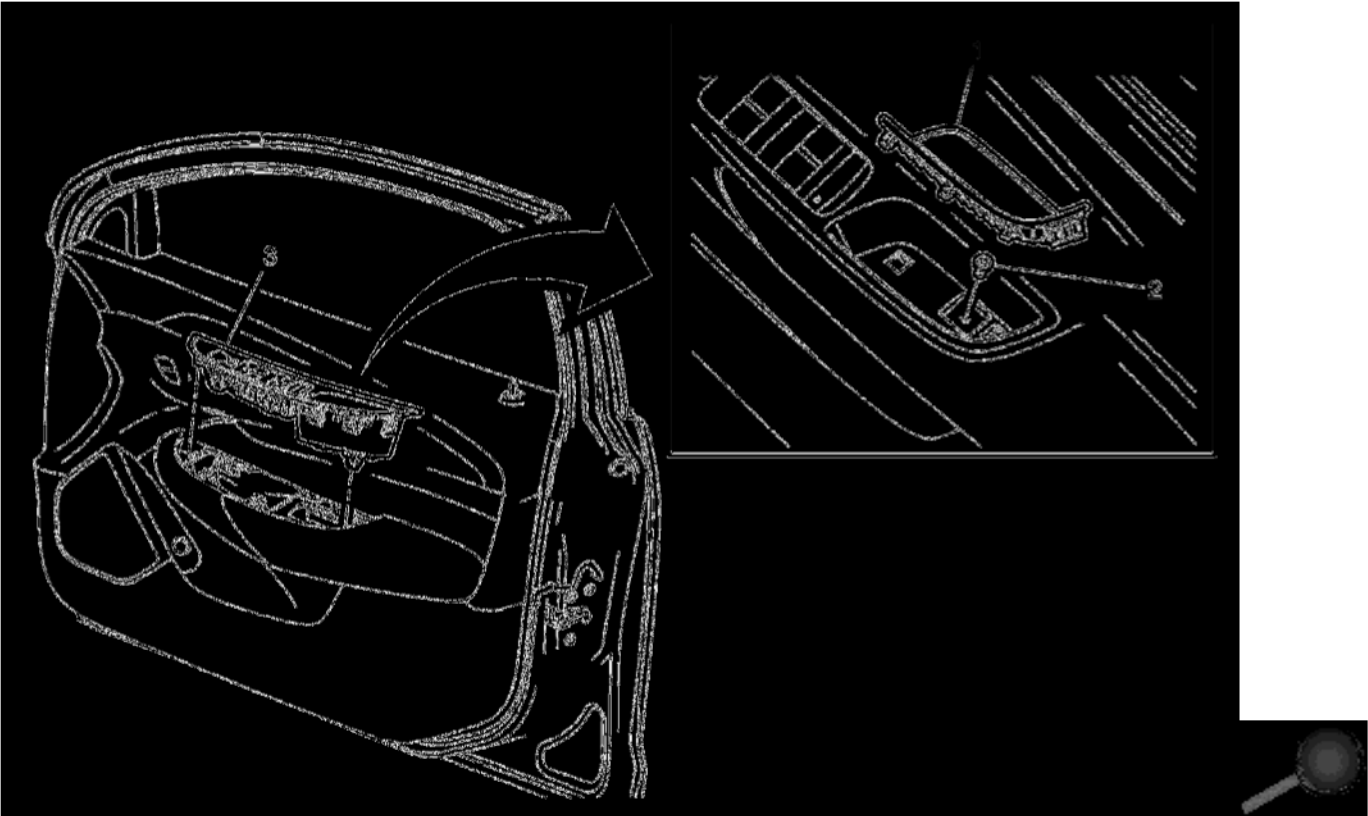


Front Side Door Accessory Switch Mount Plate Replacement - Driver Side

Callout	Component Name
1	Front Side Door Pull Cup Liner Procedure Use a small flat-bladed tool to aid in the removal of the pull cup liner.
	Front Side Door Armrest Pull Cup Fastener

2	Caution: Refer to Fastener Caution .
3	Front Side Door Accessory Switch Mount Plate Assembly — Driver Side Procedure 1. Place 2 fingers or a hooked tool in the rear access hole and lift to disengage the retaining clips. 2. Use an appropriate plastic trim tool aide to lift the front of the bezel to disengage the front clip. 3. Disconnect the electrical connectors from the switches. 4. If replacing the switch mount plate, transfer all necessary components.

Front Side Door Accessory Switch Mount Plate Replacement - Passenger Side

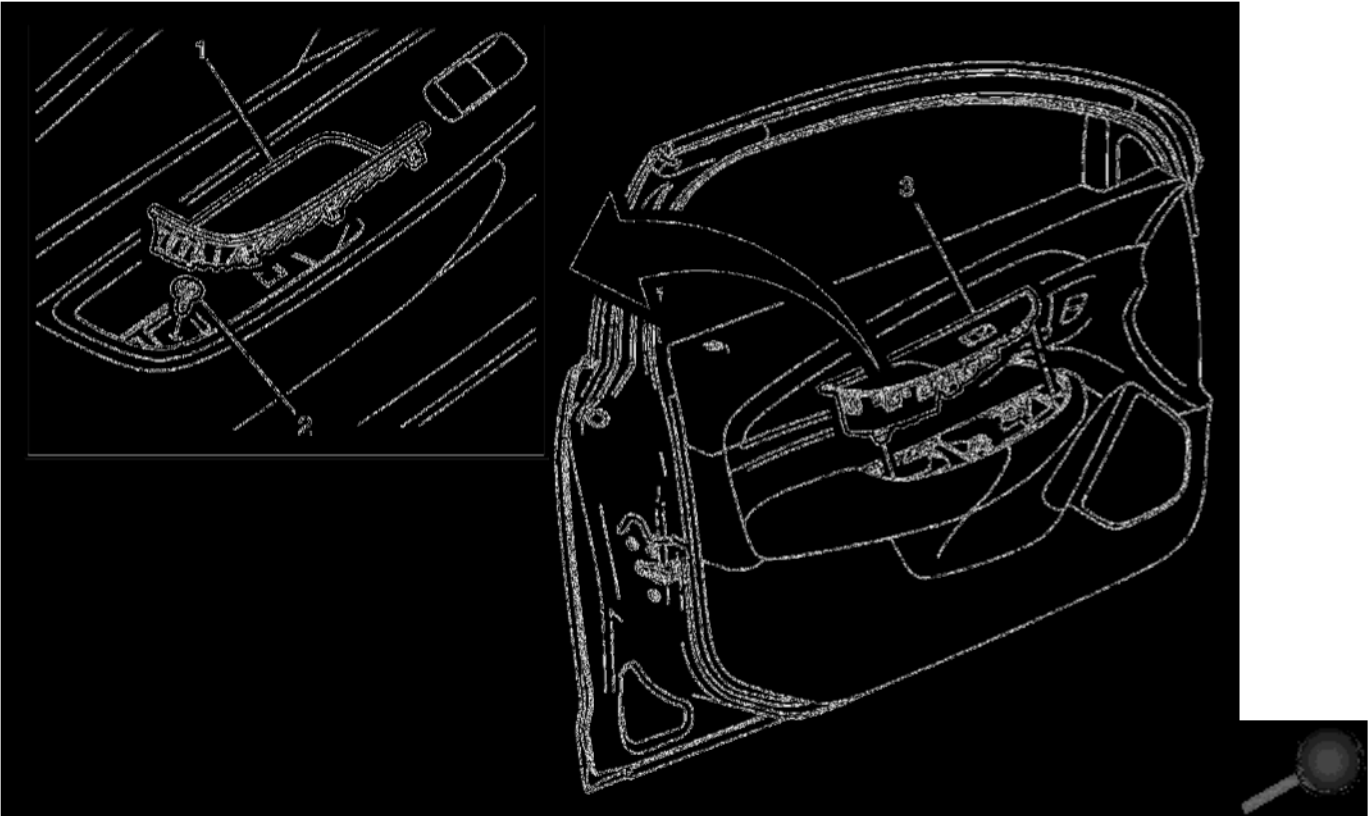


Front Side Door Accessory Switch Mount Plate Replacement - Passenger Side

Callout	Component Name
1	Front Side Door Pull Cup Liner Procedure Use a small flat-bladed tool to aid in the removal of the pull cup liner.
	Front Side Door Armrest Pull Cup Fastener

2	Caution: Refer to Fastener Caution .
3	Front Side Door Accessory Switch Mount Plate Assembly — Passenger Side Procedure 1. Place 2 fingers or a hooked tool in the rear access hole and lift to disengage the retaining clips. 2. Use an appropriate plastic trim tool aide to lift the front of the bezel to disengage the front clip. 3. Disconnect the electrical connectors from the switches. 4. If replacing the switch mount plate, transfer all necessary components.

Rear Side Door Accessory Switch Mount Plate Replacement

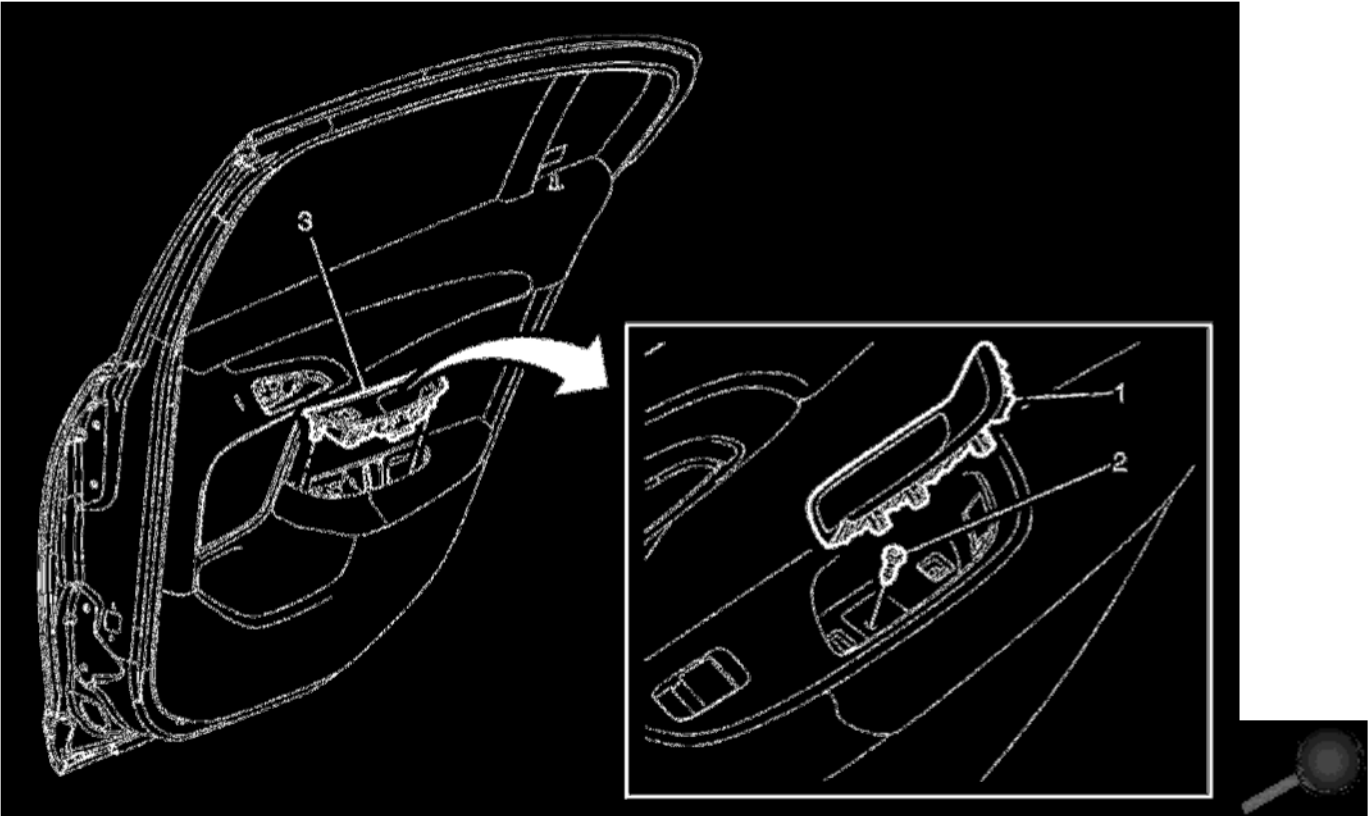


Rear Side Door Accessory Switch Mount Plate Replacement

Callout	Component Name
1	Rear Side Door Pull Cup Liner Procedure © 2014 General Motors. All rights reserved. Use a small flat-bladed tool to aid in the removal of the pull cup liner.
	Rear Side Door Armrest Pull Cup Fastener

2	Caution: Refer to Fastener Caution . Tighten 2.5 N•m (22 lb in)
3	Rear Side Door Accessory Switch Mount Plate Assembly Procedure 1. Place 2 fingers or a hooked tool in the rear access hole and lift to disengage the retaining clips. 2. Use an appropriate plastic trim tool aide to lift the front of the bezel to disengage the front clip. 3. Disconnect the electrical connectors from the switches. 4. If replacing the switch mount plate, transfer all necessary components.

Front Side Door Trim Replacement

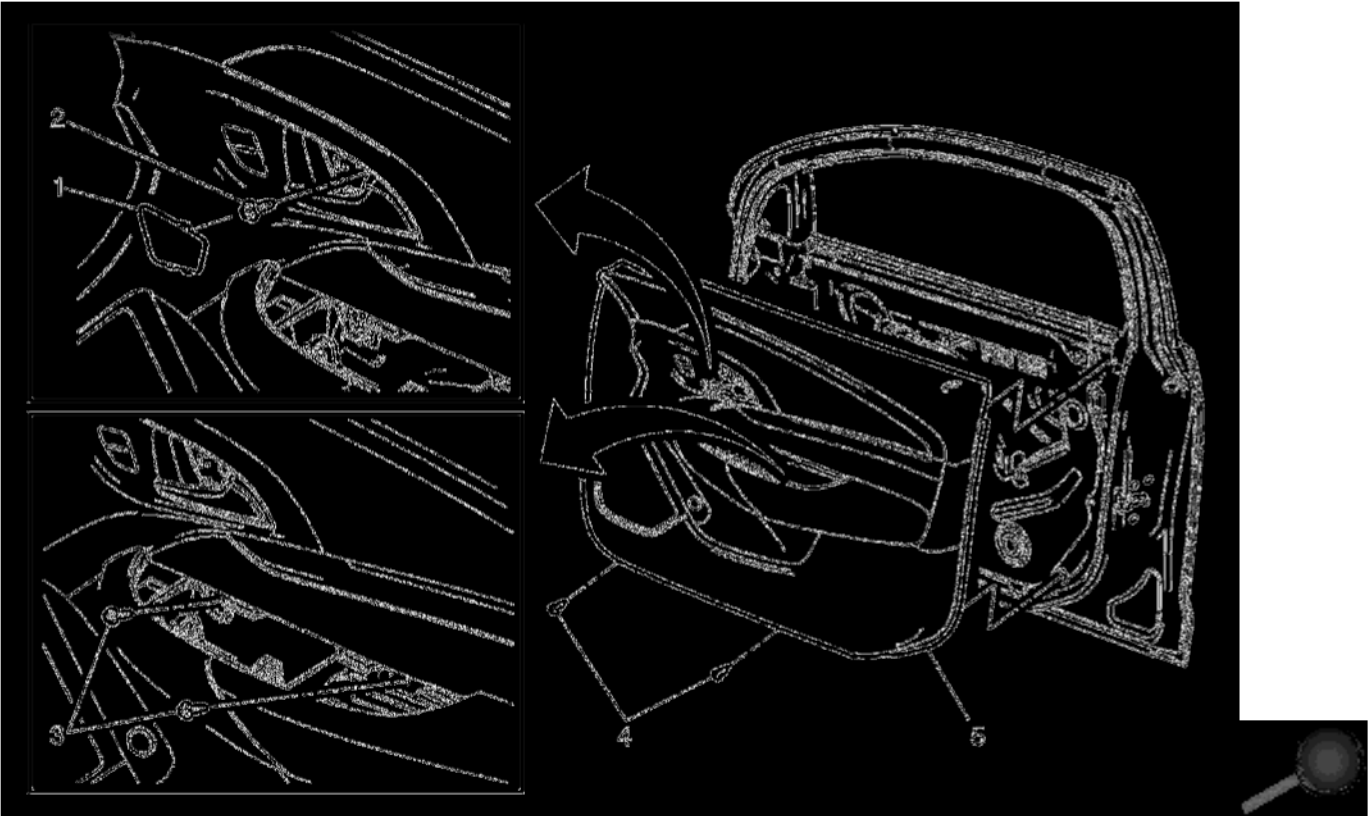


Front Side Door Trim Replacement

Callout	Component Name
Preliminary Procedure Remove the front side door accessory switch mount plate — driver side. Refer to Front Side Door Accessory Switch Mount Plate Replacement - Driver Side .	
© 2014 General Motors. All rights reserved.	
	Front Side Door Inside Handle Bolt Cap

1	Procedure Use a suitable tool to remove front side door inside handle bolt cap.
2	Front Side Door Inside Handle Fastener Caution: Refer to Fastener Caution .
3	Front Side Door Armrest Pull Cup Fastener (Qty: 2)
4	Front Side Door Trim Panel Fastener (Qty: 2)
5	Front Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to disengage clips from bottom to top of door trim panel in cross car direction. 2. Plastic clips on the back of door trim panel must be replaced each time door trim panel is removed and put back on. 3. Pull upwards on the door lock retainer cable to disengage. 4. Disconnect the electrical connector, if equipped.

Front Side Door Trim Panel Finish Panel Applique Replacement

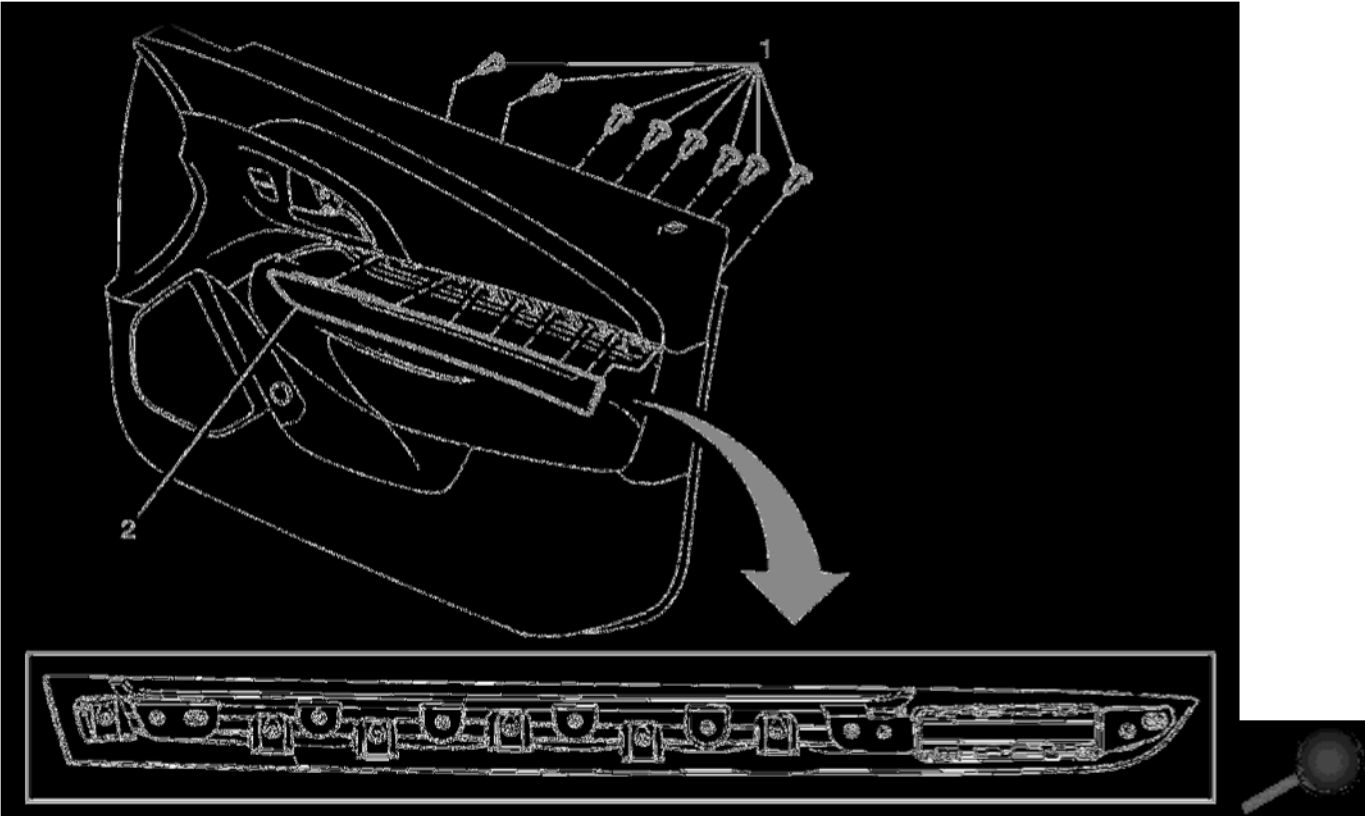


Front Side Door Trim Panel Finish Panel Applique Replacement

Callout	Component Name
Preliminary Procedure Remove the front side door trim. Refer to Front Side Door Trim Replacement . © 2014 General Motors. All rights reserved.	
1	Front Side Door Trim Panel Applique Fastener (Qty: 8) Caution: Refer to Fastener Caution .

2	Front Side Door Trim Panel Finish Panel Applique Assembly
---	---

Quarter Inner Panel Access Hole Cover Replacement (Ute)

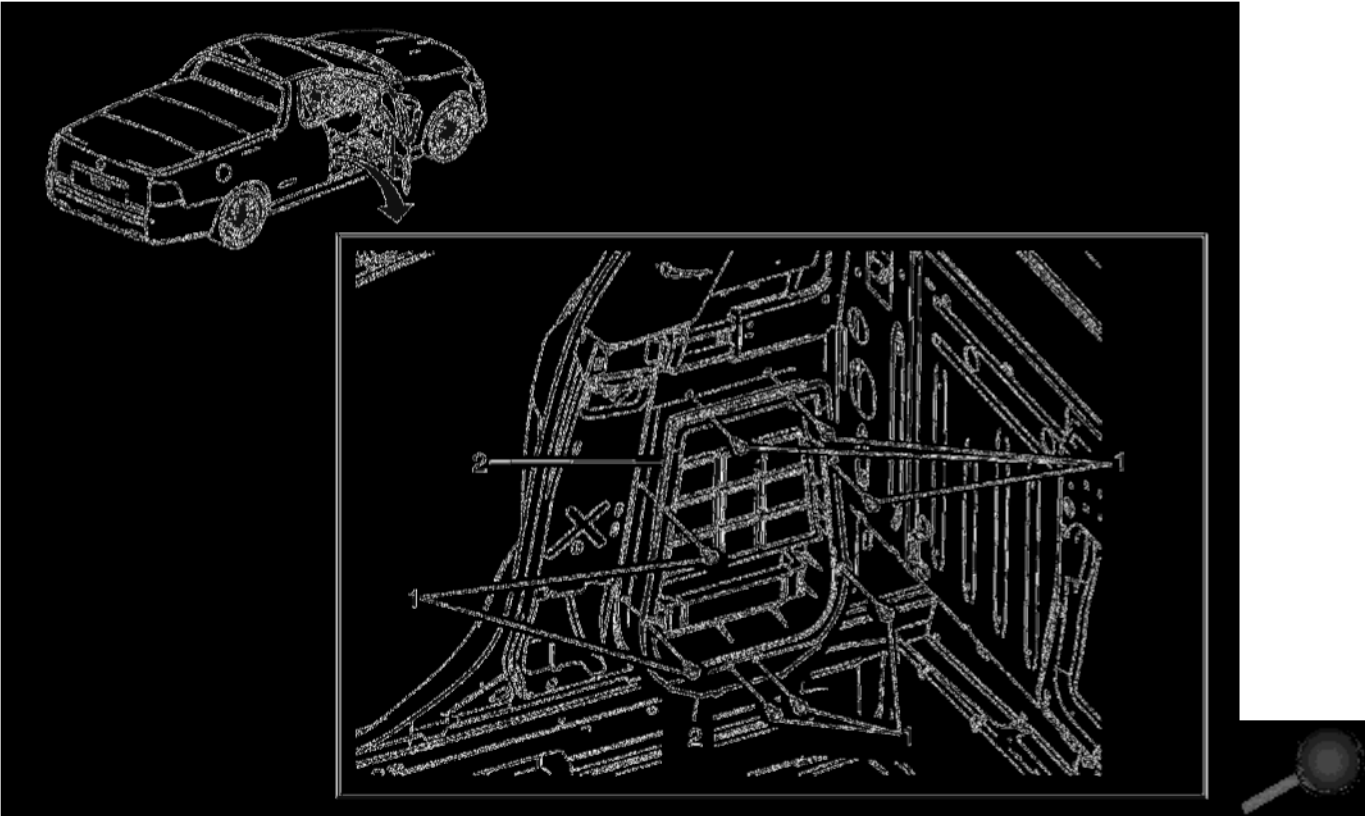


Quarter Inner Panel Access Hole Cover Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Removal and Installation .	
2. Remove the center pillar upper trim panel. Refer to Center Pillar Upper Trim Panel Replacement .	
3. Remove the rear window panel trim. Refer to Rear Window Panel Trim Replacement .	

1	Radio Rear Speaker Fastener (Qty: 8) Caution: Refer to Fastener Caution .
2	Quarter Inner Panel Access Hole Cover Assembly — Right Side

Front Side Door Sill Garnish Molding Replacement

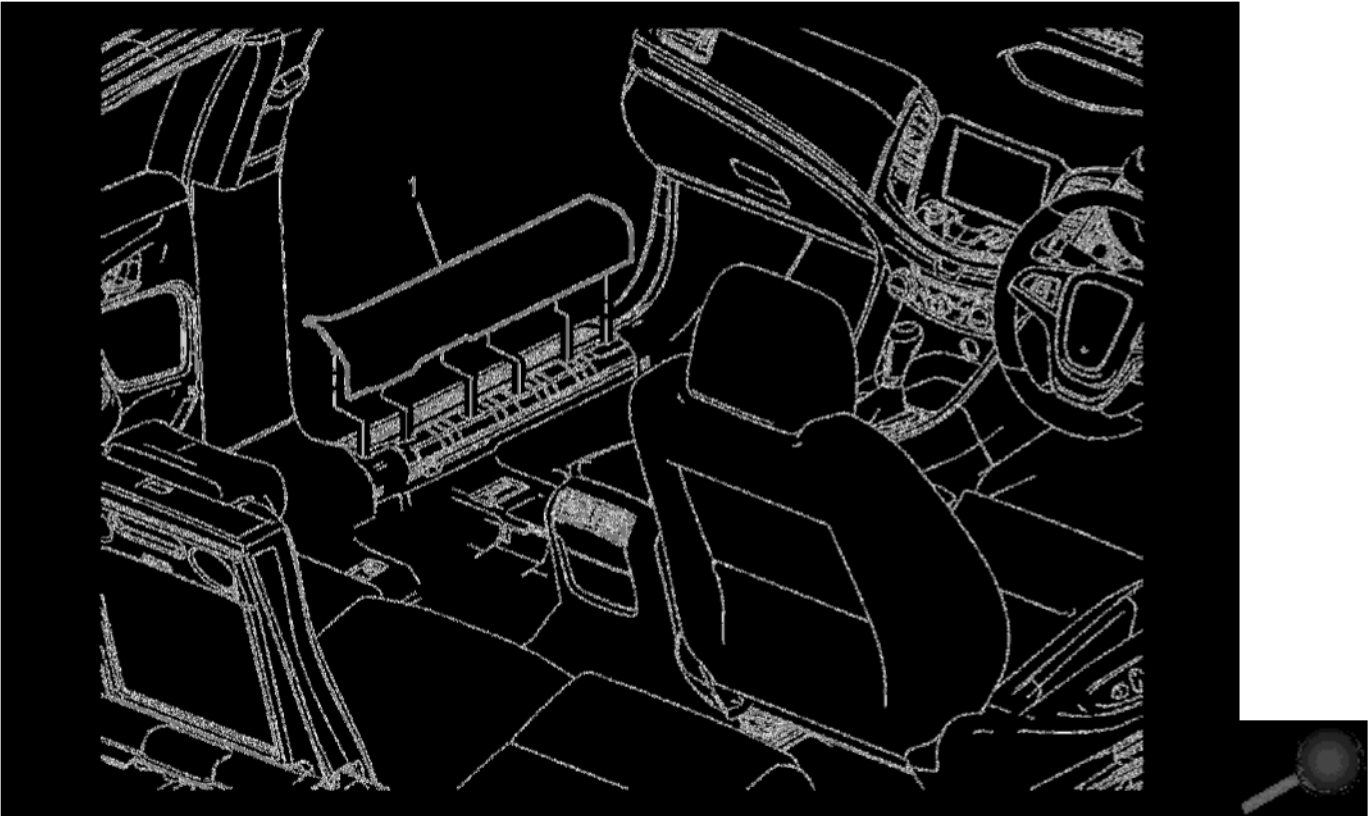


Front Side Door Sill Garnish Molding Replacement

Callout	Component Name
1	Front Side Door Sill Garnish Molding Assembly Procedure © 2014 General Motors. All rights reserved. 1. Use the appropriate plastic trim tool to aid in the removal of the front side door sill garnish molding. 2. Reposition the front floor panel carpet as needed.



Rear Side Door Sill Garnish Molding Replacement

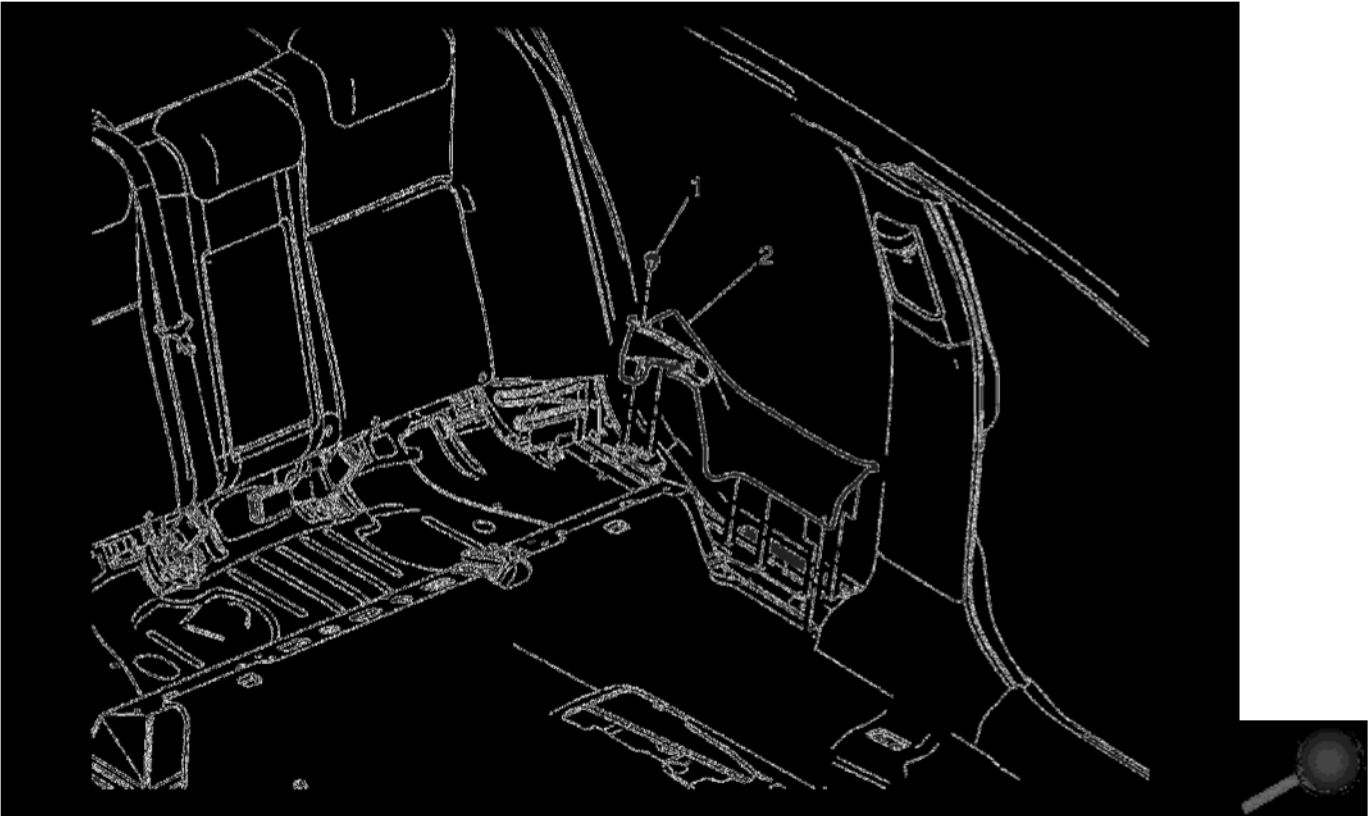


Rear Side Door Sill Garnish Molding Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat cushion. Refer to Rear Seat Cushion Removal and Installation . © 2014 General Motors. All rights reserved.	
	Body Lock Pillar Lower Trim Panel Fastener Caution: Refer to Fastener Caution .

1	Tighten 2.5 N•m (22 lb in)
2	Rear Side Door Sill Garnish Molding Assembly

Rear Compartment Side Trim Panel Access Hole Cover Replacement (Sportwagon, Right Side without LPG)

[Removal Procedure](#)

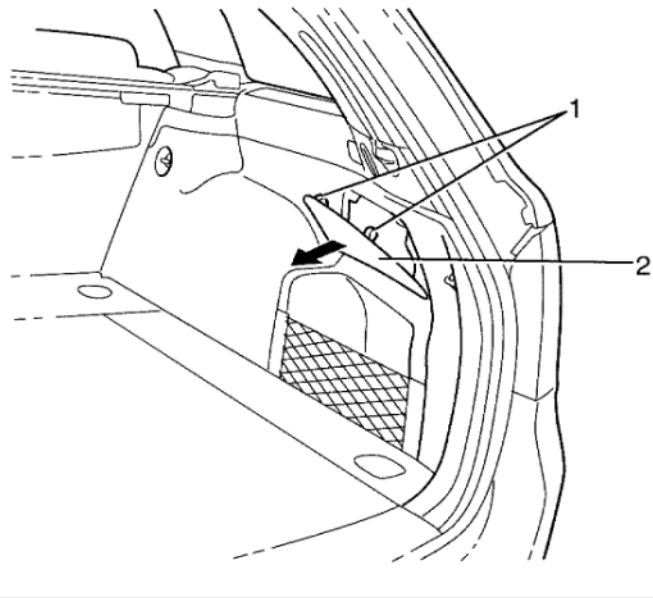


Note: When a suitable hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.

Note: Push down on the centre of the tail lamp access cover trim panel and pull on the top of the tail lamp access cover trim panel to release the retaining tangs.

1. Install a suitable liftgate brace to the vehicle.
2. Carefully disengage the tail lamp access cover trim panel retaining tangs (1).
3. Remove tail lamp access cover trim panel (2) from the vehicle.

[Installation Procedure](#)

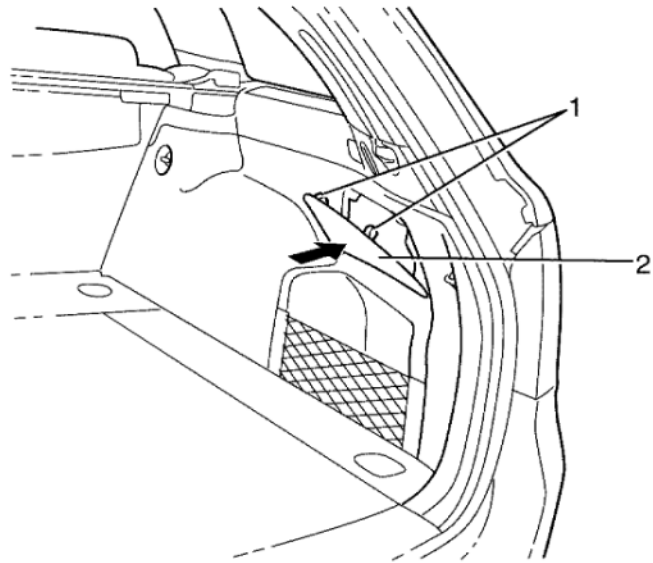


Note: When a suitable hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.

Note: Insert the locating tabs on the bottom of the tail lamp access cover trim panel then push the top of the tail lamp access cover trim panel to engage the retaining tangs.

1. Position the tail lamp access cover trim panel (2) to the vehicle.
2. Carefully engage the tail lamp access cover trim panel retaining tangs (1). An audible click will confirm correct fitment.
3. Remove the suitable liftgate brace from the vehicle.

Rear Compartment Side Trim Panel Access Hole Cover Replacement (Long Wheelbase Sedan)

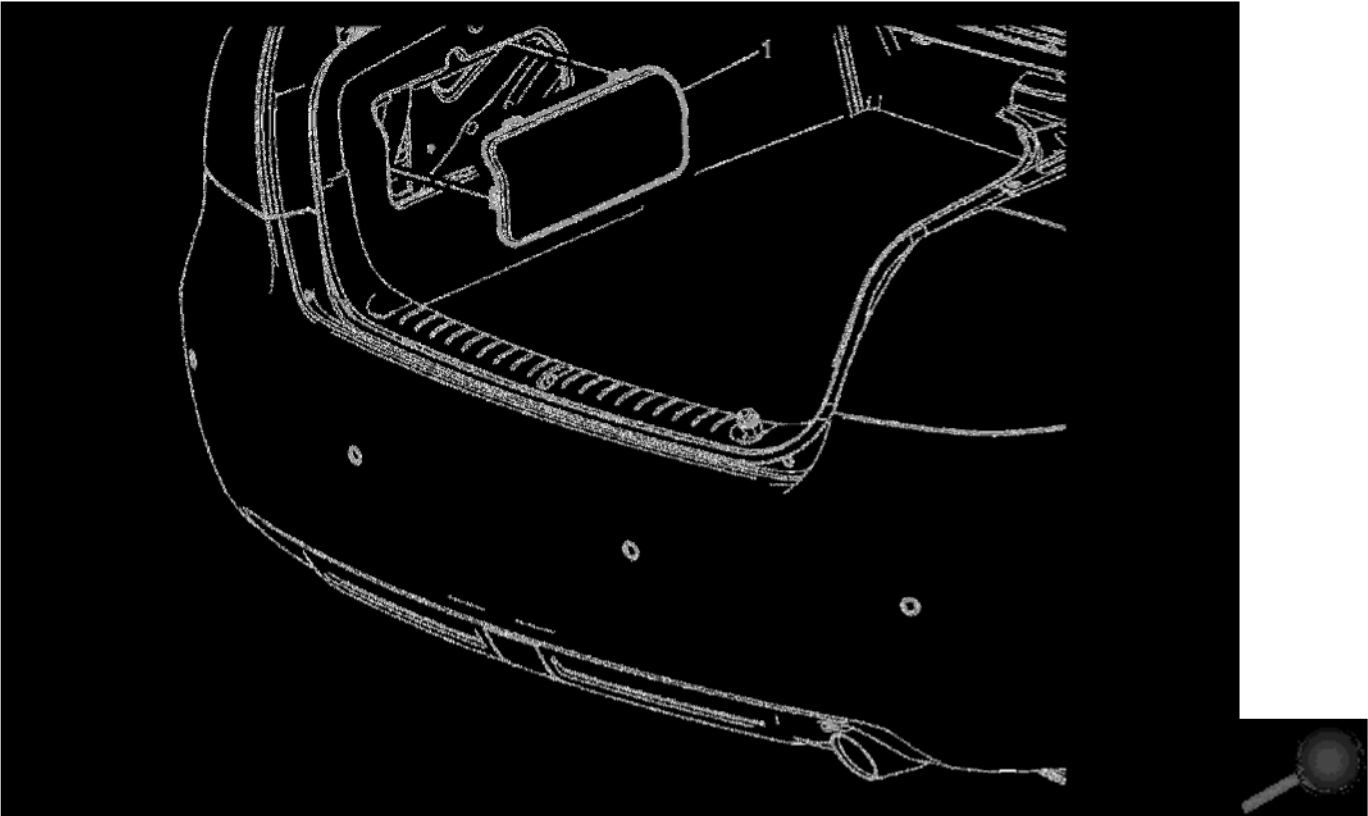

Rear Compartment Side Trim Panel Access Hole Cover Replacement

Callout	Component Name
1	Rear Compartment Side Trim Panel Access Hole Cover Assembly Procedure Use a plastic trim tool to aid in the removal. © 2014 General Motors. All rights reserved.

Rear Compartment Side Trim Panel Access Hole Cover Replacement (Sportwagon, Right Side with LPG)

[Removal Procedure](#)




Note:

- When a suitable hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.
- Push down on the centre of the tail lamp access cover trim panel and pull on the top of the tail lamp access cover trim panel to release the retaining tangs.

1. Install a suitable liftgate brace to the vehicle.
2. Remove the spare wheel stowage bracket. Refer to [Spare Wheel Stowage Bracket Replacement](#).
3. Carefully disengage the tail lamp access cover trim panel retaining tangs (1).

4. Remove tail lamp access cover trim panel (2) from the vehicle.

Installation Procedure

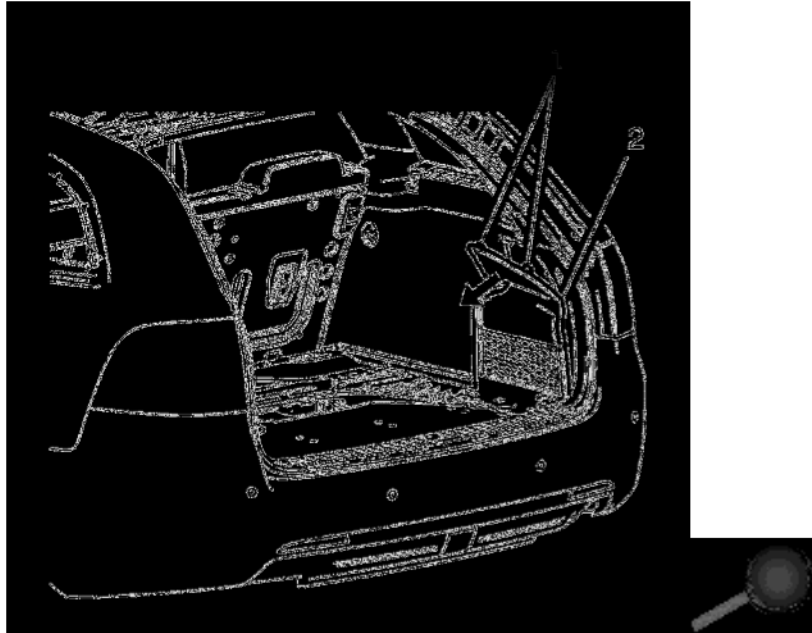


Note:

- When a suitable hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.
- Insert the locating tabs on the bottom of the tail lamp access cover trim panel then push the top of the tail lamp access cover trim panel to engage the retaining tangs.

1. Position the tail lamp access cover trim panel (2) to the vehicle.
2. Carefully engage the tail lamp access cover trim panel retaining tangs (1). An audible click will confirm correct fitment.
3. Install the spare wheel stowage bracket. Refer to [Spare Wheel Stowage Bracket Replacement](#).
4. Remove the suitable liftgate brace from the vehicle.

Rear Compartment Side Trim Panel Access Hole Cover Replacement (Short Wheelbase Sedan)

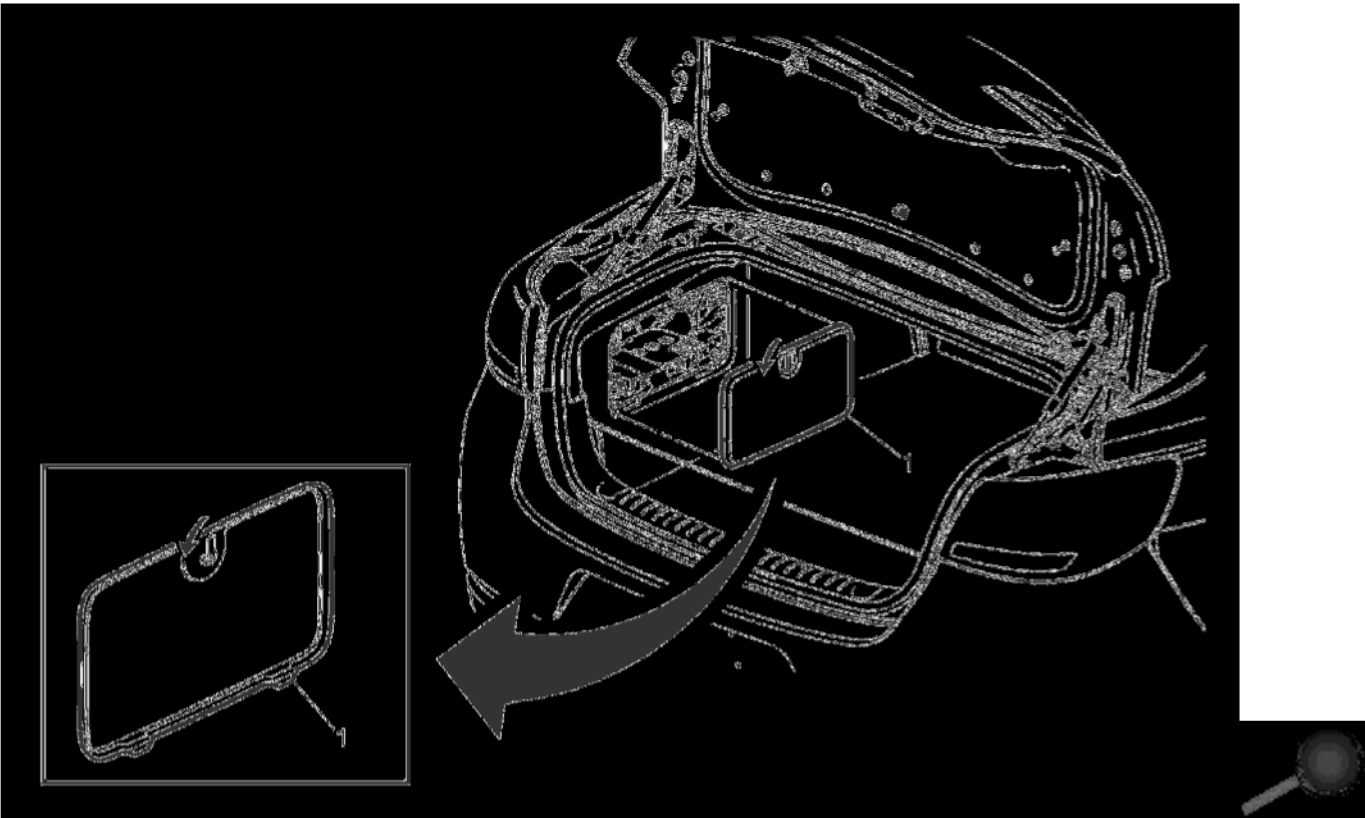


Rear Compartment Side Trim Panel Access Hole Cover Replacement

Callout	Component Name
1	Rear Compartment Side Trim Panel Access Hole Cover Procedure Turn the rear compartment side trim panel clip one quarter turn to disengage access hole cover from the rear

compartment side trim panel.

Rear Compartment Side Trim Panel Replacement (Sedan, Left Side)

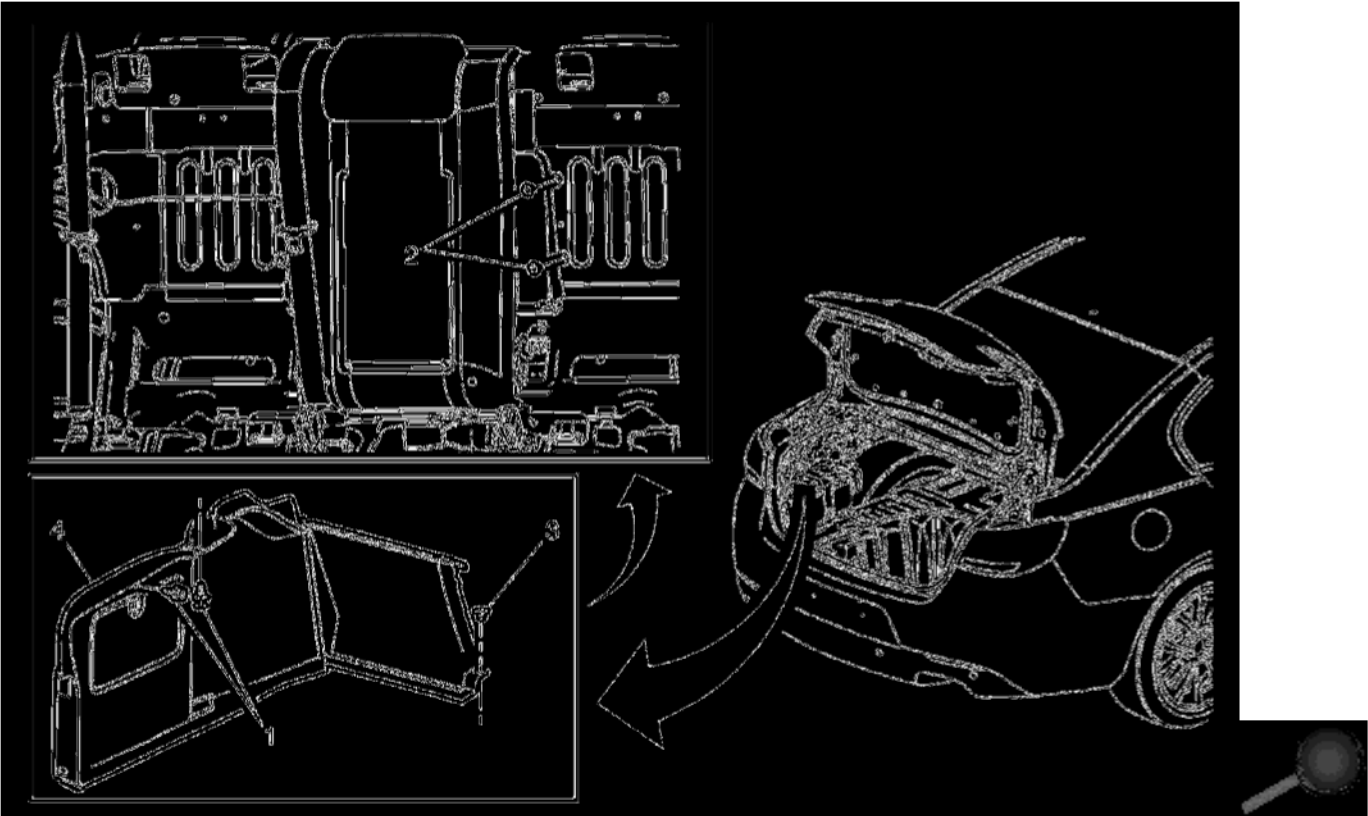


Rear Compartment Side Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the liftgate sill garnish molding. Refer to 2014 General Motors All rights Reserved. 2014 GM Sil Garnish Molding Replacement .	
2. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation .	
3. Remove the rear seat back rear lower center cover carpet. Refer to Rear Seat Back Rear Lower Center Cover Carpet	

[Replacement.](#)

1	Rear Seat Back Body Panel Trim Panel Retainer (Qty: 2)
2	Rear Compartment Side Trim Retainer (Qty: 2)
3	Rear Seat Back Opening Trim Lower Cover Retainer
4	Rear Compartment Side Trim Panel Assembly

Rear Compartment Side Trim Panel Replacement (Sedan, Right Side)

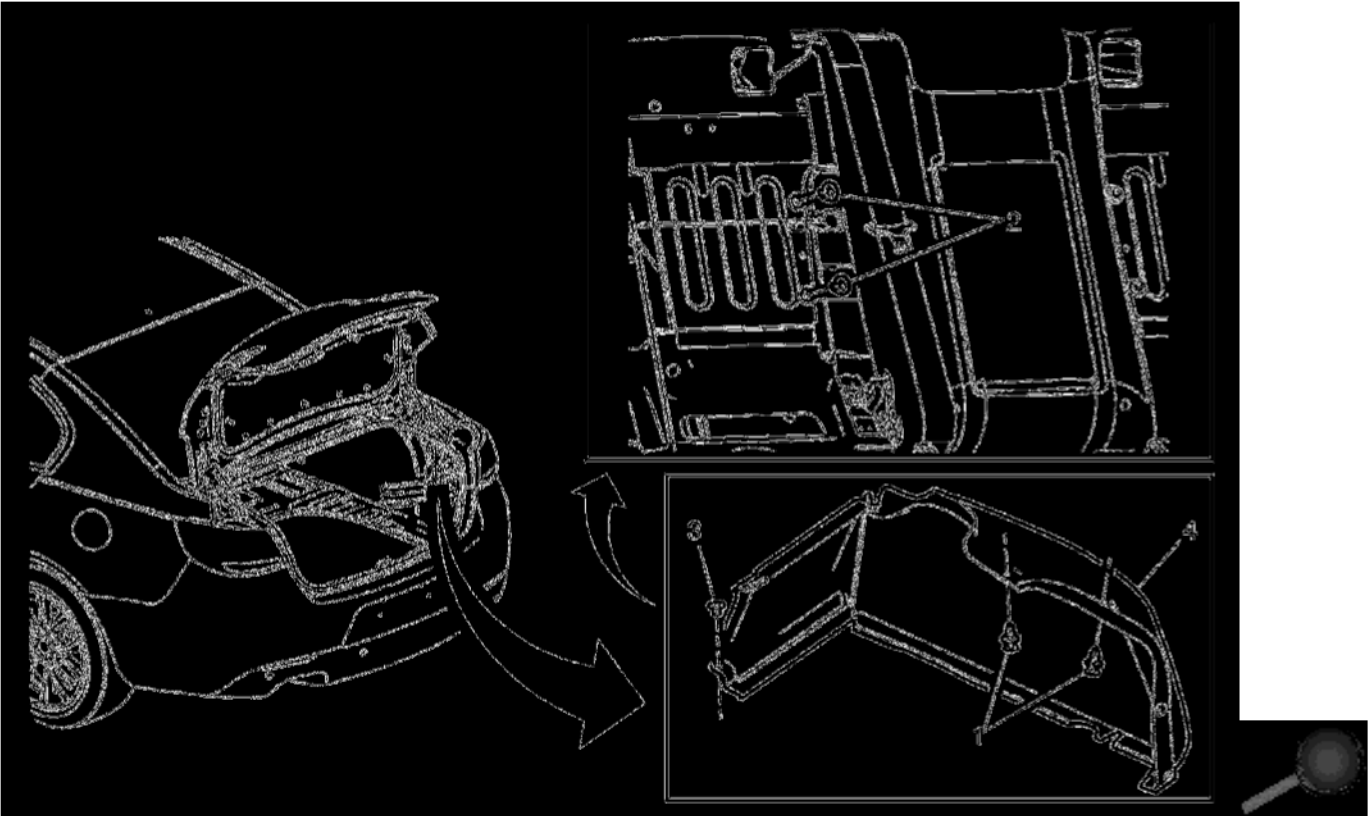


Rear Compartment Side Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the liftgate sill garnish molding. Refer to 2014 General Motors All rights Reserved.	
2. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation.	
3. Remove the rear seat back rear lower center cover carpet. Refer to Rear Seat Back Rear Lower Center Cover Carpet	

[Replacement.](#)

1	Rear Seat Back Body Panel Trim Panel Retainer (Qty: 2)
2	Rear Compartment Side Trim Retainer (Qty: 2)
3	Rear Seat Back Opening Trim Lower Cover Retainer
4	Rear Compartment Side Trim Panel Assembly

Roof Rail Assist Handle Replacement (Front)

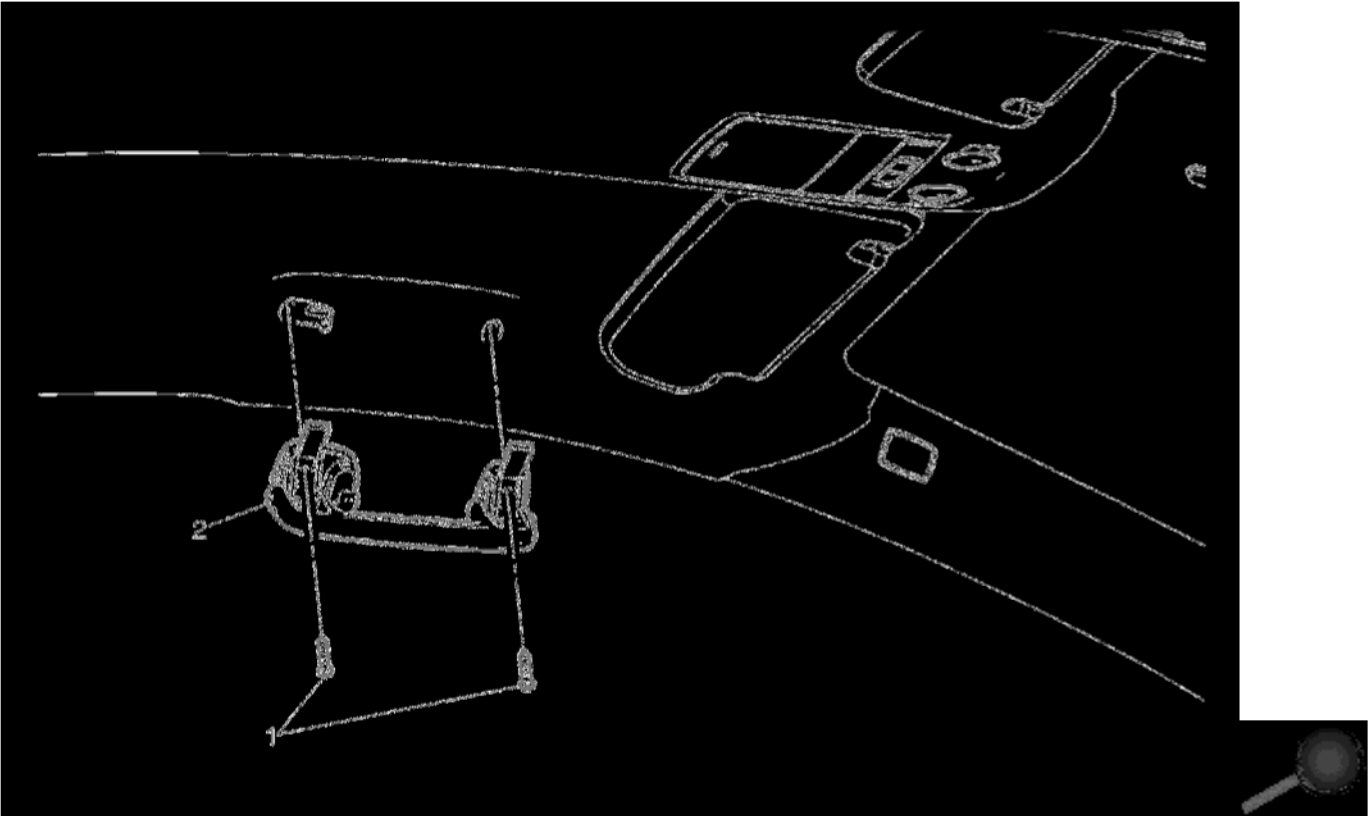


Roof Rail Assist Handle Replacement

Callout	Component Name
1	Roof Rail Front Assist Handle Fastener (Qty: 2) Caution: Refer to Fastener Caution. © 2014 General Motors. All rights reserved. Procedure 1. Fold the assist handle downward and hold.

	2. Use a small flat-bladed tool to open the assist handle covers to access the screws.
2	Roof Rail Front Assist Handle Assembly

Roof Rail Assist Handle Replacement (Rear)

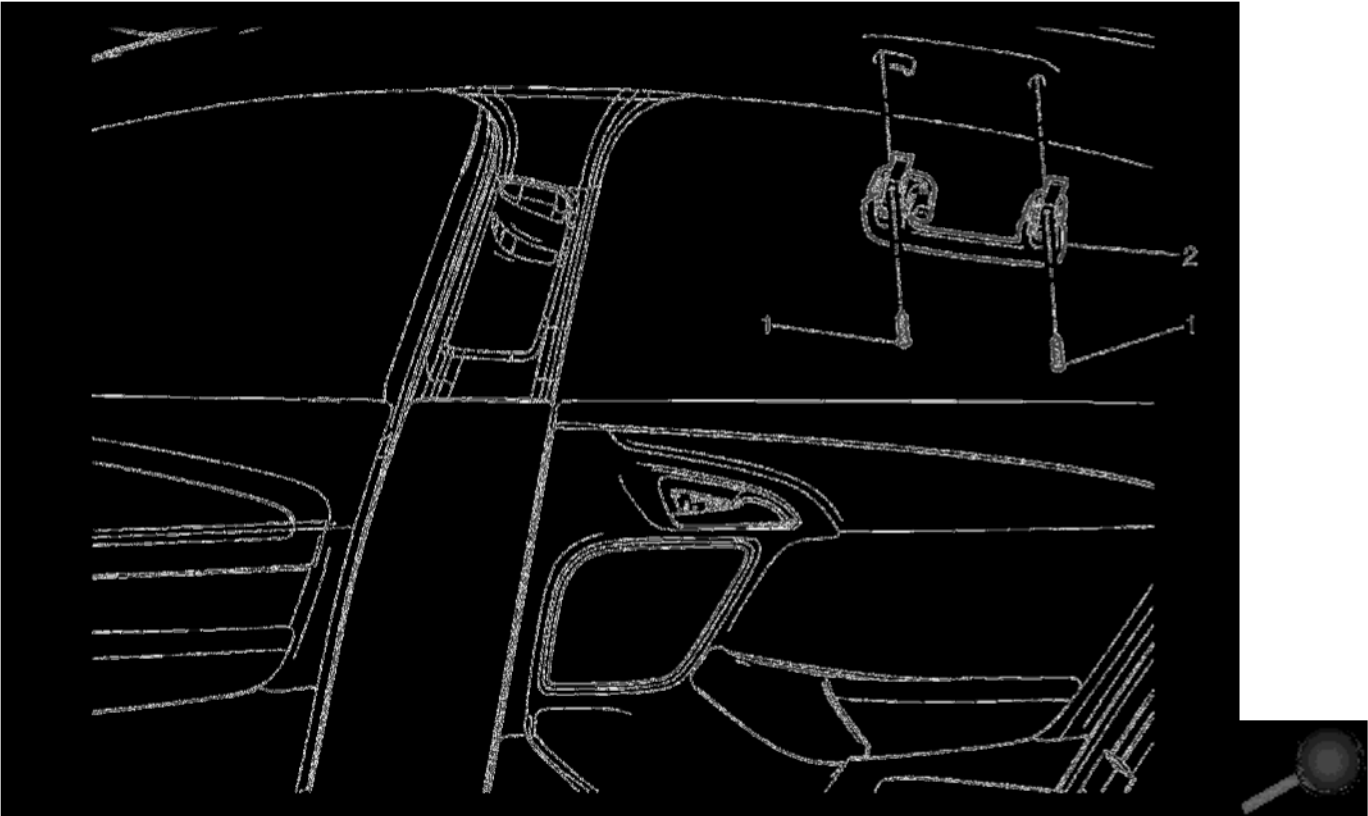


Roof Rail Assist Handle Replacement

Callout	Component Name
1	Roof Rail Rear Assist Handle Fastener (Qty: 2) Caution: Refer to Fastener Caution. Procedure 1. Fold the assist handle downward and hold.

	2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6 N•m (53 lb in)
2	Roof Rail Rear Assist Handle Assembly

Coat Hook Replacement (Sportwagon)

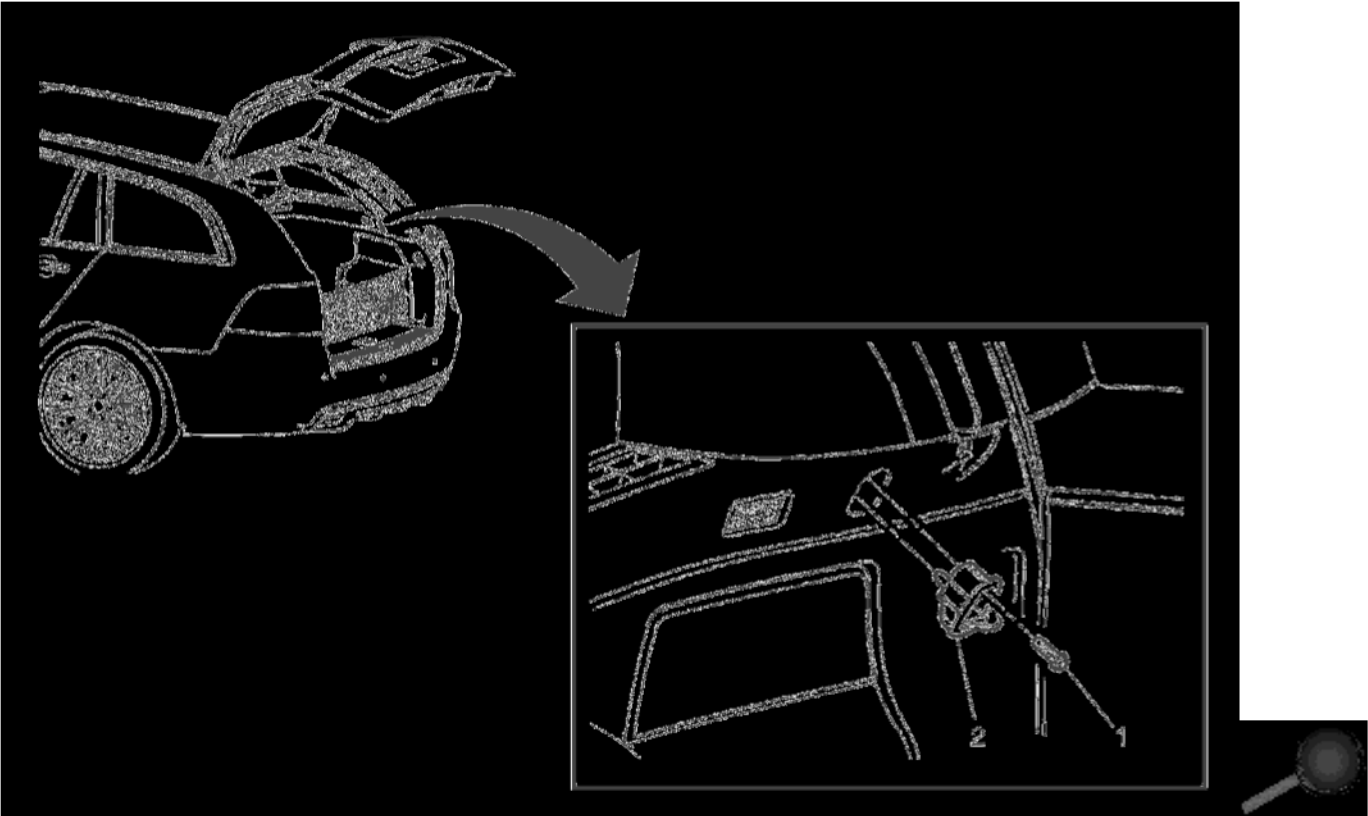


Coat Hook Replacement

Callout	Component Name
1	Coat Hook Fastener Caution: Refer to Fastener Caution. Procedure 1. Pull hook downward to access coat hook cover and fastener.

	2. Use appropriate trim tool to pull cover downward to access the coat hook fastener. Tighten 6 N•m (53 lb in)
2	Coat Hook Assembly

Sunshade Replacement

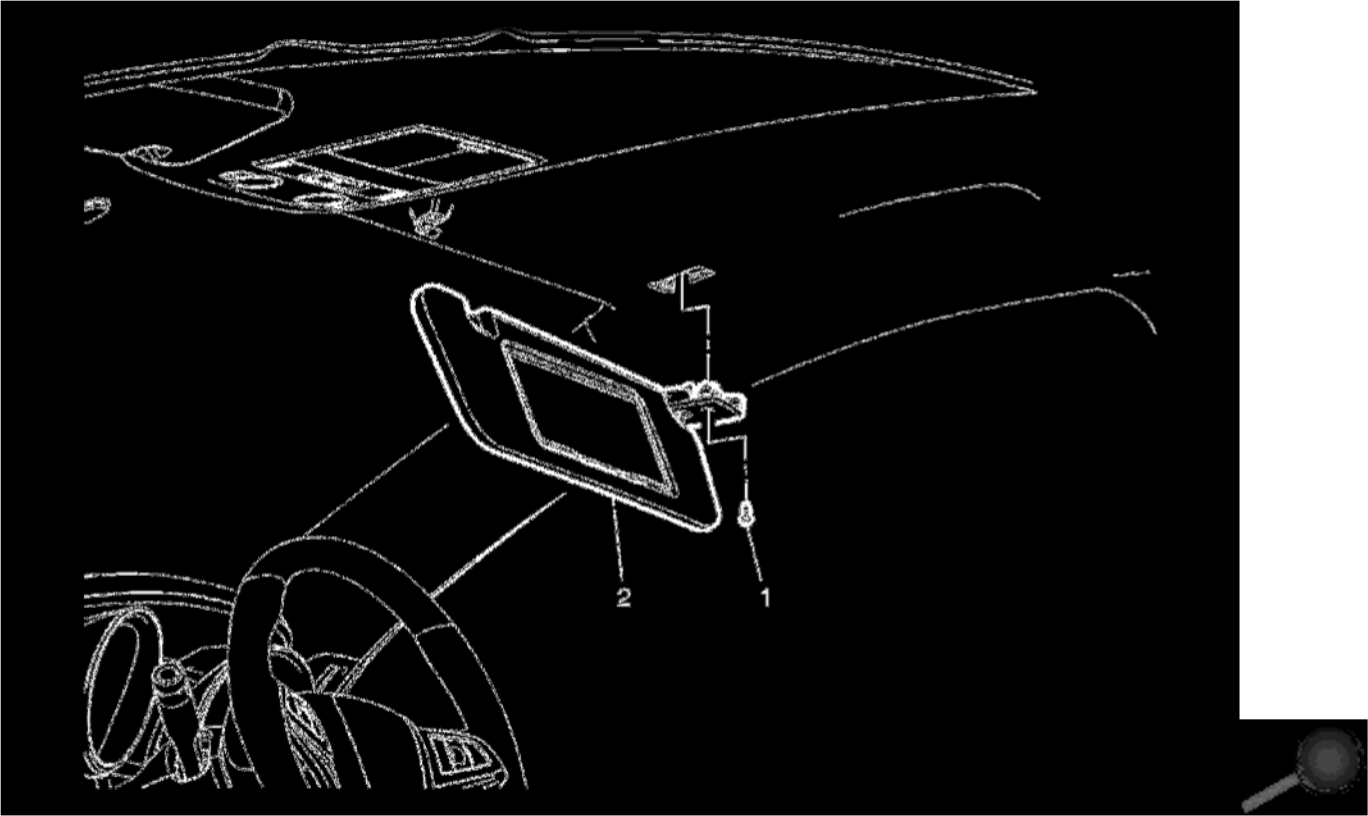


Sunshade Replacement

Callout	Component Name
Preliminary Procedure Lower the front of the headliner to access the sunshade electrical connector, if necessary. Refer to Headlining Trim Panel Replacement . © 2014 General Motors. All rights reserved.	
1	Sunshade Fastener

	Caution: Refer to Fastener Caution .
2	Sunshade Assembly Procedure 1. Detach the sunshade from the sunshade support. 2. Disconnect the electrical connector.

Sunshade Support Replacement

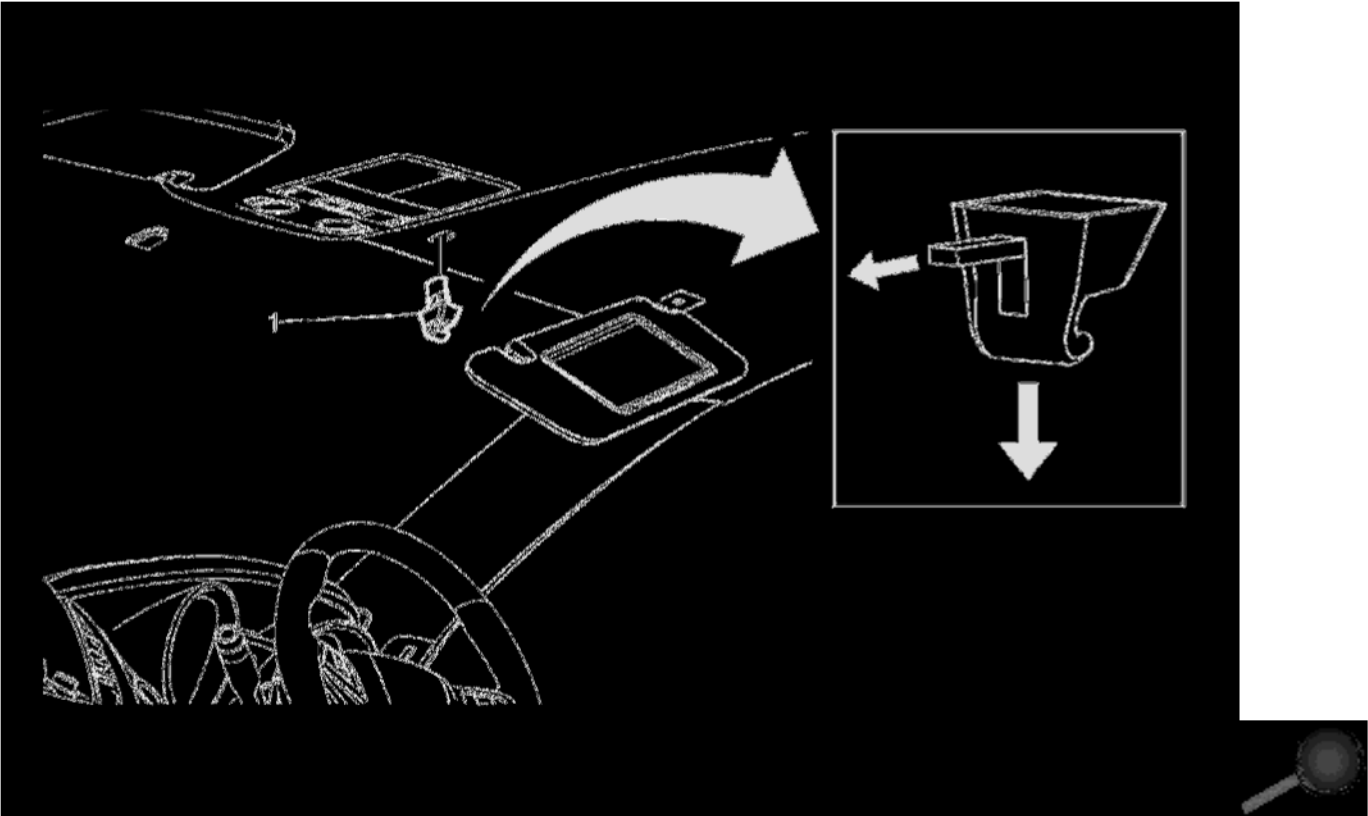


Sunshade Support Replacement

Callout	Component Name
1	Sunshade Support Assembly Procedure © 2014 General Motors. All rights reserved. 1. Pull out sunshade bezel retainer locking pin to disengage sunshade support from the headliner. 2. Ensure the internal spring is captured.

3. Using an appropriate flat-bladed tool, depress the locking clips and remove the clip base from the roof.
4. Reassemble clip base, spring, sunshade support and locking pin prior to installation.

Windshield Garnish Molding Replacement

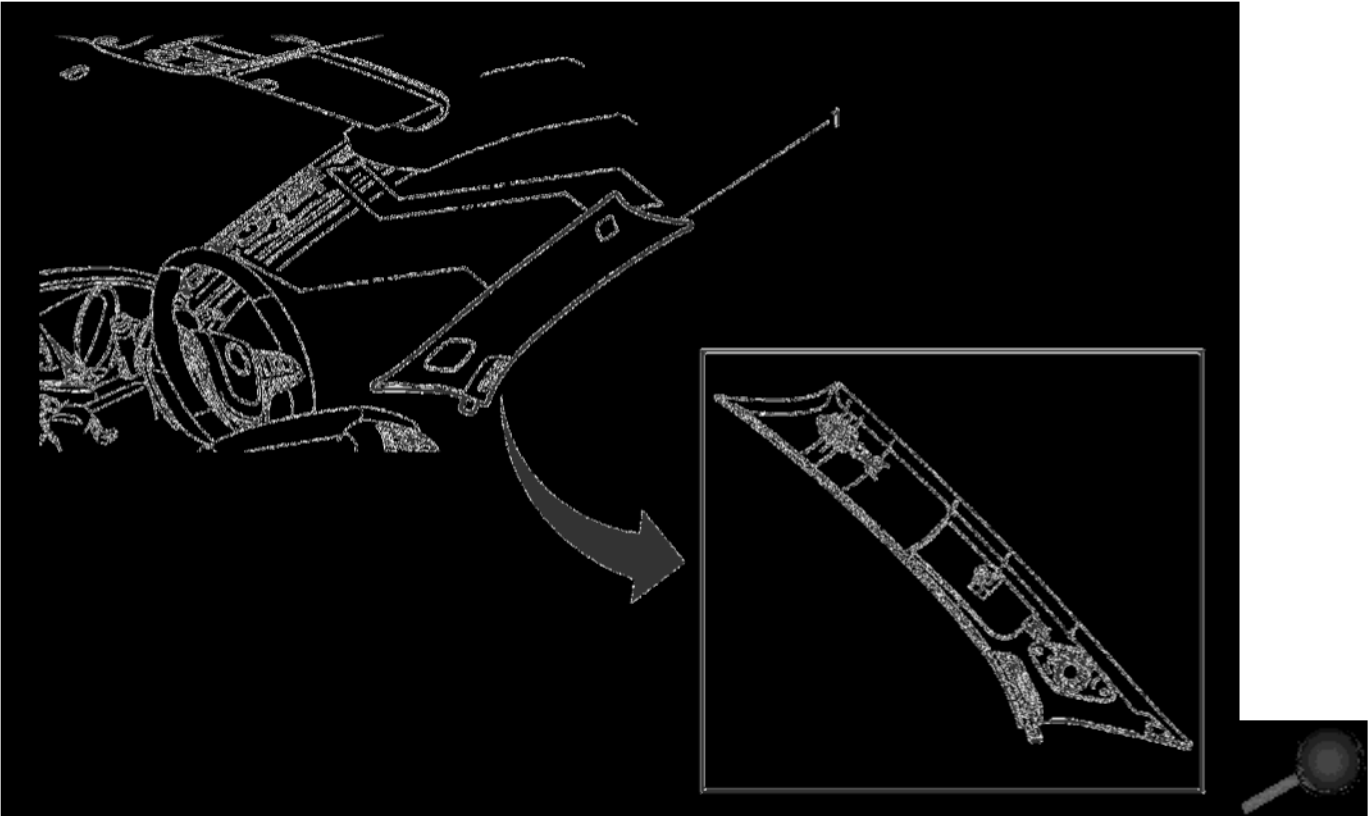


Windshield Garnish Molding Replacement

Callout	Component Name
Preliminary Procedures Disable the SIR system, if equipped. Refer to SIR Disabling and Enabling . © 2014 General Motors. All rights reserved.	
	Windshield Garnish Molding Assembly Procedure

1

1. Disengage upper portion of windshield garnish molding by pulling down on molding where it meets the headliner until the tether clip unclips from itself, then reach in with fingers to unhook the tether strap from the body hinge pillar inner panel so the tether clip can be removed from the windshield garnish molding.
2. Disconnect the electrical connector.
3. The tether clip at the upper portion of the garnish molding **MUST** be replaced every time the windshield garnish molding is removed.

Body Hinge Pillar Garnish Molding Replacement

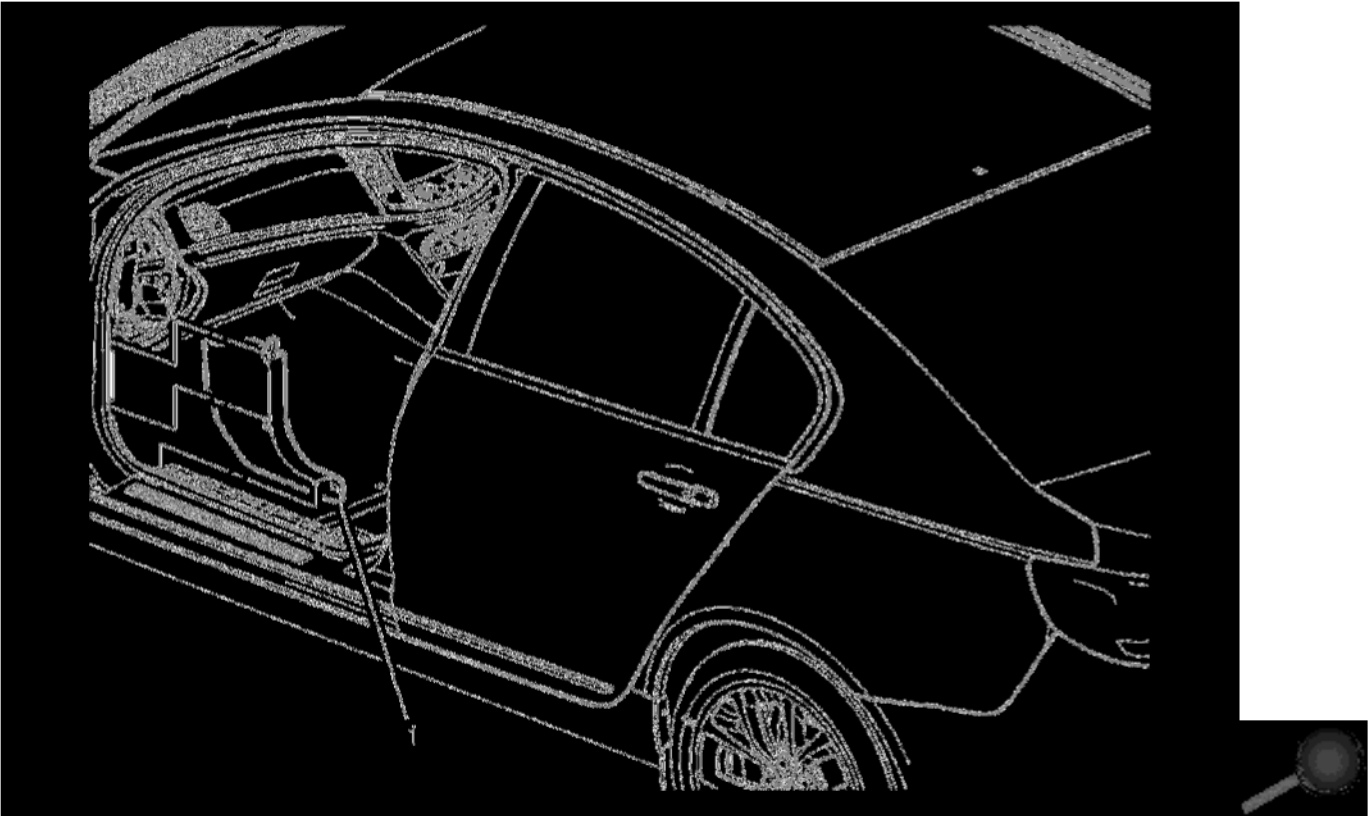

Body Hinge Pillar Garnish Molding Replacement

Callout	Component Name
Preliminary Procedure 1. Remove the front side door sill garnish molding. Refer to Front Side Door Sill Garnish Molding Replacement. 2. Remove instrument panel outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement.	


Body Hinge Pillar Garnish Molding Assembly

Procedure

1

1. Use the appropriate plastic trim tool to aid in the removal of the body hinge pillar garnish molding.
2. Reposition the front floor panel carpet as needed.

Center Pillar Upper Trim Panel Replacement (Sedan, Sportwagon)

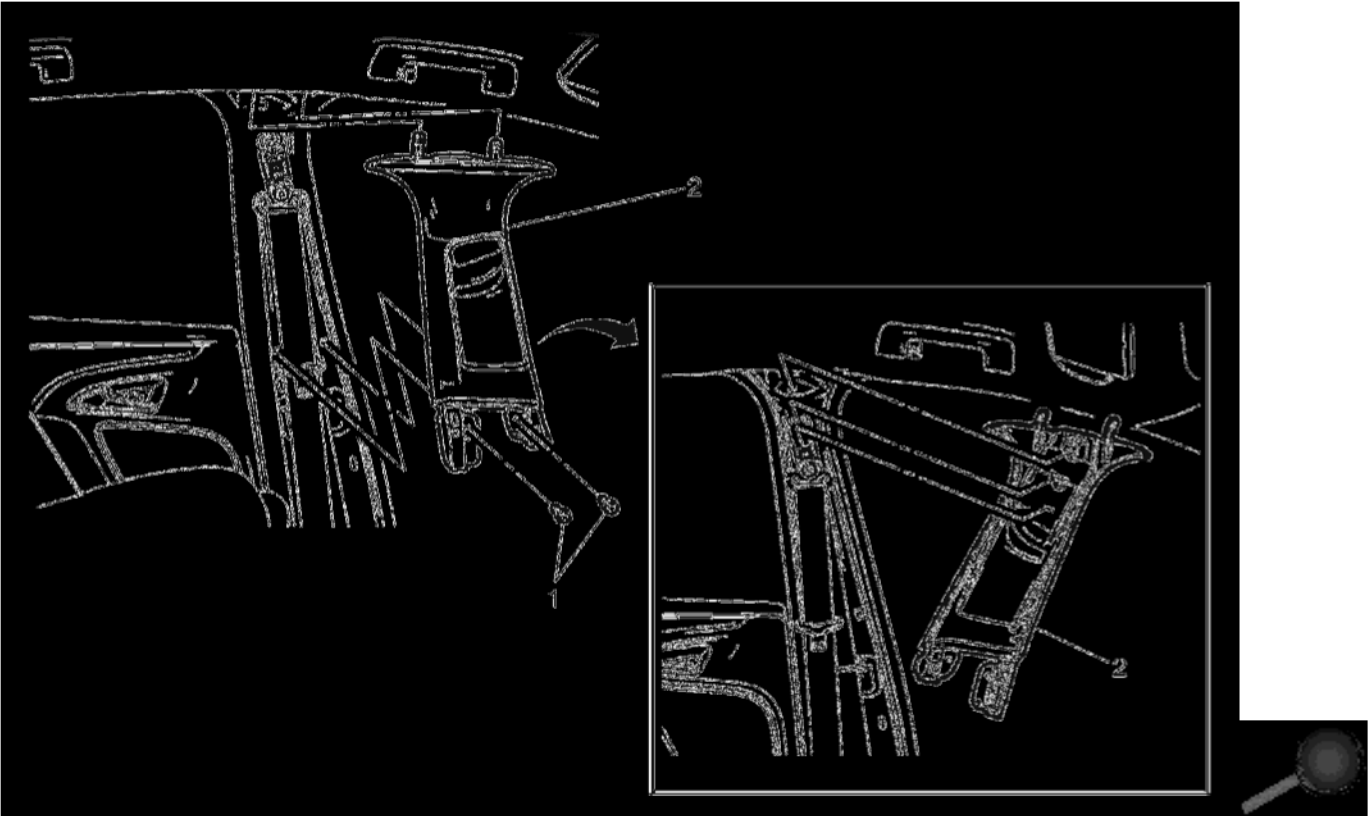


Center Pillar Upper Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Disable the roof rail SIR system. Refer to SIR Disabling and Enabling . All rights reserved.	
2. Remove the front seat belt lower anchor fastener. Refer to Front Seat Belt Retractor Replacement .	
3. Remove the center pillar center trim panel. Refer to Center Pillar Center Trim Panel Replacement .	

1	Center Pillar Upper Trim Panel Fastener (Qty: 2) Caution: Refer to Fastener Caution. Tighten 2.5 N•m (22 lb in)
2	Center Pillar Upper Trim Panel Assembly Procedure 1. Tilt the base of the center pillar upper trim panel away from the center pillar to disengage the locating pin. 2. Lower the center pillar upper trim panel down and away from the roof panel trim until the integral tabs have disengaged from the roof panel datum holes. 3. Thread the seat belt through the center pillar upper trim panel.

Center Pillar Upper Trim Panel Replacement (Ute)

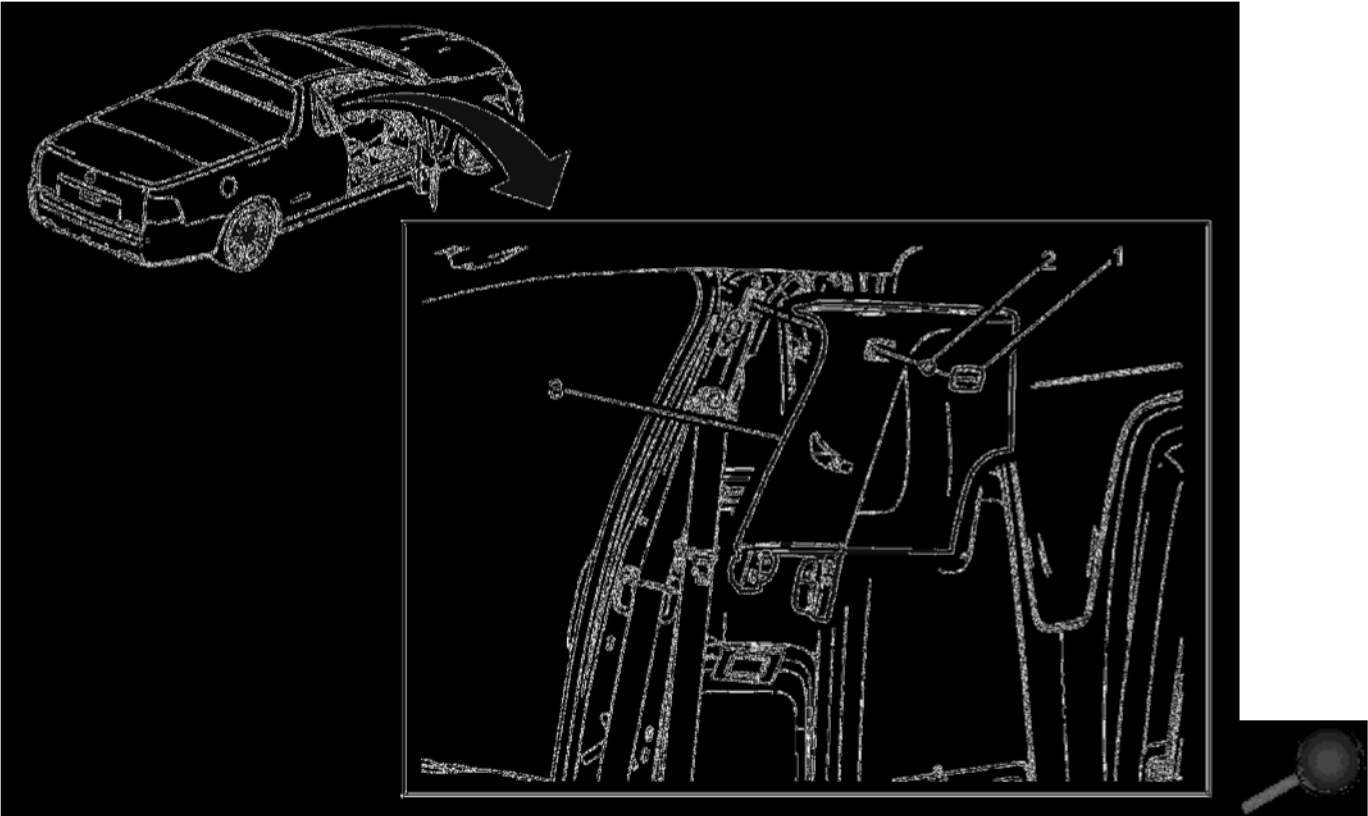


Center Pillar Upper Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Disable the roof rail SIR system. Refer to SIR Disabling and Enabling . All rights reserved.	
2. Remove the front seat belt lower anchor fastener. Refer to Front Seat Belt Retractor Replacement .	
3. Remove the center pillar center trim panel. Refer to Center Pillar Center Trim Panel Replacement .	

1	Center Pillar Upper Trim Panel Bolt Cap
2	Center Pillar Upper Garnish Molding Fastener Caution: Refer to Fastener Caution .
3	Center Pillar Upper Trim Panel Assembly Procedure Thread the seat belt through the center pillar upper trim panel.

Center Pillar Center Trim Panel Replacement (Sedan, Sportwagon)

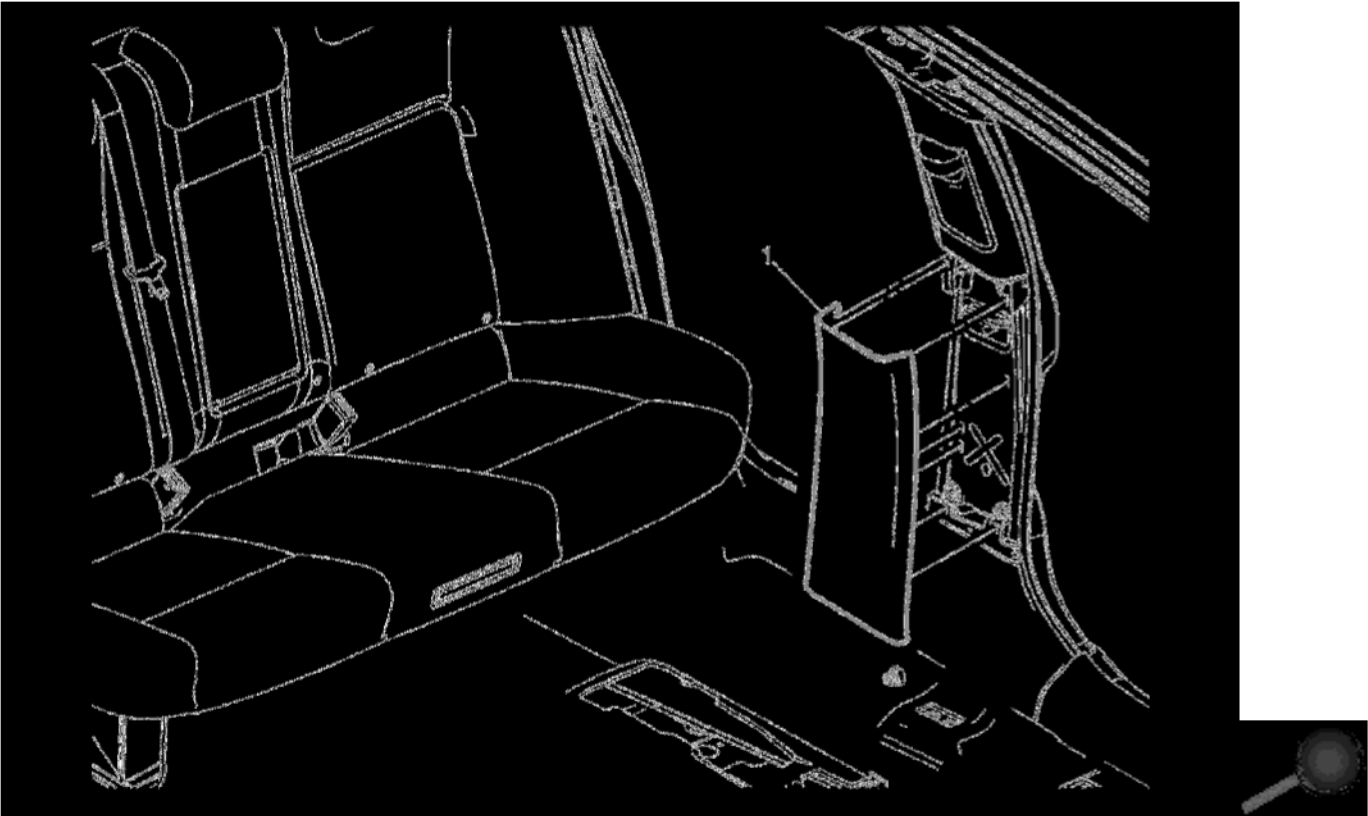


Center Pillar Center Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Open the front and rear doors. 2. Partially detach the front side door weatherstrip around the center pillar center trim panel. Refer to Front Side Door Weatherstrip Replacement - Door Side.	

3. Partially detach the rear side door upper auxiliary weatherstrip. Refer to [Front or Rear Side Door Upper Auxiliary Weatherstrip Replacement](#).

1	Center Pillar Center Trim Panel Assembly Procedure 1. Grasp and spread both sides at the top of the center pillar center trim panel and then pull away from the center pillar , disengaging it from the center pillar upper trim panel. 2. Grasp and spread both sides at the bottom of the center pillar center trim panel and then pull away from the center pillar , disengaging it from the center pillar lower trim panel.
---	--

Center Pillar Center Trim Panel Replacement (Ute)

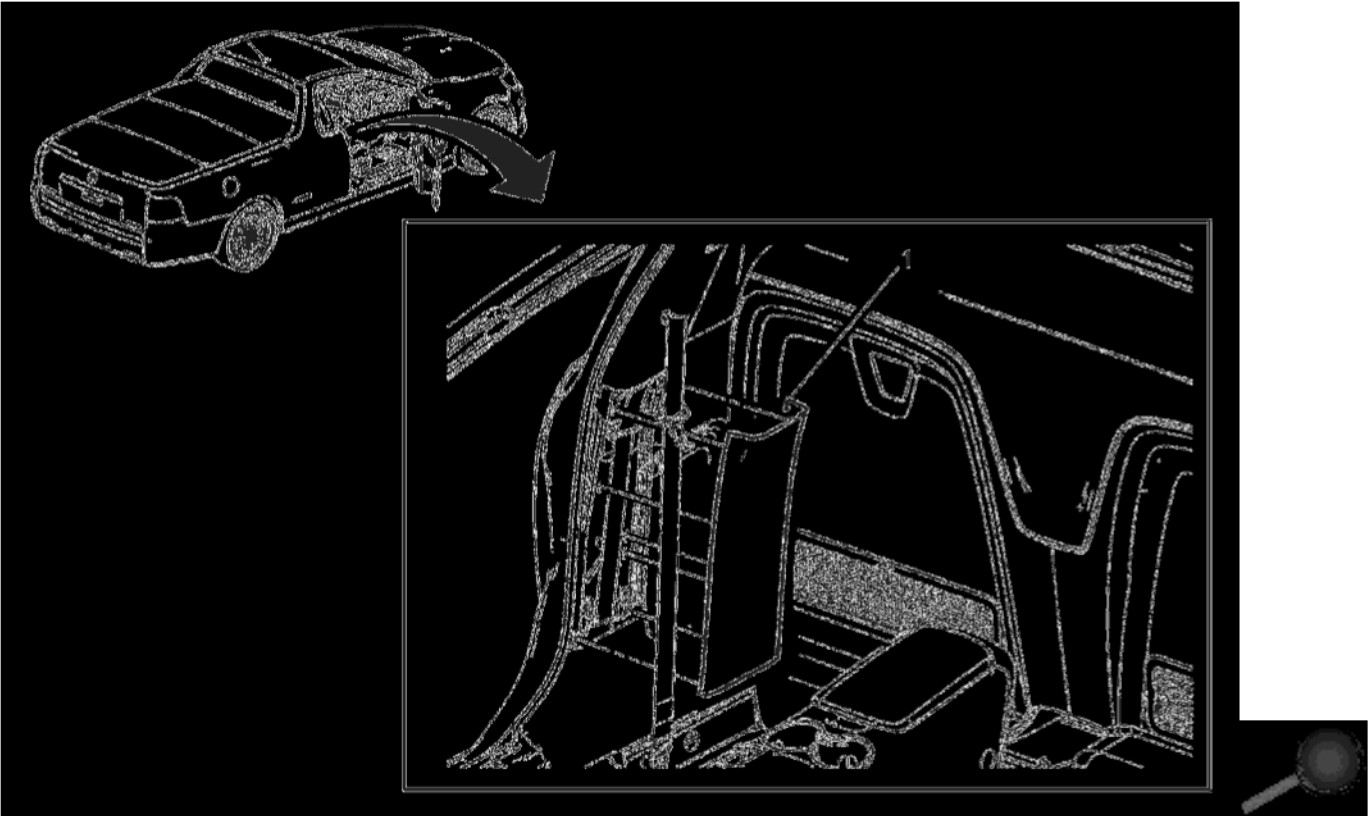


Center Pillar Center Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Open the front door. 2. Partially detach the front side door weatherstrip around the center pillar center trim panel. Refer to Front Side Door Weatherstrip Replacement - Door Side.	

1	Center Pillar Center Trim Panel Assembly Procedure 1. Grasp and spread both sides at the top of the center pillar center trim panel and then pull away from the center pillar , disengaging it from the center pillar upper trim panel. 2. Grasp and spread both sides at the bottom of the center pillar center trim panel and then pull away from the center pillar , disengaging it from the center pillar lower trim panel.
---	--

Center Pillar Lower Trim Panel Replacement (Sedan, Sportwagon)

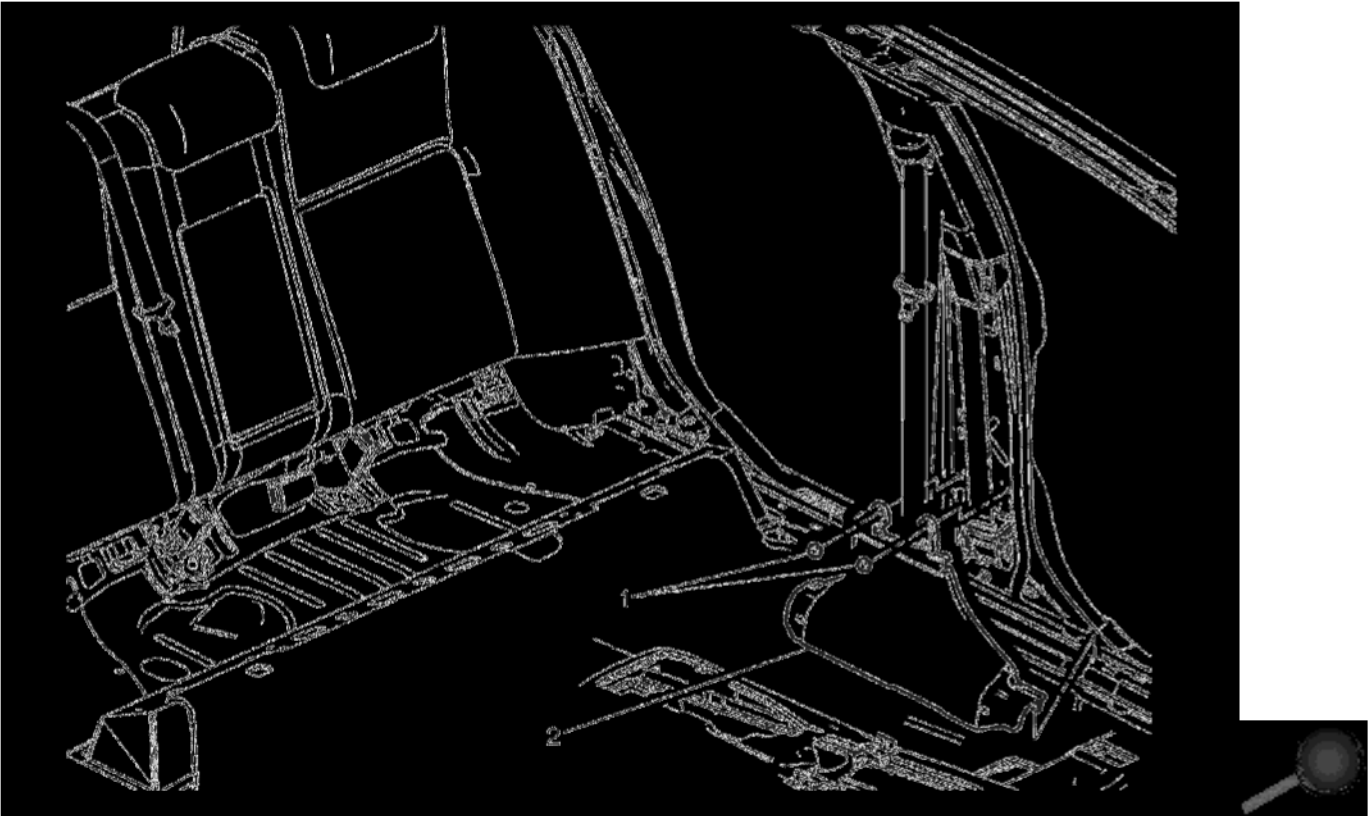


Center Pillar Lower Trim Panel Replacement

Callout	Component Name
Preliminary Procedure	
1. Remove the center pillar center trim panel assembly. Refer to Center Pillar Center Trim Panel Replacement .	
2. Remove the front side door sill garnish molding. Refer to Front Side Door Sill Garnish Molding Replacement .	
3. Remove the rear side door sill garnish molding. Refer to Rear Side Door Sill Garnish Molding Replacement .	

1	Center Pillar Lower Trim Panel Retainer (Qty: 2)
2	Center Pillar Lower Trim Panel Assembly

Center Pillar Lower Trim Panel Replacement (Ute)

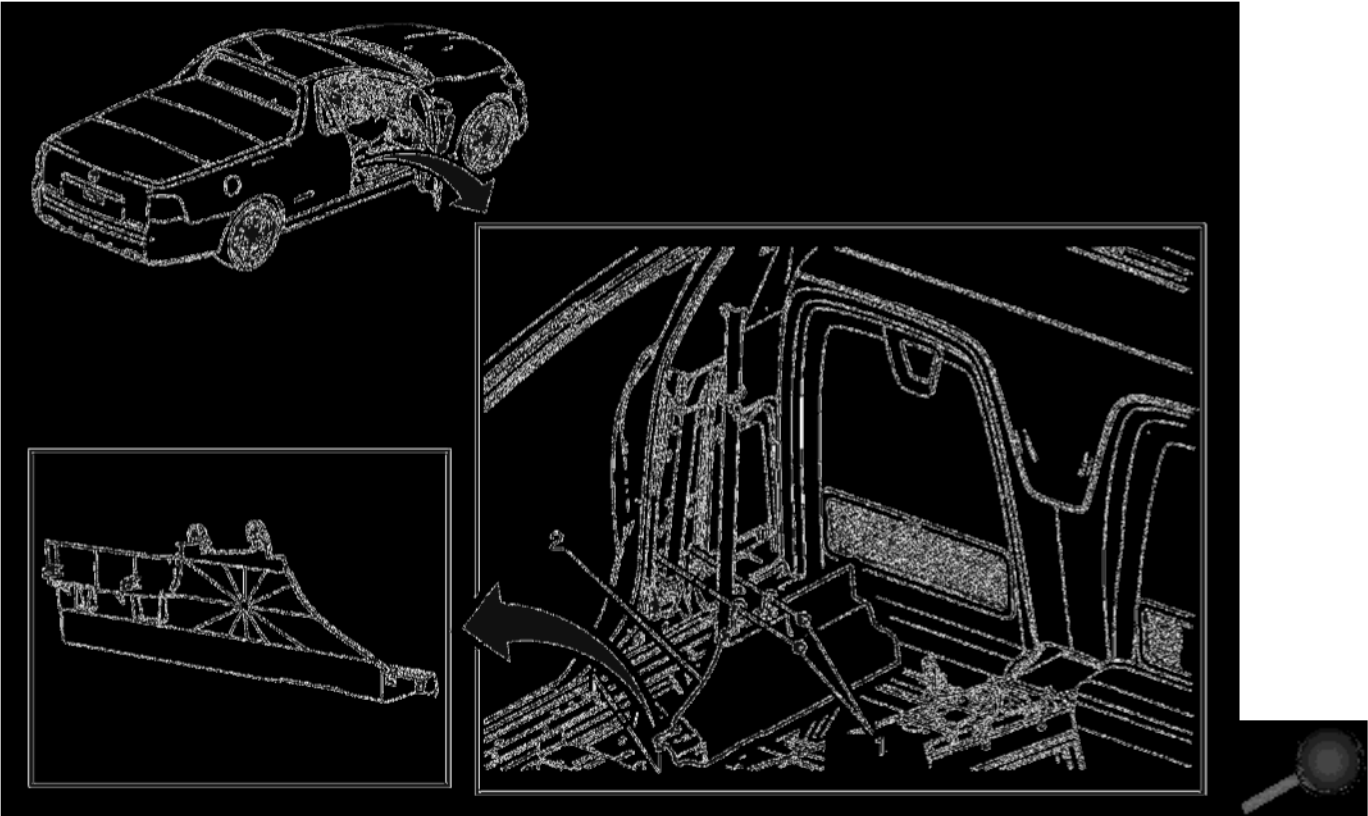


Center Pillar Lower Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the center pillar center trim panel assembly. Refer to Center Pillar Center Trim Panel Replacement .	
2. Remove the front side door sill garnish molding. Refer to Front Side Door Sill Garnish Molding Replacement .	

1	Center Pillar Lower Trim Panel Retainer (Qty: 2)
2	Center Pillar Lower Trim Panel Assembly Note: There are 2 additional retainers on the backside of the center pillar lower trim panel.

Body Lock Pillar Upper Trim Panel Replacement (Short Wheelbase Sedan)

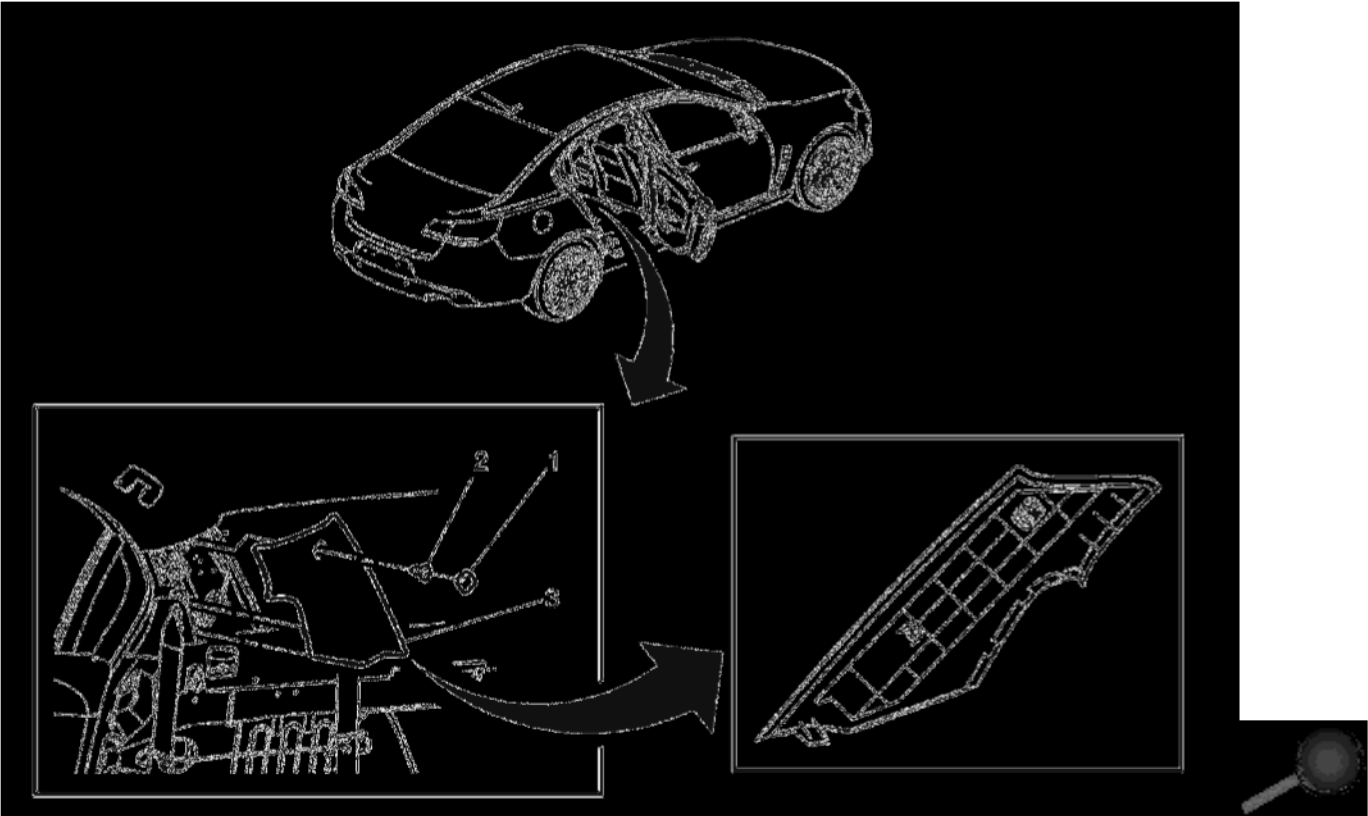


Body Lock Pillar Upper Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation .	
2. Disable the SIR system. Refer to SIR Disabling and Enabling .	

1	Body Lock Pillar Upper Trim Panel Bolt Cover
2	Body Lock Pillar Upper Trim Panel Fastener Caution: Refer to Fastener Caution . Tighten 2.5 N•m (22 lb in)
3	Body Lock Pillar Upper Trim Panel Assembly Procedure Use a trim tool or equivalent to aid in the removal.

Body Lock Pillar Upper Trim Panel Replacement (Sportwagon)

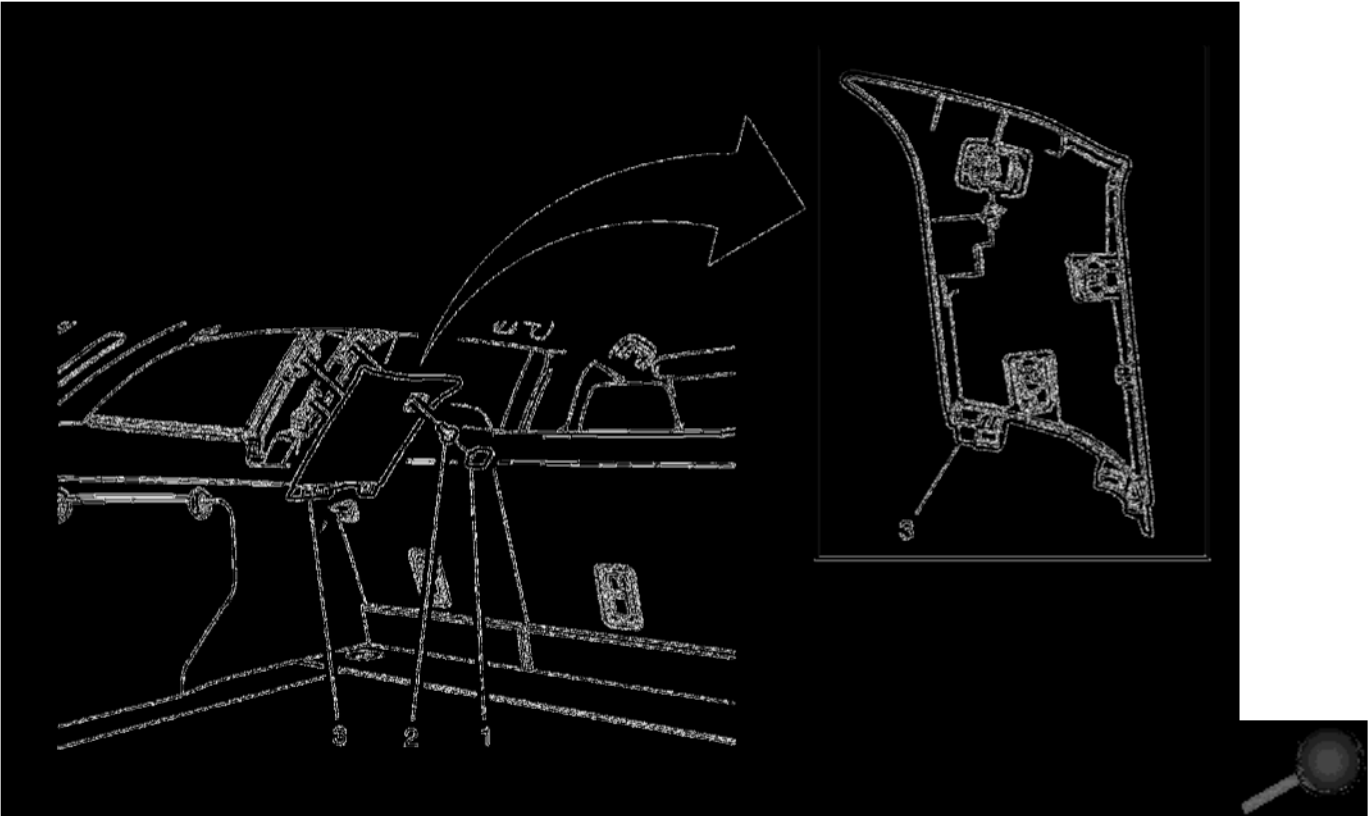


Body Lock Pillar Upper Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Disable the SIR system. Refer to SIR Disabling and Enabling .	
2. Remove the body side rear window garnish molding. Refer to Body Side Rear Window Garnish Molding Replacement .	

1	Quarter Window Trim Finish Panel Bolt Cap
2	Quarter Window Trim Finish Panel Fastener Caution: Refer to Fastener Caution .
3	Body Lock Pillar Upper Trim Panel Assembly Procedure Use the appropriate trim tool to release the body lock pillar upper trim panel from the quarter inner panel.

Body Lock Pillar Upper Trim Panel Replacement (Long Wheelbase Sedan)

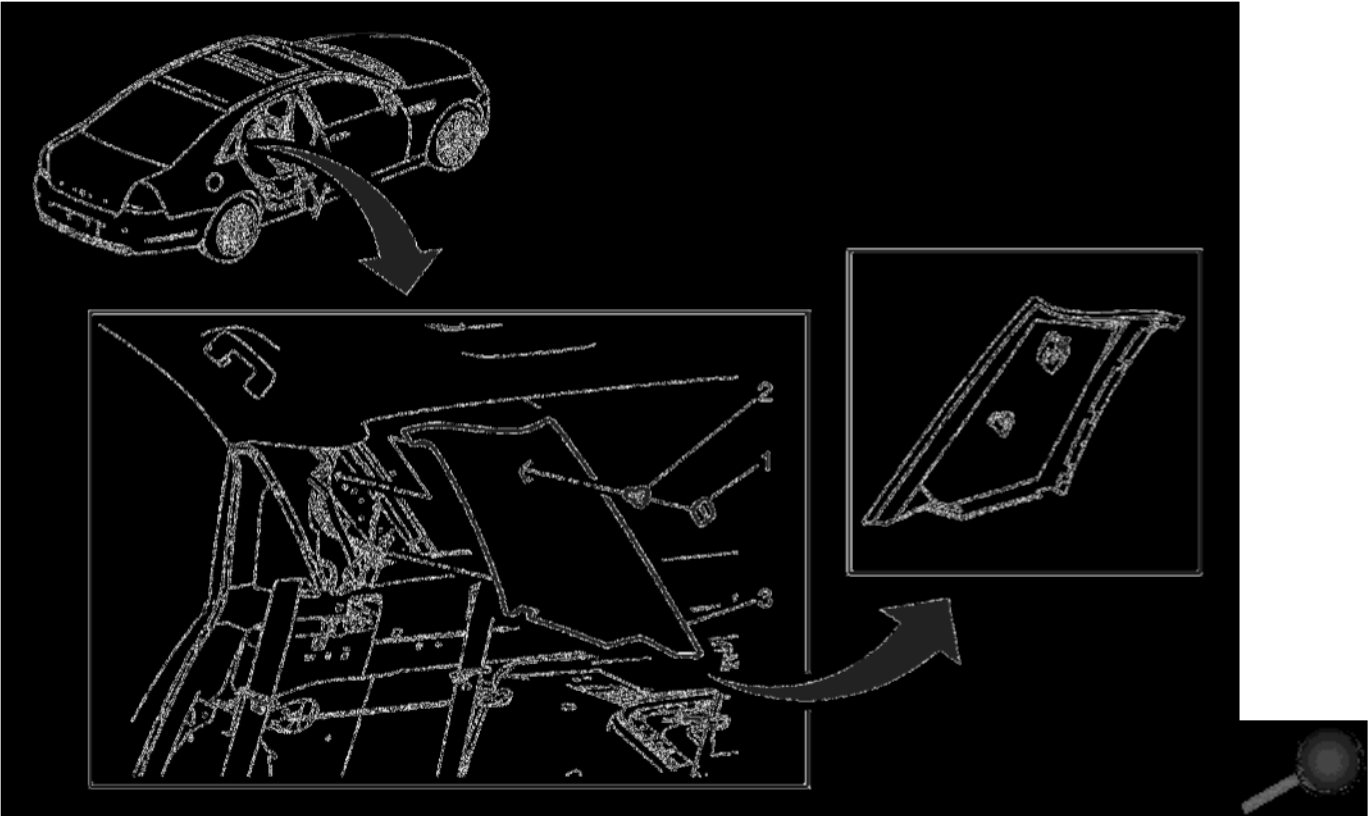


Body Lock Pillar Upper Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation .	
2. Disable the SIR system. Refer to SIR Disabling and Enabling .	

1	Body Lock Pillar Upper Trim Panel Bolt Cover
2	Body Lock Pillar Upper Trim Panel Fastener Caution: Refer to Fastener Caution .
3	Body Lock Pillar Upper Trim Panel Assembly Procedure Use a trim tool or equivalent to aid in the removal.

Quarter Window Trim Finish Panel Replacement (Short Wheelbase Sedan)

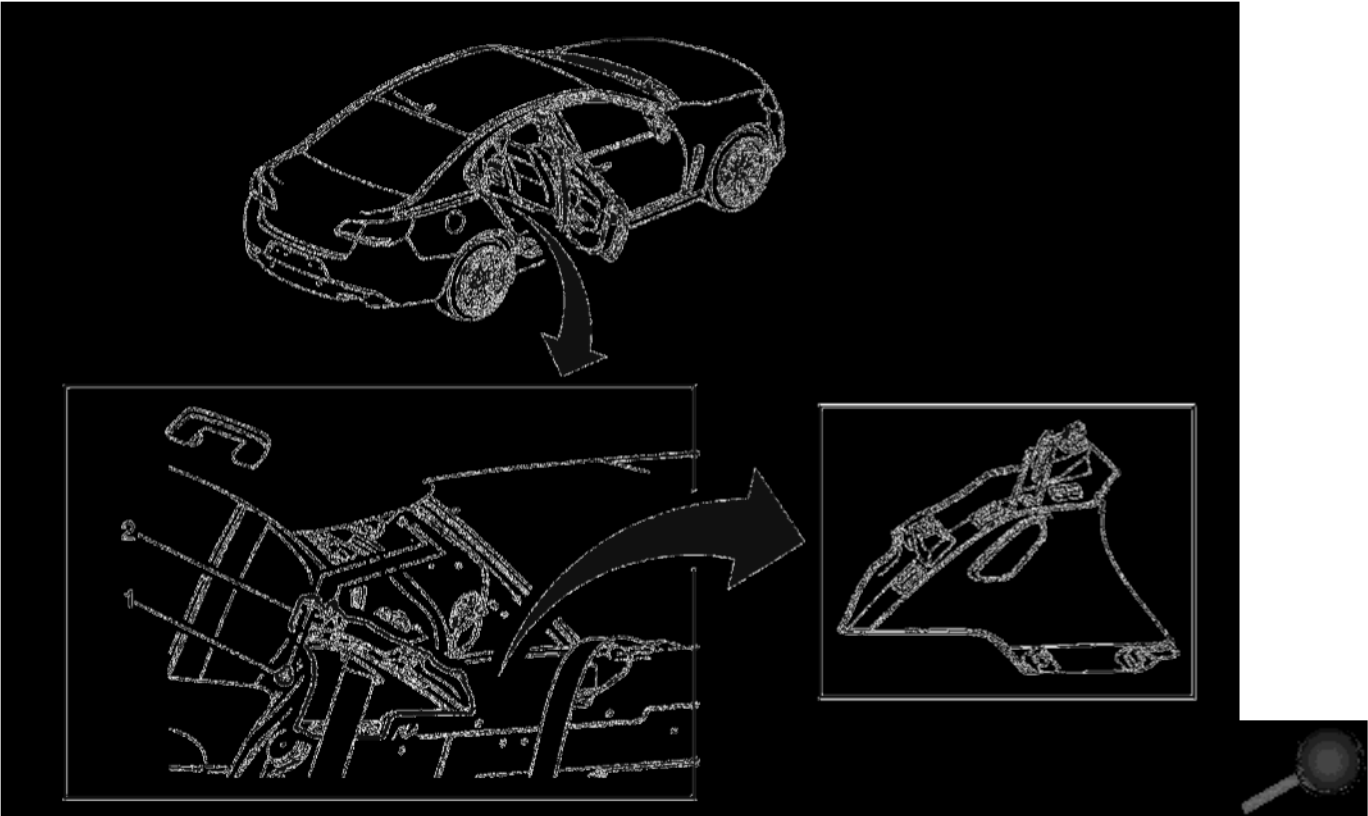


Quarter Window Trim Finish Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Disable the SIR system. Refer to SIR Disabling and Enabling . © 2014 General Motors. All rights reserved.	
2. Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement .	
3. Remove the rear seat lower anchor plate bolt on the side of the trim panel being replaced. Refer to Rear Seat Belt Retractor	

[Replacement.](#)

1	Quarter Window Trim Finish Panel Fastener Caution: Refer to Fastener Caution. Tighten 2.5 N•m (22 lb in)
2	Quarter Window Trim Finish Panel Assembly Procedure 1. Loosen the rear side door opening weather-strip. 2. Route the seat belt through trim panel.

Quarter Window Trim Finish Panel Replacement (Sportwagon)

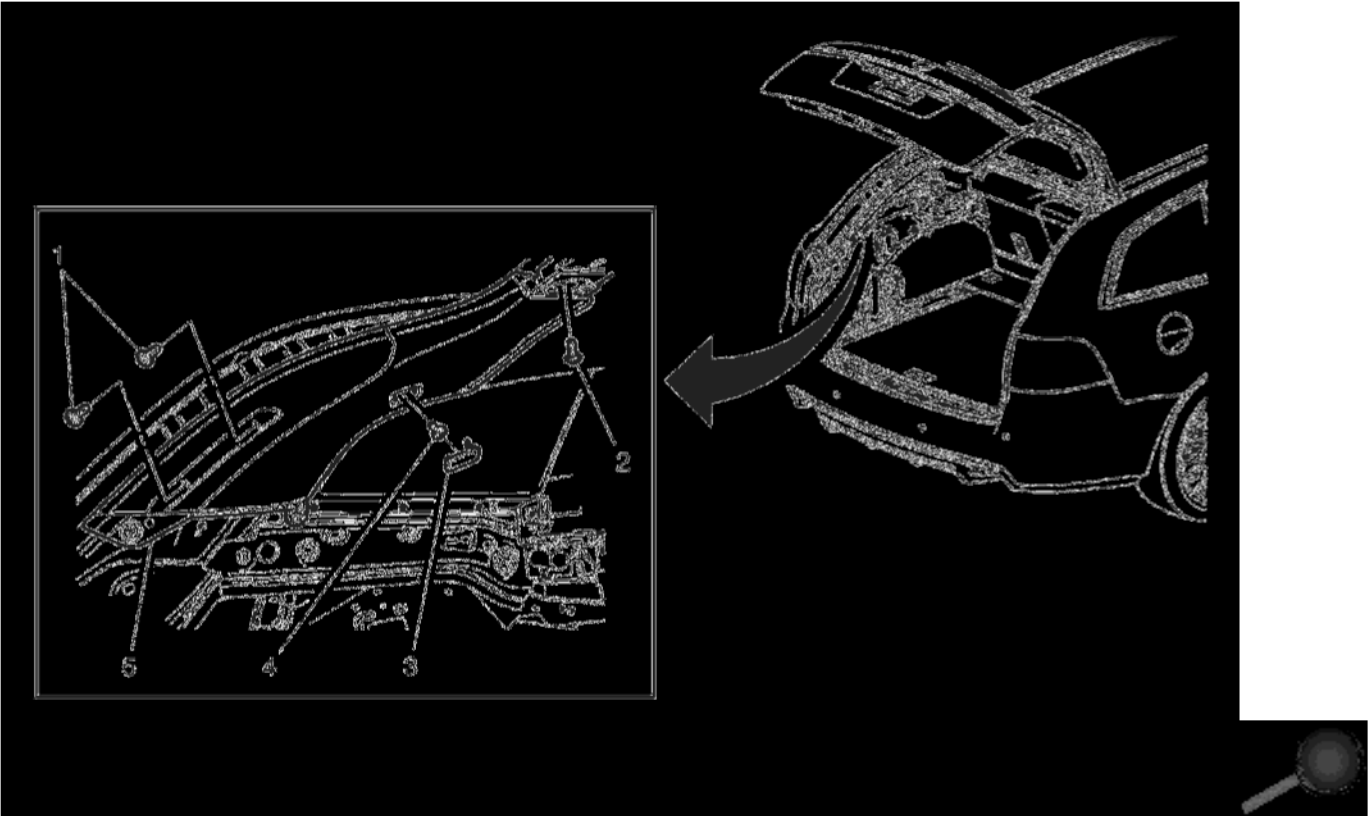


Quarter Window Trim Finish Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the luggage shade. Refer to Luggage Shade Replacement . All rights reserved.	
2. Remove the liftgate upper center trim finish panel. Refer to Liftgate Upper Center Trim Finish Panel Replacement .	
3. Remove the quarter inner trim finish panel — right side or left side. Refer to Quarter Inner Trim Finish Panel Replacement - Right	

[Side](#) or [Quarter Inner Trim Finish Panel Replacement - Left Side](#).

1	Body Side Window Garnish Molding Fastener Caution: Refer to Fastener Caution .
2	Headlining Trim Panel Fastener
3	Quarter Window Trim Finish Panel Bolt Cap
4	Quarter Window Trim Finish Panel Fastener
5	Quarter Window Trim Finish Panel – Right Side or Left Side Assembly Procedure Pull outward to disengage the trim panel retainers.

Quarter Window Trim Finish Panel Replacement (Long Wheelbase Sedan)

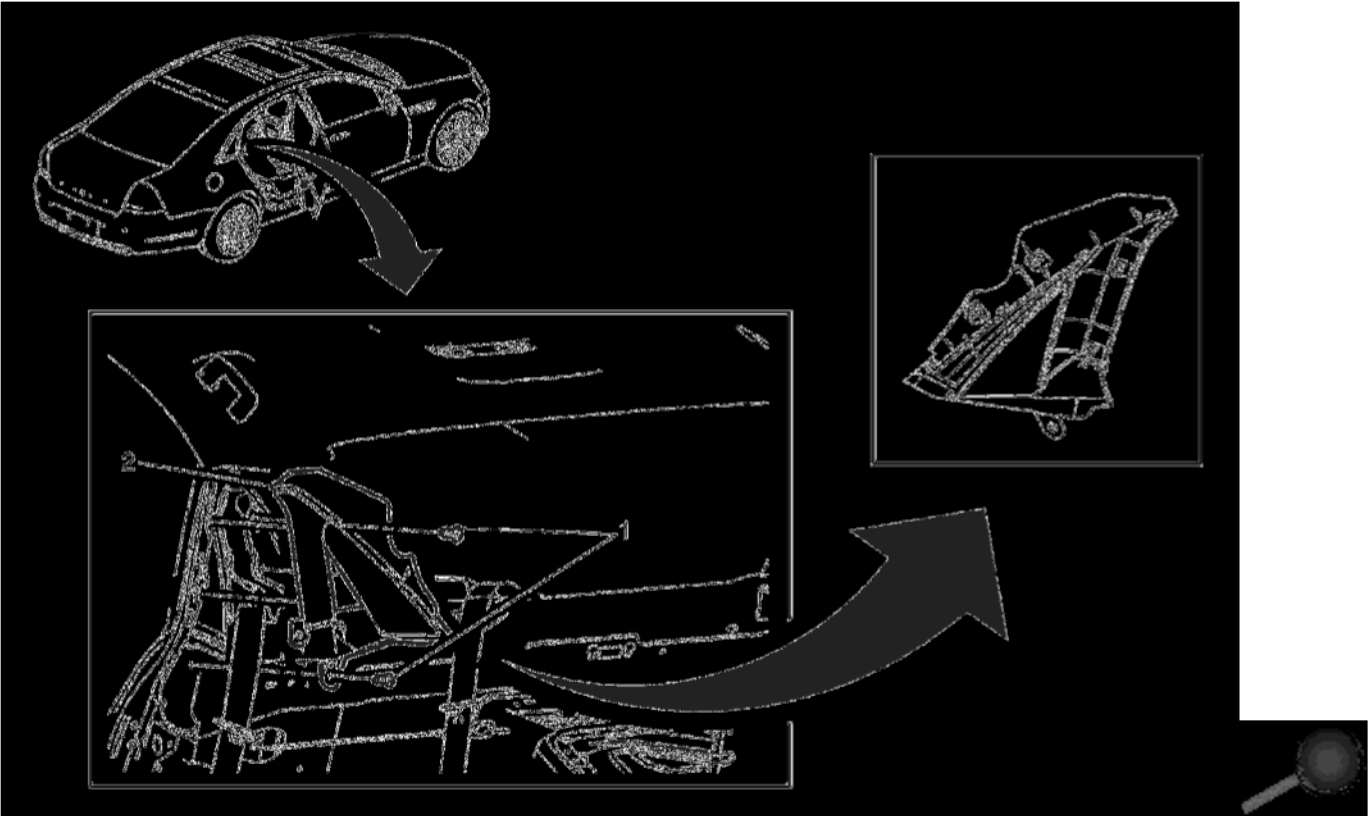


Quarter Window Trim Finish Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Disable the SIR system. Refer to SIR Disabling and Enabling . © 2014 General Motors. All rights reserved.	
2. Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement .	
3. Remove the rear seat lower anchor plate bolt on the side of the trim panel being replaced. Refer to Rear Seat Belt Retractor	

[Replacement.](#)

1	Quarter Window Trim Finish Panel Fastener (Qty: 2) Caution: Refer to Fastener Caution.
2	Quarter Window Trim Finish Panel Assembly Procedure 1. Loosen the rear side door opening weather-strip. 2. Route the seat belt through trim panel.

Quarter Inner Trim Finish Panel Opening Cover Replacement (Sportwagon, Left Side)

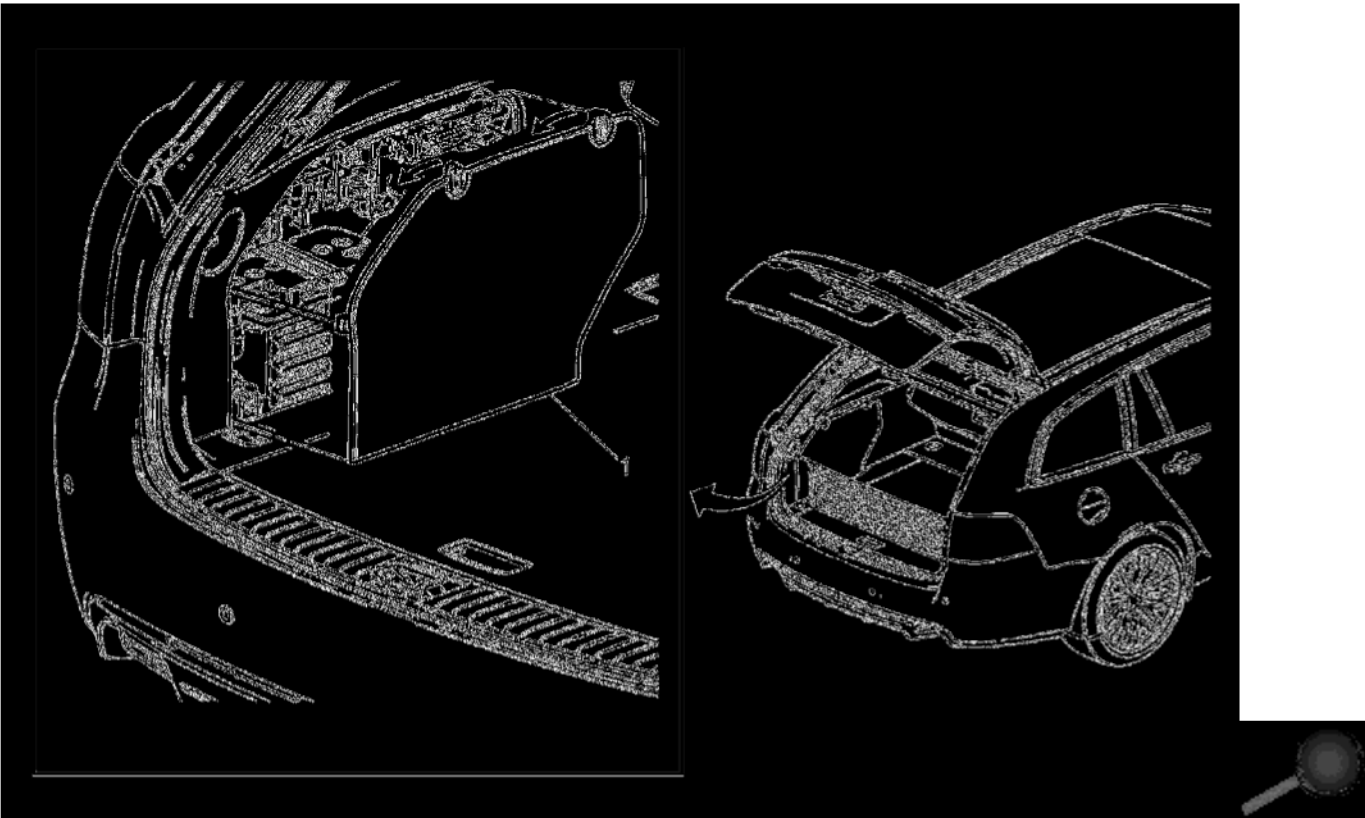

Quarter Inner Trim Finish Panel Opening Cover Replacement

Callout	Component Name
1	Quarter Inner Trim Finish Panel Opening Cover — Left Side Assembly Procedure Rotate the knobs and pull outward to release the quarter inner trim finish panel opening cover from the quarter

inner trim finish panel – left side.

Quarter Inner Trim Finish Panel Replacement - Right Side (Sportwagon, LPG with Spare Tire)


Removal Procedure

Note: When a suitable hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.

1. Install a suitable liftgate brace to the vehicle.
2. Remove the spare wheel stowage bracket. Refer to [Spare Wheel Stowage Bracket Replacement](#).
3. Remove the liftgate sill garnish molding. Refer to [Liftgate Sill Garnish Molding Replacement](#).
4. Fold the rear seat forward.




5. Remove the quarter upper trim panel to body retaining screws (1).
6. Remove the rear compartment convenience hooks (2).

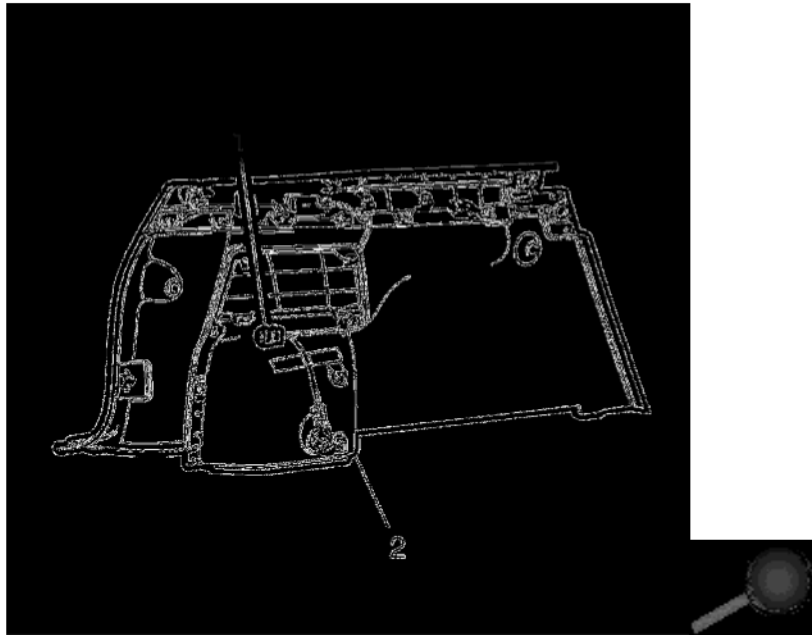

7. Disconnect the right side quarter trim panel wiring harness (1) from the rear body wiring harness (2).
8. Remove the quarter inner trim finish panel (2) from the vehicle.

[Installation Procedure](#)

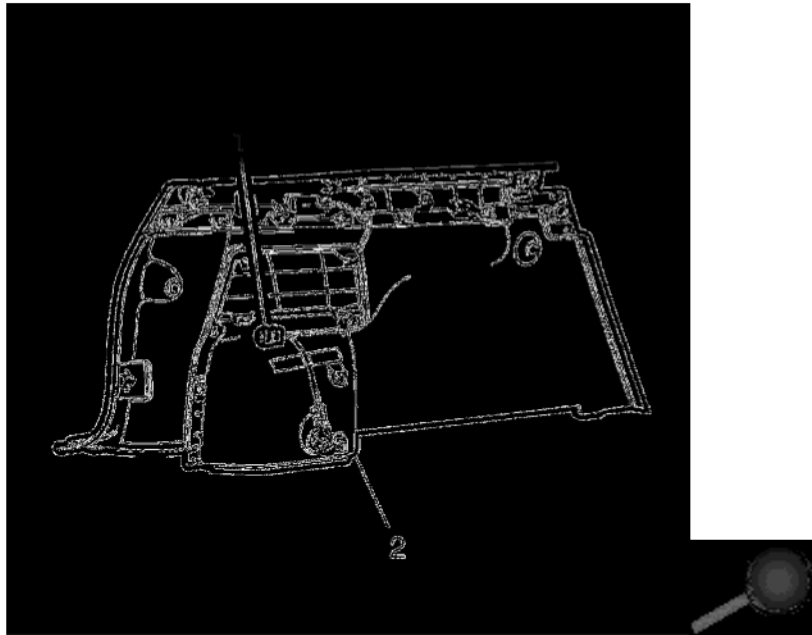

1. Position the quarter inner trim finish panel (2) to the vehicle.
2. Connect the right side quarter trim panel wiring harness (1) to the rear body wiring harness.



3. Install the rear compartment convenience hooks (2).

Caution: Refer to [Fastener Caution](#).

4. Install the quarter upper trim panel to body retaining screws (1) and tighten to **2 N·m (18 lb in)**.

5. Position the rear seat to the original upright locked position.


6. Install the liftgate sill garnish molding. Refer to [Liftgate Sill Garnish Molding Replacement](#).

7. Install the spare wheel stowage bracket. Refer to [Spare Wheel Stowage Bracket Replacement](#).

Note: When a suitable hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.

8. Remove the suitable liftgate brace from the vehicle.

Quarter Inner Trim Finish Panel Replacement - Right Side (Sportwagon without LPG or Spare Tire)

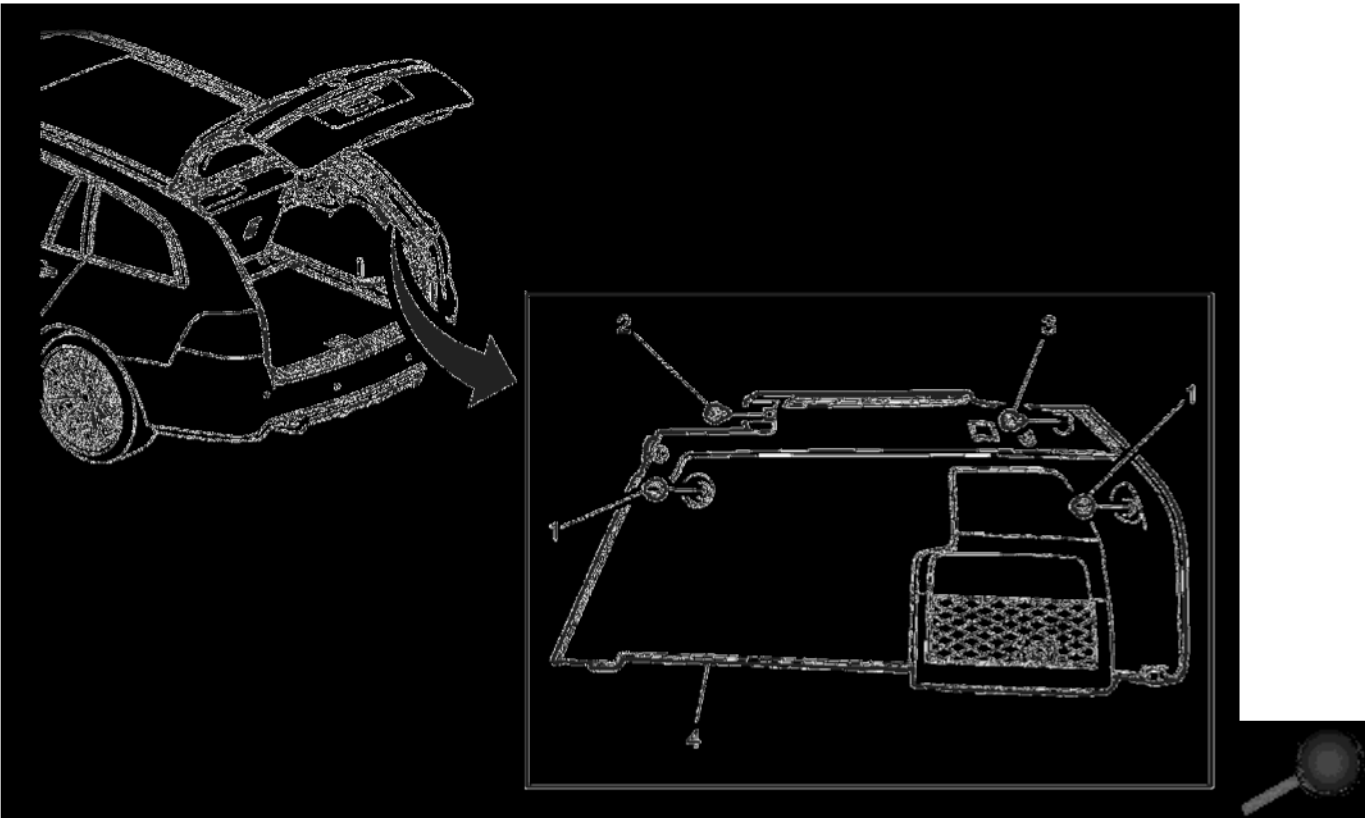


Quarter Inner Trim Finish Panel Replacement - Right Side

Callout	Component Name
Preliminary Procedures	
1. Fold the rear seat forward.	
2. Remove the luggage shade. Refer to Luggage Shade Replacement .	

3. Remove the load floor stationary panel carpet. Refer to [Load Floor Stationary Panel Carpet Replacement](#).
4. Remove the load floor front panel carpet. Refer to [Load Floor Front Panel Carpet Replacement](#).
5. Remove the liftgate sill garnish molding. Refer to [Liftgate Sill Garnish Molding Replacement](#).

1	Convenience Net Retainer
2	Body Side Window Garnish Molding Fastener Caution: Refer to Fastener Caution .
3	Quarter Inner Trim Finish Panel Fastener
4	Quarter Inner Trim Finish Panel – Right Side Assembly Procedure 1. Carefully pull outward to disengage the trim panel retainers. 2. Disconnect the accessory power outlet electrical connector, if equipped.

Quarter Inner Trim Finish Panel Replacement - Left Side (Sportwagon)

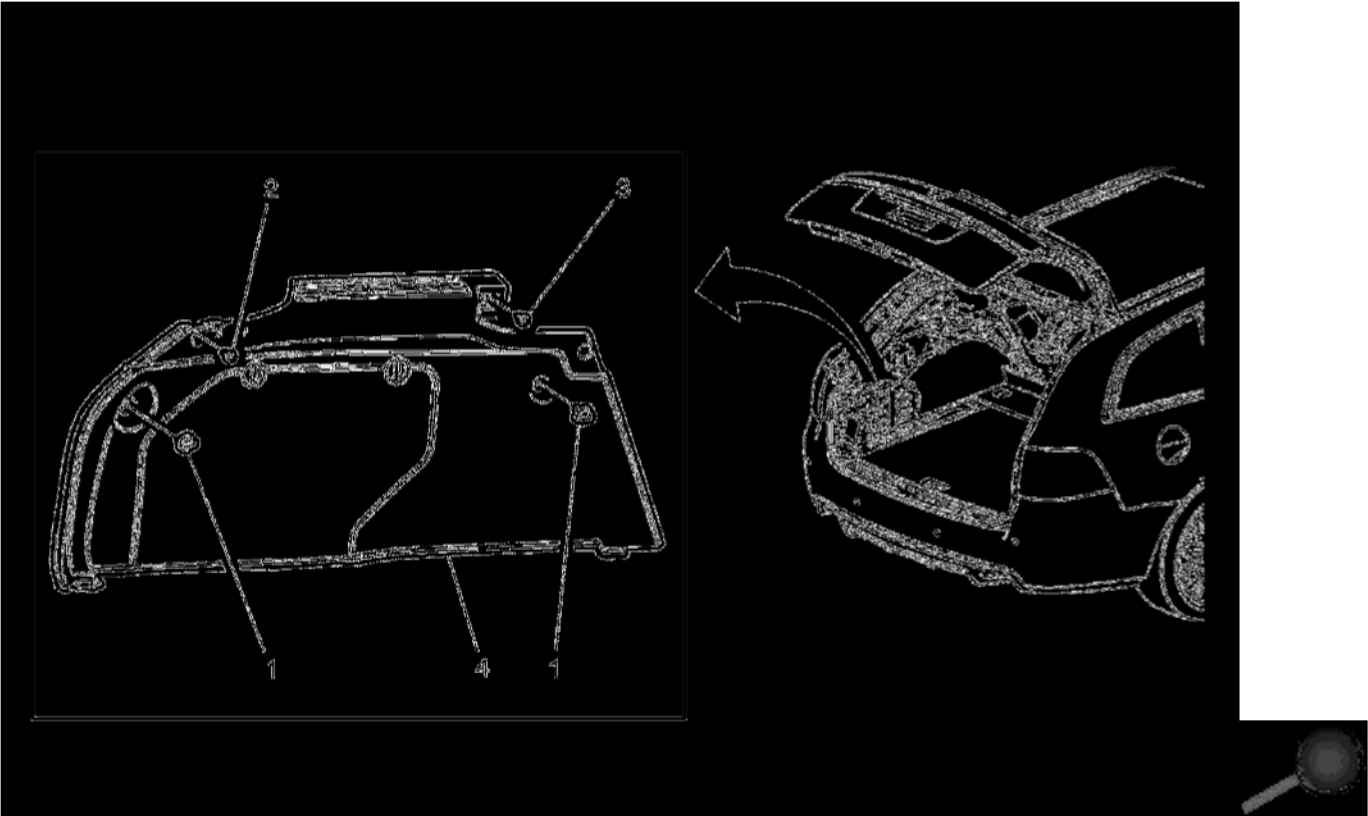


Quarter Inner Trim Finish Panel Replacement - Left Side

Callout	Component Name
Preliminary Procedures	
1. Fold the rear seat forward.	
2. Remove the luggage shade. Refer to Luggage Shade Replacement .	
3. Remove the load floor stationary panel carpet. Refer to Load Floor Stationary Panel Carpet Replacement .	

4. Remove the load floor front panel carpet. Refer to [Load Floor Front Panel Carpet Replacement](#).
5. Remove the liftgate sill garnish molding. Refer to [Liftgate Sill Garnish Molding Replacement](#).

1	Convenience Net Retainer
2	Body Side Window Garnish Molding Fastener Caution: Refer to Fastener Caution .
3	Quarter Inner Trim Finish Panel Fastener
4	Quarter Inner Trim Finish Panel – Left Side Assembly Procedure Carefully pull outward to disengage the trim panel retainers.


Quarter Trim Panel Cover Replacement (Sportwagon)

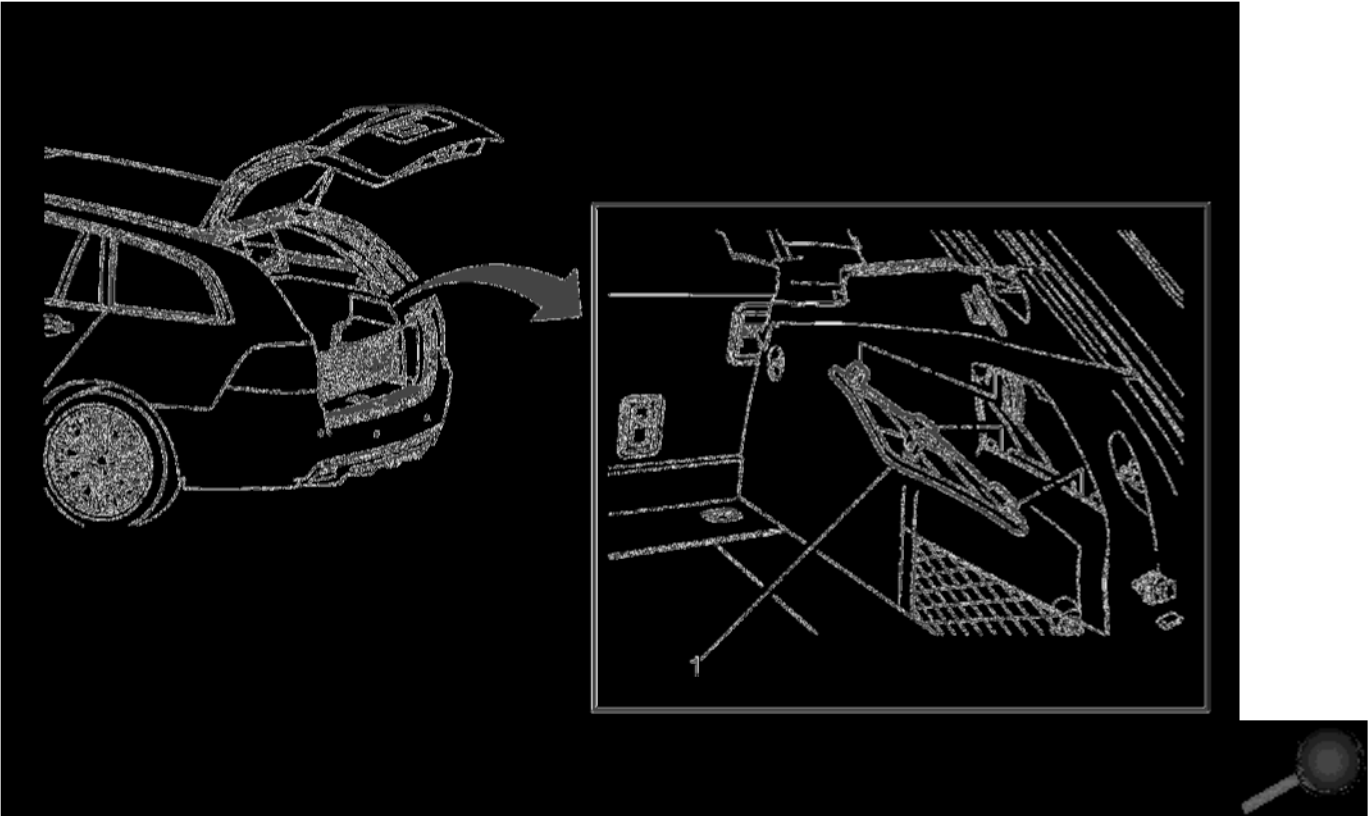

Quarter Trim Panel Cover Replacement

Callout	Component Name
1	Quarter Trim Panel Cover Assembly Procedure Use the appropriate trim tool to release the quarter trim panel cover from the quarter inner trim finish panel.

Rear Window Panel Trim Replacement (Sedan)

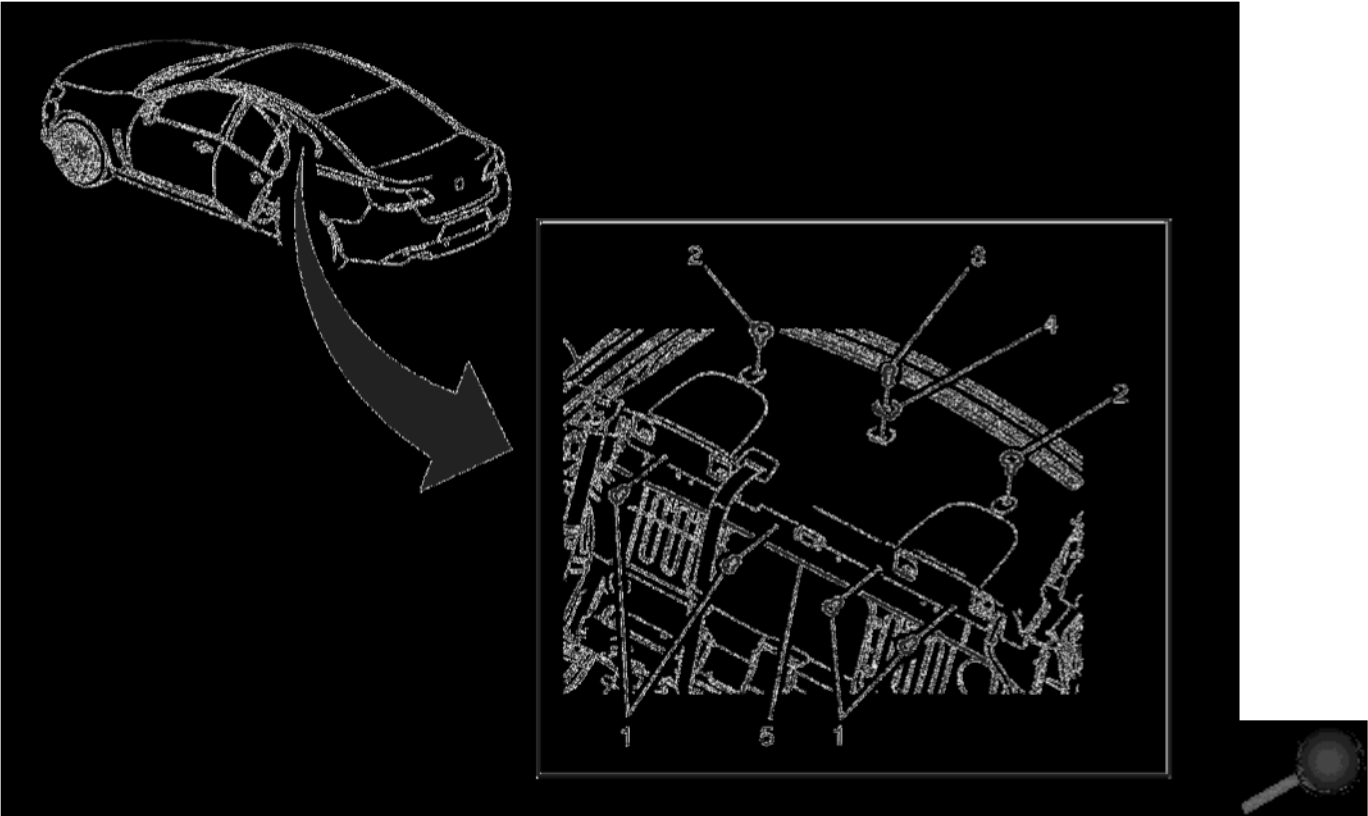


Rear Window Panel Trim Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the rear compartment access door opening upper garnish molding. Refer to Rear Compartment Access Door Opening Upper Garnish Molding Replacement .	
2. Remove the quarter window trim finish panel. Refer to Quarter Window Trim Finish Panel Replacement .	

1	Rear Window Trim Finish Panel Push-in Retainer (Qty: 4)
2	Rear Window Panel Trim Retainer (Qty: 2)
3	Child Seat Restraint System Belt Fastener Caution: Refer to Fastener Caution. Tighten 22 N•m (16 lb ft)
4	Child Seat Restraint System Belt Bracket
5	Rear Window Trim Panel Assembly Procedure 1. Remove the rear seat belt buckle nut. Refer to Rear Seat Belt Buckle Replacement. 2. Route the rear center seat belt retractor webbing, lower anchor nut, bracket, and buckle through the trim. 3. With the aid of an assistant, guide the rear window panel forward in the vehicle and upwards to clear the keyless entry control module. 4. When replacing the rear window panel trim assembly, transfer all necessary components. 5. Ensure the rear window trim panel feet are seated into the rear window drain panel sheet metal.

Rear Window Panel Trim Replacement (Ute)

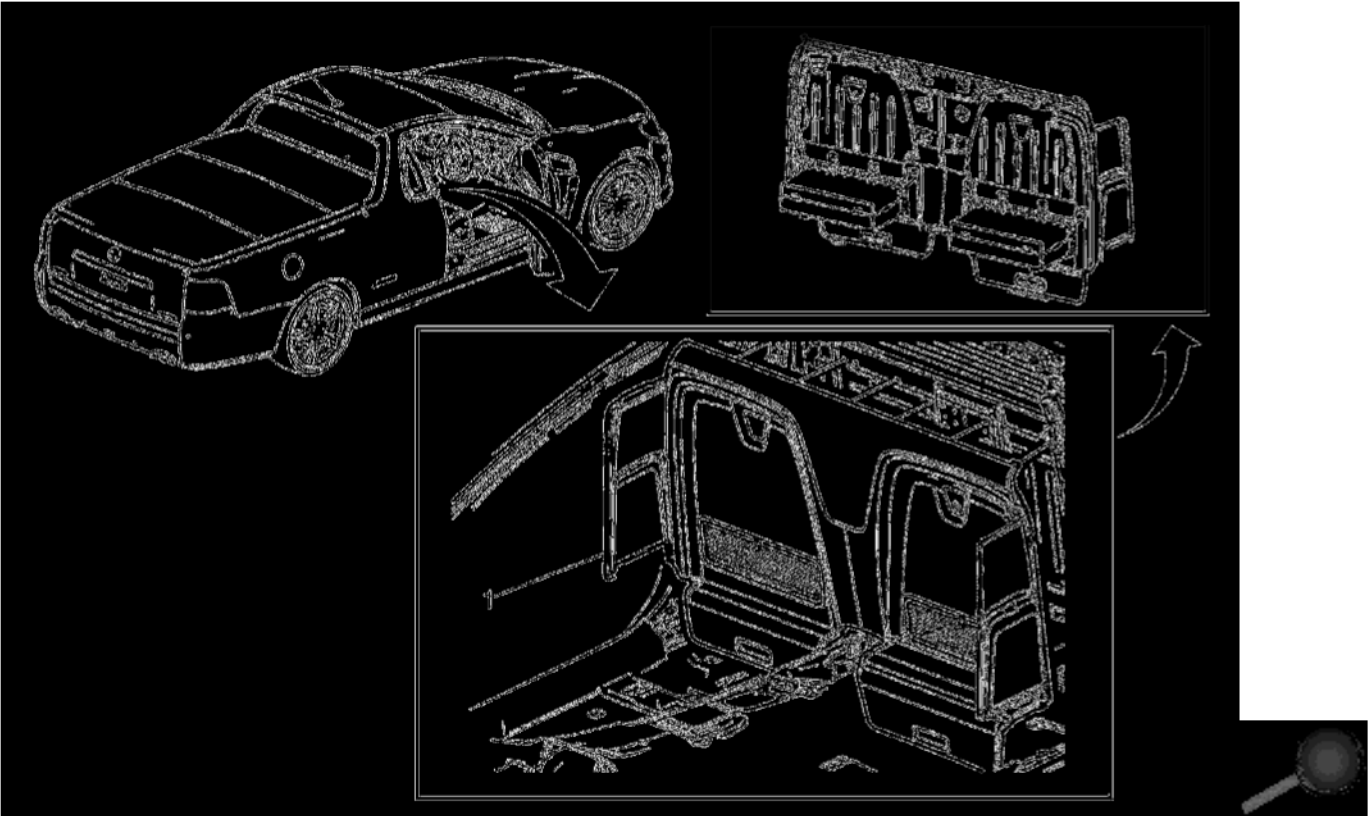

Rear Window Panel Trim Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the driver and passenger seat. Refer to Driver and Passenger Seats Removal and Installation .	
2. Remove the front side door sill garnish molding on both sides. Refer to Front Side Door Sill Garnish Molding Replacement .	
3. Remove the center pillar lower trim panel on both sides. Refer to Center Pillar Lower Trim Panel Replacement .	

4. Remove the center pillar upper trim panel on both sides. Refer to [Center Pillar Upper Trim Panel Replacement](#).
5. Remove the child seat top strap bracket trim cover. Refer to [Child Seat Top Strap Bracket Trim Cover Replacement](#).
6. Remove the cargo center courtesy lamp. Refer to [Cargo Center Courtesy Lamp Replacement](#).
7. Remove the front floor console. Refer to [Front Floor Console Replacement](#).


1

Rear Window Trim Panel Assembly

Procedure

When replacing the rear window panel trim assembly, transfer all necessary components.

Rear Compartment Access Door Opening Upper Garnish Molding Replacement

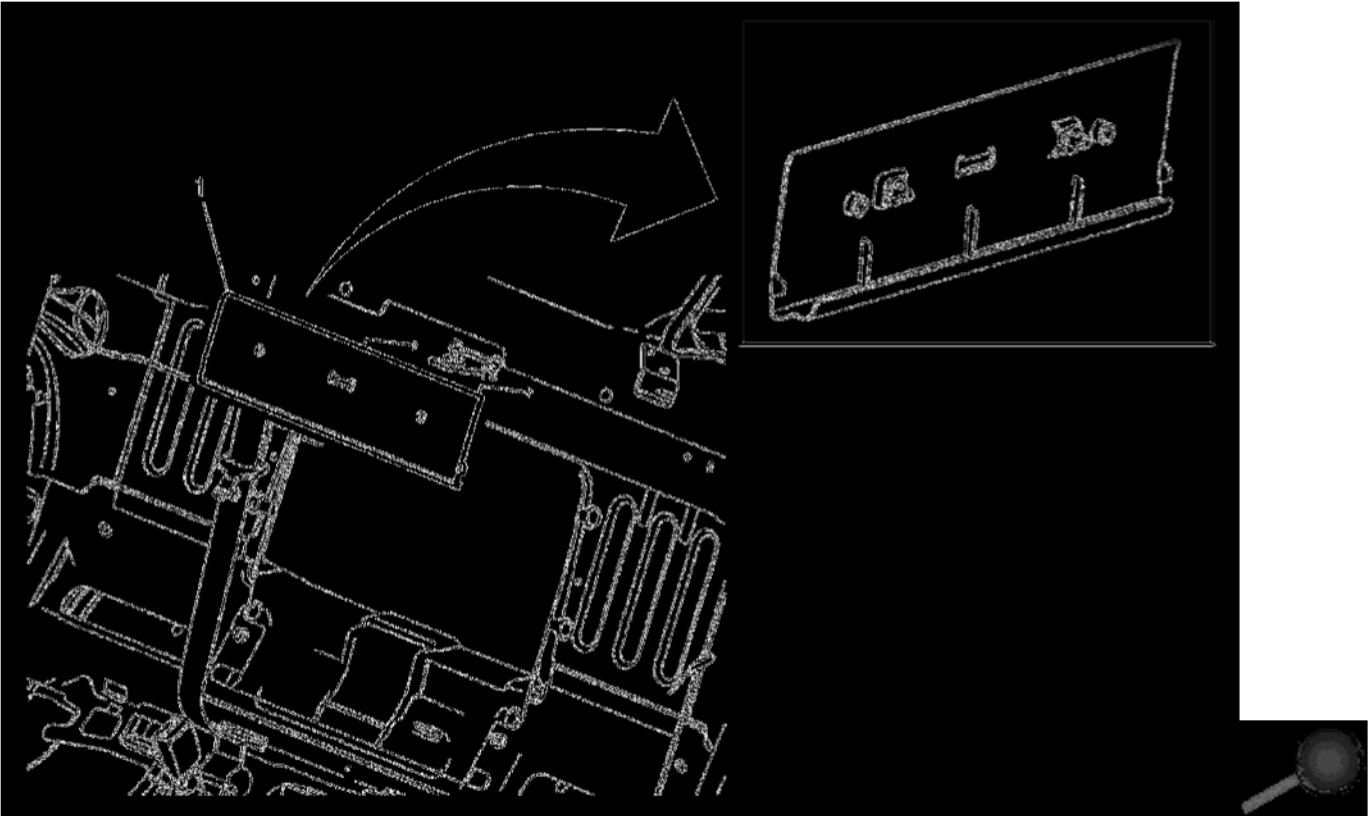

Rear Compartment Access Door Opening Upper Garnish Molding Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation .	
	© 2014 General Motors. All rights reserved. Rear Compartment Access Door Opening Upper Garnish Molding Assembly
	Procedure

1

1. Fold the center rear seat back cushion forward.
2. With a suitable tool carefully pull garnish molding towards front of car to disengage retaining clips.

Load Floor Rear Compartment Cover Replacement (With LPG)

Special Tools

J-36020 Stationary Glass Removal Tool

For equivalent regional tools, refer to [Special Tools](#).

[Removal Procedure](#)

Danger: To avoid any vehicle damage, serious personal injury or death when major components are removed from the vehicle and the vehicle is supported by a hoist, support the vehicle with jack stands at the opposite end from which the components are being removed and strap the vehicle to the hoist.

Warning: Refer to [Liquefied Petroleum Gas \(LPG\) Warning](#).


Warning: In order to reduce the risk of personal injury when exposed to toxic fumes while grinding, cutting, or applying repair material on any type of sheet molded compound or RIM rigid plastic, observe the following guidelines:

- Work in a properly ventilated area
- Apply protective cream to any exposed skin
- Remove any mixture that comes into contact with skin
- Wash skin with cold water to remove glass and resin dust
- Use a sander with a vacuum attachment
- Follow the repair material manufacturer's instructions

Also, always wear the following:

- An approved respirator, or air supplied respirator
- Eye protection
- Rubber gloves
- Earplugs
- Protective clothing


1. Remove the rear compartment floor carpet. Refer to [Rear Compartment Floor Panel Carpet Replacement](#).
2. Remove the spare wheel and emergency kit from the rear compartment.

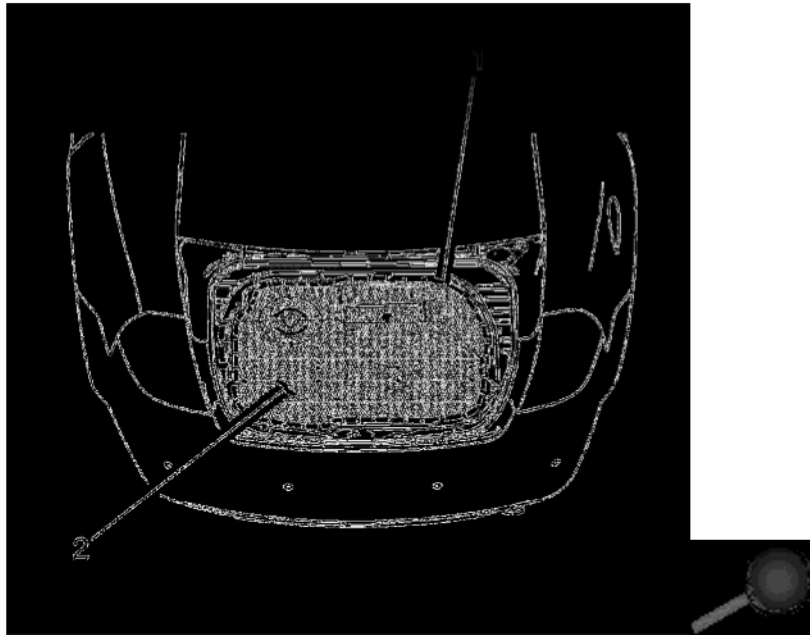

Note:

- Take care when cutting to avoid damage to adjacent panels and other parts of the vehicle.
- The load floor rear compartment cover is a single use item. The spare wheel well panel must be discarded after use.

3. Cut along the load floor rear compartment cover (2) with a suitable tool (1).
4. Remove the cutout section of the load floor rear compartment cover (1) from the vehicle.

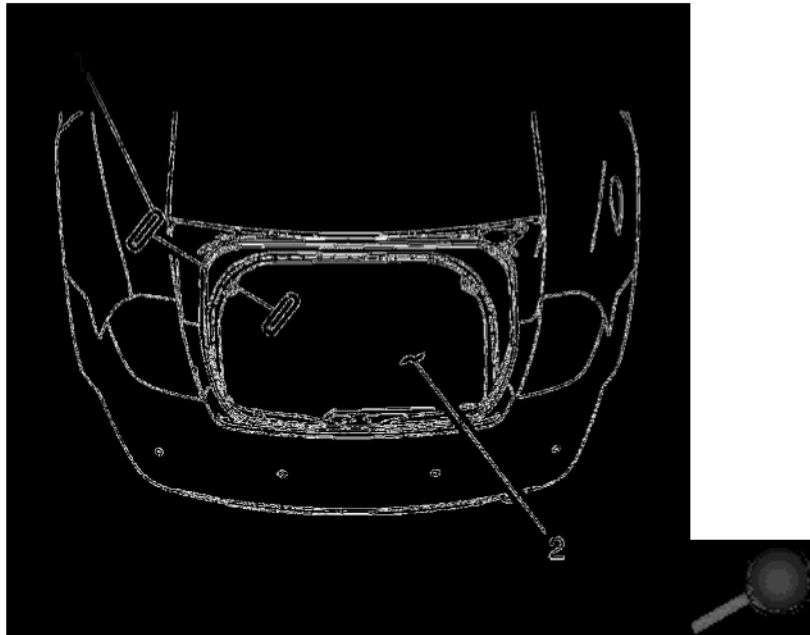

Note:

- Stationary glass removal tool *J-36020* removal tool (1) is used to cut the urethane adhesive between the remaining part of the load floor rear compartment cover (2) and the vehicle body.
- Use a suitable tool to install the piano wire of stationary glass removal tool *J-36020* removal tool (1) through the urethane at a suitable corner of the load floor rear compartment (2).


5. Install stationary glass removal tool *J-36020* removal tool to the vehicle.

Note: Keep the outside handle of stationary glass removal tool *J-36020* removal tool against the vehicle body and cycle the full length of the piano wire to prevent heat build up.


6. Cut through the urethane adhesive between the remaining part of the load floor rear compartment cover (2) and vehicle body with the aid of an assistant.

Discard the remaining section of the load floor rear compartment cover.

Installation Procedure

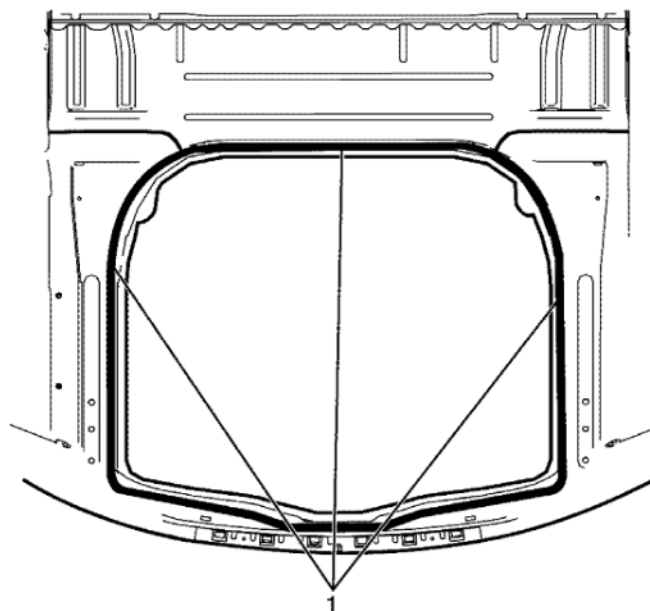


1. Clean the rear compartment panels of all remaining adhesive (1) using a suitable cleaning solution.

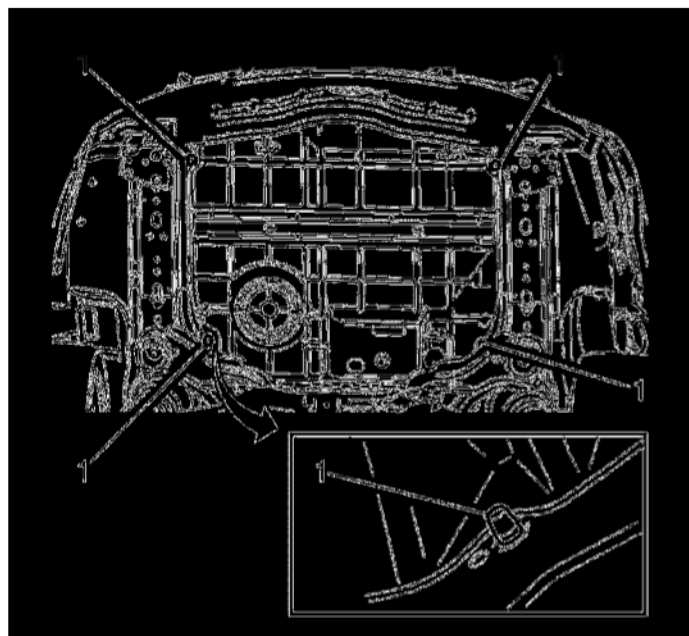

Note: Make sure that the load floor rear compartment cover datum pins (1) are correctly located in the rear compartment panels.


2. Test fit the load floor rear compartment cover to the rear compartment panels and carry out any adjustments as required.

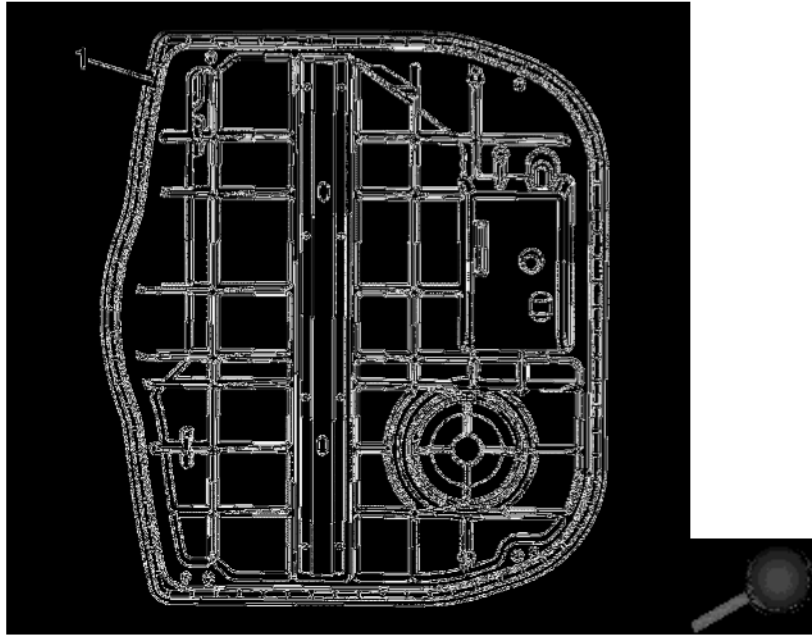

Note:

- If air drying the primer, allow at least 60 minutes in a well ventilated area for the primer to dry fully.
- If hot drying the primer, the oven temperature needs to be between 94°C (200°F) and 121°C (250°F), for 10 minutes.

3. Thoroughly clean the bonding area (1) of the load floor rear compartment cover using Isopropyl Alcohol, Prepsol or Equivalent.
4. Brush a continuous line of primer with a minimum width of 25 mm (1 in) to GM specification GM9985813 (or alternatively Lord 459X) on the bonding area of the load floor rear compartment cover.
5. Allow the primer to dry.

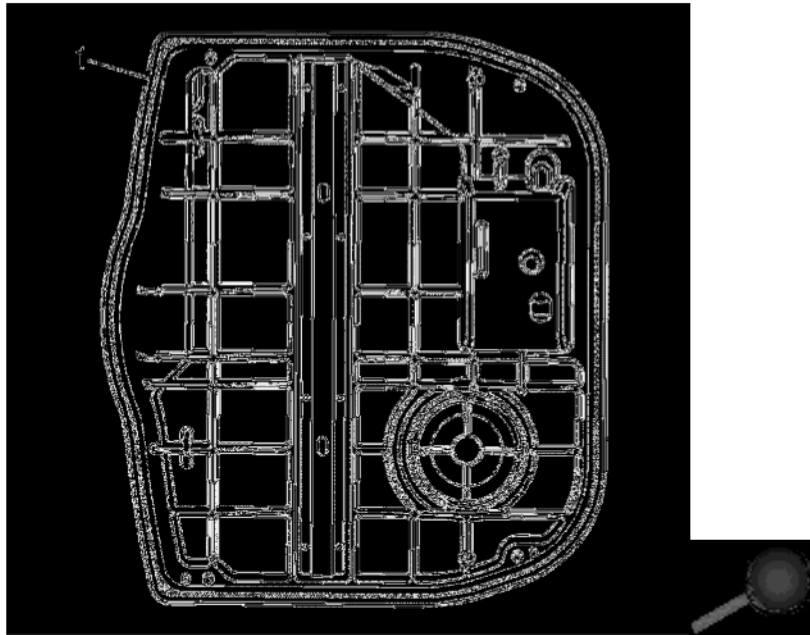

Note: Make sure that the rear compartment panels and the load floor rear compartment cover are free of any contaminants.

6. Apply a continuous bead of urethane GMW3041 (1) or equivalent approximately 10 mm in diameter to the bonding area of the load floor rear compartment cover.

Note:

- Fit the load floor rear compartment cover to the rear compartment panels within 30 minutes of applying the adhesive to the load floor rear compartment cover.
- Do not allow the adhesive bead to come into contact with the vehicle body until the load floor rear compartment cover is correctly aligned with the rear compartment panels.

7. With the aid of an assistant install the NEW load floor rear compartment cover to the vehicle.

8. Make sure that the adhesive all around the load floor rear compartment cover makes contact with the rear compartment panels.

Note:


- DO NOT drive the vehicle for 24 hours after fitting the load floor rear compartment cover to allow the adhesive to fully cure.
- Installing the spare wheel to the load floor rear compartment cover aids with the adhesion of the load floor rear compartment cover to the rear compartment panels.

9. Install the spare wheel to the load floor rear compartment cover.

10. Place one kilogram weights along the edges of the load floor rear compartment cover to aid with the adhesion of the load floor rear compartment cover to the rear compartment panels.

11. Install the emergency kit to the rear compartment.
12. Install the rear compartment floor carpet. Refer to [Rear Compartment Floor Panel Carpet Replacement](#).

Rear Side Door Trim Replacement (Short Wheelbase Sedan, Sportwagon)

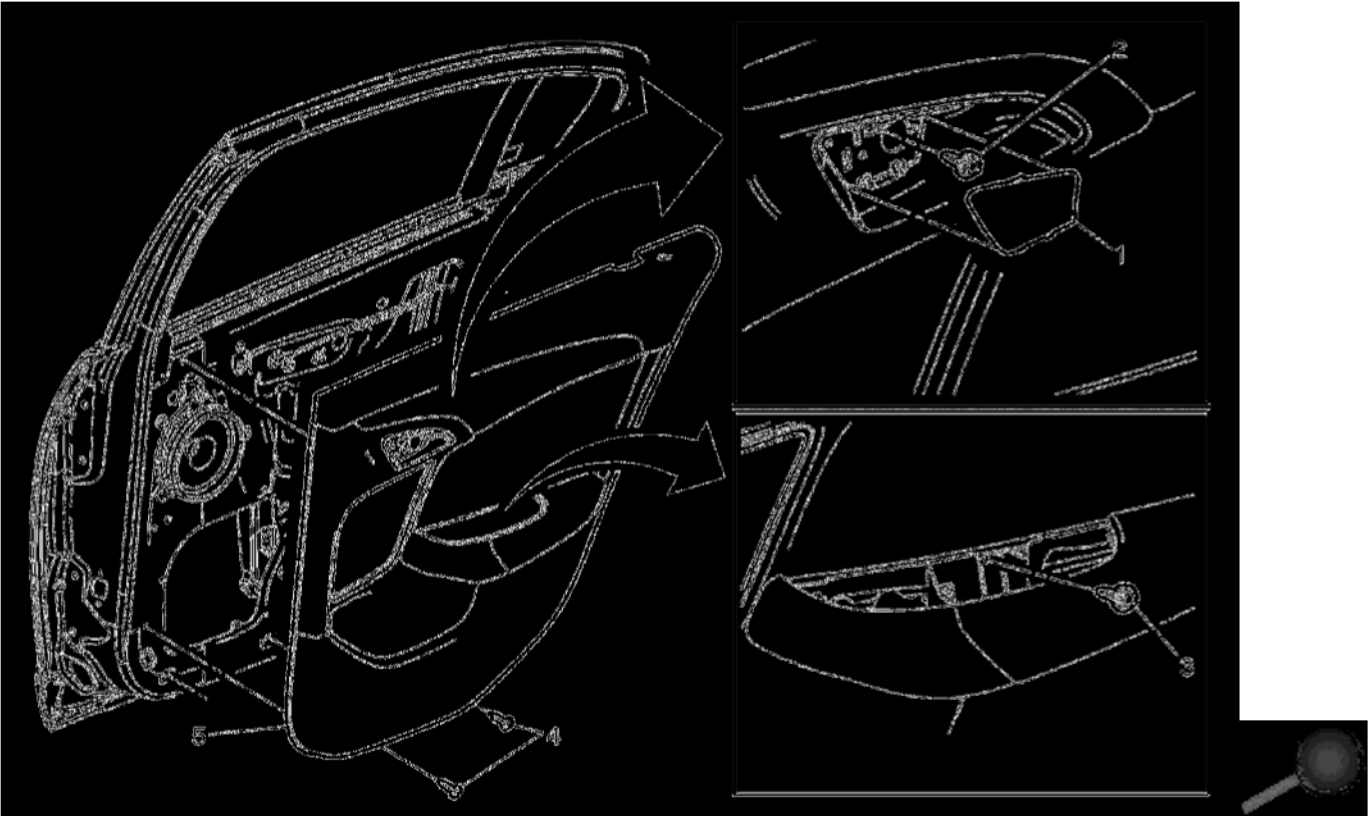


Rear Side Door Trim Replacement

Callout	Component Name
Preliminary Procedure Remove the rear side door accessory switch mount plate. Refer to Rear Side Door Accessory Switch Mount Plate Replacement .	
1	Rear Side Door Inside Handle Bolt Cap Procedure

	Use a suitable tool to remove rear side door inside handle bolt cap.
2	Rear Side Door Inside Handle Fastener Caution: Refer to Fastener Caution . Tighten 2.5 N•m (22 lb in)
3	Rear Side Door Armrest Pull Cup Fastener Tighten 2.5 N•m (22 lb in)
4	Rear Side Door Trim Panel Fastener (Qty: 2) Tighten 2.5 N•m (22 lb in)
5	Rear Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to disengage clips from bottom to top of door trim panel in cross car direction. 2. Plastic clips on the back of door trim panel must be replaced each time door trim panel is removed and put back on. 3. Pull upwards on the door lock retainer cable to disengage. 4. Disconnect the electrical connector, if equipped.

Rear Side Door Trim Replacement (Long Wheelbase)

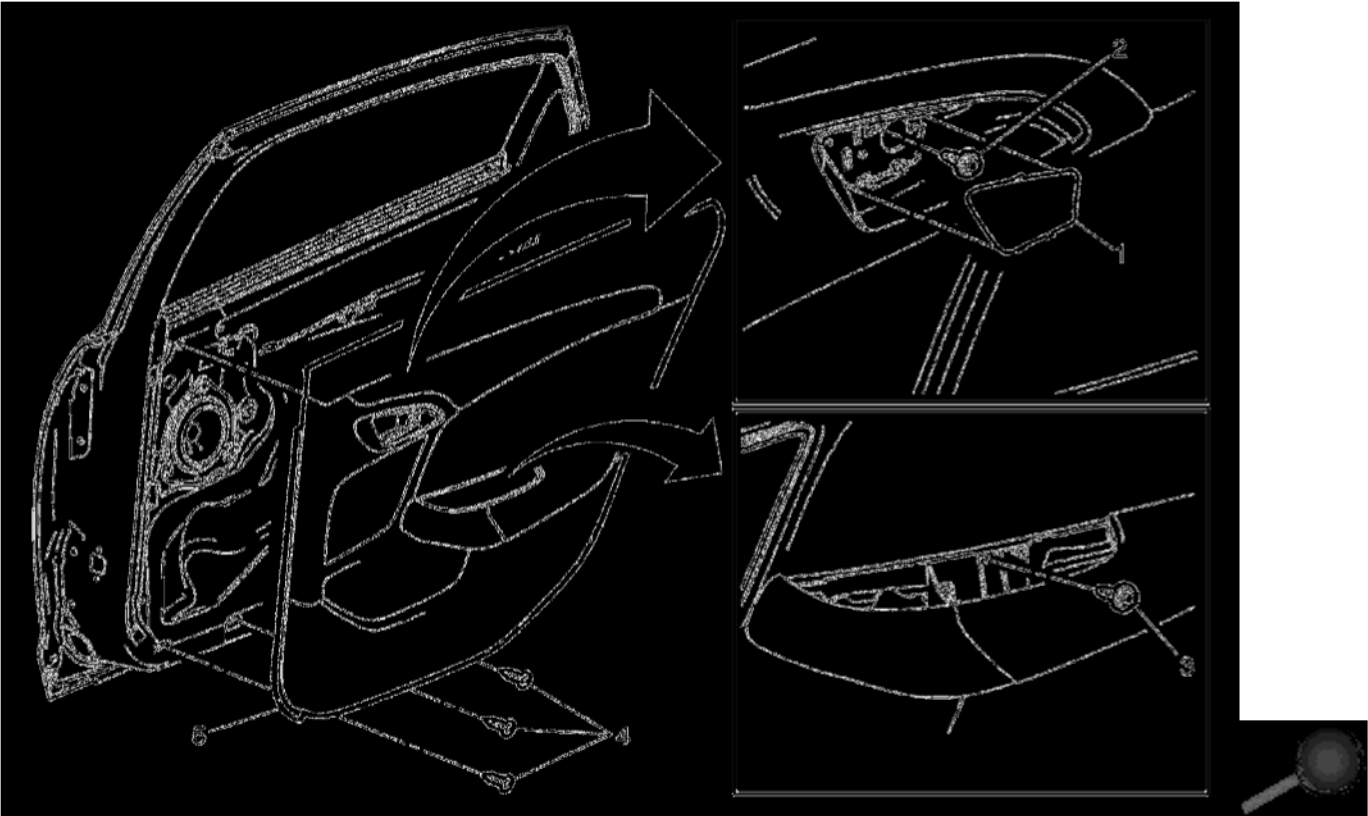


Rear Side Door Trim Replacement

Callout	Component Name
Preliminary Procedure Remove the rear side door accessory switch mount plate. Refer to Rear Side Door Accessory Switch Mount Plate Replacement .	
1	Rear Side Door Inside Handle Bolt Cap Procedure

	Use a suitable tool to remove rear side door inside handle bolt cap.
2	Rear Side Door Inside Handle Fastener Caution: Refer to Fastener Caution .
3	Rear Side Door Armrest Pull Cup Fastener
4	Rear Side Door Trim Panel Fastener (Qty: 3)
5	Rear Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to disengage clips from bottom to top of door trim panel in cross car direction. 2. Plastic clips on the back of door trim panel must be replaced each time door trim is removed and put back on. 3. Pull upwards on the door lock retainer cable to disengage. 4. Disconnect the electrical connector, if equipped.

Rear Compartment Lid Release Switch Bezel Replacement

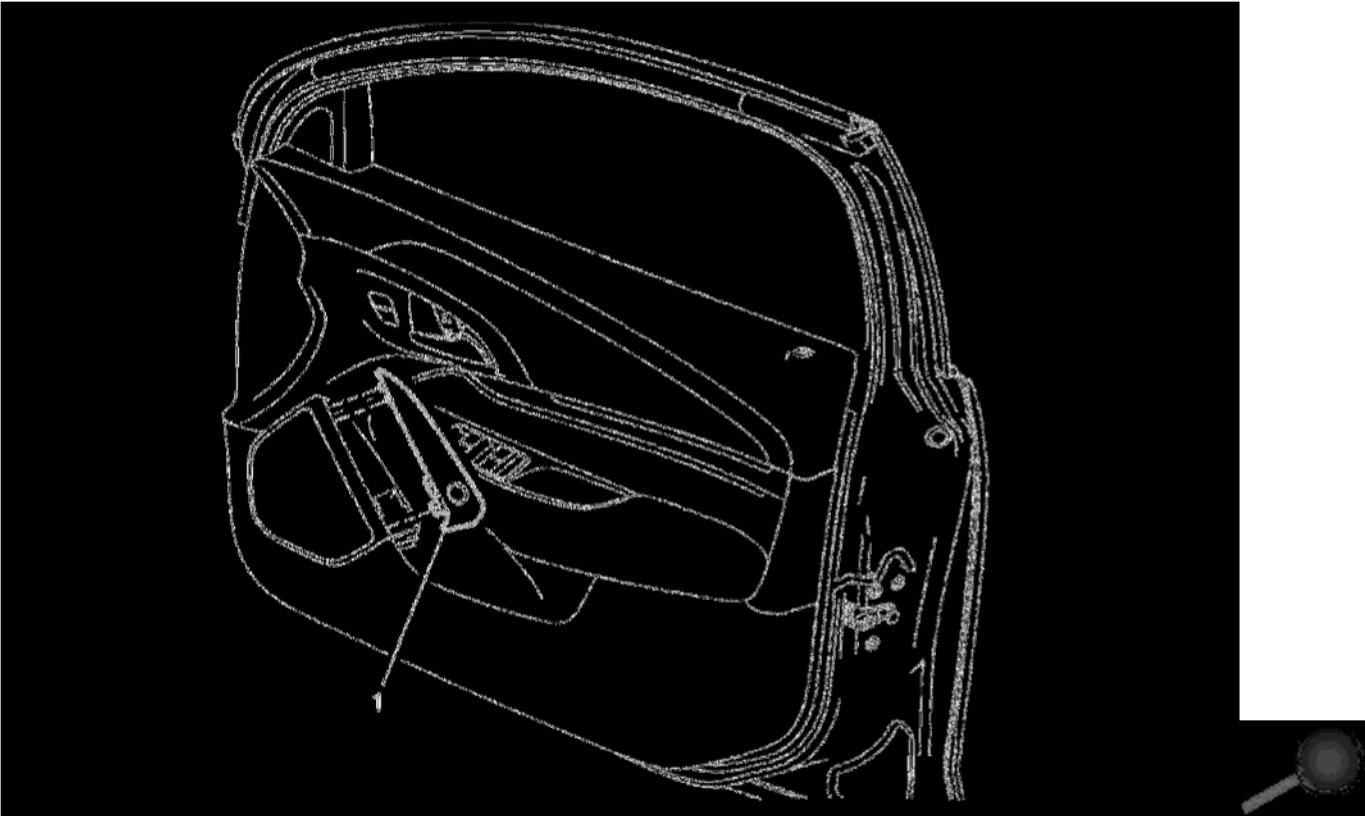


Rear Compartment Lid Release Switch Bezel Replacement

Callout	Component Name
1	Rear Compartment Lid Release Switch Bezel Assembly Procedure 1. Use a flat-bladed plastic trim tool in order to release the rear compartment lid release switch bezel from the door trim assembly.

2. Disconnect the electrical connector from the switch assembly.
3. Transfer parts as necessary.

Luggage Shade Replacement (Sportwagon)

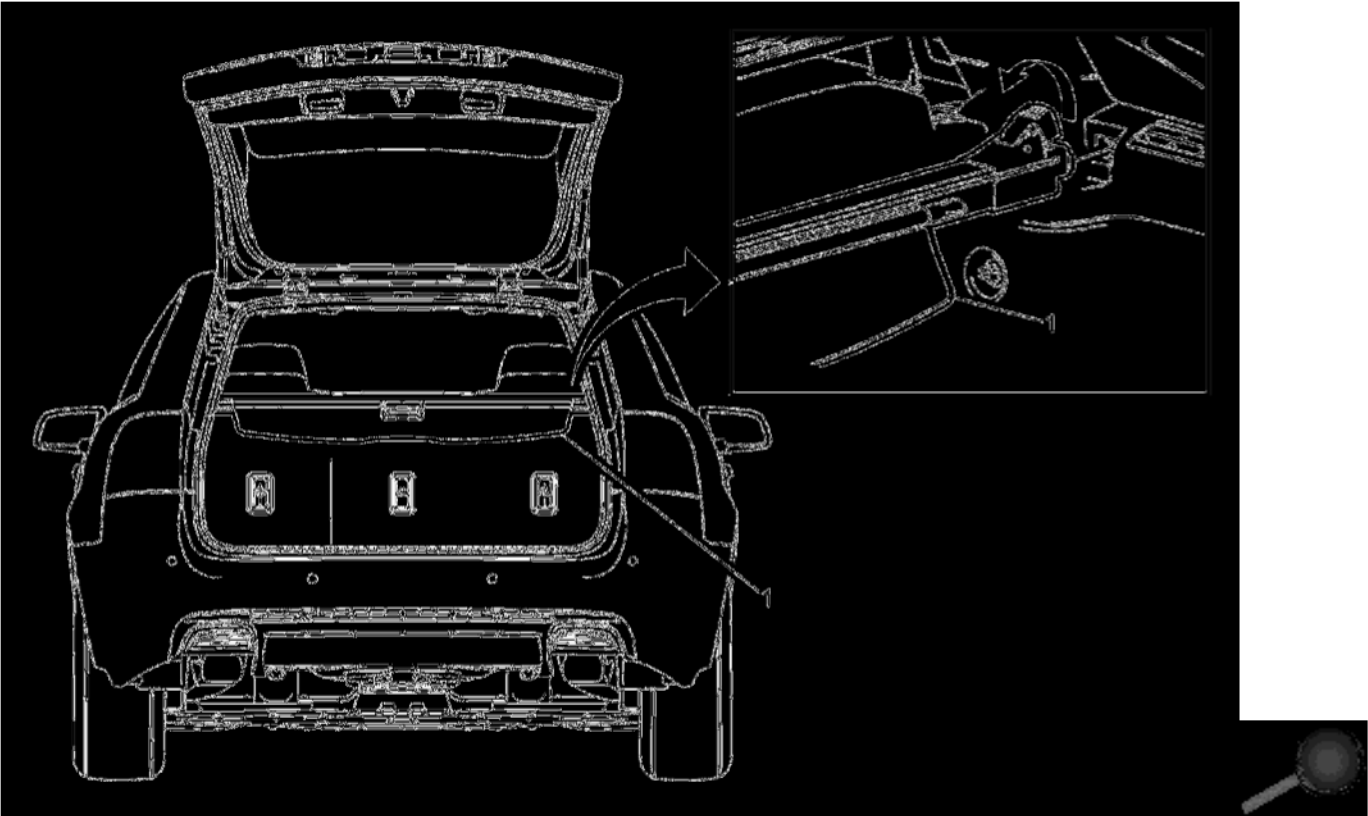


Luggage Shade Replacement

Callout	Component Name
1	Luggage Shade Assembly Procedure © 2014 General Motors. All rights reserved. 1. Pull the luggage shade lever to disengage the right hand side of the luggage shade assembly from the quarter upper trim panel.

2. Maneuver the luggage shade assembly from the vehicle.

Liftgate Sill Garnish Molding Replacement (Sedan)

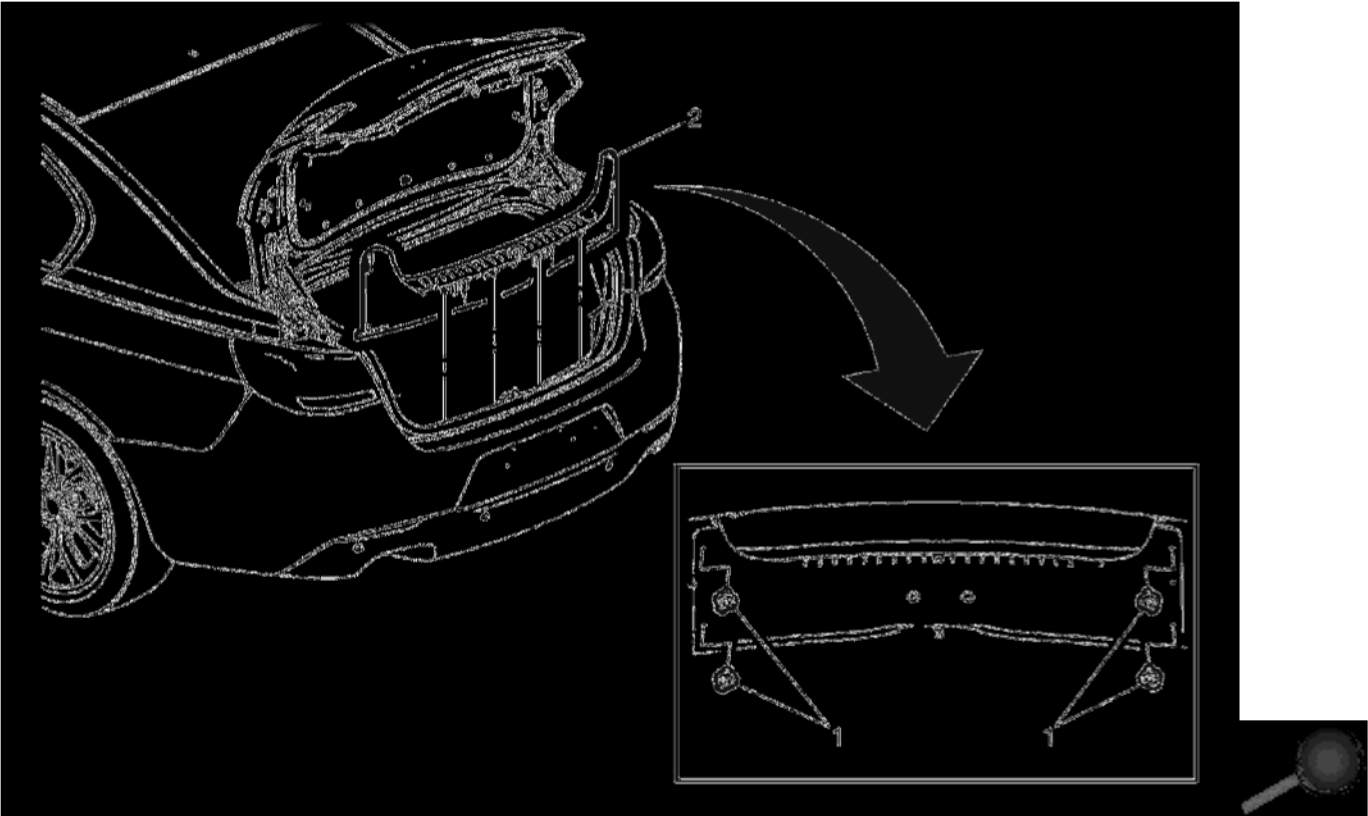


Liftgate Sill Garnish Molding Replacement

Callout	Component Name
1	Rear Compartment Convenience Hook (Qty: 4)
2	Liftgate Sill Garnish Molding assembly ©2014 General Motors. All rights reserved. Procedure Grasp and gently pull up on the liftgate sill garnish molding in order to release the integral retaining clips.




Liftgate Sill Garnish Molding Replacement (Sportwagon)

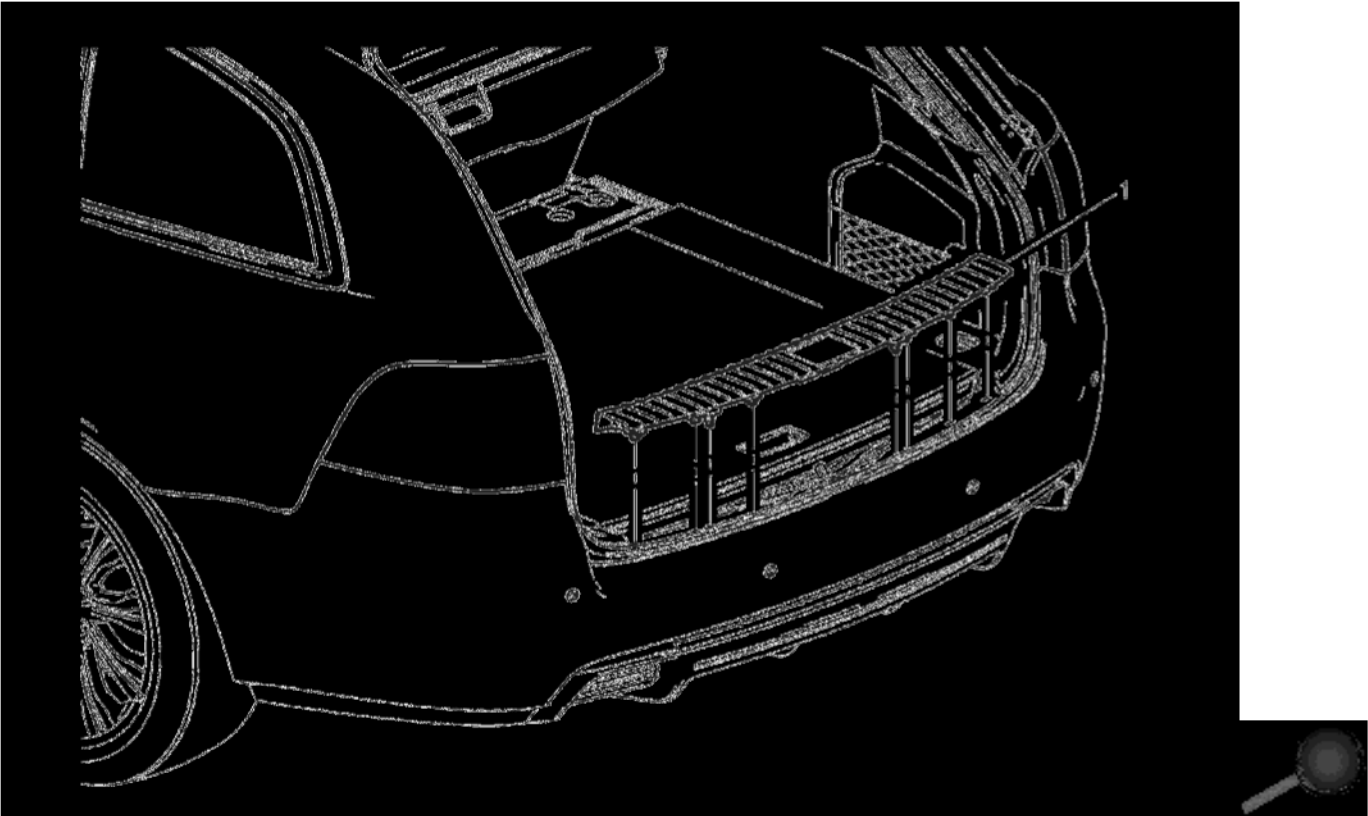

Liftgate Sill Garnish Molding Replacement

Callout	Component Name
1	Liftgate Sill Garnish Molding Assembly Procedure Grasp and gently pull up on the liftgate sill garnish molding in order to release the integral retaining clips.

Liftgate Trim Finish Panel Replacement (Sportwagon)

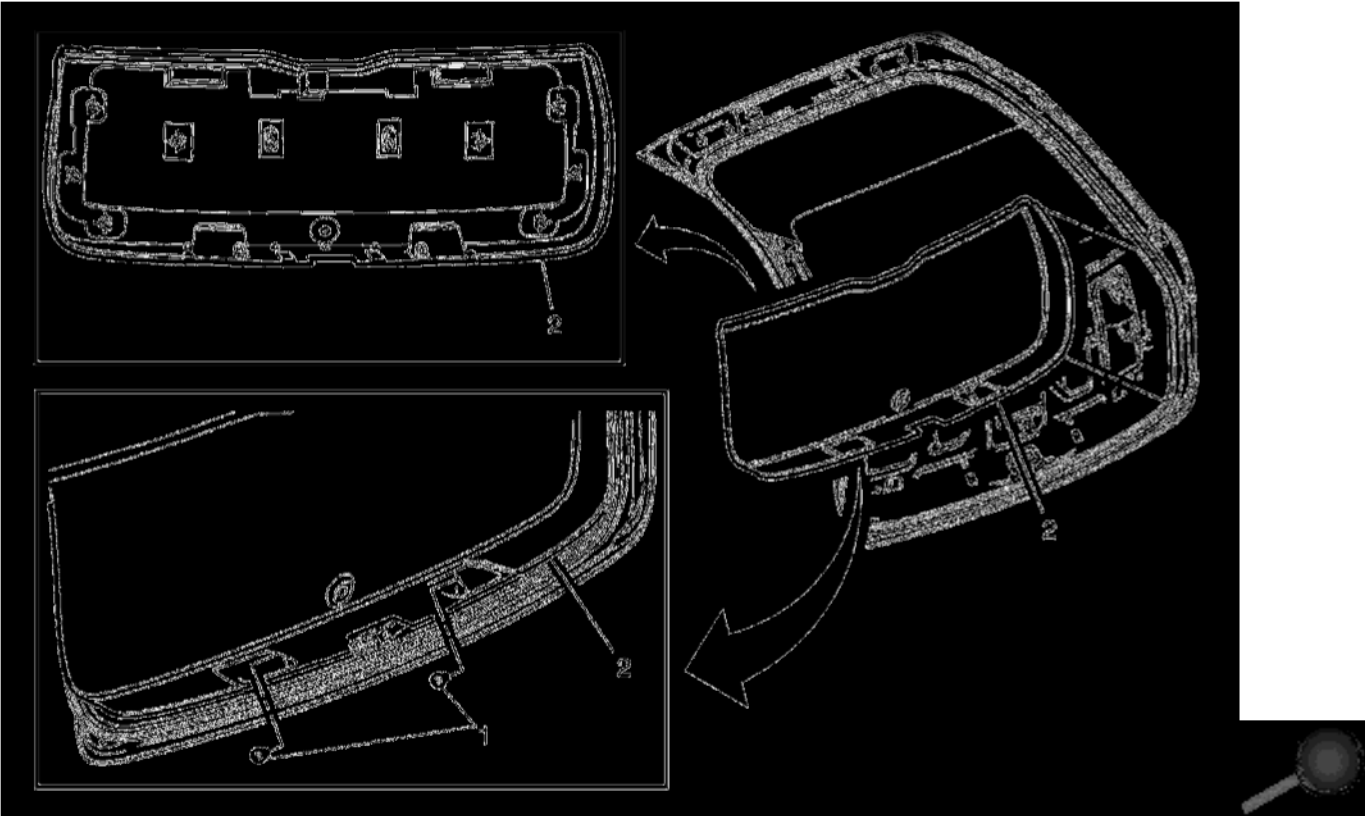


Liftgate Trim Finish Panel Replacement

Callout	Component Name
Preliminary Procedure Remove the liftgate latch cover. Refer to Liftgate Latch Cover Replacement .	
1	Liftgate Lower Trim Finish Panel Fastener Caution: Refer to Fastener Caution .

2	Liftgate Trim Finish Panel Assembly Procedure 1. Use a trim panel removal tool to aid in the removal of the trim panel from the liftgate assembly. 2. Disconnect the electrical connector, if equipped.
---	--

Liftgate Upper Trim Finish Panel Replacement (Sportwagon)

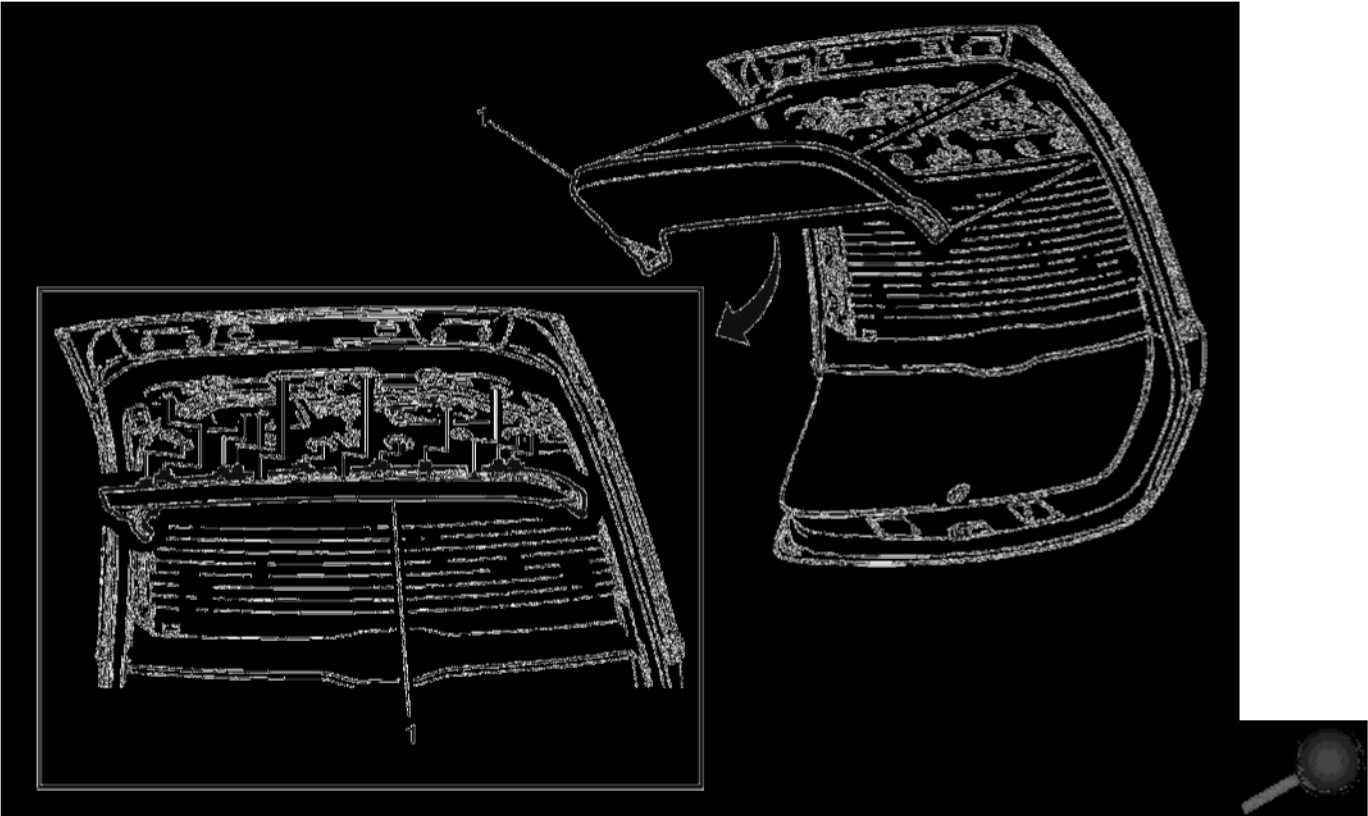


Liftgate Upper Trim Finish Panel Replacement

Callout	Component Name
Preliminary Procedure Remove the liftgate upper side trim finish panel. Refer to Liftgate Upper Side Trim Finish Panel Replacement . © 2014 General Motors. All rights reserved.	
1	Liftgate Upper Trim Finish Panel Assembly Procedure

Use the appropriate trim tool to release the liftgate upper trim finish panel from the liftgate inner panel.


Liftgate Upper Center Trim Finish Panel Replacement (Sportwagon)

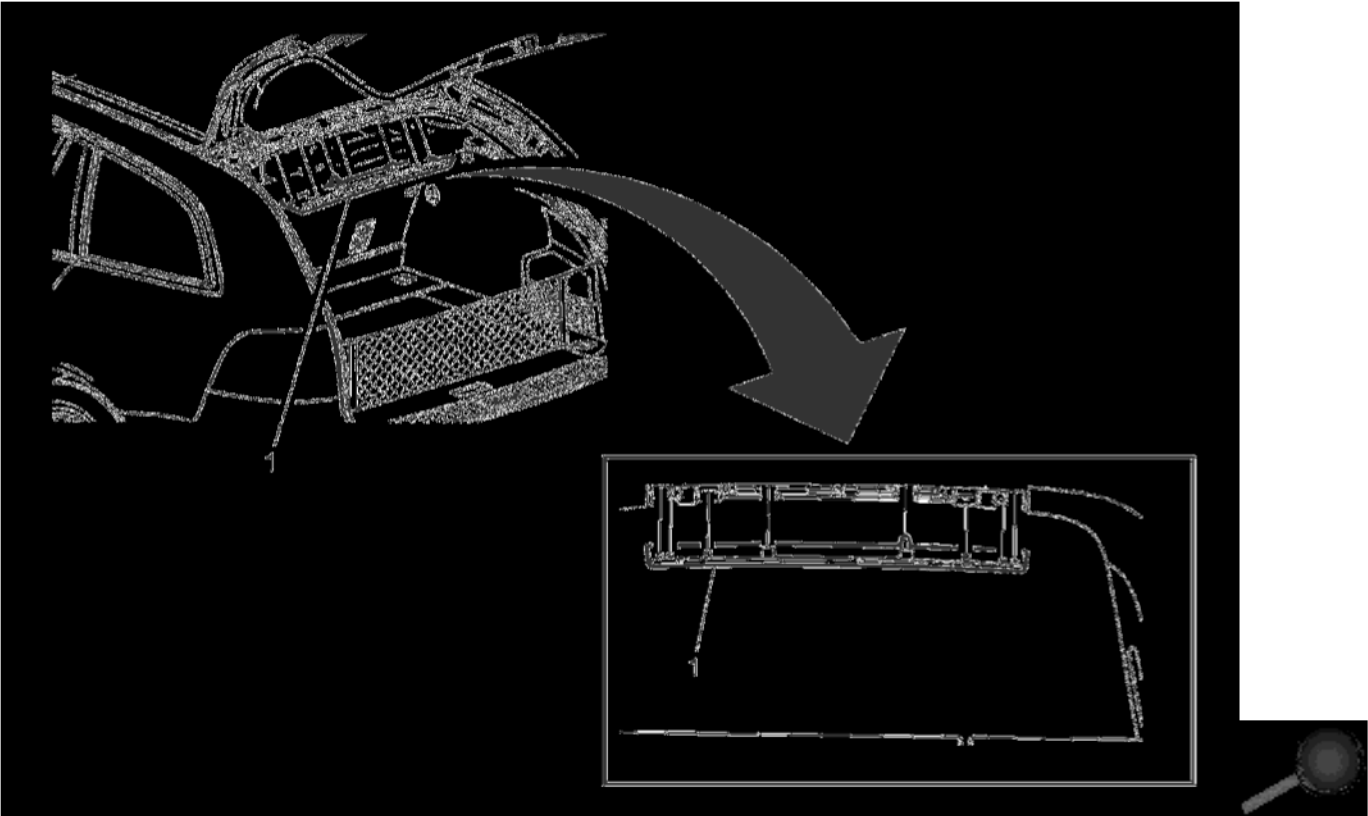

Liftgate Upper Center Trim Finish Panel Replacement

Callout	Component Name
1	Liftgate Upper Center Trim Finish Panel Assembly Procedure Using a suitable trim tool, disengage the liftgate upper center trim finish panel from the roof rear header inner panel.


Liftgate Upper Side Trim Finish Panel Replacement (Sportwagon)

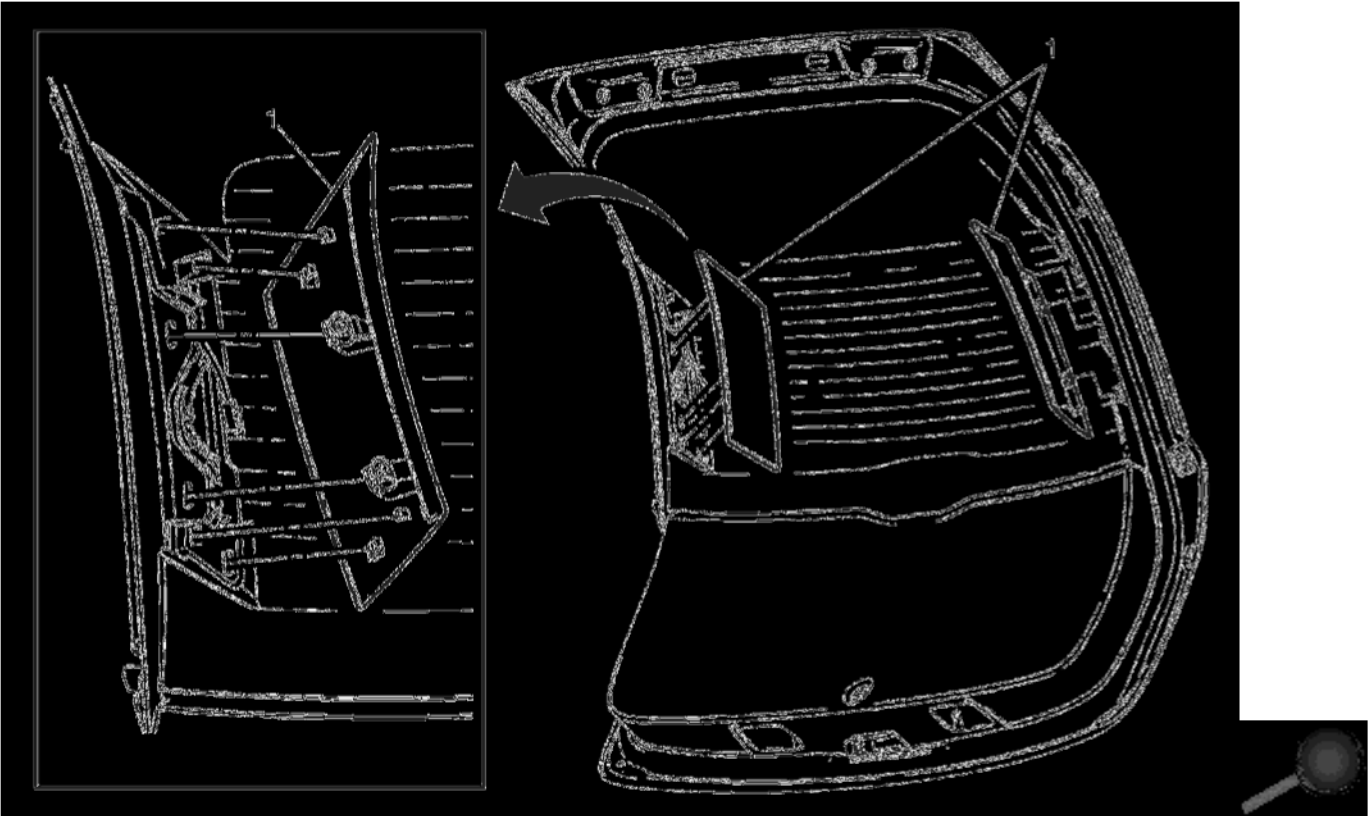

Liftgate Upper Side Trim Finish Panel Replacement

Callout	Component Name
1	Liftgate Upper Side Trim Finish Panel Assembly (Qty: 2) Procedure © 2014 General Motors. All rights reserved. Using a suitable trim tool, disengage the liftgate upper side trim finish panels from the liftgate upper center trim finish panel and the liftgate lower trim finish panel.

Liftgate Lower Trim Finish Panel Replacement (Sportwagon)

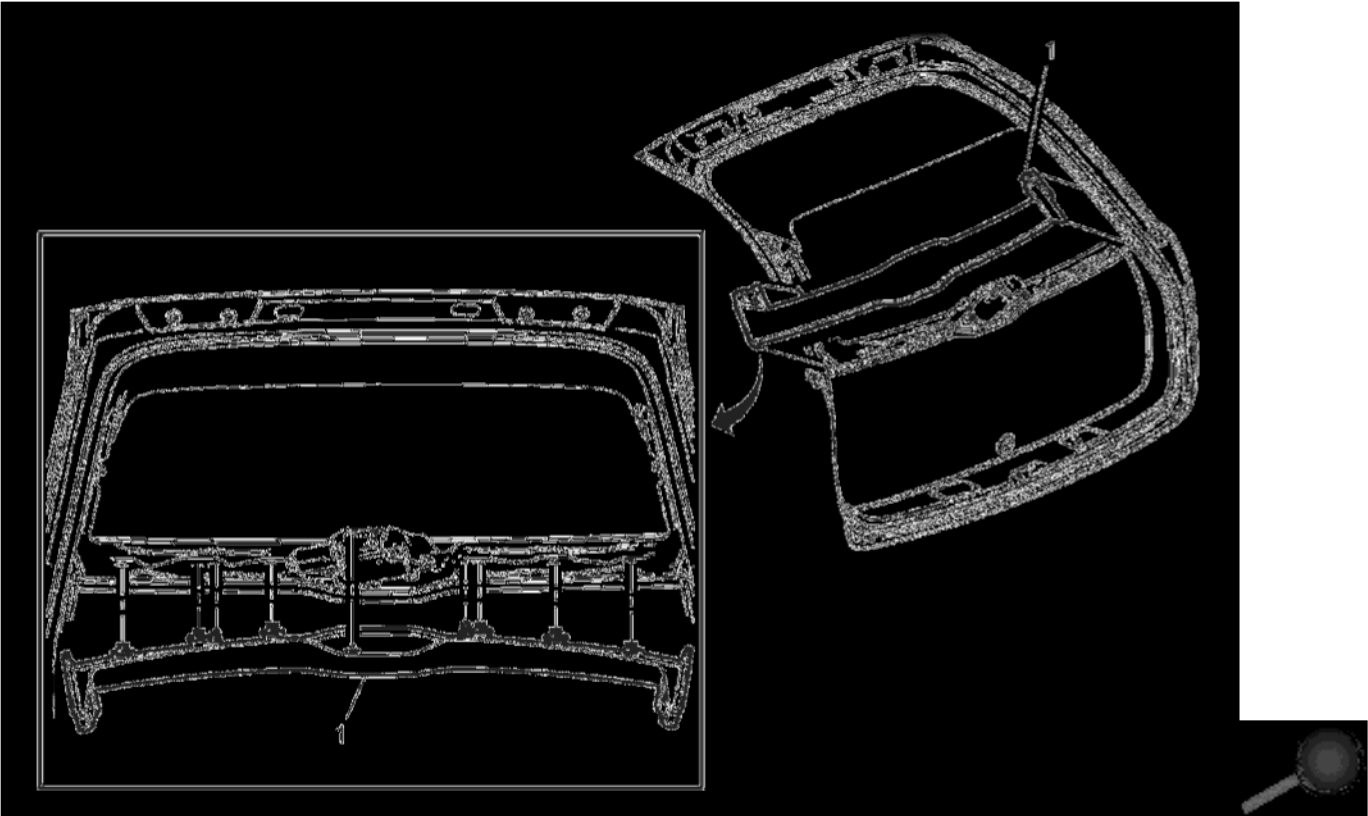


Liftgate Lower Trim Finish Panel Replacement

Callout	Component Name
Preliminary Procedure Remove the liftgate upper side trim finish panel. Refer to Liftgate Upper Side Trim Finish Panel Replacement . © 2014 General Motors. All rights reserved.	
1	Liftgate Lower Trim Finish Panel Assembly Procedure

Use the appropriate trim tool to release the liftgate lower trim finish panel from the liftgate assembly.

Rear Compartment Lid Carpet Replacement (Sedan)

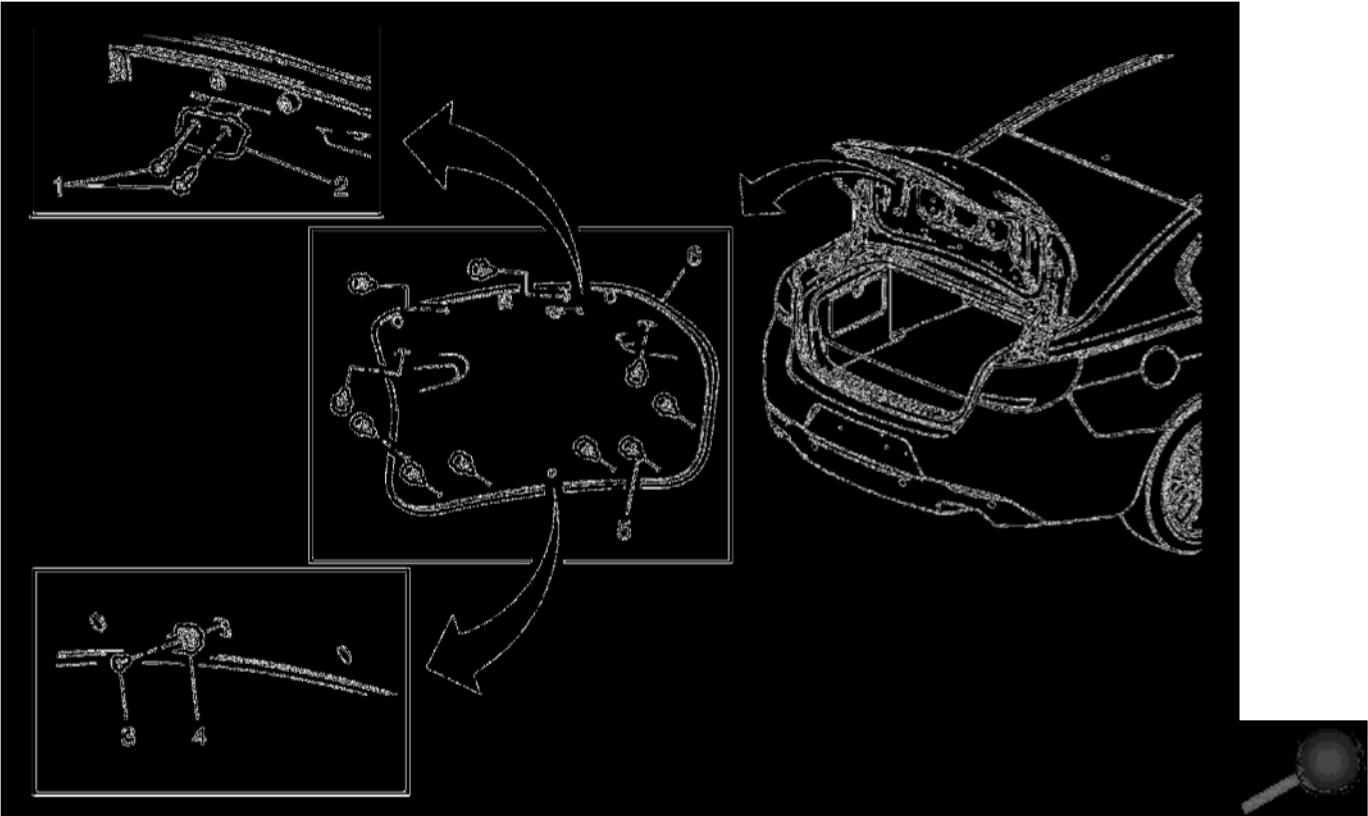

Rear Compartment Lid Carpet Replacement


Callout	Component Name
1	Rear Compartment Lid Inside Handle Fastener (Qty: 2) Caution: Refer to Fastener Caution. Tighten 2.5 N•m (22 lb in)

2	Rear Compartment Lid Inside Handle
3	Rear Compartment Spare Wheel Stowage Cover Hook Fastener Tighten 1.5 N•m (13 lb in)
4	Rear Compartment Spare Wheel Stowage Cover Hook
5	Rear Compartment Lid Inner Panel Trim Retainer (Qty: 10)
6	Rear Compartment Lid Carpet

Callout	Component Name
1	Cargo Tie Down Loop Trim Cover
	© 2014 General Motors. All rights reserved. Cargo Tie Down Loop Fastener Caution: Refer to Fastener Caution. Procedure

2	Remove the cargo tie down loop trim cover to access the fastener. Tighten 20 N•m (15 lb ft)
3	Cargo Tie Down Loop Assembly

Body Lock Pillar Garnish Molding Replacement (Sedan)

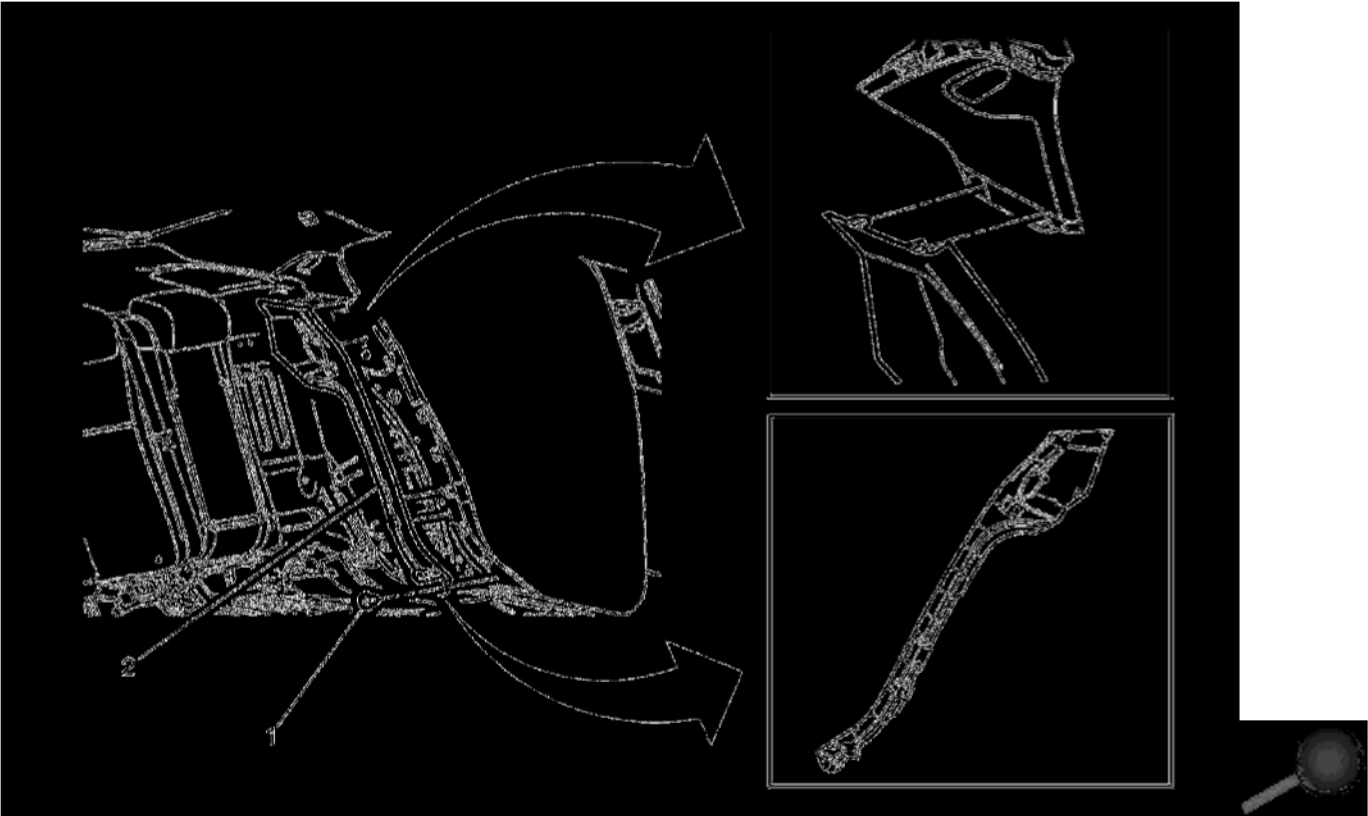


Body Lock Pillar Garnish Molding Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation .	
2. Remove the rear side door sill garnish molding. Refer to Rear Side Door Sill Garnish Molding Replacement .	

1	Body Lock Pillar Garnish Molding Clip
2	Body Lock Pillar Garnish Molding Assembly Procedure Use a trim tool or equivalent to aid in the removal.

Body Lock Pillar Garnish Molding Replacement (Sportwagon)

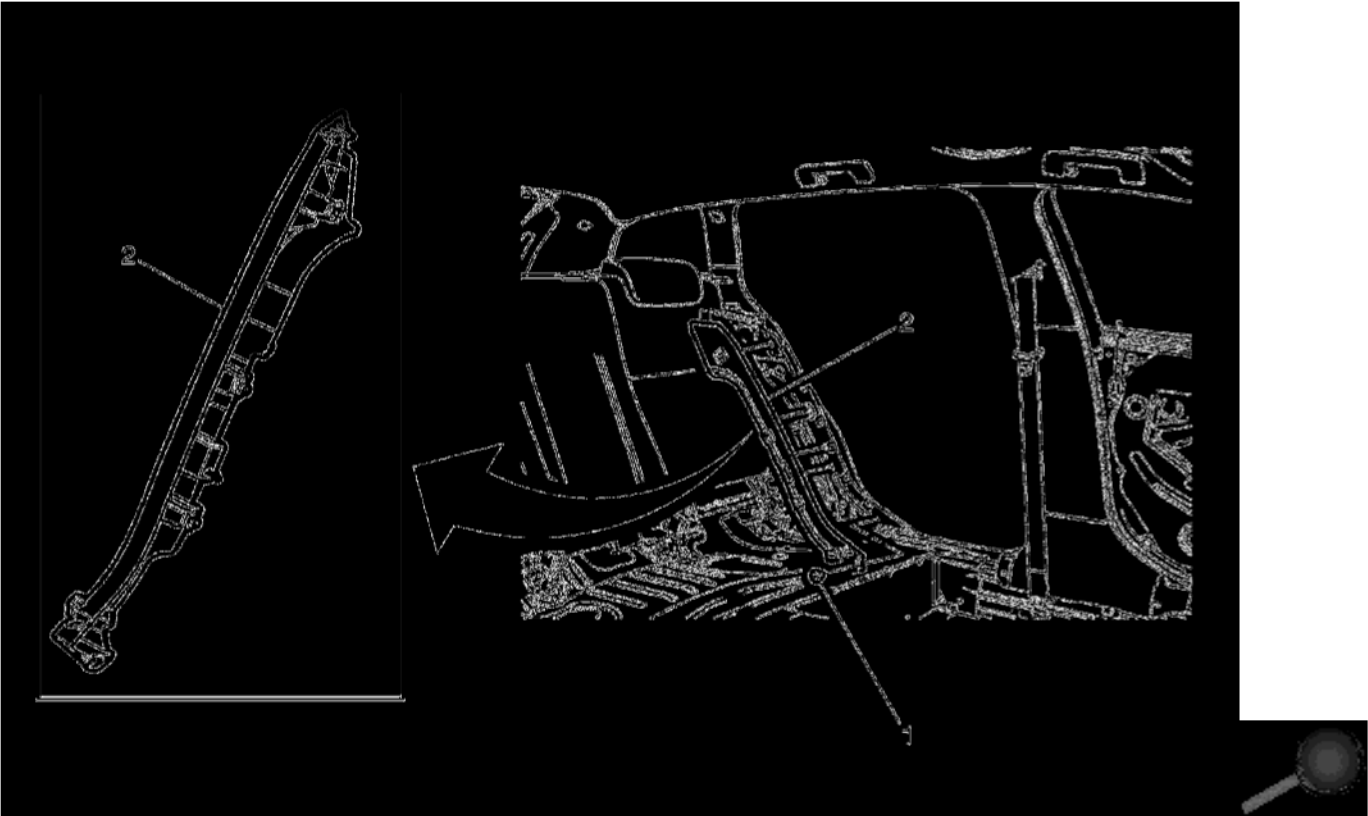

Body Lock Pillar Garnish Molding Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the rear seat back bolster. Refer to Rear Seat Back Bolster Replacement .	
2. Remove the rear seat cushion. Refer to Rear Seat Cushion Removal and Installation .	
3. Remove the rear side door sill garnish molding. Refer to Rear Side Door Sill Garnish Molding Replacement .	

1	Body Lock Pillar Garnish Molding Clip
2	Body Lock Pillar Garnish Molding Assembly Procedure Use a trim tool or equivalent to aid in the removal.

Body Side Rear Window Garnish Molding Replacement (Sportwagon)




Body Side Rear Window Garnish Molding Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the rear seat back bolster. Refer to Rear Seat Back Bolster Replacement .	
2. Remove the body lock pillar garnish molding. Refer to Body Lock Pillar Garnish Molding Replacement .	
3. Remove the quarter inner trim finish panel — right side or left side. Refer to Quarter Inner Trim Finish Panel Replacement - Right	

[Side](#) or [Quarter Inner Trim Finish Panel Replacement - Left Side](#).

1	Body Lock Pillar Trim Panel Fastener Caution: Refer to Fastener Caution .
2	Body Side Rear Window Garnish Molding Assembly Procedure Route the seat belt through the body side rear window garnish molding.

Body Pressure Relief Valve Replacement (Body Air Outlet Deflector - Wagon)

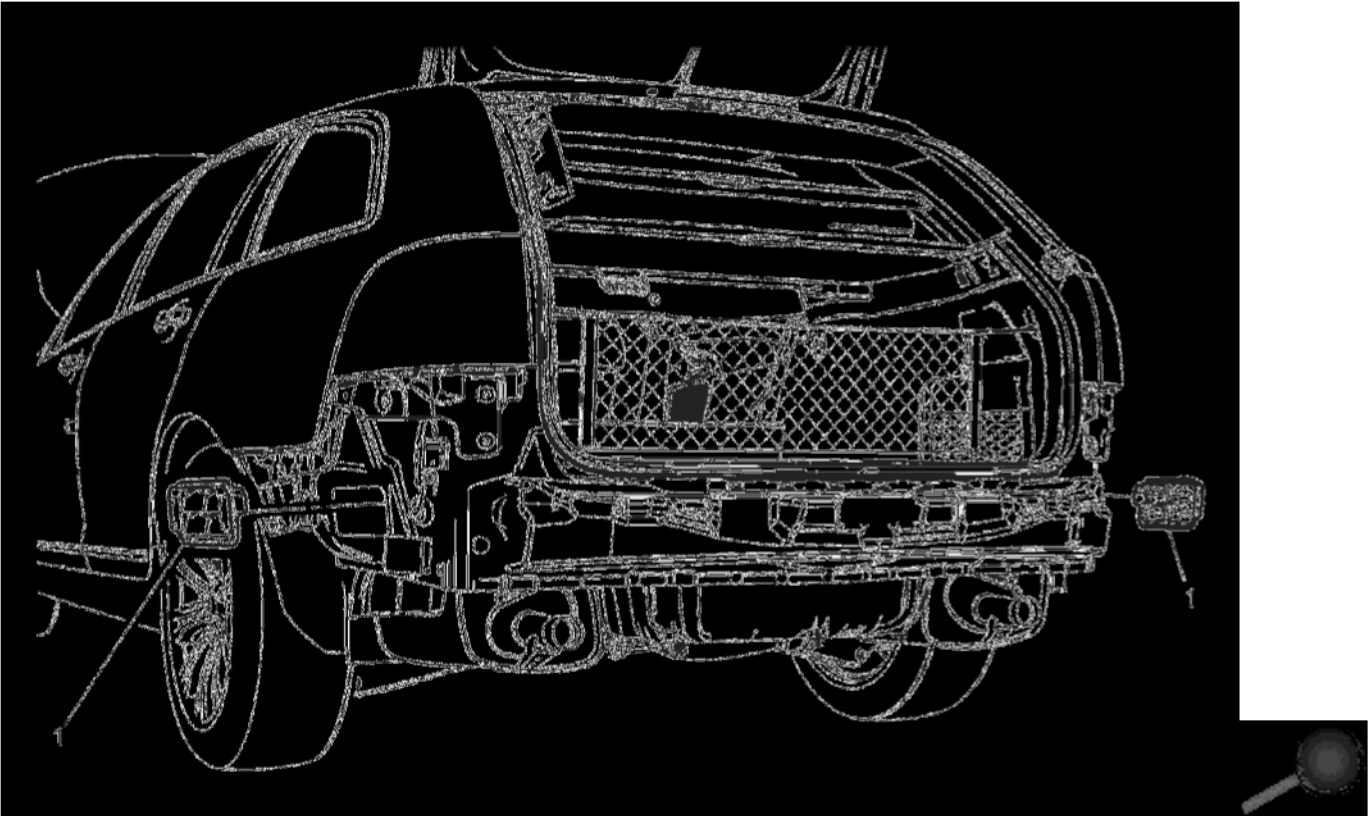

Body Pressure Relief Valve Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the rear bumper fascia. Refer to Rear Bumper Fascia Replacement .	
2. Remove the rear compartment side trim panel. Refer to Rear Compartment Side Trim Panel Replacement .	


1

Body Pressure Relief Valve (Qty: 2)

Procedure

Use a small flat-bladed tool to release the body air outlet deflector.

Body Pressure Relief Valve Replacement (Sedan)

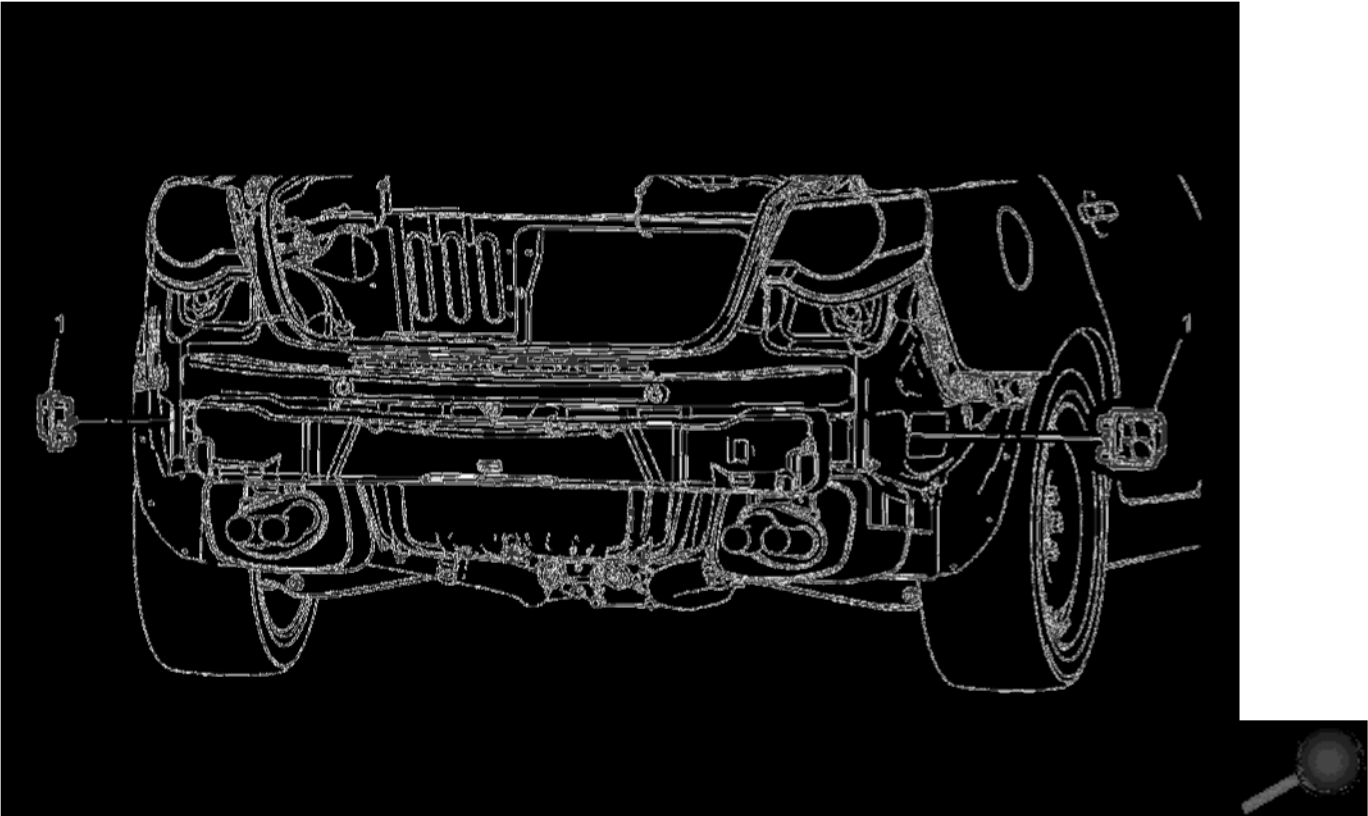

Body Pressure Relief Valve Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the rear bumper fascia. Refer to Rear Bumper Fascia Replacement .	
2. Remove the rear compartment side trim panel. Refer to Rear Compartment Side Trim Panel Replacement .	

1

Body Pressure Relief Valve (Qty: 2)

Procedure


Use a small flat-bladed tool to release the body air outlet deflector.

Body Pressure Relief Valve Replacement (UTE)

Removal Procedure


Warning: When working with any type of glass or sheet metal with exposed or rough edges, wear approved safety glasses and gloves in order to reduce the chance of personal injury.

1. Remove the cargo box liner. Refer to [Cargo Box Liner Replacement](#).

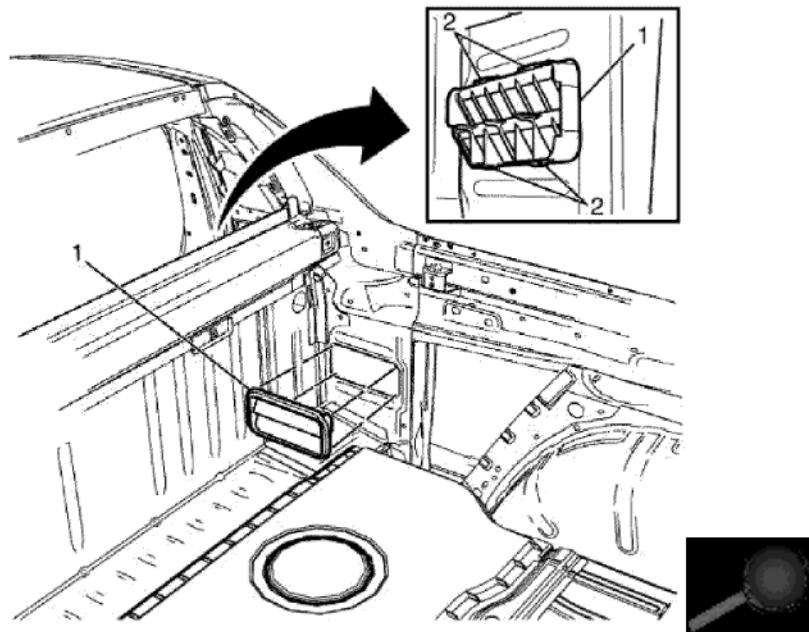

2. Working inside the cargo area, using a suitable tool, lift the lower edge up and release the 4 locking tabs (2) and push the body pressure relief valve assembly (1) into the cargo area.
3. Thoroughly inspect the body pressure relief valve for any signs of damage. Pay particular attention to the sealing performance of the pressure relief valve, including the flaps, perimeter seal and locking tab condition and general condition of the valve assembly. The body pressure relief valve MUST be replaced with a NEW part if there is any sign of damage or any doubt regarding its condition or ability to function correctly.

Installation Procedure

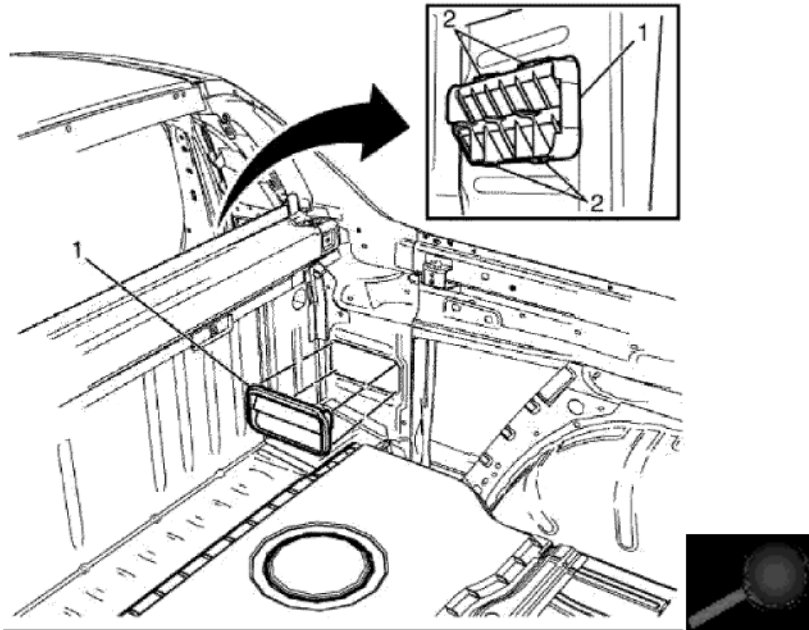

Important: Listen for an audible click to confirm that all 4 retaining clips (2) engage correctly.


1. Working inside the cargo compartment, install the body pressure relief valve (1) into the body side inner panel. Ensure the body pressure relief valve seals correctly against the body side inner panel and that all 4 locking tabs (2) are fully engaged to the body side inner panel.
2. Install the cargo box liner. Refer to [Cargo Box Liner Replacement](#).

Fastener Tightening Specifications

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Cargo Tie Down Loop Fastener	20 N•m	15 lb ft
Coat Hook Fastener	6 N•m	53 lb in
Quarter Upper Trim Panel Fastener	2 N•m	18 lb in

Special Tools

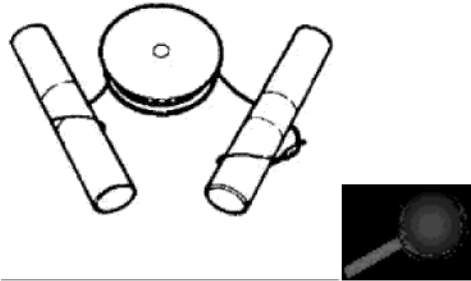Illustration	Tool Number/ Description
	J-36020 Stationary Glass Removal Tool