

ACCESSORIES & EQUIPMENT

Floor Coverings and Headlinings - Corvette

SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Driver Footrest Bracket	6 N.m	53 lb in

ADHESIVES, FLUIDS, LUBRICANTS AND SEALERS

Adhesives, Fluids, Lubricants and Sealers

Application	Type of Material	GM Part Number
GM Vehicle Care Odor Eliminator	Fluids	Refer to Electronic Parts Catalog.

REPAIR INSTRUCTIONS

ELIMINATING UNWANTED ODORS IN VEHICLES

GM Vehicle Care Odor Eliminator, Refer to **Adhesives, Fluids, Lubricants and Sealers**, may control or eliminate odors in the interior and luggage compartment areas of GM vehicles. This non-toxic, biodegradable, odorless product has been shown to greatly reduce or remove the following types of odor:

- Objectionable smells of mold and mildew resulting from vehicle water leaks
- Customer created odors, such as smoke

You may safely use GM Vehicle Care Odor Eliminator on fabrics, vinyl, leather, carpet and sound deadening materials. You may also induce this product into HVAC modules and instrument panel ducts for the control of non-bacterial related odors.

NOTE: **This product leaves no residual scent and should not be used as an air freshener.**

This product may result in the permanent elimination of an odor and may be preferable to customers whose allergies make them sensitive to perfumes. This product may effectively remove odors when directly contacting the odor source. In cases such as water leaks, use this product with diagnostic procedures to first eliminate the primary cause of the odor. Then use further applications on the residual odor to permanently correct the vehicle condition.

How to Use this Product

- Spray GM Vehicle Care Odor Eliminator directly or as an additive with carpet shampoo in steam cleaners.
- Do not use on any interior surface that plain water would deteriorate, because this product will have the same effect. Also avoid letting this product come into contact with vinegar or any acidic substance. Acid-based products will hamper the effectiveness of GM Vehicle Care Odor Eliminator.
- Complete eight page treatment sheets are enclosed within each case of GM Vehicle Care Odor Eliminator. These treatment instructions range from simple vehicle odor elimination to full step by step procedures for odor removal from water leaks.
- Instructions and cautions are printed on the bottle, but additional help is available. If you encounter a persistent or recurring odor, you may call to obtain additional information and usage suggestions.

CARPET RETAINER REPLACEMENT

Removal Procedure

WARNING: Wear safety glasses in order to avoid eye damage.

1. Remove the front floor panel carpet. Refer to **Front Floor Panel Carpet Replacement - Left Side** or **Front Floor Panel Carpet Replacement - Right Side**.

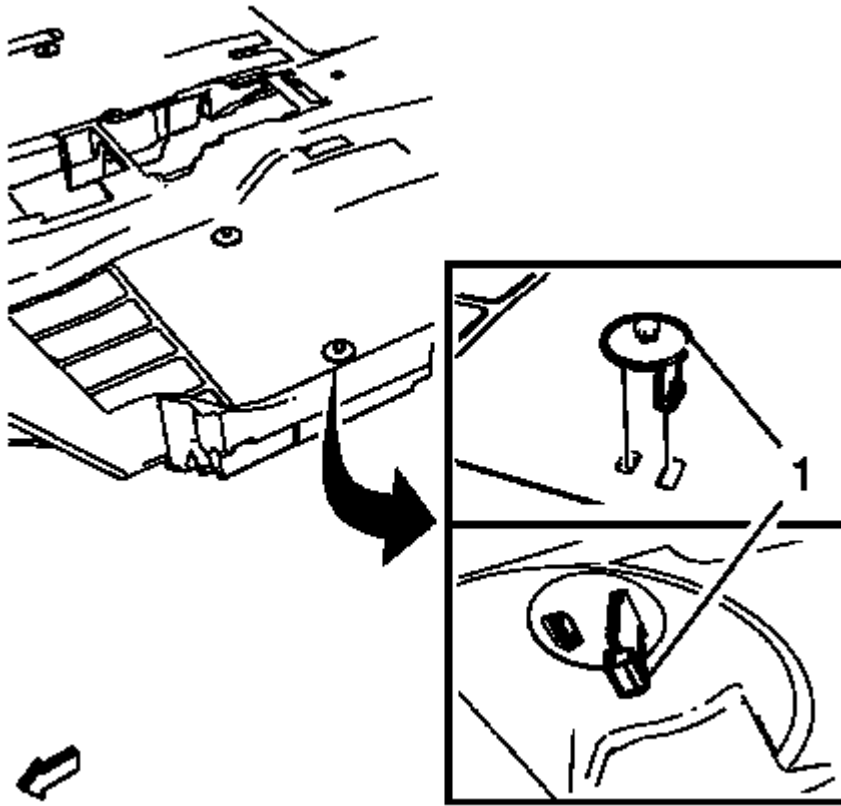


Fig. 1: Floor Panel Carpet Retainer
Courtesy of GENERAL MOTORS COMPANY

2. Disengage the front floor panel carpet retainer (1) on the rear side of the front floor panel carpet.
3. Remove the front floor panel carpet retainer (1) upwards.

Installation Procedure

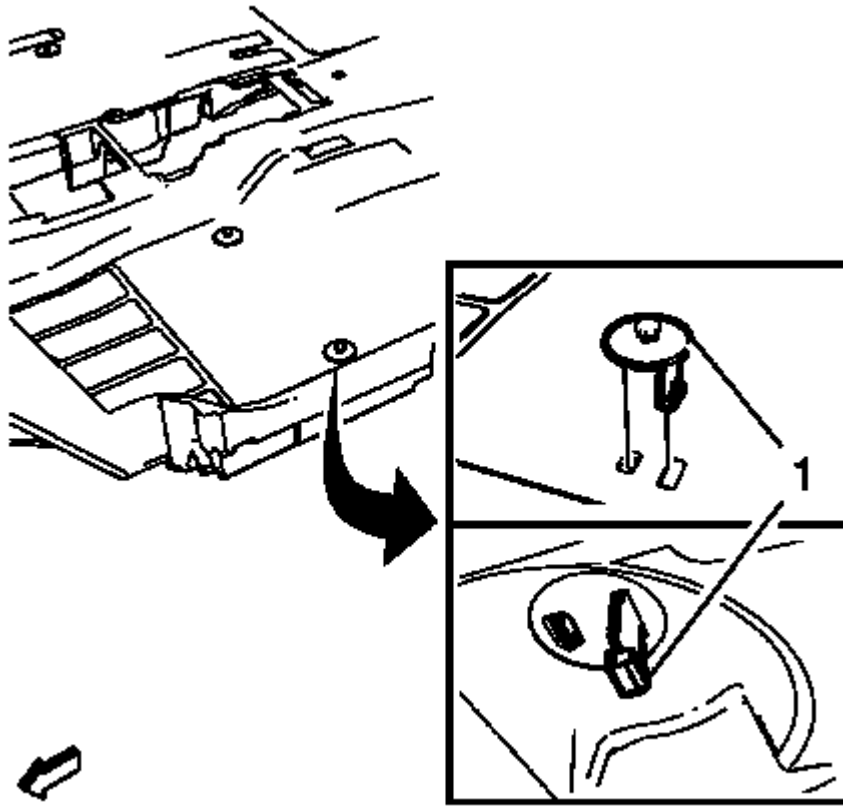


Fig. 2: Floor Panel Carpet Retainer
 Courtesy of GENERAL MOTORS COMPANY

1. Align the front floor panel carpet retainer (1) to the cutout in the carpet.
2. Engage the front floor panel carpet retainer (1) on the rear side of the front floor panel carpet.
3. Install the front floor panel carpet. Refer to **Front Floor Panel Carpet Replacement - Left Side** or **Front Floor Panel Carpet Replacement - Right Side**.

FLOOR CARPET DRYING

If the carpet or the pad or insulator is wet, use the following criteria for drying or for replacing the components:

- For a 1-piece carpet assembly bonded to a cotton or a fiber padding, replace the entire assembly.
- For a 2-piece carpet assembly with a cotton or a fiber padding, replace the padding only. While the carpet is out of the vehicle, dry the carpet using the method described below.
- For a 1-piece carpet assembly bonded to a foam padding or attached to a synthetic padding, dry the carpet using the method described below.
- For a 2-piece carpet assembly with a synthetic padding, dry the assembly using the method described below.

Drying Method

1. If you observe puddles of liquid on the carpet face, use a wet vacuum to remove the excess moisture.
2. Blot the face of the carpet with a towel in order to absorb as much moisture as possible.
3. Point a fan at the affected area and air dry the carpet.

FRONT SEAT BACK BODY PANEL CARPET REPLACEMENT

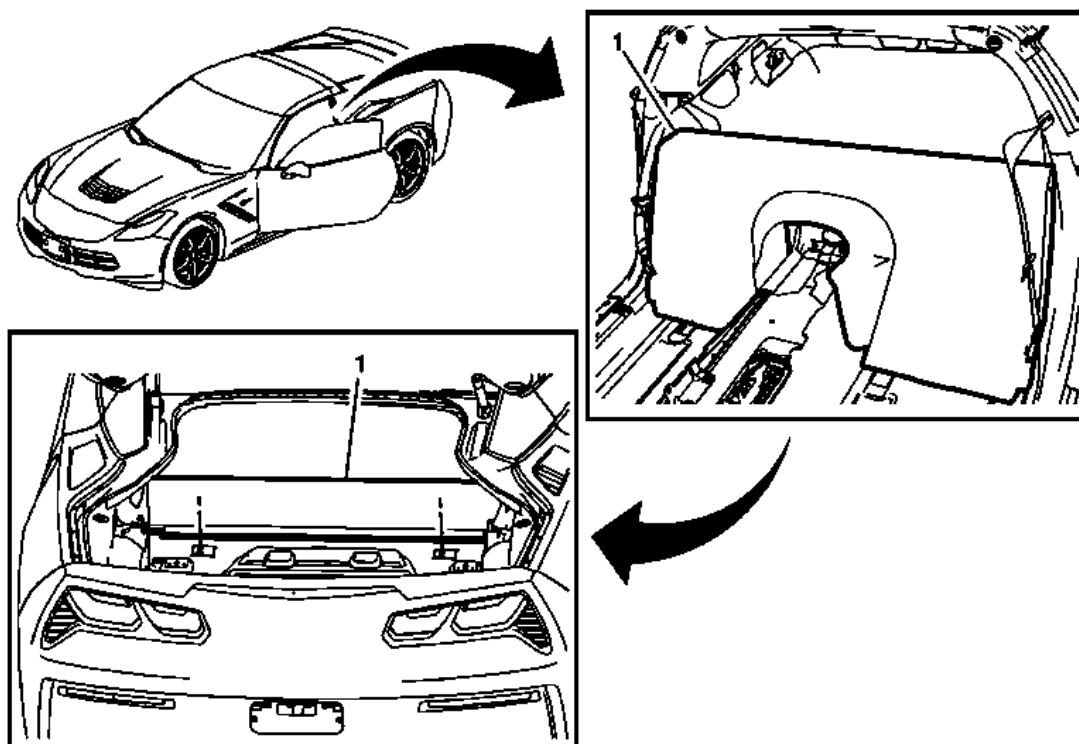


Fig. 3: Front Seat Back Body Panel Carpet
Courtesy of GENERAL MOTORS COMPANY

Front Seat Back Body Panel Carpet Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the front floor lower console. Refer to <u>Front Floor Lower Console Replacement</u> .	
2. Remove the rear compartment floor panel trim. Refer to <u>Rear Compartment Floor Panel Trim Replacement (North America)</u> , <u>Rear Compartment Floor Panel Trim Replacement (Export - CU9, CV5, CZ3, C4E)</u> .	
	Front Seat Back Body Panel Carpet

1

1. Move the seats forward.
2. Pull the carpet out from under the adjoining trim panels.
3. Rear of front seat back body panel carpet attaches to 2 integral clips on rear compartment panel.

FRONT FLOOR PANEL CARPET REPLACEMENT - LEFT SIDE

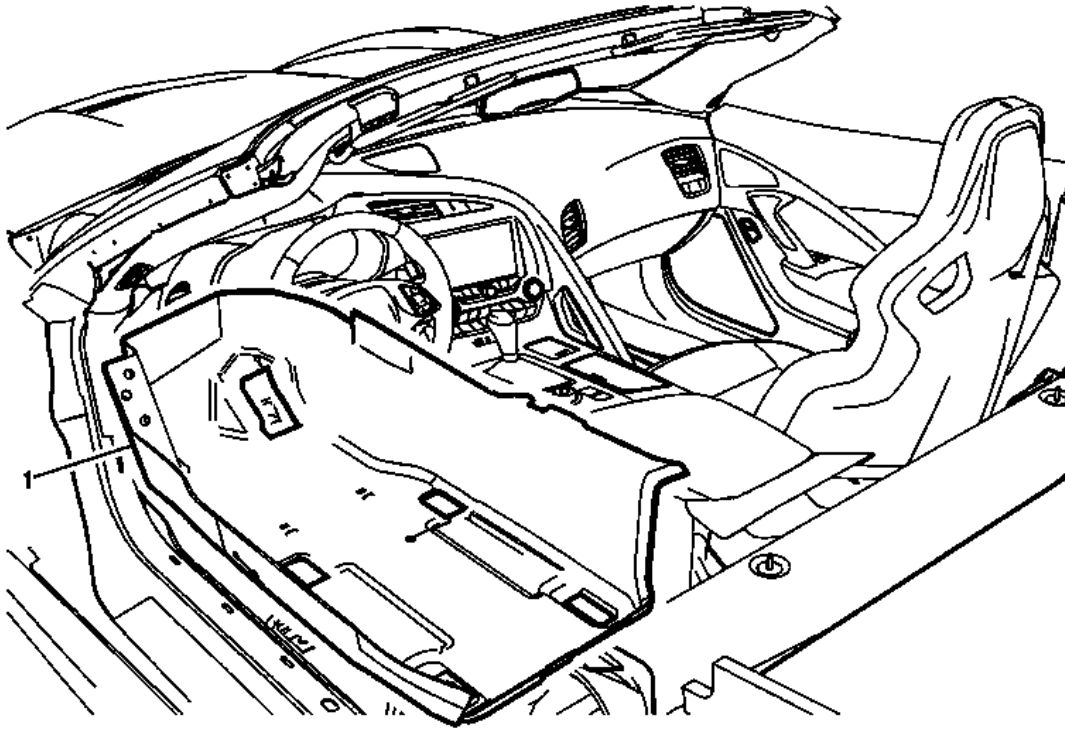


Fig. 4: Front Floor Panel Carpet - Left Side
Courtesy of GENERAL MOTORS COMPANY

Front Floor Panel Carpet Replacement - Left Side

Callout	Component Name
Preliminary Procedures	
1.	Remove the driver footrest. Refer to <u>Driver Footrest Replacement</u> .
2.	Remove the driver seat. Refer to <u>Driver or Passenger Seat Removal and Installation</u> .
3.	Remove the front side door inside handle cable. Refer to <u>Front Side Door Inside Handle Cable Replacement</u> .
4.	Remove the front floor console extension panel. Refer to <u>Front Floor Console Extension Panel Replacement</u> .
5.	Remove the body lock pillar trim panel. Refer to <u>Body Lock Pillar Trim Panel Replacement (Coupe)</u> , <u>Body Lock Pillar Trim Panel Replacement (Convertible)</u> .

Carpet Replacement.

1	Front Floor Panel Carpet Assembly - Left Side
---	---

FRONT FLOOR PANEL CARPET REPLACEMENT - RIGHT SIDE

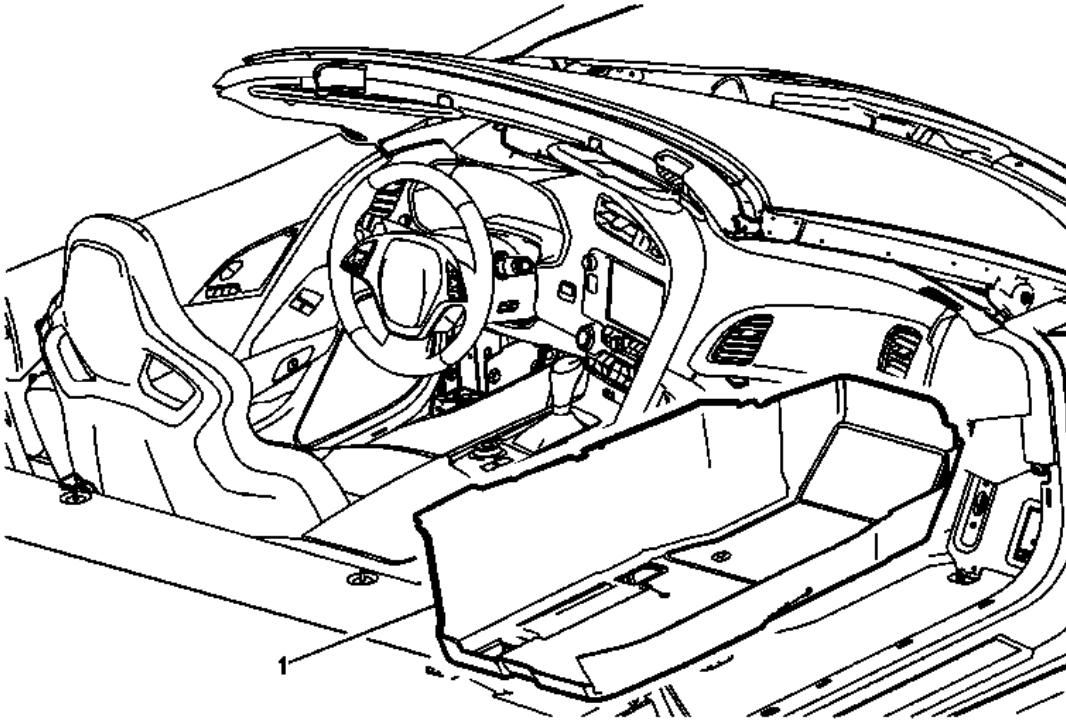


Fig. 5: Front Floor Panel Carpet - Right Side

Courtesy of GENERAL MOTORS COMPANY

Front Floor Panel Carpet Replacement - Right Side

Callout	Component Name
Preliminary Procedures	
1. Remove the passenger seat. Refer to <u>Driver or Passenger Seat Removal and Installation</u> .	
2. Remove the front side door inside handle cable. Refer to <u>Front Side Door Inside Handle Cable Replacement</u> .	
3. Remove the front floor console extension panel. Refer to <u>Front Floor Console Extension Panel Replacement</u> .	
4. Remove the body lock pillar trim panel. Refer to <u>Body Lock Pillar Trim Panel Replacement (Coupe)</u> , <u>Body Lock Pillar Trim Panel Replacement (Convertible)</u> .	
5. Remove the front seat back body panel carpet. Refer to <u>Front Seat Back Body Panel Carpet Replacement</u> .	
1	Front Floor Panel Carpet Assembly - Right Side

DRIVER FOOTREST REPLACEMENT

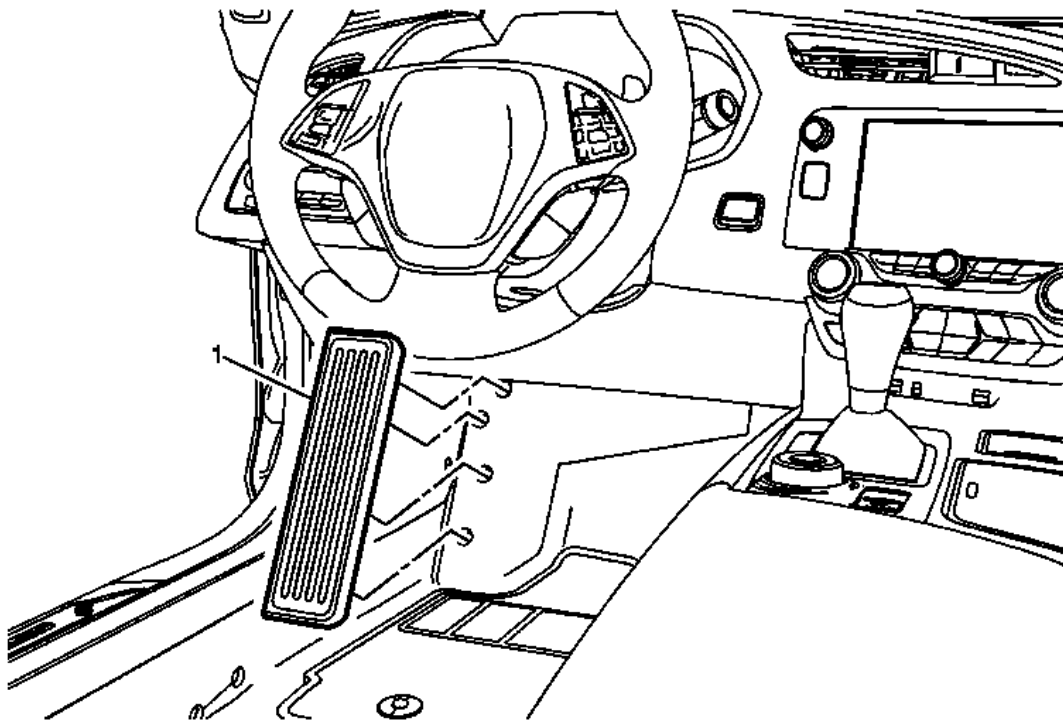


Fig. 6: Driver Footrest
Courtesy of GENERAL MOTORS COMPANY

Driver Footrest Replacement

Callout	Component Name
1	Driver Footrest Procedure Use a flat-bladed plastic trim tool in order to release the driver footrest from the driver footrest bracket.

DRIVER FOOTREST BRACKET REPLACEMENT

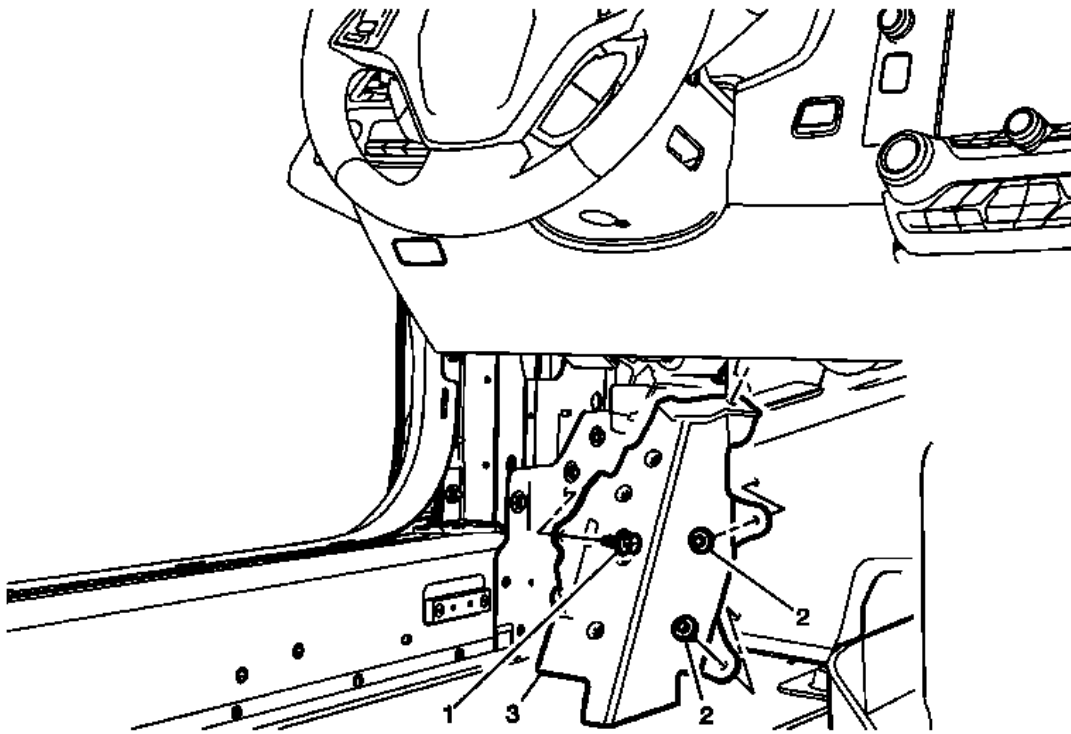


Fig. 7: Driver Footrest Bracket
 Courtesy of GENERAL MOTORS COMPANY

Driver Footrest Bracket Replacement

Callout	Component Name
Preliminary Procedure Remove the front floor panel carpet - left side. Refer to Front Floor Panel Carpet Replacement - Left Side .	
1	Driver Footrest Push-In Retainer
2	Driver Footrest Bracket Fastener (Qty: 2) CAUTION: Refer to Fastener Caution Tighten: 6 (53 lb in)
3	Driver Footrest Bracket

HEADLINING REAR TRIM PANEL REPLACEMENT

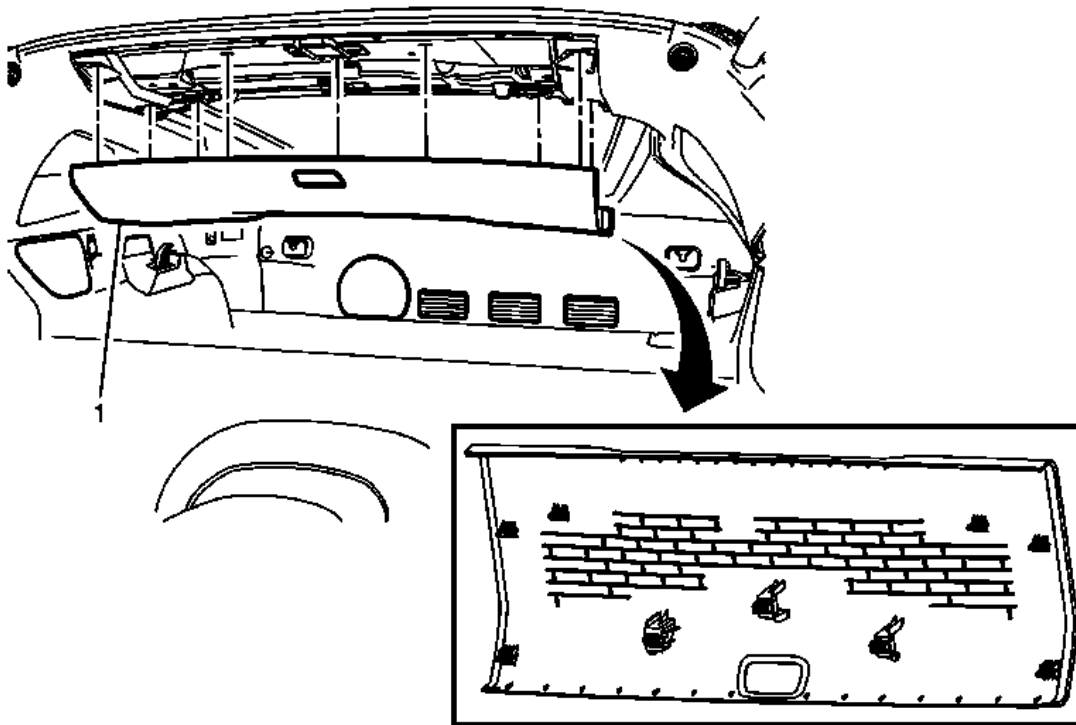


Fig. 8: Headlining Rear Trim Panel
Courtesy of GENERAL MOTORS COMPANY

Headlining Rear Trim Panel Replacement

Callout	Component Name
Preliminary Procedure	
Remove the roof lift off panel. Refer to Roof Lift Off Panel Replacement .	
1	Headlining Rear Trim Panel Procedure Pull downward to disengage the 9 integral clips that hold the trim panel to the vehicle.

ROOF RETRACTABLE FRONT SIDE HEADLINING TRIM PANEL REPLACEMENT

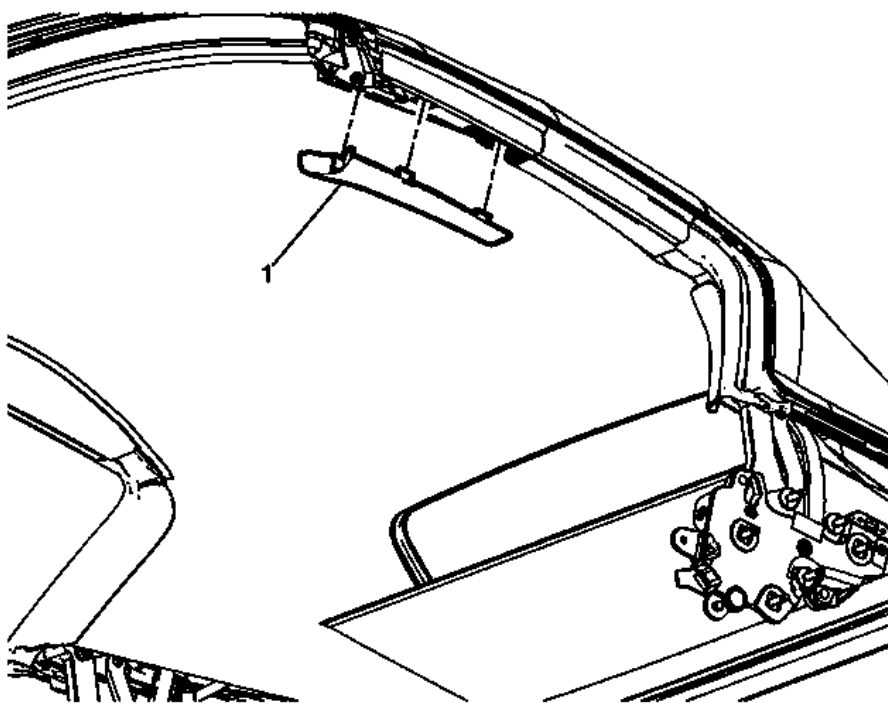


Fig. 9: Roof Retractable Front Side Headlining Trim Panel
Courtesy of GENERAL MOTORS COMPANY

Roof Retractable Front Side Headlining Trim Panel Replacement

Callout	Component Name
Preliminary Procedure Place folding top to mid-position.	
1	Roof Retractable Front Side Headlining Trim Panel Procedure Use a flat-bladed plastic trim tool in order to release the clips securing the roof retractable front side headlining trim panel from the folding top.

ROOF RETRACTABLE REAR SIDE HEADLINING TRIM PANEL REPLACEMENT

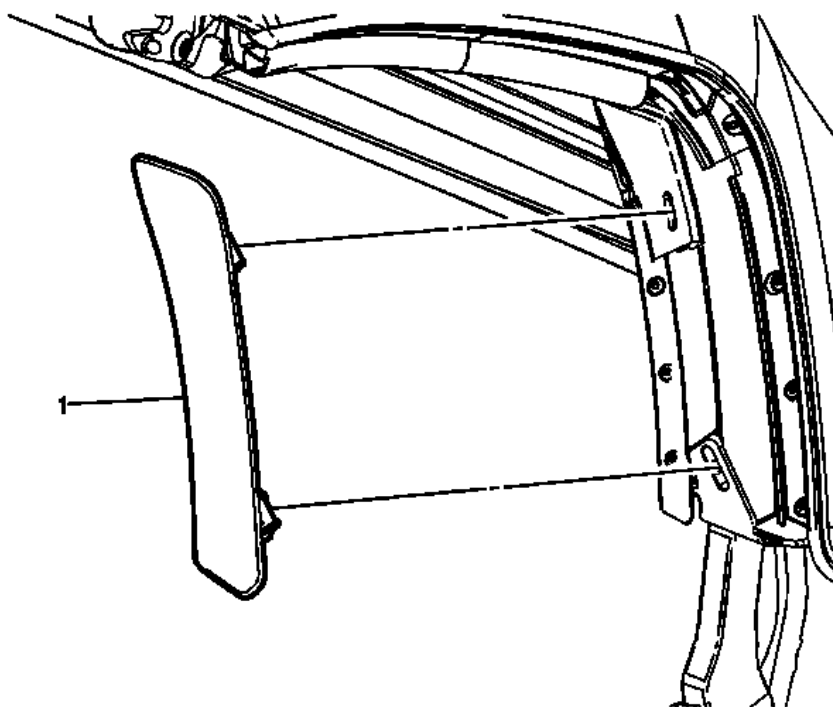


Fig. 10: Roof Retractable Rear Side Headlining Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Roof Retractable Rear Side Headlining Trim Panel Replacement

Callout	Component Name
Preliminary Procedure Remove the body hinge pillar garnish molding. Refer to <u>Body Hinge Pillar Garnish Molding Replacement</u> .	
1	Roof Retractable Rear Side Headlining Trim Panel Procedure Use a flat-bladed plastic trim tool in order to release the clips securing the roof retractable rear side headlining trim panel from the folding top.

ROOF RETRACTABLE CENTER SIDE HEADLINING TRIM PANEL REPLACEMENT

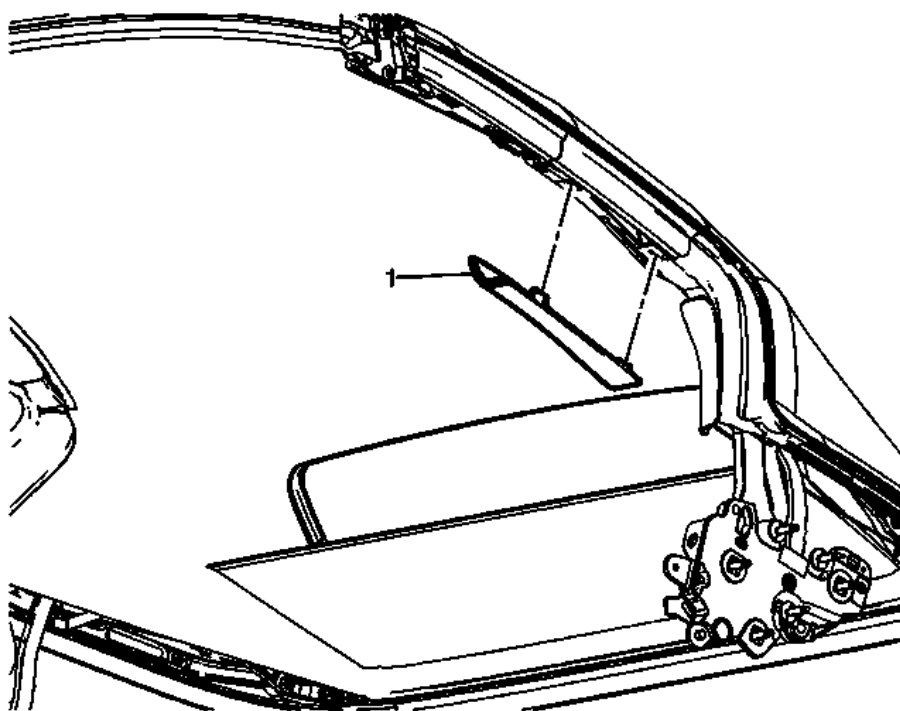


Fig. 11: Roof Retractable Center Side Headlining Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Roof Retractable Center Side Headlining Trim Panel Replacement

Callout	Component Name
Preliminary Procedure Remove the roof retractable front side headlining trim panel. Refer to <u>Roof Retractable Front Side Headlining Trim Panel Replacement</u> .	
1	Roof Retractable Center Side Headlining Trim Panel Procedure Use a flat-bladed plastic trim tool in order to release the clips securing the roof retractable center side headlining trim panel from the folding top.