


Openers

Component Location Index

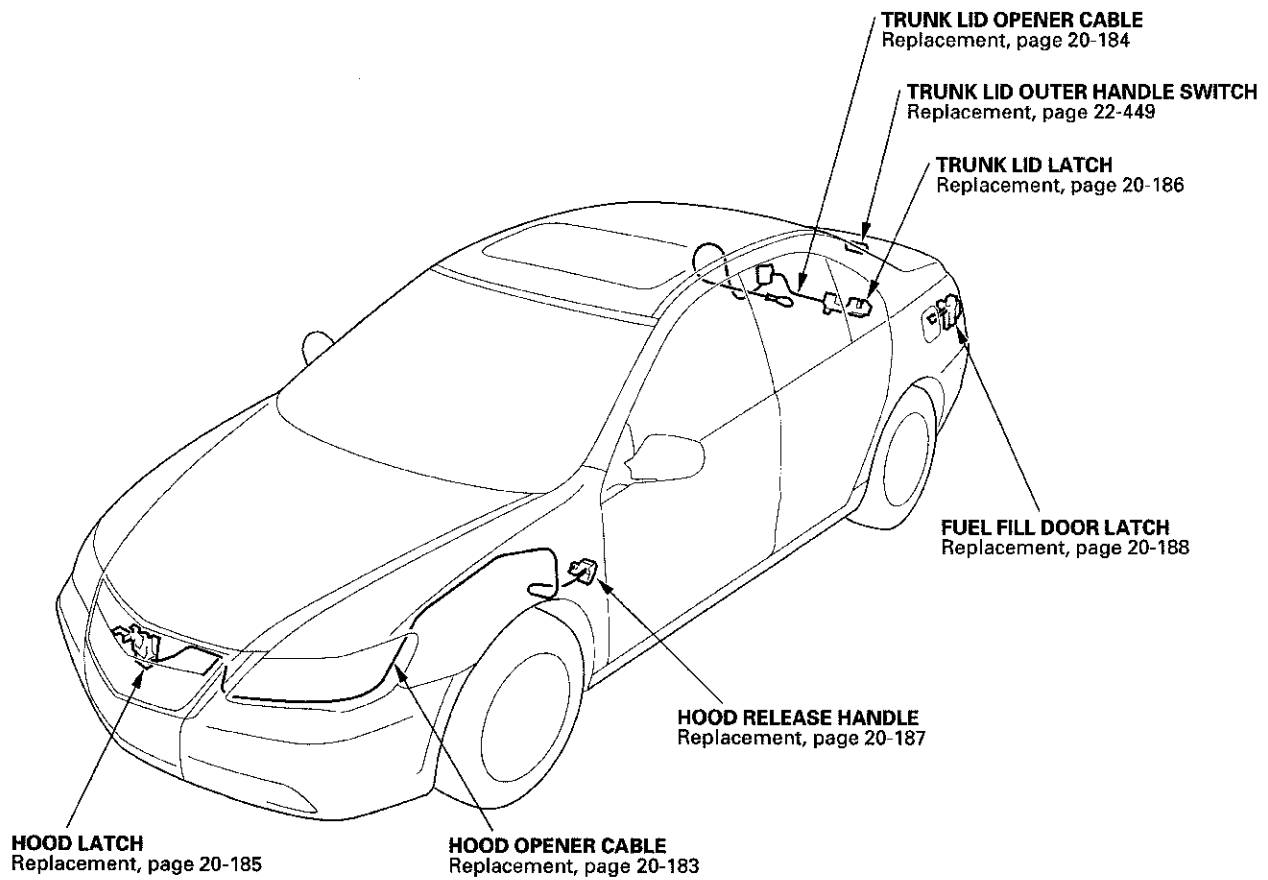

cardiagn.com



Hood Opener Cable Replacement

NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the body and related parts.



 
1. Remove these items:

- Upper grille cover (see page 20-163)
- Headlight, left side (see page 22-220)
- Radiator tank, as needed
- Front inner fender, left side as necessary (see page 20-176)
- Kick panel, left side (see page 20-67)

2. Disconnect the hood opener cable (A) from the hood latch (B) (see page 20-185).

Fastener Locations

▷ : Clip, 5

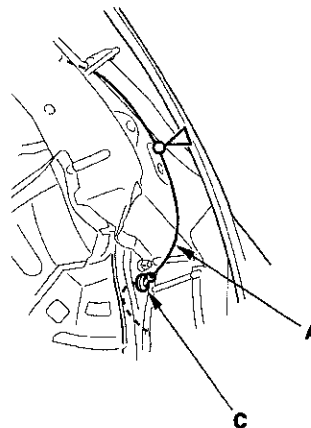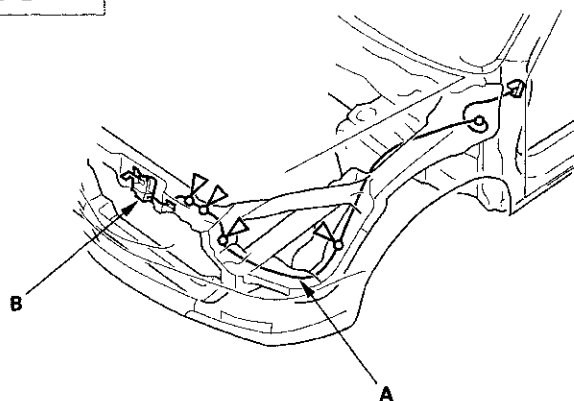

3. Using a clip remover, detach the clips, and remove the grommet (C) from the body, then remove the hood opener cable from the vehicle. Take care not to kink the cable.
4. Install the cable in the reverse order of removal.

NOTE: If the clips are damaged or stress-whitened, replace them with new ones.

Openers

Trunk Lid Opener Cable Replacement

NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the body and related parts.

1. Remove these items (see page 20-83):


- Trunk floor lid
- Trunk rear trim panel
- Trunk front trim panel
- Trunk side trim panel, right side
- Trunk upper trim panel

2. Disconnect the trunk lid opener cable from the trunk inside lever (see page 20-186).

3. Remove the trunk lid opener cable (A) and the clip (B) from the opener cable bracket (C).

Fastener Locations

B, D ▷ : Clip, 2

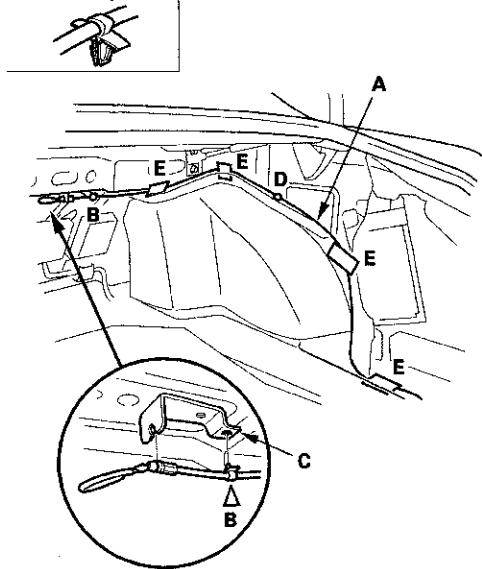


4. Use a clip remover to release the clip (D). Remove the cushion tapes (E).

5. Remove the trunk lid opener cable from the vehicle. Take care not to kink the cable.

6. Install the opener cable in the reverse order of removal, and note these items:

- Align the marks (A) on the opener cable (B) with the cable clips (C) as shown.
- If the clips are damaged or stress-whitened, replace them with new ones.
- Push the clips into place securely.

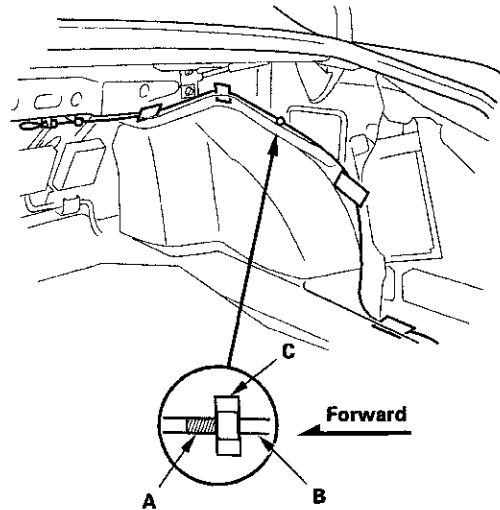




Hood Latch Replacement


1. Remove the upper grille (see page 20-162).
2. Remove the bolts, then remove the hood latch cover (A).

Fastener Locations

► : Bolt, 2

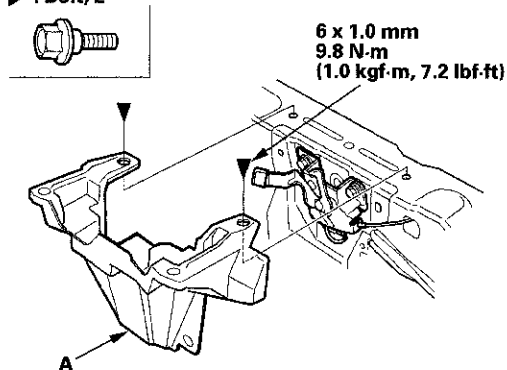


3. Disconnect the hood latch switch connector (A), then remove the connector clip from the body.

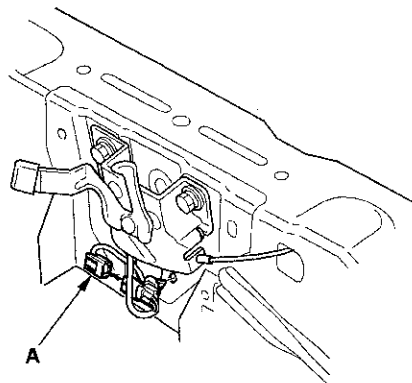

4. Remove the bolts, then remove the hood latch (A) from the body.


Fastener Locations

► : Bolt, 3

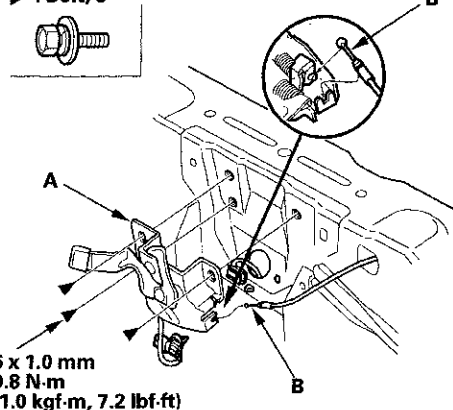

5. Disconnect the hood opener cable (B) from the hood latch. Take care not to kink the cable.
6. Install the latch in the reverse order of removal, and note these items:

- Apply multipurpose grease to the hood latch as indicated by the arrows.
- Make sure the hood opener cable is connected properly and the hood latch switch connector is plugged in properly.
- Make sure the cable actuates the latch before you close the hood.
- Adjust the hood latch alignment (see step 4 on page 20-155).
- Make sure the hood opens properly and locks securely.

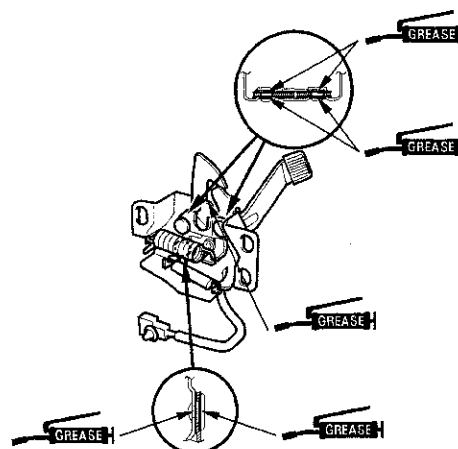

Openers

Trunk Lid Latch Replacement

NOTE: Put on gloves to protect your hands.


1. Remove these items (see page 20-83):

- Trunk rear trim panel
- Trunk side trim panel, right side

2. Remove the bolts, then remove the trunk inside lever (A) from the body. Take care not to kink the opener cable.


Fastener Locations

► : Bolt, 2

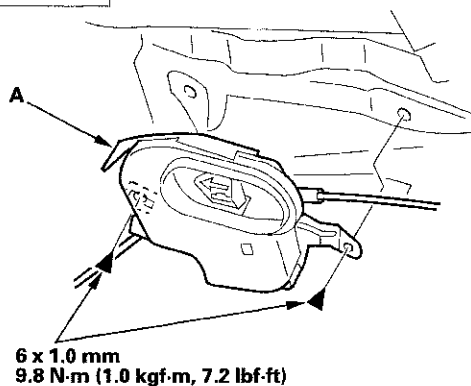

3. Disconnect the trunk lid opener cables (A, B) from the joint bushings (C). Take care not to kink the opener cables.

NOTE: If the joint bushings are damaged or stress-whitened, replace them with new ones.

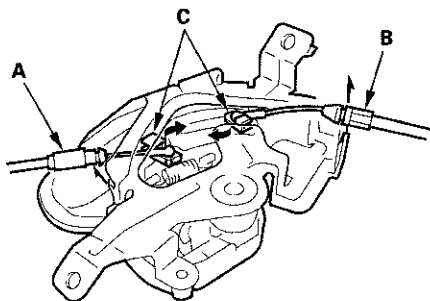


4. Disconnect the actuator connector (A), then remove the connector clip (B). Remove the trunk lid opener cable (C) from the clip (D) on the body. Take care not to kink the opener cable.

Fastener Locations


E ► : Bolt, 2 F ► : Bolt, 1



6 x 1.0 mm
9.8 N-m
(1.0 kgf-m,
7.2 lbf-ft)

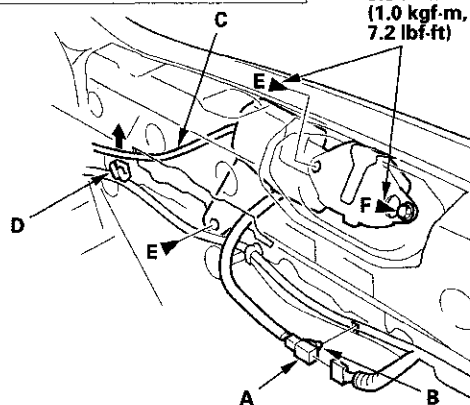

5. Remove the bolts (E) and loosen the bolt (F), then remove the latch.
6. Pull the trunk lid latch (A) away to release the bolt (B) from the hole (C) in the body.

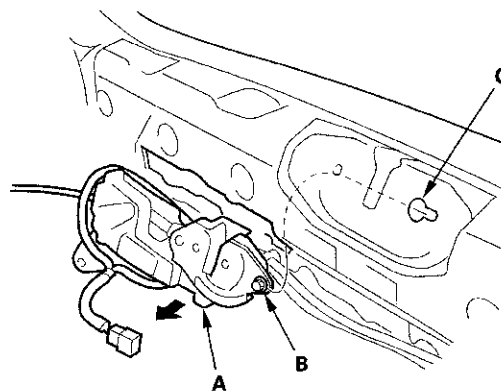




Hood Release Handle Replacement

7. Disconnect the trunk lid opener cable (A) from the joint bushing (B).

NOTE: If the joint bushing is damaged or stress-whitened, replace it with a new one.

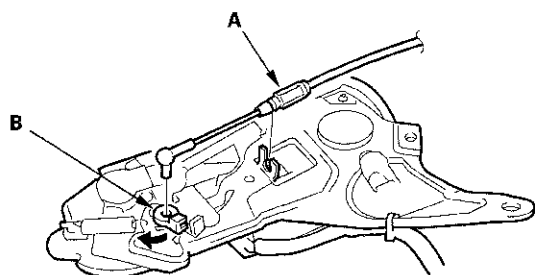



8. Install the latch in the reverse order of removal, and note these items:

- Make sure the actuator connector is plugged in properly and the opener cable is connected properly.
- Make sure the trunk lid opens properly, and locks securely.

1. Remove the bolt, and release the hook (A), then remove the hood release handle (B) from the dashboard.

Fastener Location

 ► : Bolt, 1

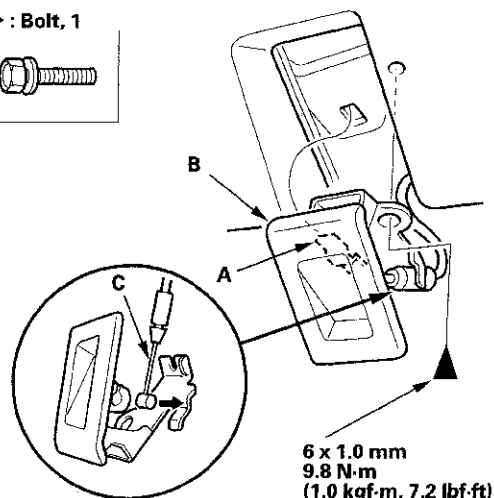

2. Disconnect the hood opener cable (C) from the hood release handle. Take care not to kink the cable.
3. Install the hood release handle in the reverse order of removal, and note these items:
 - Make sure the hood opener cable is connected properly.
 - Make sure the hood opens properly.

Openers

Fuel Fill Door Latch/Actuator Replacement


 
NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the body.

1. Remove the left trunk side trim panel (see page 20-83).
2. Remove the fuel fill door latch/actuator (A).
 - 1 Remove the fuel fill door latch (B) by turning it 90 ° from the body.
 - 2 Disconnect the actuator connector (C).
 - 3 Loosen the screws, then remove the actuator by sliding it forward.

Fastener Locations

► : Screw, 2

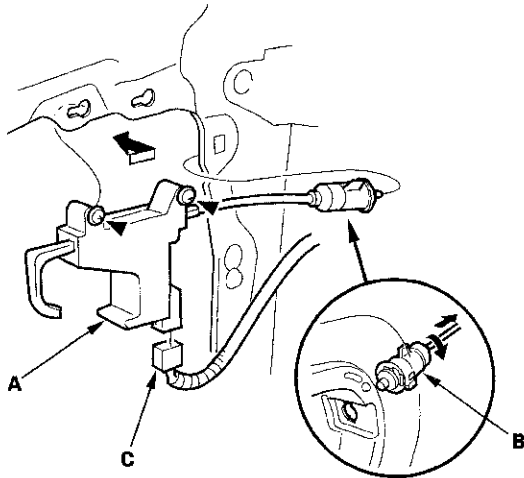

3. Install the fuel fill door latch/actuator in the reverse order of removal, and note these items:

- Apply multipurpose grease to the hood latch as indicated by the arrows.
- Make sure the door opens properly, and locks securely.
- Make sure the actuator connector is plugged in properly.

