



Operating Manual

Concert Radio System



Foreword

Thank you for choosing the concert sound system - we value your trust in us.

With your new Audi, you are receiving a vehicle with a state-of-the art system that allows you to change the vehicle's settings and operate the electronic equipment from a central location using the radio system.

We recommend that you read this guide carefully so that you quickly get to know all of the functions and possibilities that the radio system offers and are able to make full use of them while driving.

Please note that these instructions are a supplement to your vehicle Owner's Manual and should only be used in conjunction with your current vehicle Owner's Manual.

We hope you enjoy driving your Audi.

AUDI AG

Table of contents

About this Operating Manual . . .	3	Communication	25
Operation	4	Using the telephone	25
Overview	4	Introduction	25
Controls at a glance	4	Connecting a cell phone	25
Traffic safety information	4	Selecting the telephone	26
Care information	5	Dialing a phone number	27
Control panel	6	Storing a phone number	28
Switching on/off	6	Accepting/ending a call	28
Adjusting the volume	6	During a call	28
Operating	6	Accessing the directory	29
Number speller	7	Searching for a contact	30
Menus and symbols	8	Using a contact	30
Multifunction steering wheel . . .	9	Importing/exporting contacts	30
Operating	9	Storing a new contact	31
Using the telephone	10	Memory capacity	32
Listening to the radio	10	Additional settings	32
Playing media	11	Troubleshooting	33
Voice recognition system	13	Entertainment systems	34
Operating	12	Listening to the radio	34
Information about the command		Using the radio	34
overviews	14	Radio functions	35
Global commands	14	Additional settings	35
Telephone	14	Troubleshooting	36
Radio	15	Playing media	37
Media	15	Accessing media	37
Media drives/connections	16	Media functions	37
Introduction	16	Additional settings	38
Notes	16	Index	39
SD card readers	16		
CD drive	17		
Bluetooth audio player	17		
Audi music interface	18		
Supported media and file formats	20		
Troubleshooting	21		
System settings	22		
Setting the time/date	22		
Adjusting the sound	22		
Adjusting the system volume	23		
Restarting the system (reset)	23		
Additional settings	23		

This manual contains important information, tips, suggestions and warnings for using your vehicle.

Keep this manual in your vehicle at all times. This is especially important if you loan your vehicle to others or sell it.

Some sections in this manual do not apply to all vehicles. When this is the case, the beginning of the section indicates the **validity**, for example “Applies to vehicles: with cell phone prep”. Optional or vehicle-specific equipment is also identified with an asterisk “*”.

The **illustrations** in this manual are a guide. Some of the details in your vehicle may differ from the illustration.

There is a **Table of Contents** at the beginning of this manual that lists all of the topics covered in the order that they appear. There is also an **alphabetical Index** at the end of this book.

All **directions**, such as “left”, “right”, “front” and “rear”, are based on the vehicle's direction of travel.

* Optional or vehicle-specific equipment.

► The section continues on the next page.

⇒ ⚠ Cross reference to a “WARNING” within a section. If a page number is indicated, the WARNING is located outside of the section.



WARNING

Text with this symbol contains information about safety and how to reduce the risk of serious personal injury or death.



Note

Text with this symbol contains information about reducing the risk of damage to your vehicle.



For the sake of the environment

Text with this symbol contains information on protecting the environment.



Tips

Text with this symbol contains additional useful information.

Overview

Controls at a glance

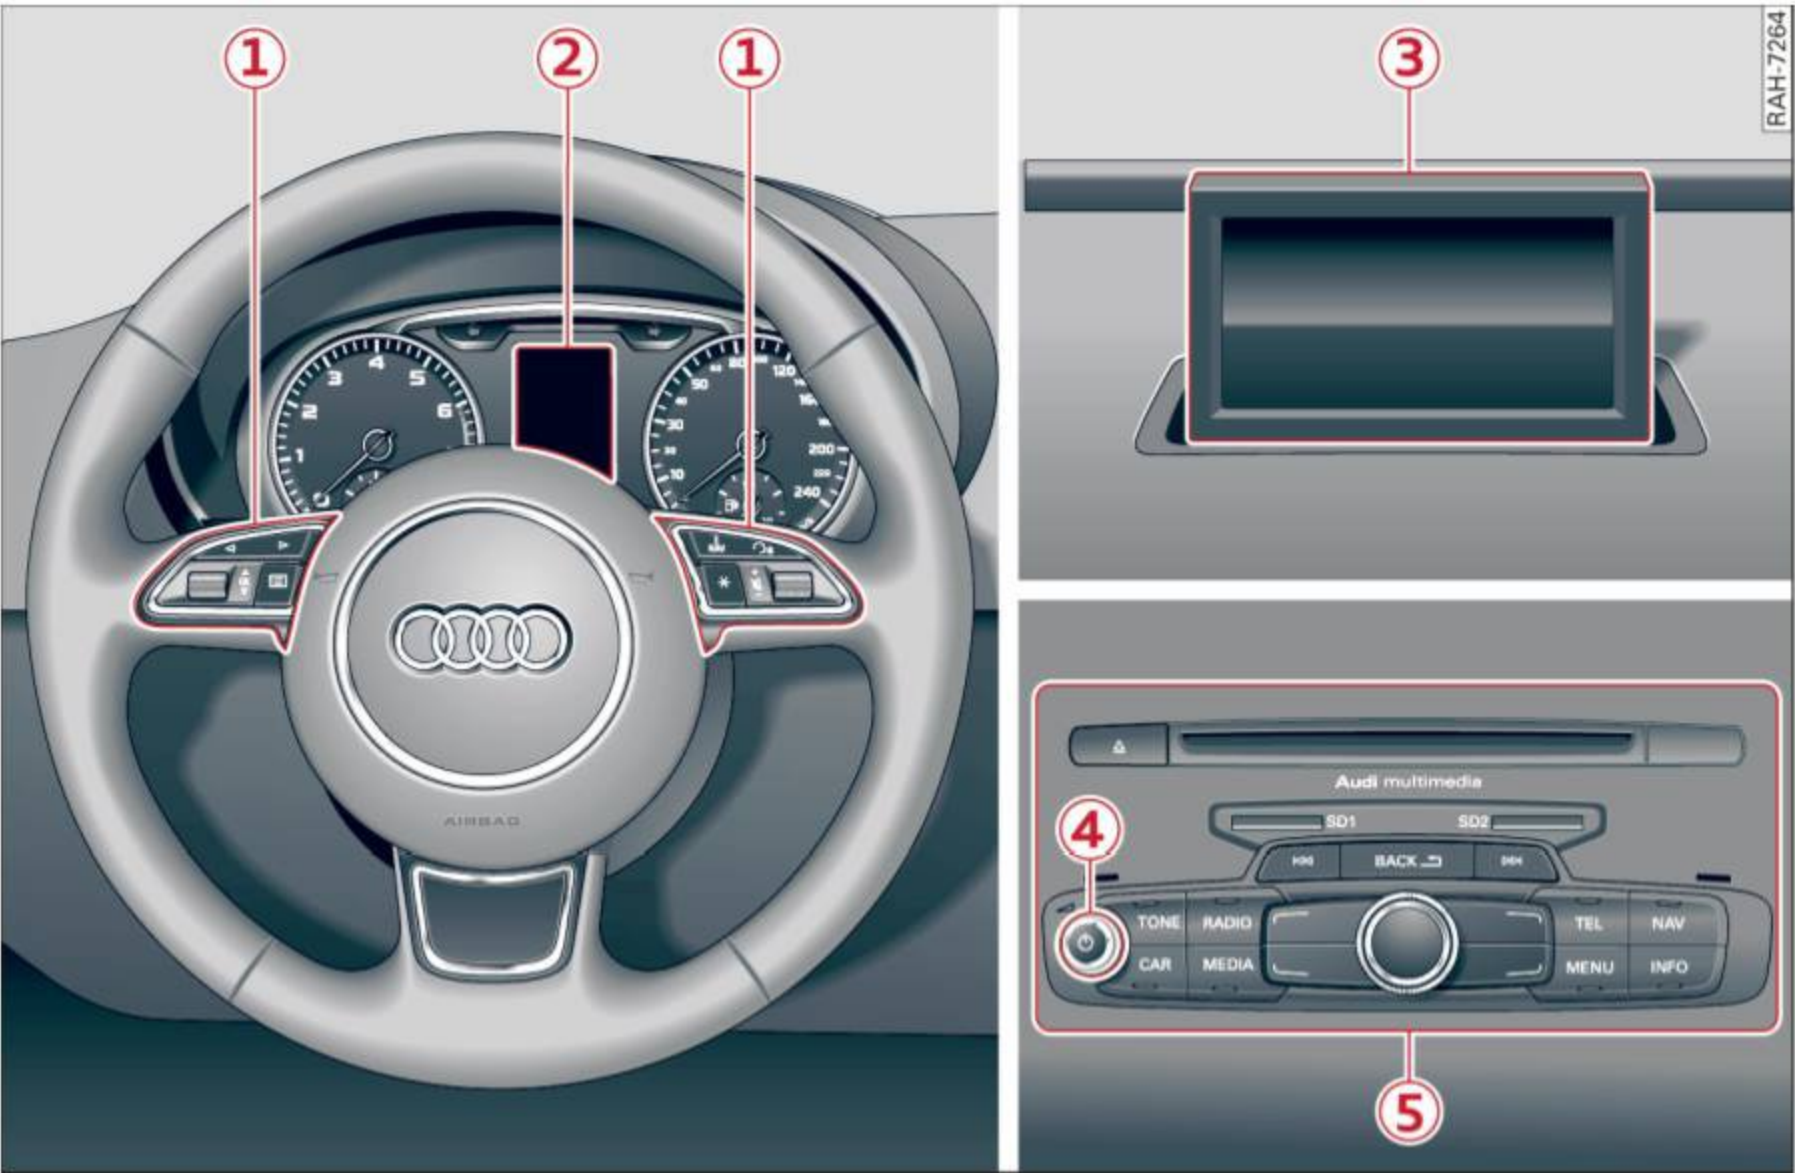


Fig. 1 Infotainment system controls

You can operate the Infotainment system through the control panel, the multifunction steering wheel* or the voice recognition system* ⇒ *fig. 1*:

① Multifunction steering wheel	9
② Driver information system	9
③ Display	
④ On/Off knob	6
⑤ Media drives and control panel	16, 6

! Note
Please note that the MMI display is stationary and cannot be retracted.

i Tips
– Please note that this manual only describes the system components. You can find additional information on operating your vehicle in your vehicle Owner's Manual.

- This manual describes the **equipment range** specified for this model at the time of printing. Individual equipment options described may only be available at a later date or may only be offered in certain countries.
- On vehicles with right-hand drive steering*, the layout of the system components differs somewhat from what is shown here ⇒ *fig. 1*. The symbols for the controls are the same.

Traffic safety information

Audi recommends only performing certain functions, such as entering a destination, when the vehicle is stationary. Always be prepared to stop operating the Infotainment system in the interest of your safety and that of other road users. ►

**WARNING**

- Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Only use the Infotainment system when traffic conditions permit and always in a way that allows you to maintain complete control over your vehicle.
- Adjust the volume of the audio system so that signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.
- Obey all applicable laws regarding use of telephones in vehicles.

Care information

For information on cleaning and caring for the Infotainment components, refer to the *Cleaning and Protection* chapter of your vehicle Owner's Manual.

Control panel

Switching on/off

The Infotainment system switches on and off automatically with the ignition. It can also be switched on or off manually.

- **Switching on manually:** press the On/Off knob ④ briefly ⇒ page 4, fig. 1. **Or:** press one of the buttons to open a menu directly ⑤.

When the system is switched on, the last menu that was selected is displayed and the last audio source that was selected begins playing.

- **Switching off manually:** press and hold the On/Off knob ④ until the MMI switches off. If the Infotainment system has been switched off manually, it does *not* switch on again automatically the next time the ignition is switched on.

The Infotainment system can still be operated for approximately ten minutes after switching the ignition off. If you do not press any buttons or the control knob on the control panel within this time, the Infotainment system switches off automatically.

Tips

The Infotainment system switches off automatically when the engine is not running and there is a low battery charge.

Adjusting the volume

The volume of an audio source or a system message (for example, from the voice recognition system) can be adjusted directly while the sound is playing using the On/Off knob.

- ▶ **Increasing or decreasing the volume:** turn the On/Off knob ④ ⇒ page 4, fig. 1 to the right or left.
- ▶ **Muting:** press the On/Off knob briefly.
- ▶ **Unmuting:** press the On/Off knob briefly. **Or:** turn the On/Off knob to the right.

Tips

Volumes that are too high or too low are automatically adjusted to a set level when the Infotainment system is switched on.

Operating

You can easily access functions in the Infotainment system using an intuitive and standardized operating process.

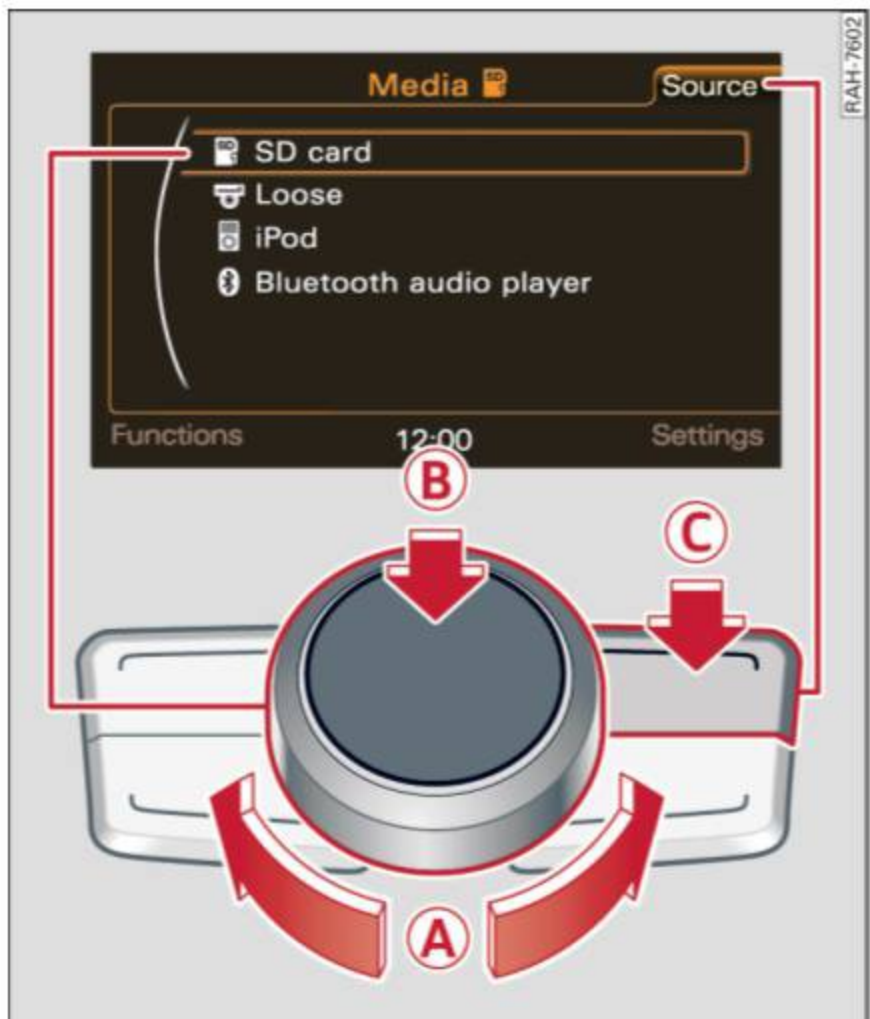


Fig. 2 Operation

Selecting and confirming a function

- ▶ **① Selecting a function:** turn the control knob to the desired function.
- ▶ **② Confirming a selection:** press the control knob.

Calling up a function in a corner of the display

- ▶ Press the control button ③ that corresponds to that corner of the display. For example, the upper right control button corresponds to the upper right corner of the display.

Opening the main menu

- Press the **MENU** button ⑤ ⇒ *page 4, fig. 1*. The Infotainment system menu (such as **Radio**) is displayed.

Opening a menu directly

- Press the button ⑤ for the desired menu (such as **RADIO** or **MEDIA**).

Returning to functions at higher levels

- Press the **BACK** button ⑤.

Number speller

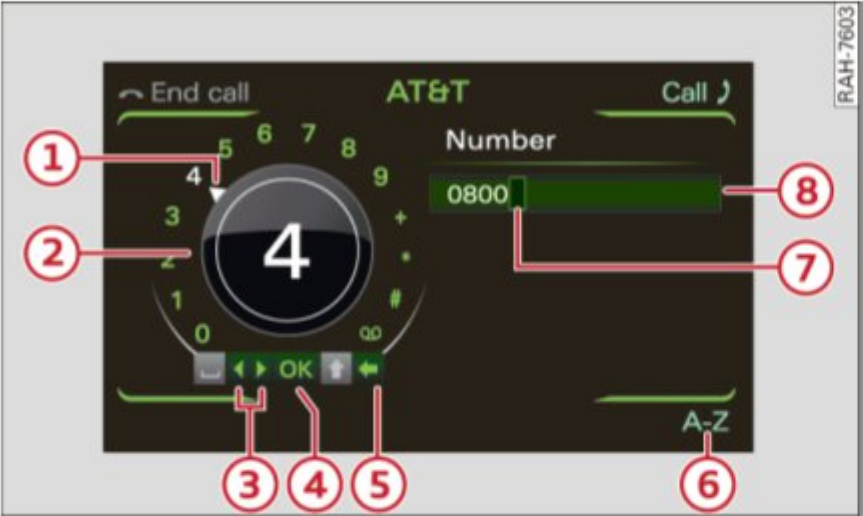


Fig. 3 Speller

- **Entering characters:** turn the control knob with the selection arrow ① ⇒ *fig. 3* to the desired character. Your selection is shown enlarged in the input ring ②. Press the control knob to confirm the character. Your input is displayed

- in the input field ⑧. When you have entered all the characters, select and confirm **OK** ④.
- **Deleting characters:** turn the control knob with the selection arrow to ◀ ⑤ and press the control knob. To delete all characters in the input field, press and hold the control knob on ◀ until all characters in the input field are deleted.
- **Entering special characters:** press the **0-9** control button ⑥ and enter the desired special character (for example, a hyphen or period) using the number speller.

Overview of symbols in the speller

The symbols in the number speller are explained in the following table:

	Symbol/Description	Explanation
①	Selection arrow	Puts a white background behind the selected element and shows it enlarged in the input ring.
②	Input ring	Shows the character selected with the selection arrow enlarged.
③	◀▶	Moves the cursor forward or back in the input field.
④	OK	Confirms the entry.
⑤	◀ Delete	Deletes the character to the left of the cursor.
⑥	0-9/A-Z	Changes from numbers to letters or from letters to numbers.
⑦	Cursor	Marks the current editing position.
⑧	Input field	Shows the current entry.

Menus and symbols

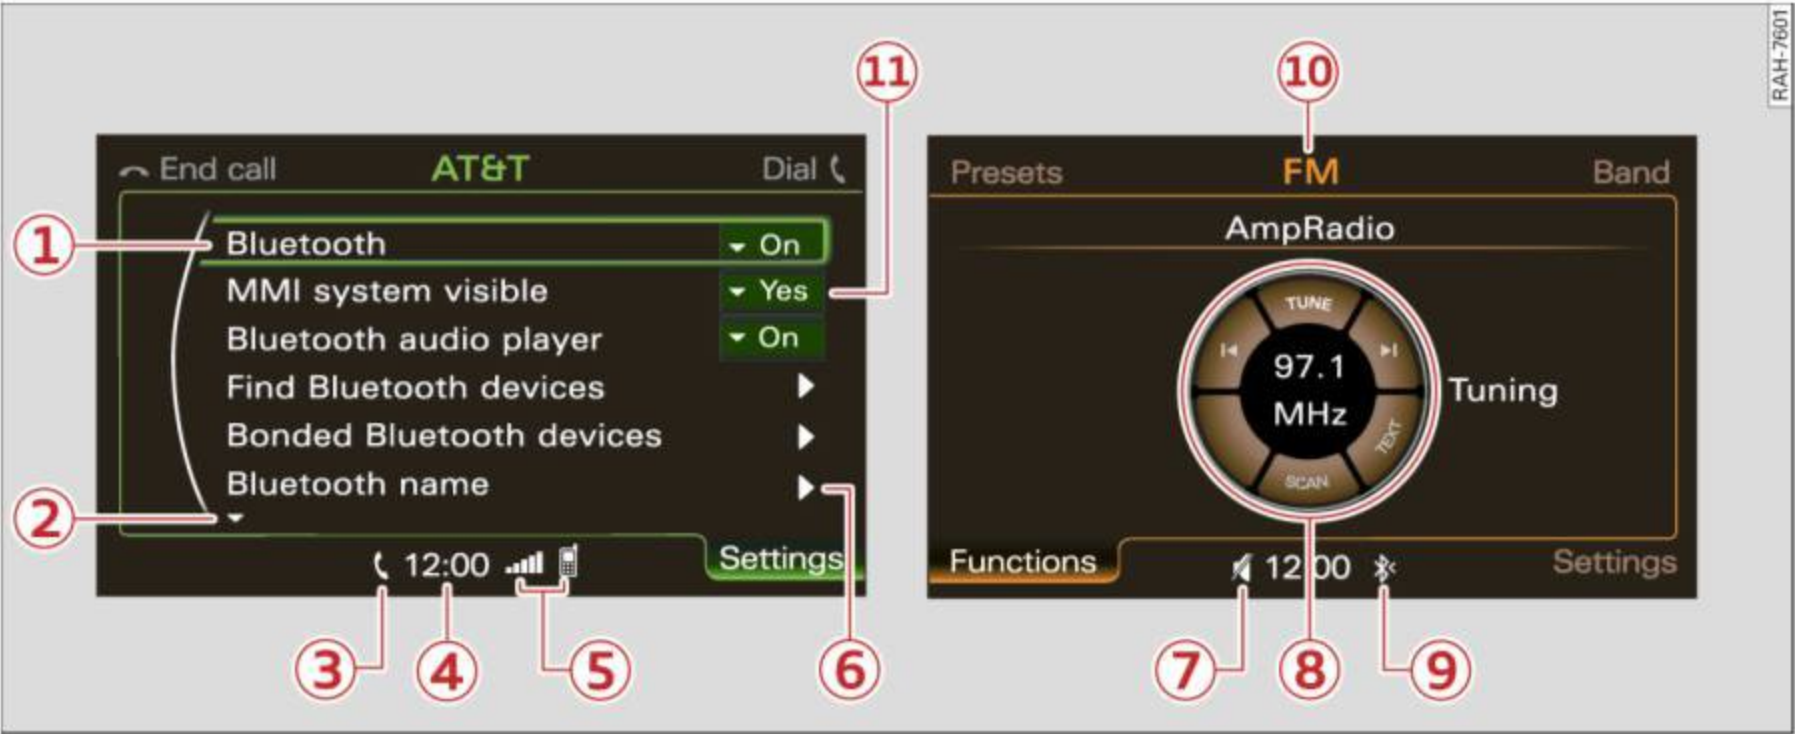


Fig. 4 Menus and symbols

	Symbol/Description	Explanation
①	Selected text	Selected function
②	Upward/downward pointing arrow	Indicates there are additional menu items (scroll forward/back)
③	Telephone*	Active phone call
④	Time	Set time ⇒ <i>page 22</i>
⑤	Cell phone/signal strength bars*	Cell phone connected ⇒ <i>page 25</i> /signal strength for the connected cell phone's mobile network
⑥	Arrow	Submenu with additional functions that are accessed by pressing the control knob
⑦	Mute	The audio source is muted ⇒ <i>page 6</i>
⑧	Title line	Selected menu (such as Telephone)
⑧	Control wheel	Is operated by rotating and pressing the control knob
⑨	Bluetooth*	Bluetooth is switched on
⑩	Title line	Selected menu (such as Telephone)
⑪	Selection list	Settings for the selected function that are accessed by pressing the control knob

Multifunction steering wheel

Operating

Applies to vehicles: with multifunction steering wheel

You can control various functions of the Infotainment system and the driver information system using the multifunction steering wheel.



Fig. 5 Display in the driver information system



Fig. 6 Controls on the multifunction steering wheel

Requirement: the ignition and the Infotainment system must be switched on ⇒ page 6.

① Operating the driver information system

The driver information system contains several tabs **A** ⇒ fig. 5 that display various information **B**.

- **Switching tabs:** press the button to the left/right.
- **Selecting a function:** turn the left thumbwheel to the desired function.
- **Confirming a selection:** press the left thumbwheel.

- **Quick scrolling through lists:** turn the left thumbwheel quickly.
- **Displaying/exiting the submenu:** press the button .

The following tabs are available, depending on vehicle equipment:

- First tab: vehicle information, assistance systems
- Second tab¹⁾: indicator lights, driver messages, speed warning system
- Third tab: radio/media ⇒ page 10
- Fourth tab: telephone* ⇒ page 10

② Programmable steering wheel button

- **Selecting a function:** press the button on the multifunction steering wheel.
- **Changing the function:** in the Infotainment system, select the button > **Systems*** control button > **Vehicle settings** > **Steering wheel button**.

③ Adjusting the volume

You can adjust the volume of an audio source or a system message (for example, from the voice recognition system) when the sound is playing.

- **Increasing or decreasing the volume:** turn the right thumbwheel up or down.
- **Muting or pausing:** turn the right thumbwheel down. **Or:** press the right thumbwheel.
- **Unmuting or resuming:** turn the right thumbwheel up. **Or:** press the right thumbwheel.

④ Switching the voice recognition system on or off

- **Switching on:** press the button briefly on the multifunction steering wheel. Say the desired command after the **Beep**.
- **Switching off:** press and hold the button. **Or:** say the command **Cancel**.

For more information about the voice recognition system, refer to ⇒ page 12.

The button ⑤ does not have a function assigned to it.

¹⁾ The second tab is only visible if at least one indicator light or message is shown or if that system is switched on.

Using the telephone

Overview

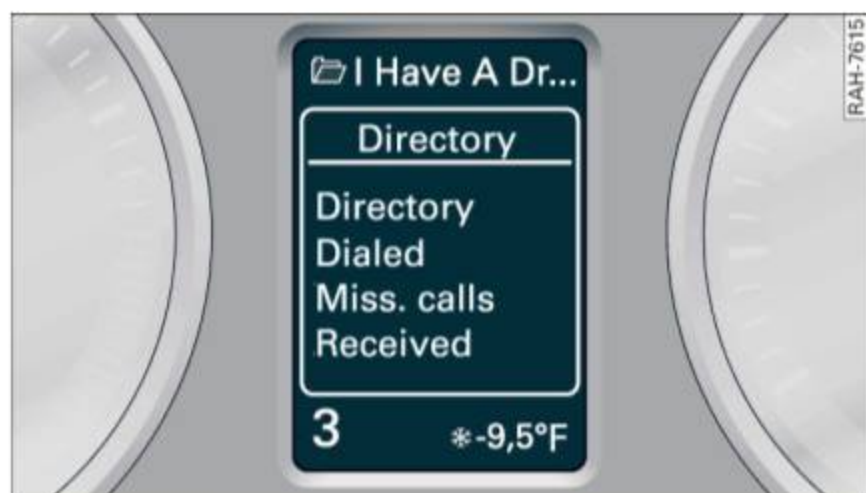


Fig. 7 Telephone menu

Requirement: a cell phone must be connected to the Infotainment system ⇒ *page 25* and the telephone tab must be displayed ⇒ *fig. 7*.

► Select: the  button.

- **Calling a contact in the directory:** select **Directory**. Select and confirm a contact.
- **Calling a contact in a call list:** select **Dialed numbers**, **Missed calls** or **Received calls**. Select and confirm a contact.

Directory contacts: the driver information system only displays directory contacts that have a phone number stored. If several phone numbers are stored with a contact, the list of stored numbers is displayed first when the entry is selected. For more information about the displayed symbols, refer to ⇒ *page 29*.

Tips

- The phone functions can only be controlled with the multifunction steering wheel if the phone equipment was installed *at the factory*.
- The phone and call options depend on the cell phone service provider and the cell phone. You can obtain more information from your cell phone service provider.

Incoming call

Applies to vehicles: with a multifunction steering wheel and phone

Caller information: the *name*, *phone number* or **Unknown** appears in the driver information sys-

tem display depending on if the caller has been stored in the directory and if the phone number has been transmitted.

- **Accepting a call:** press the left thumbwheel when there is an incoming call.
- **Ignoring a call:** select and confirm **Ignore** when there is an incoming call.
- **Ending a phone call:** select and confirm **End call**.

During a phone call

Applies to vehicles: with a multifunction steering wheel and phone

- **Accepting another call:** select and confirm **Answer**.
- **Accepting an incoming call when there is an active call and a call on hold:** select and confirm **Replace**. The active call is replaced with the incoming call.

Tips

The *Call waiting* function must be activated in your cell phone to be alerted to an incoming call during an active call. The call options depend on the cell phone and service provider. You can obtain more information from your cell phone service provider.

Listening to the radio



Fig. 8 Radio menu

Requirement: radio mode must be started ⇒ *page 34* and the Radio/Media menu must be displayed ⇒ *fig. 8*.

- **Selecting a station from the station list:** select and confirm a radio station. ►

The following functions are available when you press the  button:

- **Selecting a station from the presets list:** select and confirm **Preset** and then select a radio station.
- **Selecting the frequency band:** select and confirm a frequency band.
- **Accessing media using the source list:** select and confirm an audio source.

Playing media

Applies to vehicles: with multifunction steering wheel

Requirement: a media drive must contain audio files ⇒ *page 16* and the Radio/Media menu must be displayed ⇒ *page 10, fig. 8*.

- ▶ **Playing an audio file:** select and confirm a file.
- ▶ **Pausing or resuming playback:** press the right thumbwheel up or down. **Or:** press the right thumbwheel.

The following functions are available when you press the  button:

- **Selecting a source:** select and confirm a source such as Audi music interface.
- **Selecting a radio station using the source list:** select and confirm a frequency band and then select a station from the station list.



Fig. 9 Command overview

Voice recognition system

Operating

Applies to vehicles: with voice recognition system

You can operate many Infotainment functions conveniently by speaking.



Fig. 10 Talk button and right thumbwheel

Requirement: the ignition and the Infotainment system must be switched on ⇒ *page 6*, there must be no phone call in progress and the parking system must not be active.

- ▶ **Switching on:** briefly press the  button ⇒ *fig. 10* on the multifunction steering wheel and say the desired command after the **Beep**.
- ▶ **Switching off:** press and hold the  button.
Or: press any button on the MMI control panel.
- ▶ **Canceling:** press the  button and say a new command. Or: say the command **Cancel**.

Input assistance

The system guides you through the input with visual and audio feedback.

- **Visual input assistance:** after turning on voice recognition, a display with a selection of possible commands appears in the MMI display. The command display can be turned on or off in the main menu using the **Setup MMI** control button.
- **Audio input assistance:** to have the possible commands read, turn the voice recognition system on and say **Help**.

For the system to understand you:

Speak clearly and distinctly at a normal volume. Speak louder when driving faster.

Emphasize the words in the commands evenly and do not leave long pauses.

Do not speak a command when the voice recognition system is making an announcement.

Close the doors, the windows and the sunroof* to reduce background noise. Make sure that passengers are not speaking when you are giving a voice command.

Do not direct the air vents toward the handsfree microphone, which is on the roof headliner near the front interior lights.

Only use the system from the driver's seat because the hands free microphone is directed toward that seat.

Additional settings

Additional settings, such as **individual voice training** based on your voice, the **Command display** or the **prompt volume**, can be adjusted in the main menu using the **Setup MMI** control button ⇒ *page 23*.



WARNING

- Direct your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.
- Do not use the voice recognition system in emergencies because your voice may change in stressful situations. It may take longer to dial the number or the system may not be able to dial it at all. Dial the emergency number manually.



Tips

- The dialog pauses when there is an incoming phone call and will continue if you ignore the call. The dialog ends if you answer the call.
- You can select an item in the list using either the voice recognition system or the control knob.

Information about the command overviews

Applies to vehicles: with voice recognition system

The following overviews describe the commands that can be used to operate the Infotainment system using the voice recognition system.

Alternative commands are separated using a “|”, for example say: **Telephone | (or) Radio**.

Sequences of commands used to perform an action are identified with a “>”, for example say: **Find contact > (then) Name contact**.

The majority shown are main commands. This system also recognizes synonyms in certain cases. For example, for **Business**, you can also say **office** or **work**.

Global commands

Applies to vehicles: with voice recognition system

You can always use the global commands, regardless of the menu selected.

Function	Say:
Opening a menu	Telephone* Directory* Radio Media
Having the possible commands read aloud	Help Help speech dialog system Help telephone* Help radio Help media
Telephone functions*	Call (XY) , for example Call John Smith Enter number Redial Directory
Selecting an entry from a list	Line (XY)
Scrolling through a list	Next page Previous page
Switching the voice recognition system off	Cancel

Telephone

Applies to vehicles: with voice recognition system and telephone

Requirement: a cell phone must be connected to the Infotainment system ⇨ *page 25* and the **Telephone** menu must be open ⇨ *page 14*.

Function	Say:
Calling a contact from the directory	Call (XY) , for example Call John Smith
Selecting a specific contact number	Call (XY) cell private land line business , for example, Call John Smith at private number
Selecting a phone number with an address card open	Call business private land line cell business
Showing contact information	Directory Find contact > the desired contact when prompted , such as John Smith
Personalizing a contact with a name tag	Find contact > the desired contact when prompted , such as John Smith > Name contact > the personal name tag , such as Uncle John

Function	Say:
Dialing a phone number	Enter number > <i>After being prompted, say the telephone number in groups of individual numbers, for example 800 555 0100</i> > Dial
Correcting the phone number that was entered	Delete Correction
Displaying call lists	Dialed numbers Received calls Missed calls
Calling the last number dialed	Redialing

Tips

- You can assign up to 50 additional name tags for address cards.

- Name tags can only be stored using the voice recognition system.
- You can delete name tags using the control panel ⇒ *page 23*.

Radio

Applies to vehicles: with voice recognition system

Requirement: the **Radio** menu must be open

⇒ *table on page 14*.

Function	Say:
Selecting the reception band	Set band FM AM Sirius*
Selecting a station from the station list	Station list > Station (XY) Line (XY)
Selecting a station from the presets list	Presets > Station (XY) Line (XY)
Setting the frequency	Set frequency > <i>the desired frequency</i>
Additional commands	Read station list Read presets Next/previous channel Next/previous station

Media

Applies to vehicles: with voice recognition system

Requirement: the **Media** menu must be open

⇒ *table on page 14*.

Function	Say:
Selecting a source directly	Select medium > CD SD card 1/2 Audi music interface* Bluetooth Next/previous medium
Selecting a track number on an audio CD	Track: (XY)
Selecting an audio file in the Audi music interface*	Artists Composers Songs Albums Podcasts Audio books Genres Playlists > Line (XY)
Navigating between audio files within a source	Next track Previous track
Navigating within a folder structure/list	Folder up Line (XY)

Media drives/connections

Introduction

There are various media drives and connections available in the Infotainment system. For example, you can play CDs or connect a portable device to the Audi music interface* and operate it through the Infotainment system.

Notes

General information

Media and format restrictions: the MMI (including the SD card reader and the USB storage device connection*) was tested with a variety of products and media on the market. However, there may be cases where individual devices or media and audio/video files are not recognized, may play only with restrictions or may not play at all.

Data protection: please note that audio files are subject to copyright laws. The media drives do not support DRM protected files.

Data security: never store important data on SD cards, CDs or portable devices. Audi is not responsible for damaged or lost files and media.

Loading times: the more files/folders/playlists that are on a storage medium, the longer it will take to load the audio files. Audi recommends using storage mediums that only contain audio files. To decrease the time it takes to load audio files, create subfolders (for example, according to artist or album).

Restricted functionality: if functionality is restricted, reset the **Media settings** to the factory default settings ⇒ *page 24*.

For information about the properties of supported media and file formats, see ⇒ *page 20*.

CD mode

CD/DVD and format restrictions: the functionality of individual storage media may be limited due to the variety of blank CDs available and the vari-

ous capacities. Audio CDs with copy protection, CDs that do not conform to the standard and multisession CDs may not play or playback may be limited. Audi recommends finalizing the recording process when creating multisession CDs.

Using CDs: to ensure good, high-quality sound reproduction and to prevent damage to the drive or disc reading errors, always store CDs in a protective sleeve and do not expose them to direct sunlight. Do *not* use:

- Damaged, dirty or scratched CDs
- Single CDs (3 inch/8 cm diameter)
- CDs that are not round
- CDs with labels
- Protective rings
- Cleaning CDs

Thermal protection switch: CD playback may be temporarily unavailable if outside temperatures are extremely hot or cold. A thermal protection switch is installed to protect the CD and the laser.

Laser devices: laser devices are divided into safety classes 1 to 4 in accordance with DIN IEC 76 (CO) 6/VDE 0837. The various types of audio equipment installed conform to safety class 1. The laser uses so little power or is shielded so there is no danger when it is used correctly.

Device cover: do not remove the cover from the device. The device does not contain any parts that the owner can repair.

SD card readers

The SD card readers are located in the center console.

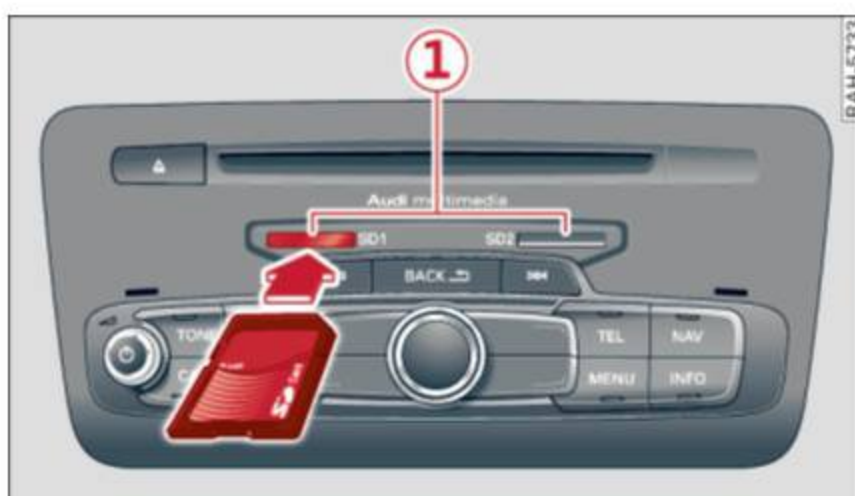


Fig. 11 Inserting the SD card

- **Inserting the SD card:** slide the SD card into the card reader slot ① with the label facing up (contact surfaces facing down) ⇒ *fig. 11*. The angled corner of the SD card must point toward the right front. Then push the SD card into the slot until it clicks into place.
- **Removing the SD card:** press briefly on the SD card. The card is released.

The SD card reader is started and operated through the Infotainment system ⇒ *page 37*.

! Note

Only use one-piece SD cards. If adapter cards (SD cards with more than one piece) are used, the card could fall out of the adapter when driving because of vibrations. Individual pieces could then become stuck in the drive and impair the functionality.

i Tips

Always keep the SD card in a suitable case to protect it from dirt, dust particles and other damage.

CD drive

The CD drive is located in the center console.

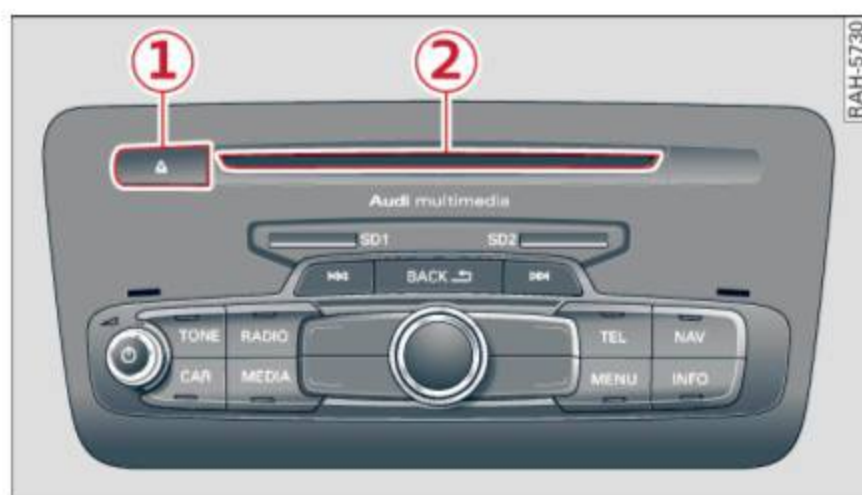


Fig. 12 CD drive

- **Loading a CD:** slide the CD straight into the slot ② with the label facing up ⇒ *fig. 12*.
- **Ejecting a CD:** press the button ①.

The CD is pulled in again automatically if it is not removed from the slot within ten seconds of ejecting it.

The CD drive is started and operated through the Infotainment system ⇒ *page 37*.

! Note

Never force a CD into the drive. The CD is pulled in automatically.

Bluetooth audio player

Applies to vehicles: Bluetooth

You can play music wirelessly from your cell phone through the Infotainment system using the Bluetooth audio player.

The vehicle must be stationary and the Bluetooth function on the portable device and the **Bluetooth audio player** in the Infotainment system ⇒ *page 32* must be switched on.

- ▶ Select the **MEDIA** button > **Source** control button > **Bluetooth audio player** > **Connect new BT audio player**. The available Bluetooth audio players are displayed.
- ▶ Select and confirm the desired Bluetooth audio player from the list.
- ▶ Select and confirm **Audio player**. The Infotainment system generates a PIN for connecting.
- ▶ Select and confirm **Yes**.
- ▶ Enter the PIN for connecting on your cell phone. **Or:** if the PIN is already displayed on your cell phone, confirm it in the cell phone and in the Infotainment system. The time allowed for entering the PIN is limited to approximately 30 seconds.

Several Bluetooth audio players can be connected to the Infotainment system, but only one portable device can be active.

The media are started and operated through the portable device or the Infotainment system, depending on the device being used ⇒ *page 37*.

i Tips

- Be sure to pay attention to any possible connection prompts on your Bluetooth audio player.
- You only have to pair your device one time. Bluetooth devices that are already paired automatically connect to the Infotainment system when they are within range and the ignition is switched on.

- Several Bluetooth audio players can be connected to the Infotainment system, but only one portable device can be active.
- Bluetooth A2DP and AVRCP (1.0/1.3) are supported.
- The supported media functions depend on the Bluetooth audio player being used.
- For more information on the supported devices, visit www.audiusa.com/bluetooth or contact your authorized Audi dealer or authorized Audi Service Facility.

Audi music interface

Introduction

Applies to vehicles: with Audi music interface

You can connect a portable device (such as an MP3 player) to the Audi music interface using a special adapter cable and operate the device through the Infotainment system.*

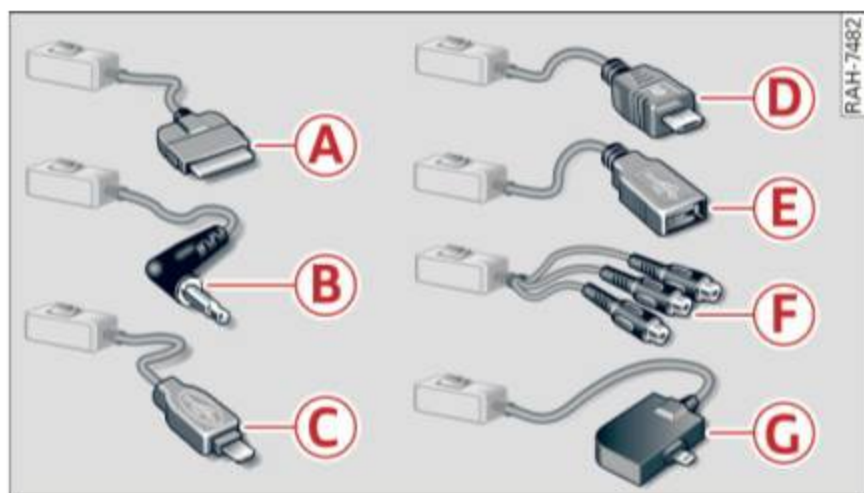


Fig. 13 Adapter cables

- Ⓐ iPod adapter cable*/iPod adapter cable plus*
- Ⓑ 3.5 mm stereo jack adapter cable*
- Ⓒ Mini USB adapter cable*
- Ⓓ Micro USB adapter cable*
- Ⓔ USB adapter cable*
- Ⓕ AV adapter cable*
- Ⓖ Adapter cable for Apple devices with Lightning connector*

You can purchase the adapter cable from an authorized Audi dealer or at specialty stores.

! Note

- Handle the adapter cable carefully. Do not allow it to be pinched.
- Extremely high or low temperatures that can occur inside vehicles can damage portable devices or affect their performance. Never leave a portable audio device in the vehicle in extremely high or low temperatures.

i Tips

Be sure to pay attention to any messages on your cell phone when connecting it with the USB /Mini USB /Micro USB adapter cable. In some cases, it may not be possible to access the audio files on your cell phone.

Setup

Applies to vehicles: with Audi music interface

The Audi music interface is located in the glove compartment or the center armrest, depending on vehicle equipment.

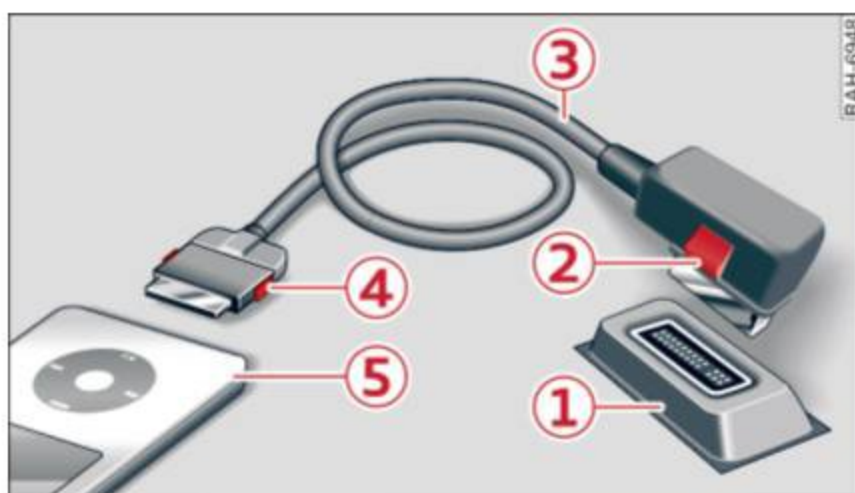


Fig. 14 Connecting the portable device

- **Connecting the adapter cable:** connect the adapter cable* ③ ⇨ fig. 14 to the slot on the Audi music interface ① and then connect it to the portable audio device ⑤ (such as an iPod).
- **Disconnecting the adapter cable from the Audi music interface:** disconnect the connector from the Audi music interface while pressing the release tab ②.
- **Disconnecting the iPod adapter cable (plus)* from the iPod:** disconnect the iPod connector from the iPod while pressing the release tabs ④.

The media are started and operated through the portable device or the Infotainment system, depending on the device being used ⇒ *page 37*.

Note

- Remove the connector from the Audi music interface carefully so it is not damaged.
- Extremely high or low temperatures that can occur inside vehicles can damage portable devices or affect their performance. Never leave a portable audio device in the vehicle in extremely high or low temperatures.

Tips

- Do not use USB extension cables or adapters. They may impair the functionality.
- Functionality is not guaranteed for portable devices that do not meet the USB 2.0 specification.
- USB hubs are not supported.
- The iPod/iPhone/iPad battery charges through the iPod adapter cable (plus)* once the device is connected to the Audi music interface and the ignition is switched on.
- Only use an iPod adapter cable (plus)* with a red or blue marking to connect an iPod/iPhone/iPad.
- Other iPod versions such as the iPod shuffle cannot be connected with the iPod adapter cable (plus)*. Connect these devices using the optional 3.5 mm stereo jack adapter cable*.

- Some iPod functions, such as rating music tracks, Cover Flow or adding tracks to the “On-the-go” playlist, are not supported. Cover display and video playback are only supported by the iPod adapter cable plus* (red marking).
- The video image is only displayed when the vehicle is stationary for safety reasons. Only the sound from the video plays while driving.
- Video playback through an iPod/iPhone/iPad does *not* continue after turning the vehicle off and restarting it.
- For video playback, you can also connect your iPod using the AV adapter cable*. You also need an Apple AV cable to do this. For more information on the Apple AV cable, refer to your iPod user guide.
- The Apple Lightning connection does not support video playback.
- iPod/iPhone/iPad malfunctions also affect the operation of the Infotainment system. Reset your iPod/iPhone/iPad if this happens.
- For important information on operating your iPod/iPhone/iPad, refer to the user guide for that device. Audi recommends updating the iPod/iPhone/iPad software to the latest version.
- For more information about the Audi music interface and supported devices, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer.

Supported media and file formats

Overview

The CD drive, SD card reader and the USB storage device* connection support the following audio file properties:

	Audio files		Video files	
Supported media	SD cards: with a capacity up to 32 GB CD drive: audio CDs (up to 80 minutes), CD-ROMS with a capacity up to 700 MB Audi music interface*: portable devices (such as iPods ⇨ <i>page 18</i> , USB storage devices)			
File system	SD/SDHC/ MMC memory cards USB storage device*: FAT or FAT32 file system, maximum 4 partitions CD drive: Joliet (single session and multisession CDs); UDF 1.5 - 2.01			
Metadata	Album, track, artist, year, genre and commentaries for MP3/WMA/M4A files Embedded album covers up to 800x800 px. (GIF, JPEG, PNG)			
Format	MPEG-1/-2 Layer 3	Windows Media Audio 8 and 9	MPEG-2/-4	PCM
File extension	.mp3	.wma	.m4a; .m4b .mp4; .aac	.wav
Play lists	.M3U; .PLS; .WPL			
Characteristics	up to max. 320 kbit/s and 48 kHz sampling frequency, 8 and 16 bit, 44.1 kHz sampling frequency			
Number of files	Maximum 1,000 files per directory			

 **Tips**

- The media drives do not support Windows Media Audio 9 Voice, Windows Media Audio 9 Lossless and Windows Media 9 Professional.
- To compress MP3 files, a bit rate of at least 160 kbit/s is recommended. The display

- showing the remaining play time may differ for MP3 files with variable bit rate.
- Special characters (such as those in ID3 tag information) display differently depending on the system language and cannot always be guaranteed.

Troubleshooting

Problem	Solution
Audi music interface*/Bluetooth audio player*: portable devices/Bluetooth audio players are not supported.	Refer to the information on the Audi music interface* ⇨ <i>page 18</i> /Bluetooth audio player* ⇨ <i>page 17</i> . You can learn about supported devices in the Audi database for mobile devices at www.audiusa.com/bluetooth .
Audi music interface*/Aux-in connection*: the volume is too loud when starting playback through the 3.5 mm stereo jack*/AV adapter cable*.	Adjust the volume of the portable device to approximately 70 percent of the maximum output (Input level) ⇨ <i>page 38</i> .
Audi music interface*: malfunctions during audio playback through an iPod/iPhone/iPad.	The Audio player function is switched On . Switch this function Off ⇨ <i>page 32</i> when you are not using the Bluetooth audio player*.
Audi music interface*: there is static when connecting or disconnecting the 3.5 mm stereo jack*/AV adapter cable* or when connecting or disconnecting the portable device to the 3.5 mm stereo jack*/AV adapter cable*.	The Audi music interface*/Aux-in connection* source is already selected when connecting or disconnecting. Either mute the portable device or switch to another audio source (such as the radio) before connecting or disconnecting the portable device.

System settings

Setting the time/date

You can set the clock time manually or using the radio clock*.



Fig. 15 Setting a time zone

► Select: the **MENU** button > the upper left **Time** control button ① ⇒ fig. 15.

Time source*

Manual: all time functions are set manually.

Auto: the time and date are set by the radio clock, depending on the **Time zone** that was selected manually. Always remember to set the new time zone in the Infotainment system when you change time zones with the vehicle.

Time

The **Time** can be set manually. The **Time source*** must be set to **Manual** to do this.

Time format

If you select **24h**, the clock will display **13:00**, for example. If you select **AM/PM**, the clock will display **1:00 PM**, for example.

Day. savings time*

When daylight saving time is switched **On**, the time is moved forward or back automatically by one hour when daylight saving time begins or ends.

Manual day. savings time

When this function is switched **On**, an hour is added to the set **Time**.

Time zone

When selecting the appropriate time zone, a sampling of countries in this zone will be listed.

Date

The **Date** can be set manually. The **Time source** must be set to **Manual** to do this.

Date format

If you select **DD.MM**, the date will display, for example, **31.12**. If you select **MM/DD**, the date will display, for example, **12/31**.

Adjusting the sound

The sound distribution and volume of the Infotainment system can be adjusted individually. The settings depend on vehicle equipment.



Fig. 16 Sound settings



Fig. 17 Adjusting treble

► Select: the **TONE** button.

① Treble / ② Bass / ③ Subwoofer* / ④ Balance / ⑤ Fader

The settings for **Treble**, **Bass**, **Subwoofer*** and **Balance/Fader** (sound focus) can be adjusted by turning the control knob. The changed settings

only apply for the audio source that is active at the time. This allows you to adjust the sound settings for each audio source separately.

⑥ GALA / DSP* / DSP [BOSE]*

- **GALA (speed dependent volume control)**: you can adjust how much the volume changes to compensate for noise inside the vehicle by turning the control knob.
- **Sound focus* (adjusting the sound distribution)**: select and confirm **All** (symmetrical sound distribution)/**Driver** (sound distribution aimed toward the driver) or **Front/Rear**.
- **Surround level***: you can adjust the volume of the surround sound effect by turning the control knob.
- **AudioPilot* (dynamic road noise compensation)**: select and confirm **Active**. The volume is adjusted automatically depending on the noise inside the vehicle.

Adjusting the system volume

- ▶ Select: the **MENU** button > **Tone**.

Telephone* control button

Ring tone volume/Call volume: you can adjust the selected ring tone volume or call volume by turning the control knob. The **Call volume** can only be adjusted during a call.

Systems control button

Parking aid: the **Front volume/Rear volume** and the **Front frequency/Rear frequency** of the signals can be adjusted by turning the control knob.

In-car entertainment fader means that the volume of audio playback is temporarily lowered when the parking system or voice guidance is active.

Restarting the system (reset)

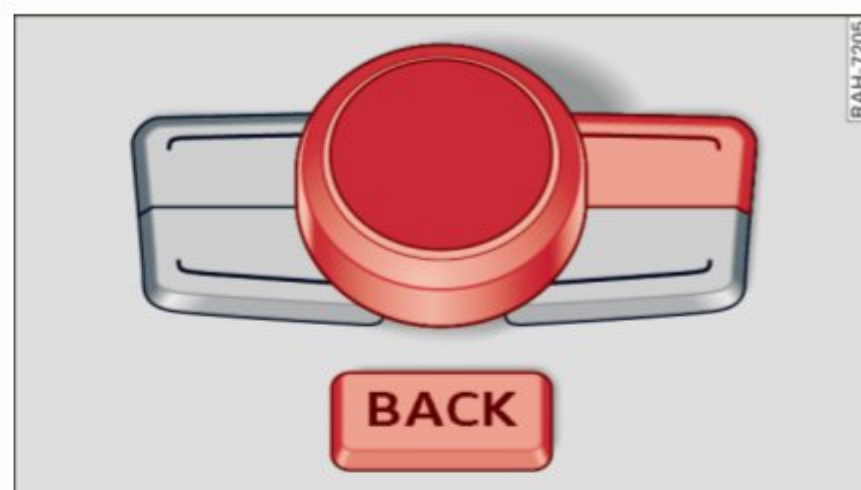


Fig. 18 Button combination to restart the system

- ▶ Press and hold the **BACK** button, the control knob and the upper right control button
⇒ *fig. 18 at the same time* briefly and then release the buttons.

Additional settings

- ▶ Select: the **MENU** button > **Setup MMI** control button.

Menu language

You can change the language of the text on the MMI display and driver information system, as well as the language of the voice recognition system*.

English, French and Spanish are available.

Units of measurement

The following measurement units can be set in the display and driver information system.

- **Distance** (miles or kilometers)
- **Speed** (mph or km/h)
- **Temperature** (°F or °C)
- **Consumption** (l/100km, mpg (US), mpg (UK) or km/l)
- **Capacity** (gallons (US), liters or gallons (UK))

Voice recognition*

Command display: the display of possible commands during voice input can be switched **On** or **Off**.

Short dialogue: prompts in a shorter format can be switched **On** or **Off**.

System settings

Input signal: the input signal **beep** during a dialog can be switched **On** or **Off**.

Voice recognition volume: you can adjust the volume of the announcements by turning the control knob.

Individual speech training (only when the vehicle is stationary): you can adapt the voice recognition system to your voice or pronunciation in order to improve the system's ability to recognize your speech. Individual training is comprised of 40 speech entries that consist of commands and sequences of numbers. You can delete the programmed speech training using **Reset speech training**.

Delete all name tags: all of the name tags that you have stored (spoken names) are erased.

Display brightness

You can adjust the display brightness by turning the control knob.

Factory default settings

The following functions can be reset to the factory default settings:

- **Sound settings**
- **Radio**
- **Media settings**
- **Directory***
- **Telephone***
- **Bluetooth***
- **Voice recognition**

You can select the desired functions individually or all at once with the option **Select all**. Select and confirm **Restore factory default settings**.

System update

The Bluetooth software can be updated by CD, USB or SD card using the system update.

For more information about the **System update**, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer or authorized Audi Service Facility.

Version information

Information about the software version in the Infotainment system is displayed.

Using the telephone

Introduction

Applies to vehicles: with telephone

Once you have connected your cell phone to the Infotainment system using Bluetooth, you can operate the telephone functions comfortably using the Infotainment system.

To learn which Bluetooth connections and functions are supported by your cell phone, ask your cell phone service provider or visit www.audiusa.com/bluetooth.

With the cell phone prep, you use the handsfree system and operate telephone functions through the Infotainment system. Phone calls are transmitted through the antenna on your cell phone.

WARNING

- Medical experts warn that cell phones can interfere with the function of pacemakers. Always maintain a minimum distance of 20 centimeters between the cell phone antenna and the pacemaker.
- Do not carry the cell phone in a pocket directly over the pacemaker when the phone is switched on.
- Switch the cell phone off immediately if you suspect it may be interfering with the pacemaker.
- Switch your cell phone off in areas where there is a risk of an explosion. These locations are not always clearly marked. This may include gas stations, fuel and chemical storage facilities or transport vehicles, or locations where fuel vapors (such as propane or gasoline vapor in vehicles or buildings), chemicals or large quantities of dust particles (such as flour, sawdust or metal) may be present in the air. This also applies to all other locations where you would normally turn your vehicle engine off.
- The demands of traffic require your full attention. Refer to and follow the guidelines provided in ⇨ *page 4, Traffic safety information*.

Note

- Obey all applicable laws regarding use of phones in vehicles.
- Switch off the phone where use of cell phones is prohibited. Obey all applicable notices and regulations.

Tips

- The Bluetooth connection range is limited to inside the vehicle. It can also be affected by local conditions and interference with other devices.
- The telephone functions depend on the cell phone service provider and the cell phone you are using. You can obtain more information from your cell phone service provider or from your cell phone user guide.
- For up-to-date information on the cell phone prep, visit www.audiusa.com/bluetooth or your authorized Audi dealer.
- The cell phone prep is designed to work with GSM and CDMA networks.

Connecting a cell phone

Applies to vehicles: with telephone

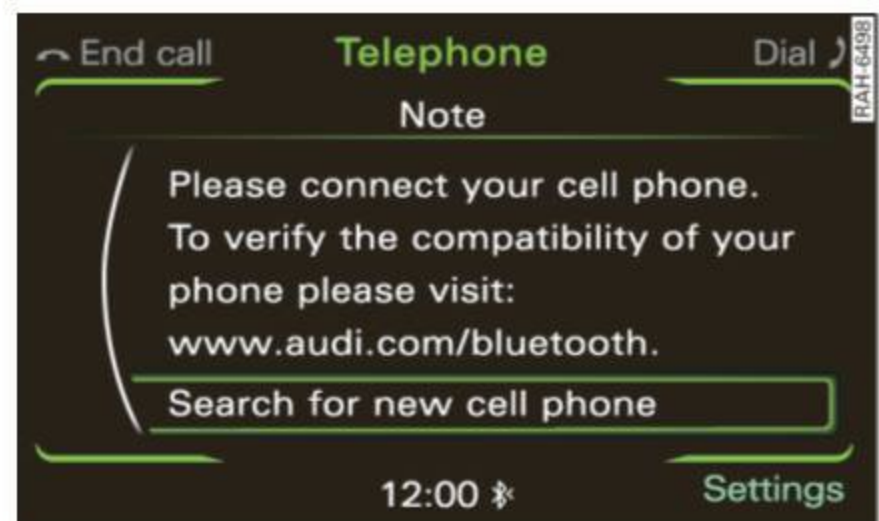


Fig. 19 Searching for new cell phones

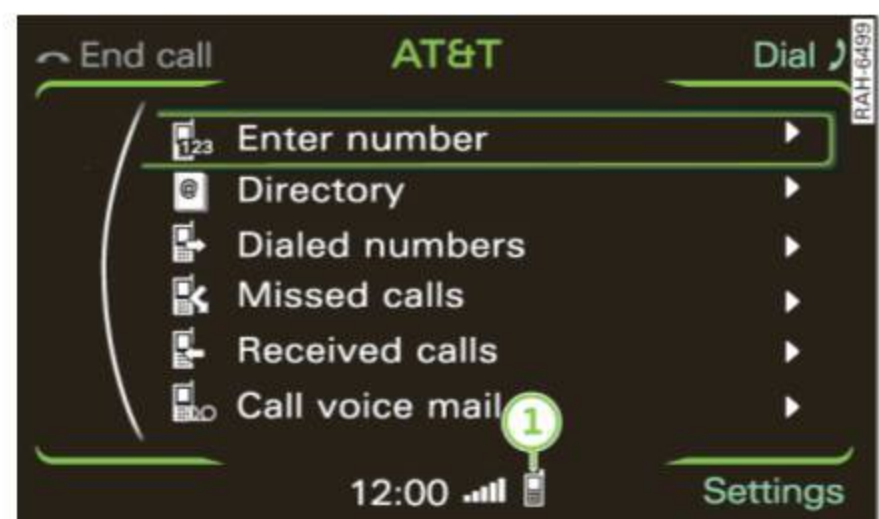


Fig. 20 The cell phone is paired to the cell phone prep

Requirements

The vehicle must be stationary and the ignition must be switched on.

The Bluetooth function and visibility of the Infotainment system ⇒ *page 32* and cell phone must be switched on.

The Infotainment system and the cell phone to be paired must not be actively connected with any other Bluetooth devices.

Pairing a cell phone

- ▶ Select the **TEL** button > **Search for new cell phone**. The available Bluetooth devices are shown in the display. **Or:** search for the MMI using the Bluetooth device search on your cell phone.
- ▶ Select and confirm the desired cell phone from the list of displayed Bluetooth devices.
- ▶ Select and confirm **Handsfree**. The Infotainment system generates a PIN for connecting.
- ▶ Select and confirm **Yes**.
- ▶ Enter the PIN for connecting on your cell phone. **Or:** if the PIN is already displayed on your cell phone, confirm it in the cell phone and in the Infotainment system. The time allowed for entering the PIN is limited to approximately 30 seconds.

Pay attention to any additional system prompts displayed on your cell phone, for example if the system should connect automatically in the future. Depending on the cell phone, you may have to confirm downloading the directory separately.

After connecting successfully

After connecting successfully, the signal strength bars and the telephone symbol ① ⇒ *fig. 20* appear in the display status line. In addition, the cell phone contacts are automatically loaded in the Infotainment system directory. This process can take several minutes, depending on the number of contacts.

If all of the memory capacity is filled, you will be asked to replace the contacts from one cell phone when connecting another cell phone. With the option **Restricted use of telephone**, only contacts in the cell phone and the local public Info-

tainment system memory are available

⇒ *page 29*.

Tips

- You only have to pair your device one time. Bluetooth devices that are already paired automatically connect to the Infotainment system when they are within range and the ignition is switched on.
- Authorizing the Infotainment system connection in your cell phone will speed up the automatic connection.
- Several cell phones can be paired to the Infotainment system, but only one cell phone can be actively connected.
- A Bluetooth device that is already paired with the Infotainment system will be disconnected if another device is paired.
- When leaving the vehicle, the Bluetooth connection to the cell phone ends automatically.
- You can obtain more information from your cell phone service provider or from your cell phone user guide. For information on using the telephone, visit www.audiusa.com/bluetooth or your authorized Audi dealer.

Selecting the telephone

Applies to vehicles: with telephone

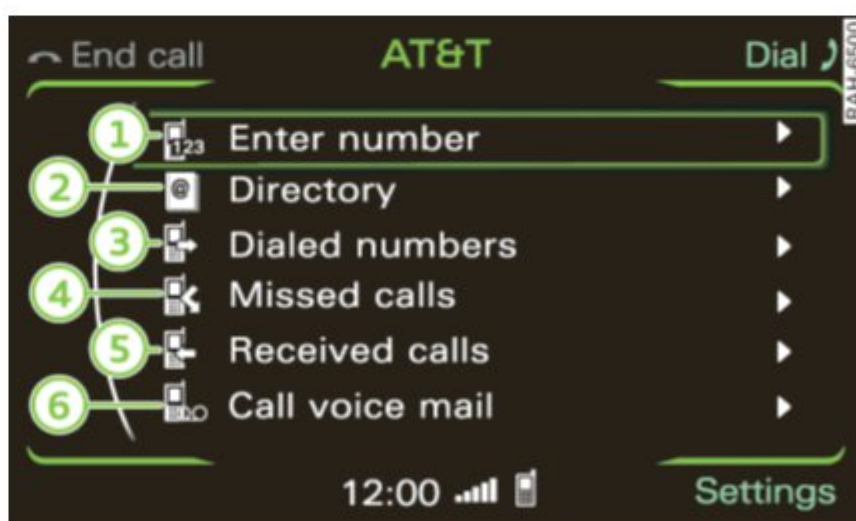


Fig. 21 Telephone main functions

Requirement: a cell phone must be connected to the Infotainment system ⇒ *page 25*.

- ▶ Select: the **TEL** button.

The last active telephone menu is shown in the display. Press the **TEL** button in the **Telephone** menu again to access the telephone functions. ►

The following telephone functions are available
⇒ *fig. 21*:

- ① Entering a number ⇒ *page 27*
- ② Directory ⇒ *page 29*
- ③ List of dialed numbers ⇒ *page 27*
- ④ List of missed calls ⇒ *page 27*
- ⑤ List of received calls ⇒ *page 27*
- ⑥ Calling voice mail ⇒ *page 32*

Dialing a phone number

From the directory

Applies to vehicles: with telephone

You can dial a phone number directly from the directory ⇒ *page 29*.

From a list

Applies to vehicles: with telephone

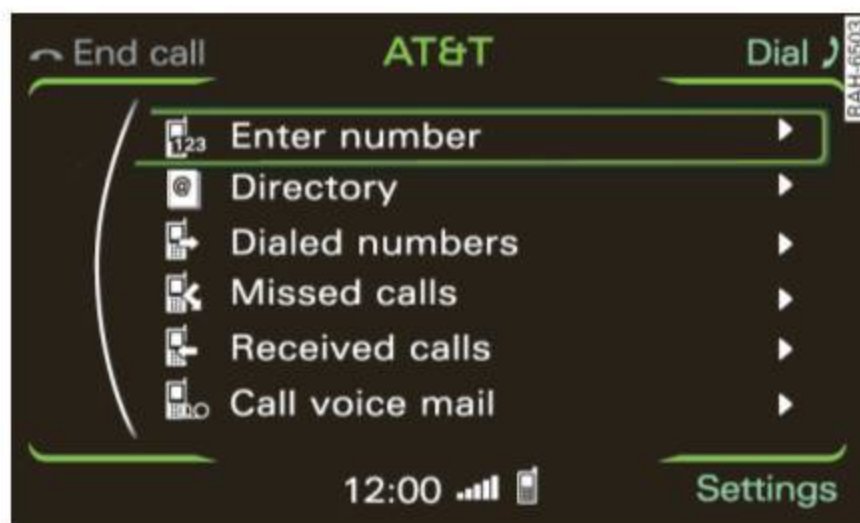


Fig. 22 Dialing a phone number from a list

Requirement: a phone number must be stored in the call lists.

- Select: the **TEL** button.

Dialed numbers / Missed calls / Received calls

- **Dialing a phone number**: select and confirm the desired phone number from the recent calls list. Select and confirm **Call**.

Dial control button

- **Dialing a phone number**: select and confirm the desired phone number from the **Dialed numbers** list. Select and confirm **Call**.

Using the speller

Applies to vehicles: with telephone



Fig. 23 Entering phone numbers using the number speller



Fig. 24 Entering phone numbers using the letter speller

- Select: the **TEL** button > **Enter number**.
- **Entering a phone number as a sequence of numbers**: enter the number using the number speller ⇒ *fig. 23*.
- **Enter a phone number as a sequence of letters**: press the **A-Z** control button. Enter a sequence of letters using the letter speller, for example *AUDISERVICE* ⇒ *fig. 24*.
- **Dialing a phone number**: select and confirm **OK**. Or: press the **Dial** control button. The active audio source is muted when making a call.
- **Deleting individual characters**: select and confirm ◀.
- **Deleting all characters entered at once**: turn the speller to ◀ and press and hold the control knob.

Tone sequences (DTMF) can be entered directly into the speller during a phone call.

Storing a phone number

Storing a new phone number

Applies to vehicles: with telephone

You can store a new phone number as a contact in the directory ⇒ *page 31*.

Storing from the call lists

Applies to vehicles: with telephone

You can store a phone number from the call lists in the directory.

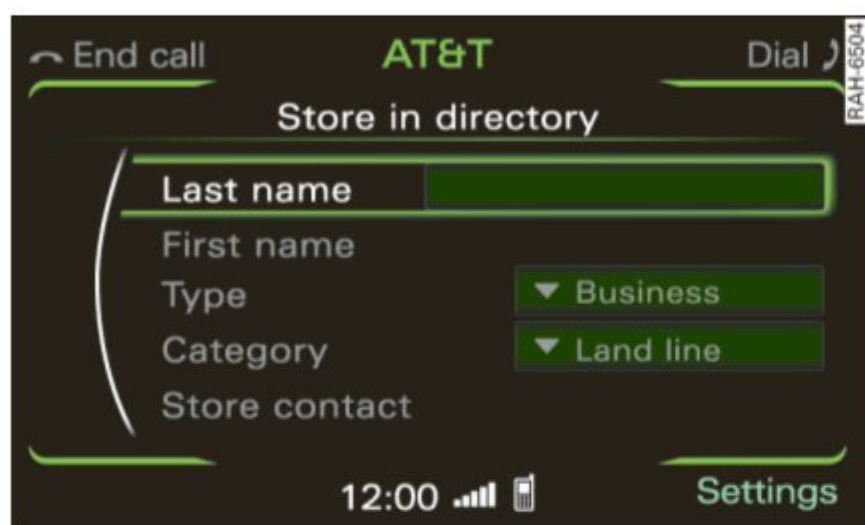


Fig. 25 Storing a phone number in the directory

Requirement: a phone number must be stored in the call lists.

- ▶ Select: the **TEL** button > **Dialed numbers**, **Missed calls** or **Received calls** > *Telephone number* > **Store**.
- **Storing a phone number as a new address card**: select and confirm **New contact**. Enter a **Name**. Enter additional data, if necessary. Select and confirm **Store contact**.
- **Assigning a phone number to an existing address card**: select and confirm a contact in the list. Select and confirm **Store contact**.

Tips

- The contacts are only stored in the Infotainment system directory.
- You can edit the directory ⇒ *page 29*.

Accepting/ending a call

Applies to vehicles: with telephone

- ▶ **Accepting an incoming call**: press the **Answer** control button.

- ▶ **Ignoring an incoming call**: press the **Ignore** control button.
- ▶ **Ending a call or canceling dialing**: press the **End call** control button.

Answering another call: if there is an incoming call during a call, you can select **Answer** to put the existing phone call on hold and answer the incoming call. If you select **Ignore**, the incoming call will be ignored.

Caller information: the *name*, *phone number* or **Unknown** appears in the display and driver information system, depending on if the caller has been stored in the directory and if the phone number has been transmitted.

Tips

- The audio/video source is muted during an incoming or outgoing call.
- If you have switched the display off, it will switch on again automatically when an incoming call is received.

During a call

Applies to vehicles: with telephone

Requirement: there must be a call in progress.

- ▶ Select: the **Options** control button.
- **Making an additional call**: select **Additional call** > **Directory** or *a call list* > *an entry in the list*.
- **Answering an incoming call when there is an active call and a call on hold**: select **Replace**. The active call is replaced with the incoming call.

Mute: if you select and confirm this function, the other person on the phone cannot hear you. You can hear the other person.

Hold/Resume: you can put an active phone call on hold and resume it. **On hold** and the duration of the phone call is shown in the display.

Swap call: you can alternate between two phone calls at the same time. One of the calls will be on hold. **End call** ends the active phone call. A phone

call that is on hold stays on hold and can be resumed using the **Options** control button and **Resume**.

Join conference: a party on hold and up to five active parties (depending on the network) can be added to a conference call. To make an additional call, put all participants in the current conference call on hold using **Hold**. Press the **Options** control button. Select and confirm **Additional call** and select a phone number from a call list or the **Directory**, or select **Enter number**. To add this party to the conference call, select **Conference**. With **Resume**, all participants are taken off hold. **Show conf. participants** shows all participants.

Tips

- The *Call waiting* function must be activated in your cell phone to be alerted to an incoming call during an active call.
- An incoming phone call may still be visible in the display for a few seconds depending on the cell phone being used. If you use the **Replace** or **Ignore** functions in the Infotainment system while the display is still visible, the active phone call may end.

Accessing the directory

Applies to vehicles: with telephone

After connecting the cell phone, the contacts in it are automatically imported into the Infotainment system.

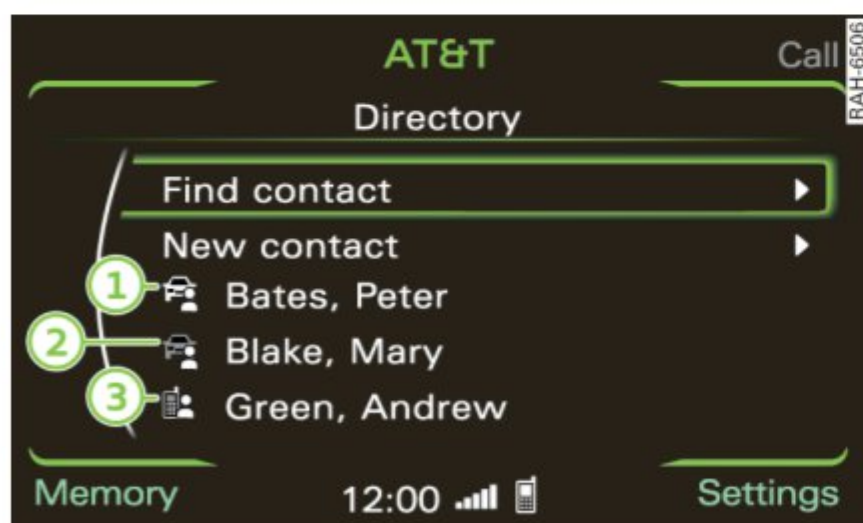


Fig. 26 Contact list

- Select: the **TEL** button > **Directory**.

- **Selecting a contact:** select and confirm a contact from the directory. The address card is displayed.

Contacts are displayed in alphabetical order, can be sorted according to first or last name ⇒ *page 33* and are identified with a symbol to tell the location where they are stored ⇒ *fig. 26*:

- ① **Private Infotainment system directory:** these contacts are only visible when the cell phone is connected.

You can pair up to four different cell phones with the Infotainment system and manage up to four private directories.

- ② **Public Infotainment system directory:** these contacts are visible to all users and can be used by all users regardless of the cell phone that is connected. To store a contact in the private directory, the contact must be marked as **Private contact** ⇒ *page 30*.

- ③ **Cell phone:** these contacts are stored in the cell phone and are only visible when the corresponding cell phone is connected.

If all of the memory capacity is filled, you will be asked to replace the contacts from one cell phone when connecting another cell phone. With the option **Restricted use of telephone**, only contacts in the cell phone and the local public Infotainment system memory are available.

Tips

- Check for a possible request to synchronize on your cell phone. Requests to synchronize the directory must be confirmed so that your cell phone contacts can be loaded into the Infotainment system.
- The contact display in the Infotainment system depends on the cell phone used. For more information on the supported cell phones, visit www.audiusa.com/bluetooth or your authorized Audi dealer.
- The contacts from the cell phone may not be transferred in alphabetical order. If there are too many entries, contacts with different first letters may be missing in the Infotainment system.

- The public contacts in the local Infotainment system memory are always visible and can be accessed by other users.

Searching for a contact

Applies to vehicles: with telephone

- ▶ Select: the **TEL** button > **Directory**.
- Select and confirm **Find contact**. Enter the name. **Or**: select and confirm the contact using the **List**.

Tips

You can scroll through long lists quickly by turning the control knob quickly.

Using a contact

Applies to vehicles: with telephone

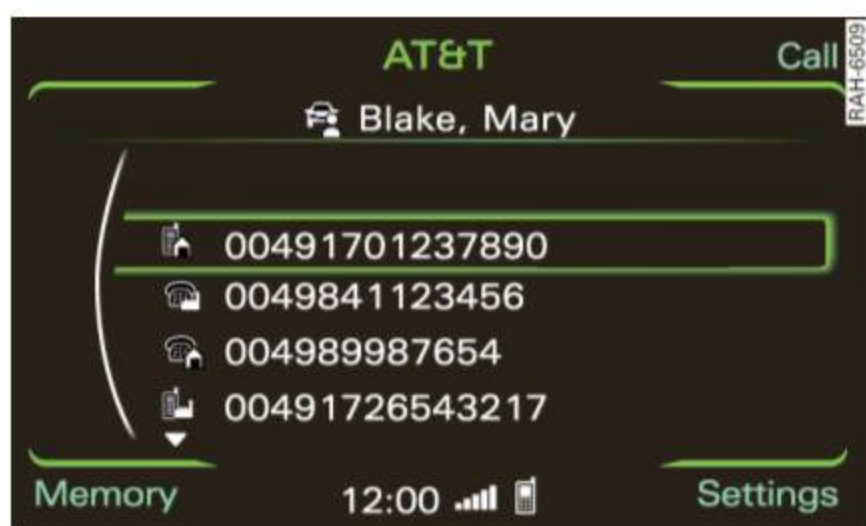


Fig. 27 Calling a contact

- ▶ Select: the **TEL** button > **Directory** > *a contact from the directory*.
- **Call**: select and confirm the desired telephone number. **Or**: select the desired phone number and press the **Call** control button.

Read contact

For each entry in the directory, the Infotainment system automatically creates a name tag that can be read by the system.

Create copy for editing/Edit contact

A copy of the contact is stored in the private local Infotainment system memory.

You can change the information in the input fields ⇒ *page 31* using the speller.

Storing a contact in the private directory

You can mark a contact as a **Private contact** . The contact is then stored in the private Infotainment system directory ⇒ *fig. 27*. If a contact is not marked as a **Private contact**, then it is stored in the public Infotainment system memory  and is accessible to all directory users.

Delete contact

Only the contacts in the Infotainment system memory (private/public) can be deleted.

Tips

- Contacts edited in the Infotainment system directory cannot be automatically updated in the connected cell phone. Audi recommends editing cell phone contacts directly in the cell phone.
- Only the contacts in the Infotainment system memory (private/public) can be edited or deleted.
- You can delete all private contacts at once by selecting the **Delete all private contacts** option in the directory settings ⇒ *page 33*. You can only delete all of the contacts in the public memory at once by resetting the directory to the factory default settings ⇒ *page 24*.

Importing/exporting contacts

Applies to vehicles: with telephone

Contacts in vCard format (.vcf) can be imported into the directory or exported.



Fig. 28 Importing the phone book manually

Requirement: an SD card must be in the SD card reader or a USB storage device must be connected to the Audi music interface* ⇒ *page 18*.

- ▶ Select: the **TEL** button > **Directory** > **Memory** control button.
- **Importing contacts from a storage device:** select and confirm **Import contacts** > **SD card 1**, **SD card 2** or **USB device** > *desired contacts* > **Import**.
- **Exporting contacts to a storage device:** select and confirm **Export contacts** > **SD card 1**, **SD card 2** or **USB device** > *desired contacts* > **Export**.
- **Selecting all contacts at once for import or export:** select and confirm **Import contacts/Export contacts** > **SD card 1**, **SD card 2** or **USB device** > **All** control button > **Import/Export** control button.
- **Importing the phone book manually:** select and confirm **Import phone book**. The symbol  ⇒ *fig. 28* appears in the status line in the display while the contacts are being imported from the cell phone.

Tips

- The imported contacts are stored in the local memory of the directory.
- A maximum of 100 contacts can be imported. You can check the directory memory capacity at any time ⇒ *page 32*.
- Never save important data on SD cards or USB storage devices. Audi is not responsible for damaged or lost files and media.

Storing a new contact

Applies to vehicles: with telephone

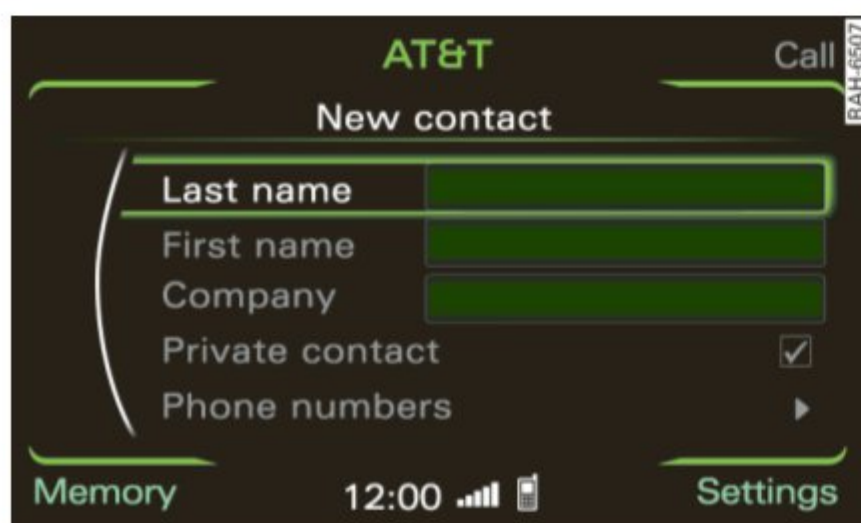


Fig. 29 Storing a new contact

- ▶ Select: the **TEL** button > **Directory** > **New contact**.

Last name/First name

Enter the last name and first name using the speller.

Telephone numbers

You can store up to five phone numbers in an address card. You can also assign a **Type** (**Business** or **Private**) and a **Category** (**Land line**, **Cell** or **Fax**) for each phone number. You can also set a frequently used phone number as the **Default number**. That number is then displayed first in the open address card.

You can import phone numbers from the call lists (such as **Dialed numbers**) into the address card using the **New number** function and the **List** control button.

Mailing address (business)/Mailing address (private)

You can store a business and a private mailing address for a directory contact. With the **Delete mailing address** function, you can delete the business or private address.

Structured addresses from a cell phone that have information regarding country, ZIP code, city and street name can be imported directly into the directory.

Tips

- The public contacts in the local Infotainment system memory are always visible and can be accessed by other users.
- The new contact will be stored in the private memory of the directory currently being used.
- Contacts are stored automatically during input.
- The importing of new addresses depends on the cell phone.
- Up to 100 contacts can be stored in memory in a private or public directory.
- Contacts edited in the Infotainment system directory cannot be automatically updated in the connected cell phone. Audi

recommends editing cell phone contacts directly in the cell phone.

Memory capacity

Applies to vehicles: with telephone

- Select: the **TEL** button > **Directory** > **Memory** control button > **Memory capacity**.

The **Memory capacity** for each directory and for the entire memory appears.

You can manage up to 5,000 contacts with the directory. You can load up to 2,000 contacts from your cell phone into each private directory. In addition to this, you can store up to 100 private contacts and up to 100 public contacts into the Infotainment system memory.

Additional settings

Telephone settings

Applies to vehicles: with telephone

- Select: the **TEL** button > **Settings** control button.

Call options

Auto answer: when the function is switched **On**, incoming calls are automatically answered after a brief time. If the call has not yet been answered automatically, it can still be ignored using the **Ignore** function.

Invert call lists: the phone numbers in the call lists are sorted according to the time the call took place. When the function is switched **On**, the sorting order is reversed.

Telephone settings

Ring tone volume/Call volume: refer to
⇒ page 23

Bluetooth

Bluetooth: the Infotainment system Bluetooth function can be switched **On** or **Off**. The Bluetooth symbol  appears in the display when the function is switched **On** ⇒ page 8, fig. 4.

MMI system visible: the visibility of the MMI for cell phones or for Bluetooth audio players can be switched **On** or **Off**. When **Auto** is selected, the

Infotainment system will remain visible for cell phones or a Bluetooth audio player for about five minutes when the vehicle is stationary and the ignition is switched on. The visibility switches off after that. However, it is still possible to establish a Bluetooth connection with paired cell phones or players that have already been paired when the visibility is switched off. The function should be switched **Off** when the pairing process is complete so the Infotainment system is not visible to others. The visibility of the Infotainment system automatically switches **Off** when audio files are being played using a connected Bluetooth audio player. Otherwise, there could be distortion in the playback.

Bluetooth audio player: the **Bluetooth audio player** function must be switched **On** to be able to select the **Bluetooth audio player** as the source in the **Media** menu ⇒ page 37. Switch the **Bluetooth audio player** function **Off** if you are not using it to prevent malfunctions in the **Telephone** or **Media** menus.

Find Bluetooth devices: the system searches for and lists Bluetooth devices that are within range.

Bonded Bluetooth devices: Bluetooth devices that have been paired with the Infotainment system are listed. The active connected Bluetooth device is identified with the Bluetooth symbol. To delete paired Bluetooth devices individually, select the device and delete it with the **Delete Bluetooth devices** function. To switch between the handsfree profile (**Handsfree**) and **Audio player** when cell phones are connected, select the Bluetooth device when the vehicle is stationary and change the profile using the **Connect** function. Use **Disconnect** to disconnect the paired Bluetooth device.

Bluetooth name: the Bluetooth name of the MMI (for example, "AUDI MMI 2613") is shown and can be changed.

Delete Bluetooth devices: all paired Bluetooth devices can be deleted by confirming with **Yes**.

Voice mail number

The voice mail number is entered with the speller or from a **List** (directory) and stored with **OK**. ►

When a voice mail number is stored, the voice mail can be accessed with the  symbol in the speller. This service must be set up and activated in advance in the cell phone network. You can obtain more information from your cell phone service provider.

Directory settings

Applies to vehicles: with telephone

- Select: the  button > **Directory** > **Settings** control button.

Sort order

You can sort the contacts in your directory alphabetically according to **Last name/First name**.

Troubleshooting

Applies to vehicles: with telephone

Problem	Solution
Connecting the cell phone to the Infotainment system failed.	Check if the visibility on the cell phone and Infotainment system is switched on. For some cell phones, the visibility turns off automatically after a short period. Or: restart your cell phone. For more information on this, refer to the user guide for your cell phone.
After pairing, not all contacts/no contacts are loaded in the Infotainment system.	Avoid using special characters in names. Avoid using contact groups.
Certain phone functions are grayed out or not available.	The phone functions depend on the cell phone service provider and the cell phone you are using. You can obtain more information from your cell phone service provider or from your cell phone user guide.
Some phone functions are switched off or not available, even though the cell phone is supported.	On corporate phones, some Bluetooth settings may not be compatible or the cell phone Bluetooth function may be deactivated. You can obtain more information from your system administrator.

Public contacts

You can show or hide the stored contacts. With **Yes**, all the contacts in the public Infotainment system memory are shown, and with **No**, they are hidden.

Delete all private contacts

You can delete all private contacts in the local memory using the **Delete all private contacts** function. You can only delete all of the contacts in the public memory at once by resetting the directory to the factory default settings ⇒ *page 24*.

Listening to the radio

Using the radio

The radio supports the FM, AM and Sirius* (satellite radio) bands.



Fig. 30 FM station list



Fig. 31 Sirius station list when there is a loss of reception

► Select: the **RADIO** button.

After selecting the radio, the last menu that was open is displayed.

- **Showing the station list:** press the **RADIO** button again. The receivable stations are shown in the station list ⇒ *fig. 30* and can be selected directly.
- **Updating the station list:** to update the station list in the AM reception range, select and confirm **Update station list**. The station list is automatically updated in the FM and Sirius bands.
- **Selecting a station:** select and confirm a station from the station list.
- **Quick storing from the station list:** select and confirm a station from the station list ⇒ *fig. 31*. Press and hold the control knob until **Store station name here** appears in the presets list. Select and confirm the desired presets location.

- **Selecting the frequency band:** press the **Band** control button. Select and confirm the desired band. The current band is shown in the title line. **Or:** press the **RADIO** button repeatedly until the desired frequency band is displayed.

The Sirius* provider updates the Sirius station list (max. 224 channels) and the station information automatically. If the last station that was playing is no longer available after the station list is updated, station 184 is played automatically. If there is a loss of radio signal, the radio stations that are currently not received are shown in the station list with the following system information:

If there is a loss of radio signal (Sirius*), the following system information may be shown:

LINKING: the tuner is currently not receiving a satellite signal ① ⇒ *fig. 31*.

ANTENNA: the antenna is not ready. Contact your authorized Audi dealer for more information.

The system information turns off when the radio stations are received again.

Tips

- Contact the Sirius* provider if you would like to receive satellite programming.
- That stations in the AM station list are still displayed after you leave the reception area. There is no longer any reception.
- Buildings, tunnels, bridges, open areas, other vehicles or objects on the vehicle roof can affect reception.
- Satellite radio is not available in Alaska and Hawaii.

Radio functions



Fig. 32 FM band functions

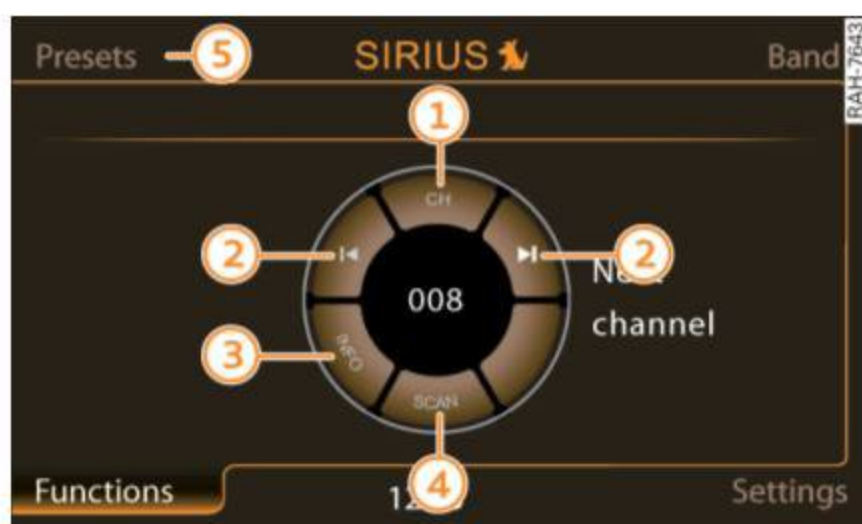


Fig. 33 Sirius band functions

- Select: the **RADIO** button > **Functions** control button.

The following functions can be selected in the display, depending on which band is selected:

① Tuning/Channel number (Sirius*)

The frequency bars are displayed. Select and confirm the desired frequency.

Select and confirm the desired channel from the SIRIUS frequency band*.

② Seek up/Seek down or Next channel/Previous channel (Sirius*)

The previous ◀ or next ▶ receivable frequency is selected.

③ Radio text (FM)/Info (Sirius*)

Information that accompanies the programs is displayed.

④ SCAN (Scan)

All stations are played for several seconds each.

If the SCAN function is activated in the AM band, the sender list will be updated while scanning.

⑤ Presets

The presets list can contain up to 50 stations from all reception bands.

- **Storing stations:** select the **Presets** control button > **Store station name**. The selected station is stored in the next empty position in the presets list. Select and confirm the desired presets location.
- **Selecting a stored station:** press the **Presets** control button. Select and confirm a station from the presets list.
- **Moving stored stations:** press the **Presets** control button. Select and confirm the station from the station list and then **move station name**. Select and confirm the desired presets location.

Additional settings

- Select: the **RADIO** button > **Settings** control button.

The following settings can be selected, depending on the band that is selected:

Channel info (Sirius*)

If track information is available for the current track (such as artist or album), it will be displayed in a pop-up window if this function is activated.

Station sorting

- **Channel number:** the stations are sorted in ascending order according to their station number.
- **Channel name:** the station categories are listed in alphabetical order in the main menu.
- **Category and channel no.:** the channels are sorted by their category and then by their channel number.
- **Category and channel name:** the channels are sorted according to their category and then according to their channel name. ►

Category filter

The stations shown in the station list can be filtered by your personal preferences and by program type. The program categories that you can select depend on what is offered by your provider.

Select the **Deactivate filter** option to deactivate all filter options and display all available stations in the satellite station list.

Station names

Scrolling station names: scrolling text transmitted by the FM stations is shown in the MMI display.

Fixed station names: scrolling text transmitted by the FM stations is not shown in the display.

Only the current section of the scrolling text is displayed.

Station names off: text transmitted by the FM stations is not shown in the display.

Receiver serial number (Sirius*)

The electronic serial number (ESN) is displayed. The number is required to log in to Sirius*.

Delete presets

Requirement: a station must be stored in the presets list ⇒ *page 35*.

Stored stations can be deleted individually or all at once.

Troubleshooting

Problem	Solution
A station with poor reception is no longer displayed in the station list once you switch to a different station.	Store the station ahead of time and then select it from the presets list later ⑤ ⇒ <i>page 35, fig. 33</i> .

Playing media

Accessing media

You can start and operate various media drives through the control panel.



Fig. 34 Possible audio sources

Requirement: a media drive must contain audio files.

► Select: the **MEDIA** button.

The source overview or the last file that was playing is displayed after selecting Media.

- **Selecting a source:** press the **Source** control button. Select and confirm a source from the list. **Or:** press the **MEDIA** button repeatedly until the desired source is displayed.
- **Playing an audio file:** select a folder, if necessary. Select and confirm a track.
- **Moving one level up in the folder structure:** press the **BACK** button. **Or:** select and confirm **Folder up**.
- **Moving to the highest level in the folder structure:** press the **MEDIA** button.

Possible sources are:

- ① SD card reader
- ② CD drive
- ③ Audi music interface* (such as iPod, USB or external audio/video input*) ⇒ page 18
- ④ Bluetooth audio player* ⇒ page 17

Tips

You can scroll through long lists of folders or tracks quickly by turning the control knob quickly. The scrolling speed depends on the number of folders or tracks.

Media functions



Fig. 35 SD card main functions

► Select: the **MEDIA** button > **Functions** control button.

① || (Pause)

The mute symbol ⑦ ⇒ page 8, fig. 4 appears in the status line in the display. To resume playback, select and confirm **|| (Pause)** again. **Or:** press the On/Off knob briefly.

② ►► (Fast forward)/◄◄ (Rewind)

Press and hold the control button to rewind ◄◄ or fast forward ►► an audio file.

③ ►| (Next track)/|◄ (Previous track)

The previous |◄ or next ►| track plays. If you select |◄ and confirm within the first ten seconds of playback, the previous track will play. If you press it after approximately ten seconds, the current track will begin playing again from the beginning. **Or:** press the arrow keys on the control panel (◄◄ / ►►).

④ MIX (Shuffle)

Requirement: an audio file must be playing and **Repeat options** must be selected.

The tracks in the selected repeat option are played in random order.

⑤ INFO (Display track info)

Stored information (such as artist, album, track or genre) is displayed with the current track.

⑥ RPT (Repeat options)

– **Off:** the repeat options are switched off. ►

- **Folder:** the songs in the folder that is currently selected are repeated.
- **Track:** the song currently being played will be repeated.

Tips

- **Shuffle** also depends on the repeat options settings.
- The **Shuffle** and **Repeat options** functions switch off automatically when the source changes in the **Media** menu.

Additional settings

Requirement: a source must be selected.

- ▶ Select: the **MEDIA** button > **Settings** control button.

The following settings can be selected, depending on the active source and the storage medium:

Display track info

Requirement: an audio file must be playing.

Various information about the current track (such as the embedded album cover*), the playing time and remaining playing time may be displayed, depending on availability.

Track display

Requirement: an audio file must be playing.

File name: the name of the file is displayed with the file extension.

Track name: the name of the current track or the track that was played last is displayed.

Input level

Requirement: a portable audio device must be connected with a 3.5 mm stereo jack adapter cable*/AV adapter cable*/iPod adapter cable (plus)*.

Select: the **MEDIA** button > **Source** control button > Audi music interface > **Settings** control button > **Input level**.

Picture format

Requirement: a portable audio device must be connected using the iPod adapter cable plus*/AV adapter cable* ⇒ *page 18*.

Picture format: the **Picture format** can be adjusted automatically with **Automatic**. The picture width varies depending on the film format. The formats **4:3** and **16:9** can also be displayed. The picture is expanded to fill the entire display using the **Zoom** function and is displayed in the stored picture format using **Original**.

AV standard: you can select **PAL**, **NTSC** or **Auto** for an externally connected device. The same standard must be selected on the device. Selecting the incorrect AV Standard can cause a poor-quality image, no image or no color at all.

Brightness: reduce or increase the brightness.

Contrast: reduce or increase the contrast.

Color: reduce or increase the intensity of the color.

AV standard

- Select: the **MEDIA** button > **Source** control button > **External video input** > **Settings** control button > **AV standard**.

You can select **PAL**, **NTSC** or **Auto** for an externally connected device. The same standard must be selected on the device. Selecting the incorrect AV Standard can cause a poor-quality image, no image or no color at all.

Tips

- The **Track display** function is not available for audio CDs or a connected iPod.
- The **Display track info** function is not available for audio CDs and connected Bluetooth audio players*.
- The video image is only displayed when the vehicle is stationary for safety reasons. Only the sound from the video plays while driving.
- When synchronizing a portable device with "Cloud" services, playlists may display incorrectly in the Infotainment system. Use the media center in the device.

A

Adapter cable (Audi music interface)	18
Additional information (radio)	35
Adjusting the sound (tone)	22
Adjusting the volume	
Infotainment system	6
Multifunction steering wheel	9
Adjusting volume	
Multifunction steering wheel	13
AM (amplitude modulation)	34
Audi music interface	18
Adapter cable	18
Connecting/disconnecting	18
Screen settings	38
Audio file	
Fast forwarding/rewinding	37
Next/previous	37
Playing	37
Track info	38
Audio player	
<i>refer to</i> Bluetooth	17

B

Balance (sound)	22
Bass (sound)	22
Bluetooth	
Audio player	17
Connecting a cell phone	25
Device search	32
Handsfree profile	25
Secure Simple Pairing	25
Settings	32
Browsing album covers	37
Buttons	
Infotainment system	6
Multifunction steering wheel	9

C

Cable (Audi music interface)	18
Call	
Accepting/rejecting	28
Answering/ignoring	10
Holding/resuming	10
Placing on hold/resuming	28

Call list	
Voice recognition system	14
Care	5
CD	
Drive	17
Ejecting	17
Loading	17
Multifunction steering wheel	11
Player	17
<i>also refer to</i> Media	17
Cell phone	
Connecting	25
<i>also refer to</i> Telephone	25
Cell phone preparation	
<i>refer to</i> Telephone	25
Cell phones	
Playing music	17
Channel information (Sirius)	35
Characters	
Infotainment system	8
Clock	22
Cockpit overview	4
Command (voice recognition system)	13
Components	4
Connecting/disconnecting an MP3 player	17
Connections	
<i>refer to</i> Media drives	16
Contact	
Calling	10, 30
Deleting	30, 33
Editing	30
Importing/exporting	30
Naming (name tag)	14
Reading aloud	30
Searching	30
Selecting	29
Storing	31
Using as a destination	30
Control buttons	6
Control knob	6
Control panel	
System update	23
Controls	
Infotainment system	4, 6
Multifunction steering wheel	9
Overview	4

D

Data encryption	23
Data protection	
Media drives	16
Date	22
Date display	22
Daylight saving time	22
Deleting	
Bluetooth device	32
Contact	30, 33
Input	7
Name tags	23
Stations	35
Voice mail	32
Directory	29
Memory capacity	32
Multifunction steering wheel	10
Settings	33
Sort order	33
Stored locations	29
Storing an address	31
Directory entry	
<i>refer to</i> Contact	30
Display	
Brightness	23
Infotainment system	8
Multifunction steering wheel	9
Settings	23, 38
Driver information system	9
Drives	
<i>refer to</i> Media drives	16
Driving noise compensation (GALA)	22
DSP	22
DTMF tones	27
Dynamic volume	
<i>refer to</i> In-car entertainment fader	23

E

End call	10
Ending a phone call	10
Entering numbers/symbols (speller)	7
Exporting/importing (contacts)	30

F

Factory default settings	
Control panel	23
Fader (sound)	22
Fast forwarding/rewinding (audio file)	37
Fast forwarding (audio file)	37
File formats (media drives)	20
FM (ultra shortwave)	34

G

GALA (speed dependent volume control)	22
Global commands (voice recognition system)	14

H

Handsfree	
<i>refer to</i> Telephone	25
Handsfree profile	25
Help	
Media drives	21
Radio	36
Telephone	33
Voice recognition system	14

I

Importing/exporting (contacts)	30
In-car entertainment fader	23
Incoming call	
<i>refer to</i> Telephone	25
Individual speech training	23
Infotainment system	4
Controls	4
Operating	6
Restarting	23
Switching on/off	6
Symbols/menus	8
Input	
Using the speller	7
Using the voice recognition system	13
Input level (Media)	38
iPod	
<i>refer to</i> Audi music interface	18

J

Join conference	10, 28
-----------------	--------

L

Listening to music	
<i>refer to</i> Playing media	37
Listening to the radio	
Control panel	34
Multifunction steering wheel	10
Voice recognition system	15
Loss of reception (radio)	36

M

Measurement units	23
Media	
Accessing	37
Album browser	37
Display track info	37
Formats	20
Next/previous track/chapter	37
Picture format	38
Random playback	38
Repeat options	37
Selecting a source	37
Track display	38
Media drives	
Audi music interface	18
Bluetooth audio player	17
CD drive	17
Restrictions	16
SD card readers	16
Supported formats	20
Troubleshooting	21
Memory capacity	
Directory	32
Menu language	23
Microphone on/off	10
Multifunction steering wheel	
Button	9
Call	10
Changing tabs	9
Directory	10
Listening to the radio	10
Operating	9
Pause	9
Playing media	11
Recent calls	10
Using the telephone	10
Mute	6, 9

Muting/unmuting the microphone	28
--------------------------------	----

N

Name tags	
Assigning	14
Next/previous track	37
Notes	
Audi music interface	18
Care	5
CD	16
Data protection (media drives)	16
Media drives	16
Operating Manual	3
Privacy protection (storing a contact)	31
Traffic safety	4
Using the telephone	25
Voice recognition system	13, 14

O

Opening a menu (operation)	6
Operating	
Infotainment system	6
Multifunction steering wheel	9
Voice recognition system	13
Overview	
Controls	4
Menus and symbols	8
Voice recognition system	13

P

Pause (audio file)	9, 11, 37
Phone book	
<i>refer to</i> Directory	29
Phone number	
Dialing	27
Entering	27
Storing	28
Storing from the call lists	28
Playing media	37
Multifunction steering wheel	11
Voice recognition system	15
Presets	35
Privacy protection	
Storing a contact	31
Prompt (voice recognition system)	13

Q

Quartz clock 22

R

Radio

Deleting a station 35
 Next/previous station 35
 Presets 35
 Scanning stations (SCAN) 35
 Storing a station 35
 Troubleshooting 36

Radio clock 22

Radio text 35

Random playback (media) 38

Reading aloud

Contact 30
 Possible commands 14
 Station list 15

Recent calls

Control panel 27
 Multifunction steering wheel 10

Regional stations (radio) 35

Requirements

Connecting a cell phone 25
 Phone calls 26

Reset 23

Restart (Infotainment system) 23

Restricted use of telephone 25

Rewinding (audio file) 37

Ring tone settings 23

S

Safety

Using the telephone 25
 Voice recognition system 13

SCAN 35

Screen

refer to Display 9

SD card readers 16

Secure Simple Pairing 25

Security

Data protection (media drives) 16
 Privacy protection (storing a contact) 31

Seek (radio) 35

Selecting a source 37

Voice recognition system 15

Selecting source

Multifunction steering wheel 11

Sending a tone sequence 27

Settings

Directory 33

Media 38

Radio 35

System 23

Telephone 32

Voice recognition system 13

Setting the frequency 35

Setting the language 23

Setting the reception band 34

Setup MMI (system settings) 23

Short dialog 23

Showing shared (public) contacts 33

Sirius (satellite radio) 34

Software version 23

Speller 7

Station list 34

Station name (radio) 35

Station sorting (radio) 35

Steering wheel

refer to Multifunction steering wheel 9

Stored location (directory) 29

Subwoofer (sound) 22

Switch 10, 28

Switching on/off 6

Switching tabs

refer to Multifunction steering wheel 9

Symbols 3

Infotainment system 8

System settings 22

System update 23

T

Telephone 25

Main functions 26

Microphone on/off 28

Options during a call 28

Options during a phone call 10

Settings 32

Switching the microphone on/off 10

Troubleshooting	33
<i>also refer to</i> Cell phone	25
Time	22
Tone (sound)	22
Traffic safety	4
Treble (sound)	22
Troubleshooting	
Media drives	21
Radio	36
Telephone	33

U

Update software	23
Using the telephone	
Control panel	25
Multifunction steering wheel	10
Voice recognition system	14

V

Version information	23
Video image settings	38
Voice mail	
Deleting the voice mail number	32
Entering the voice mail number	32
Voice recognition system	13
Assigning name tags	14
Command	13
Help commands	14
Input assistance	13
Listening to the radio	15
Operating	13
Overview	13
Playing media	15
Settings	13
Switching on/off	13
Using the telephone	14
Volume	13
Volume	6
In-car entertainment fader	23
Input level	38
Parking system	23
System volume	23
Telephone	23
Voice recognition system	13

It has always been Audi's policy to continuously improve its products. Audi, therefore, reserves the right to make changes in design and specifications, and to make additions or improvements in its products without incurring any obligation to install them on products previously manufactured. Text, illustrations and specifications in this book are based on the most up-to-date information available at the time of printing.

May not be reproduced or translated in whole or in part without the written consent of AUDI AG. All rights reserved by AUDI AG. Subject to alteration or amendment.



For the sake of the environment

Printed on environmentally friendly paper
(bleached without chlorine, recyclable)

Operating Manual
Englisch Nordamerika 05.2016
8U1012721NB



8U1012721NB

www.audi.com