


Index	SEATS	0-7
Specifications	Driver or Passenger Seat Recliner Handle Replacement (2 Way Uplevel)	
Driver or Passenger Seat Replacement	Child Seat Back Cushion Cover Replacement	
Front Seat Outer Recliner Upper Finish Cover Replacement	Rear Seat Head Restraint Replacement	
Front Seat Riser Finish Cover Replacement	Rear Seat Head Restraint Guide Replacement	
Driver or Passenger Seat Adjuster Handle Replacement (4 Way Standard)	Rear Seat Back Cushion Pivot Support Replacement	
Driver or Passenger Seat Adjuster Handle Replacement (4 Way Uplevel)	Rear Seat Center Head Restraint Replacement	
Front Seat Storage Tray Replacement	Rear Seat Cushion Cover and Pad Replacement	
Front Seat Armrest Replacement	Rear Seat Cushion Replacement	
Driver or Passenger Seat Head Restraint Replacement	Rear Seat Latch Replacement	
Driver or Passenger Seat Head Restraint Guide Replacement	Rear Seat Back Cushion Replacement (AN1 Fixed Bench)	
Front Seat Belt Anchor Plate Tensioner Cover Replacement (2 Way)	Rear Seat Back Cushion Replacement (AMA 40% w/Split Back)	
Front Seat Belt Anchor Plate Tensioner Cover Replacement (4 Way)	Rear Seat Back Cushion Replacement (AMA 60% w/Split Back)	
Driver or Passenger Seat Cushion Frame Replacement	Rear Seat Back Cushion Replacement (AM7 Non Split Folding)	
Front Seat Cushion Outer Trim Panel Replacement (4 Way Standard)	Rear Seat Shoulder Belt Guide Opening Bezel Replacement	
Front Seat Cushion Outer Trim Panel Replacement (4 Way Uplevel)	Rear Seat Back Cushion Panel Replacement	
Front Seat Cushion Outer Trim Panel Replacement (2 Way Uplevel)	Rear Seat Back Cushion Cover and Pad Replacement (AMA 40% w/Split Back)	
Front Seat Cushion Outer Trim Panel Replacement (2 Way Standard)	Rear Seat Back Cushion Cover and Pad Replacement (AMA 60% w/Split Back)	
Front Seat Cushion Inner Trim Panel Replacement	Rear Seat Back Cushion Cover and Pad Replacement (AN1 Fixed Bench)	
Front Seat Cushion Cover and Pad Replacement	Rear Seat Back Cushion Cover and Pad Replacement (AM7 Non Split Folding)	
Driver or Passenger Seat Back Cushion Cover and Pad Replacement	Rear Seat Back Cushion Hinge Replacement	
Driver or Passenger Seat Back Cushion Frame Replacement	Rear Seat Back Cushion Latch Release Knob Bezel Replacement	
Driver or Passenger Seat Recliner Handle Replacement (4 Way Standard)	Description and Operation	

Fastener Tightening Specifications


Application	Specification	
	Metric	English
Front Seat Mounting Bolt	40 N·m	30 lbft
Front Seat Armrest Mounting Bolt	45 N·m	33 lbft
Front Seat Cushion Frame Bolt	22 N·m	16 lbft
Front Seat Cushion Outer Trim Panel Fastener	8 N·m	71 lbin
Front Seat Inner Recliner Finish Cover Fastener	8 N·m	71 lbin
Front Seat Back Cushion Frame Bolt	22 N·m	16 lbft
Rear Seat Back Outer Pivot Bolt	23 N·m	17 lbft
Rear Seat Latch Bolt	45 N·m	33 lbft
Rear Seat Back Cushion Bolt (AN1 Fixed Bench)	22 N·m	16 lbft
Rear Seat Back Cushion Hinge Bolt	43 N·m	32 lbft
Rear Seat Back Cushion Hinge Nut	43 N·m	32 lbft

Driver or Passenger Seat Replacement

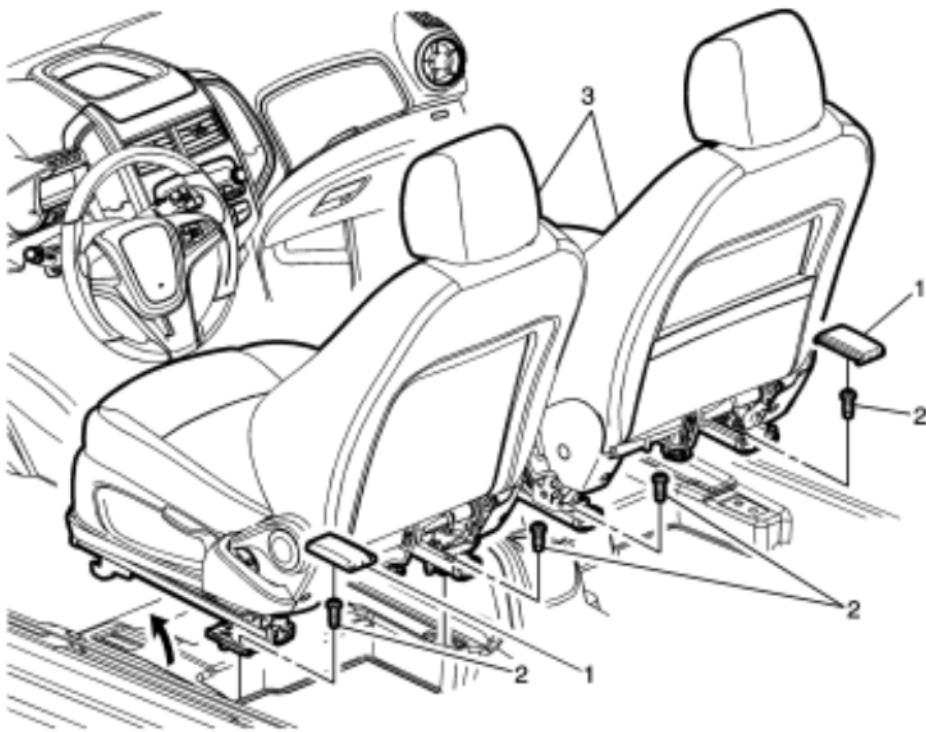


Callout	Component Name
Warning: Refer to SIR Warning . Preliminary Procedures 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Disconnect the front seat belt lower fastener. Refer to Driver or Passenger Seat Shoulder Belt Replacement . 3. Disable the front seat belt tensioner fastener by removing the cap, and cover, if equipped. Refer to SIR Disabling and Enabling .	
1	Front Seat Riser Finish Cover (Qty: 2) Procedure Remove the front seat riser cover. Refer to Front Seat Riser Finish Cover Replacement .
2	Front Seat Mounting Bolt (Qty: 4) Caution: Refer to Fastener Caution . Procedure Adjust the seat to the full forward position to gain access to the rear bolts. Tighten 40N·m (30lbft)
3	Driver or Passenger Seat Assembly (Qty: 2) Procedure 1. Disconnect the electrical. 2. With the aid of an assistant remove the front seat, by tilting the seat forward and then lifting and pulling the seat rearwards to disengage the front hooks. 3. Transfer components as necessary.

Front Seat Outer Recliner Upper Finish Cover Replacement

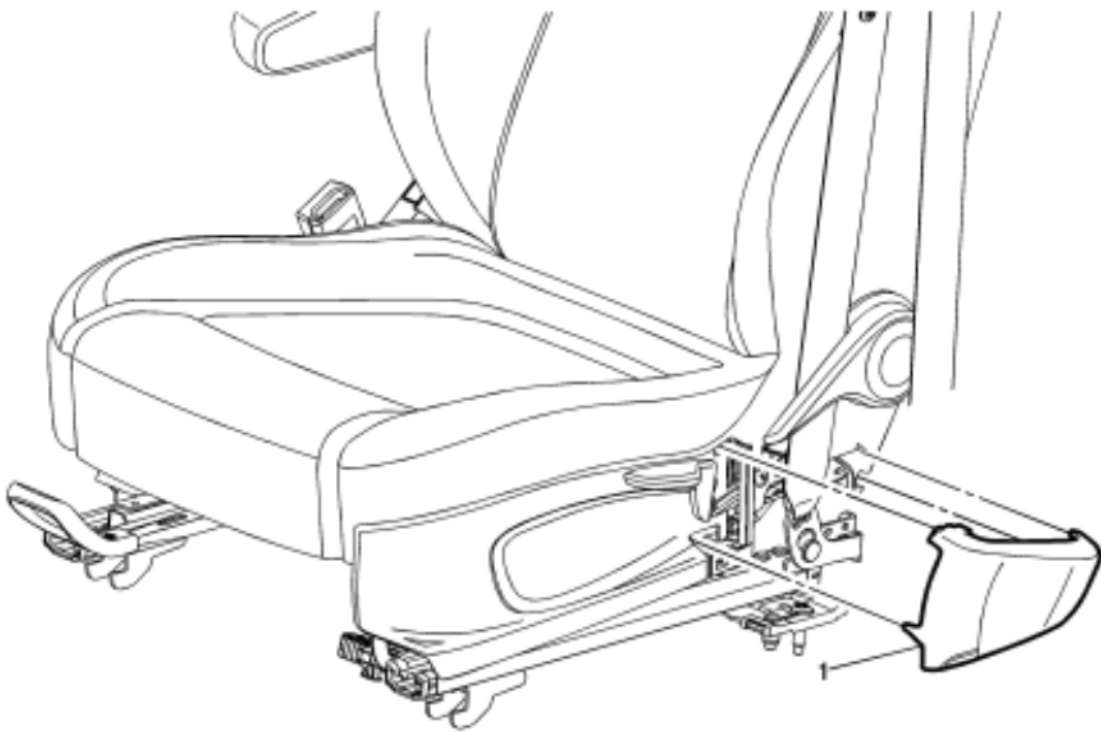


Callout	Component Name
1	Front Seat Outer Recliner Upper Finish Cover Caution: Do not twist the cover during removal. Twisting the cover may cause the component to break. Procedure 1. Firmly grasp the lower rear area of the finish cover, this area needs to be flexed outward then rearward to disengage it from the outer trim panel. 2. Remove the finish cover by gently pulling the cover outward to disengage it fully from the outer trim panel.

Front Seat Riser Finish Cover Replacement

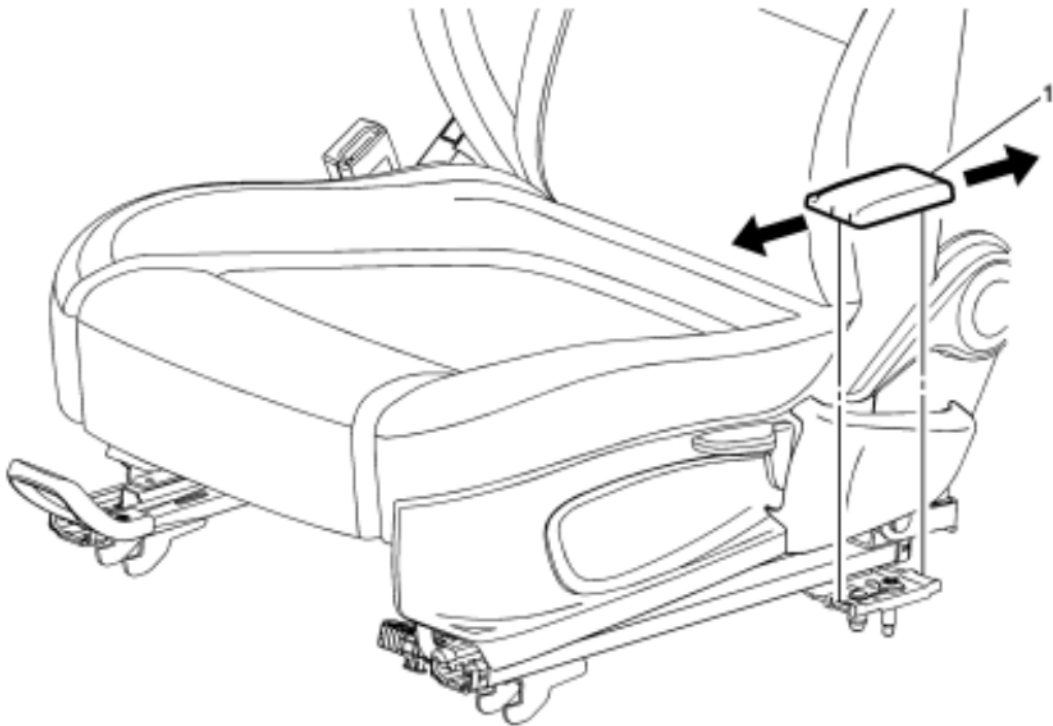


Callout	Component Name
1	Front Seat Riser Finish Cover Caution: Do not twist the cover during removal. Twisting the cover may cause the component to break. Procedure Remove the finish cover by firmly grasping the front or rear of the cover and pulling the cover outward then upward to disengage it from the track.

Driver or Passenger Seat Adjuster Handle Replacement (4 Way Standard)

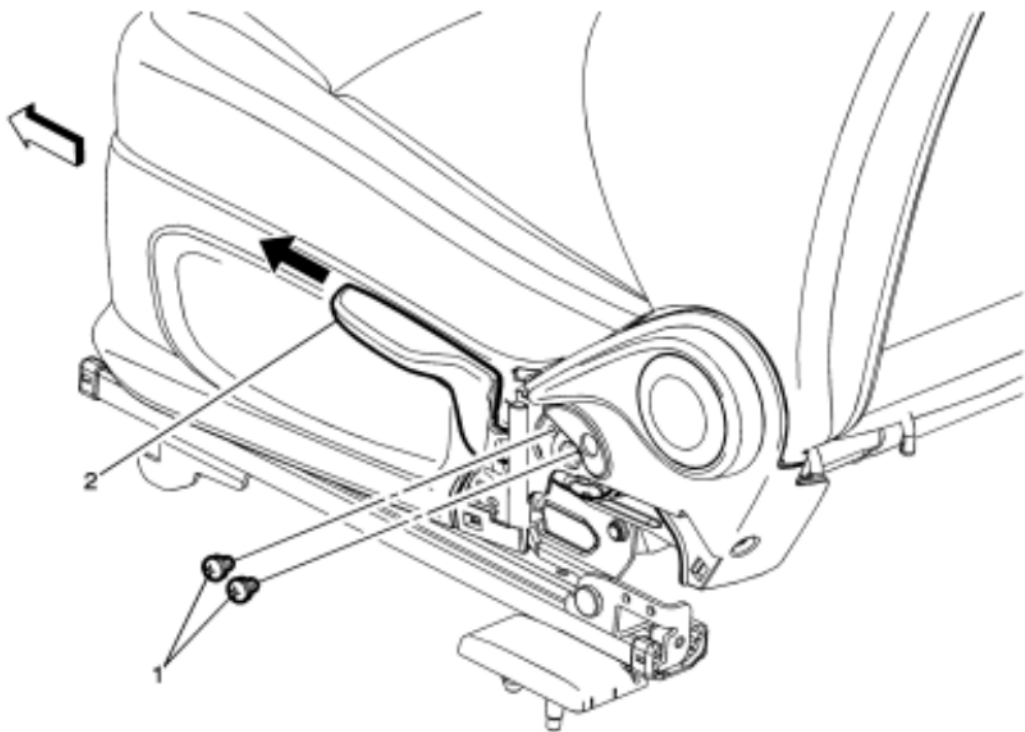


Callout	Component Name
Preliminary Procedure Remove the front seat outer recliner upper finish cover. Refer to Front Seat Outer Recliner Upper Finish Cover Replacement	
1	Front Seat Adjuster Fasteners (Qty: 2) Caution: Refer to Fastener Caution .
2	Front Seat Adjuster

Driver or Passenger Seat Adjuster Handle Replacement (4 Way Uplevel)

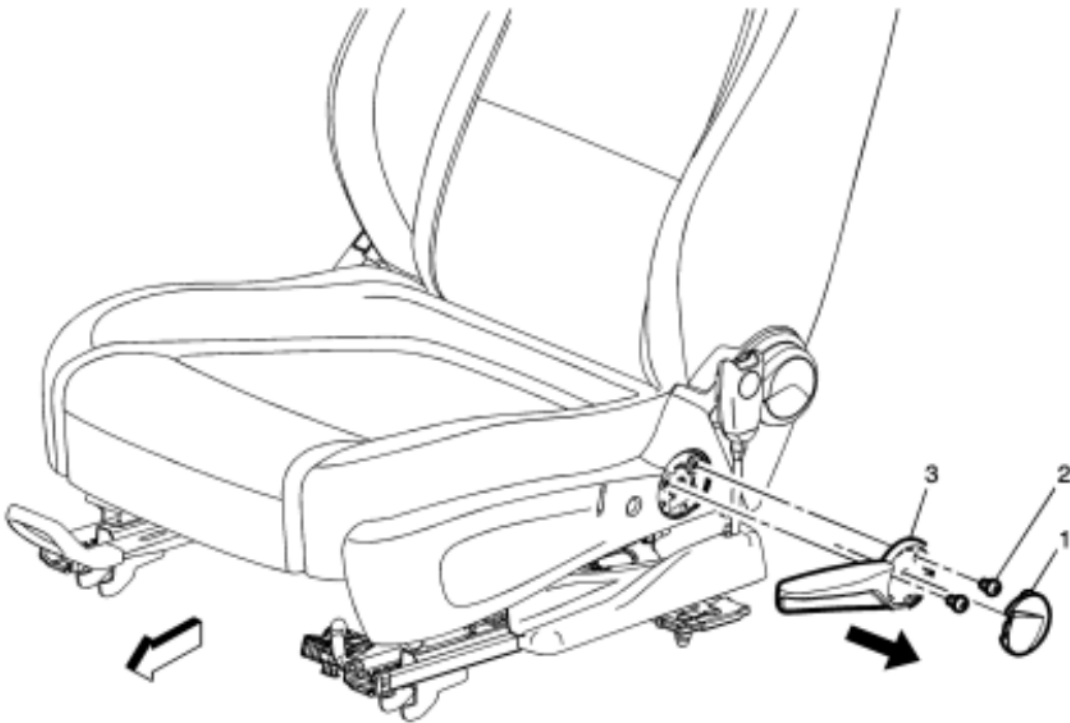


Callout	Component Name
1	Front Seat Adjuster Handle Cover Procedure Use a flat-bladed tool to push inward on the three tabs to release the handle cover from the handle assembly.
2	Front Seat Adjuster Handle Fastener (Qty: 2) Caution: Refer to Fastener Caution .
3	Front Seat Adjuster Handle Procedure Use a flat-bladed tool to release the adjuster handle from the seat frame assembly.

Front Seat Storage Tray Replacement

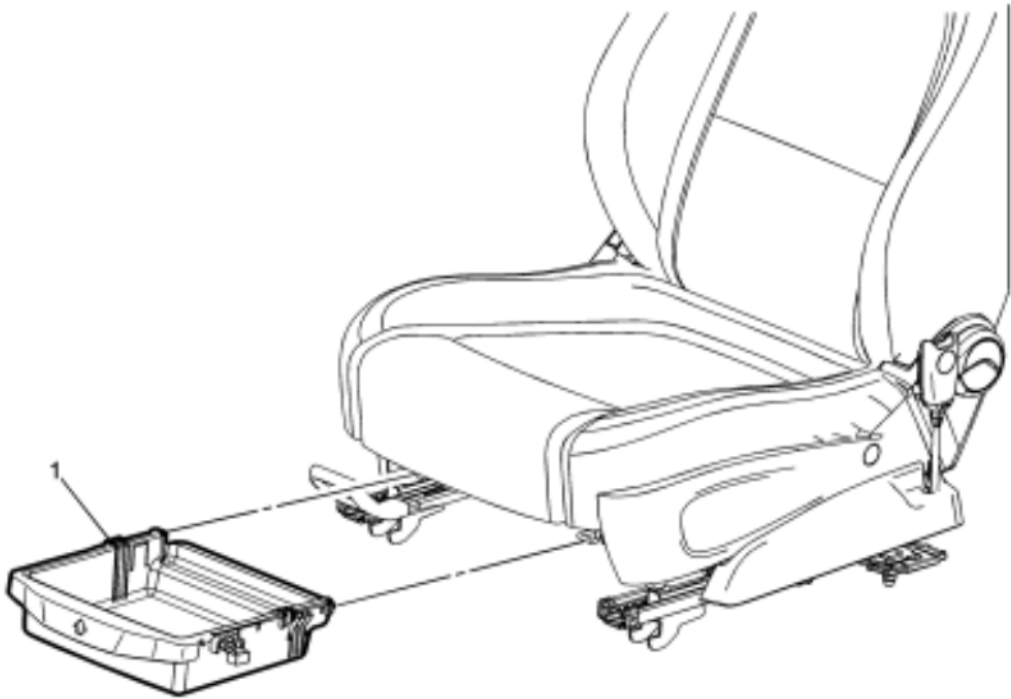


Callout	Component Name
1	Front Seat Storage Tray Procedure Carefully disengage the tray by pulling forward near the bottom of the tray.

Front Seat Armrest Replacement

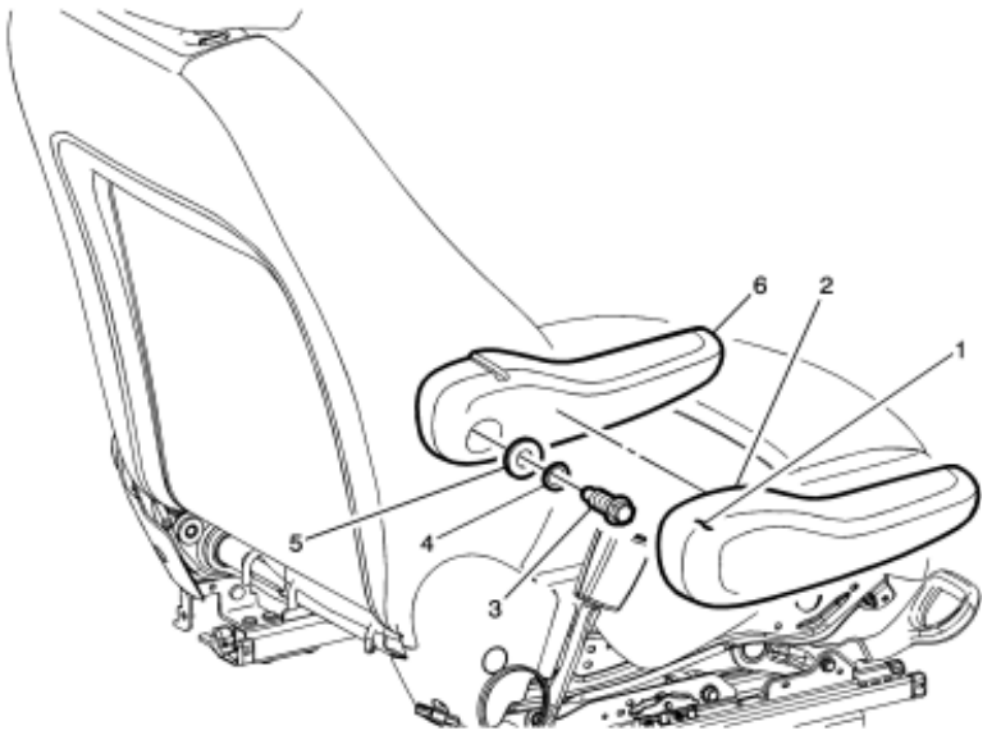


Callout	Component Name
1	Front Seat Armrest Cover Zipper Procedure Open the zipper to access the front seat armrest mounting bolt and to remove the armrest cover
2	Front Seat Armrest Cover Procedure Slide the armrest cover off the armrest assembly.
3	Front Seat Armrest Mounting Bolt Caution: Refer to Fastener Caution . Tighten 45N·m (33lbft)
4	Front Seat Armrest Spring Washer
5	Front Seat Armrest Washer
6	Front Seat Armrest Assembly

Driver or Passenger Seat Head Restraint Replacement

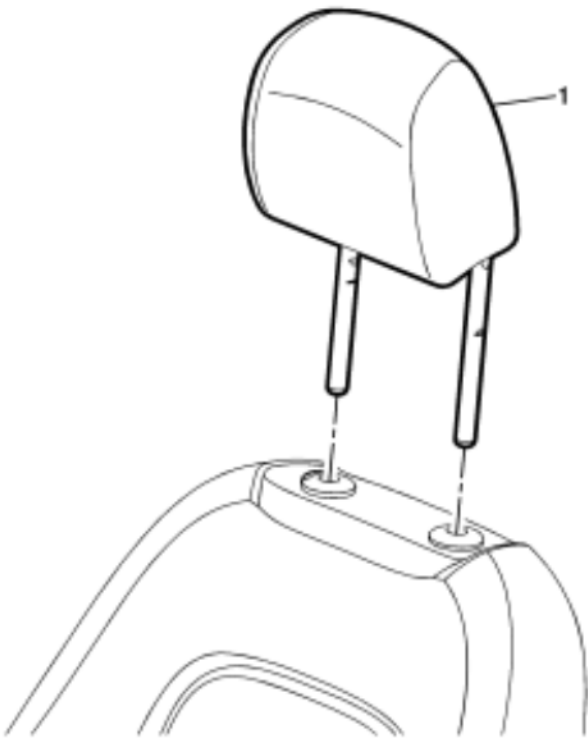


Callout	Component Name
1	Driver or Passenger Seat Head Restraint Procedure 1. Raise the headrest to the full upward position. 2. Depress the flush button on the head restraint guide. 3. Remove the head restraint by pulling up on the restraint.

Driver or Passenger Seat Head Restraint Guide Replacement

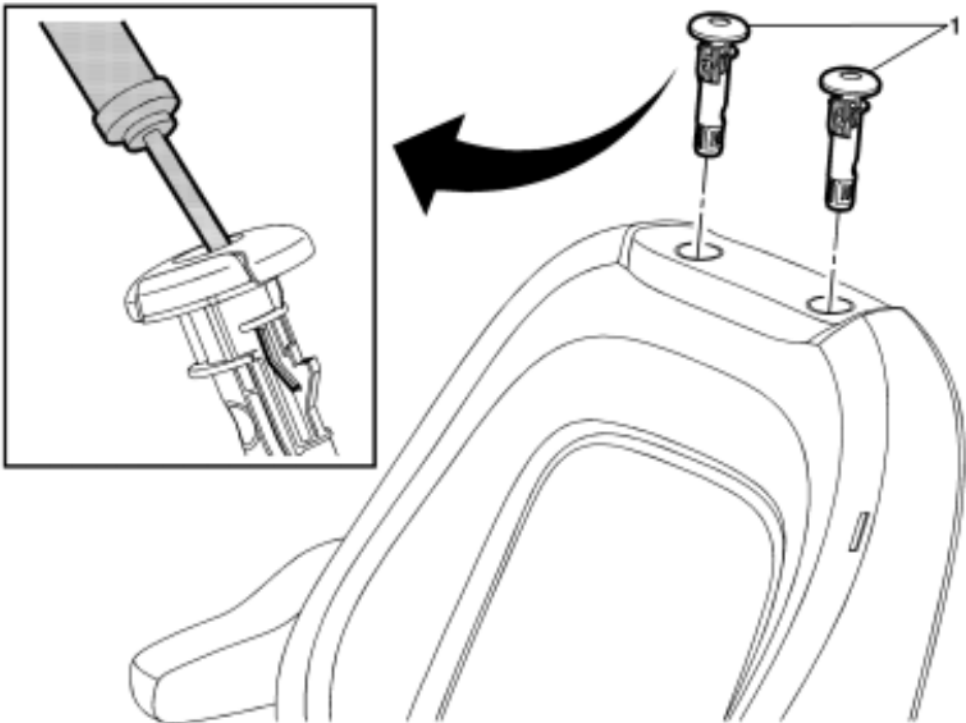


Callout	Component Name
Preliminary Procedure Remove the seat head restraint. Refer to Driver or Passenger Seat Head Restraint Replacement .	
1	Driver or Passenger Seat Head Restraint Guide (Qty: 2) Procedure Using a suitable flat-bladed tool, slide the tool on the inside of the guide until it finds the slot. Then push the tool forward pulling the guide tab inward, while pulling upward to remove the guide from the seat back frame.

Front Seat Belt Anchor Plate Tensioner Cover Replacement (2 Way)

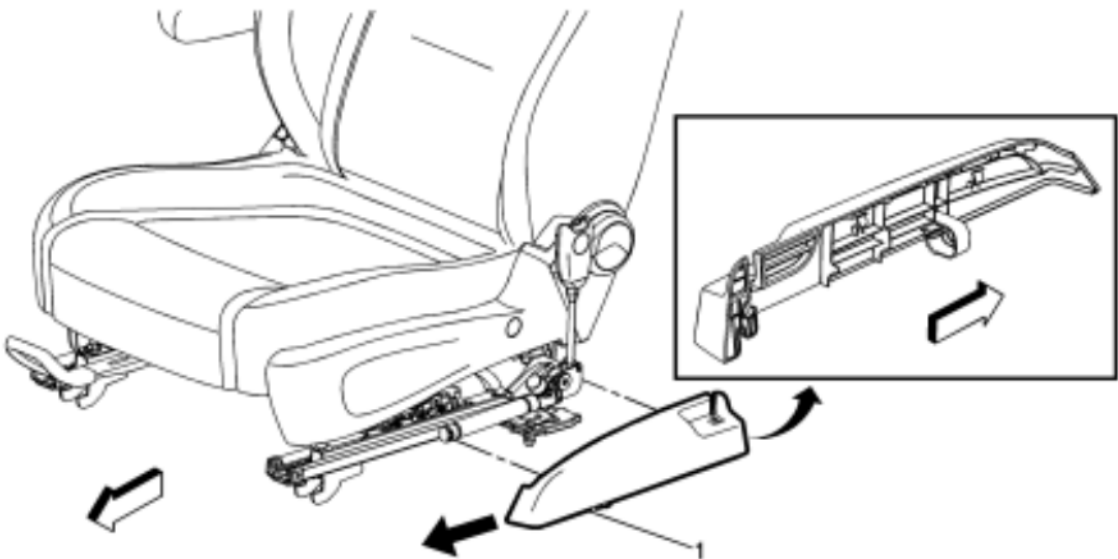

Callout	Component Name
1	Driver or Passenger Seat Belt Tensioner Cover Procedure Remove the tensioner cover by pushing downward on the rear of the cover while applying light pressure to the front of the cover. Then push the cover rearward to remove it from the seat frame.

Front Seat Belt Anchor Plate Tensioner Cover Replacement (4 Way)

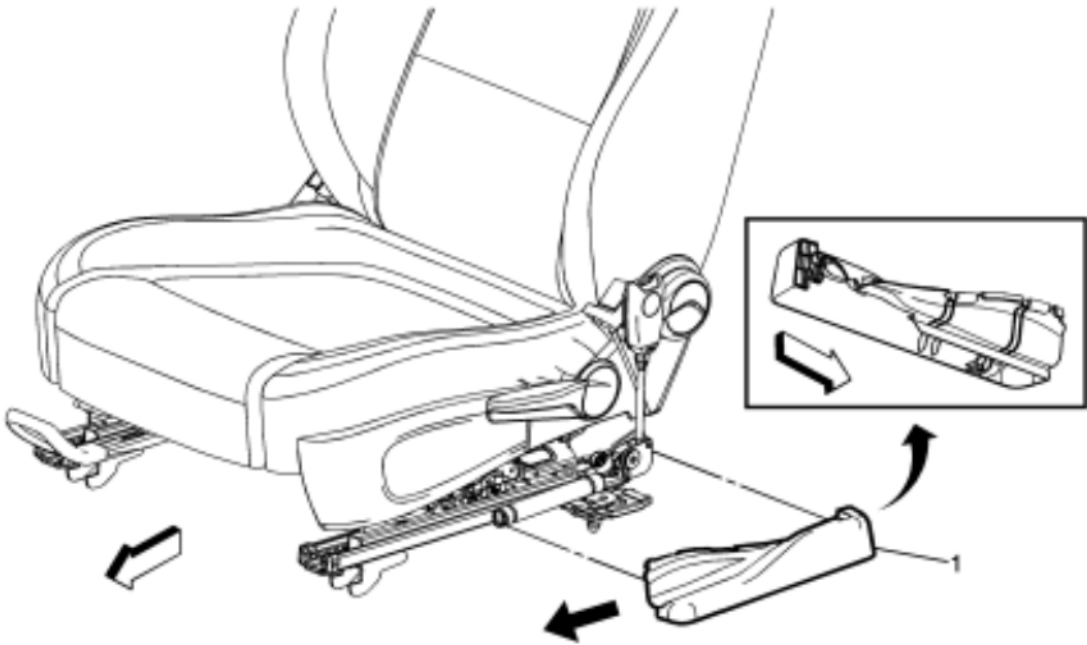


Callout	Component Name
1	Driver or Passenger Seat Belt Tensioner Cover Procedure Remove the tensioner cover by pushing downward on the rear and center of the cover. Then applying light pressure to the front of the cover, push the cover rearward to remove it from the seat frame.

Driver or Passenger Seat Cushion Frame Replacement




Callout	Component Name
Preliminary Procedures 1. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Replacement 2. Remove the front seat cushion outer trim panel. Refer to Front Seat Cushion Outer Trim Panel Replacement 3. Remove the front seat cushion inner recliner. Refer to Front Seat Cushion Inner Trim Panel Replacement	
1	Front Seat Cushion Frame Bolt (Qty: 4) Caution: Refer to Fastener Caution . Tighten 22N·m (16lbft)
2	Driver or Passenger Seat Cushion Frame Procedure 1. Disconnect electrical connectors as needed. 2. If replacing with a new front seat cushion frame, transfer components as necessary.

Front Seat Cushion Outer Trim Panel Replacement (4 Way Standard)

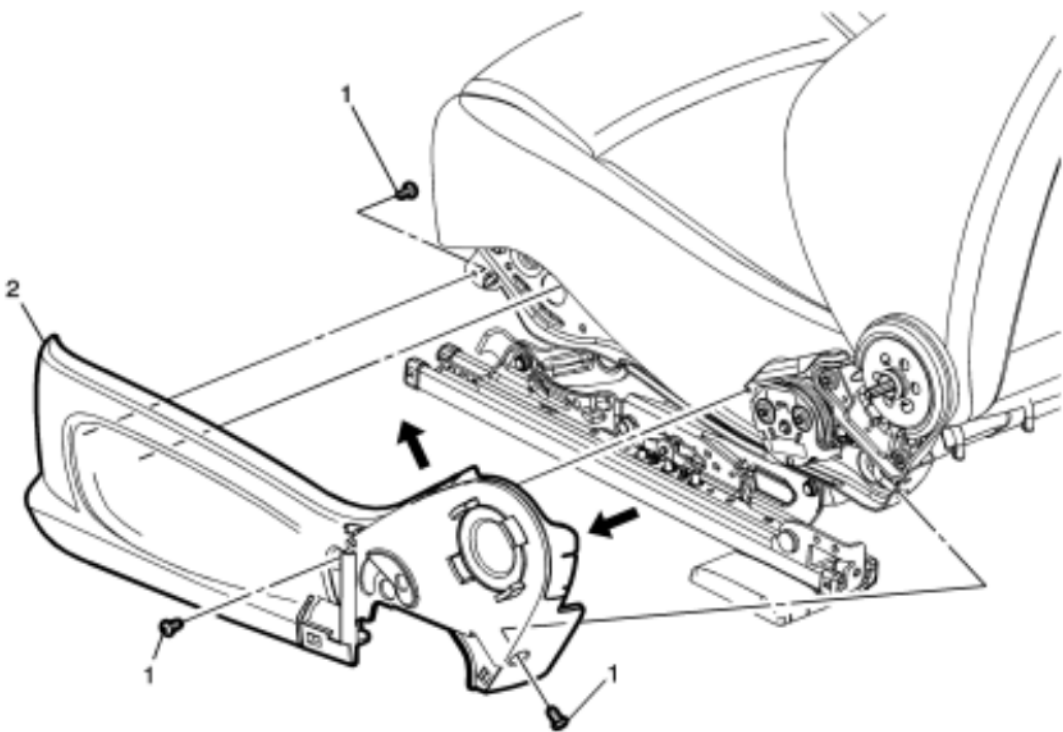


Callout	Component Name
Preliminary Procedures 1. Remove the front seat outer recliner upper finish cover. Refer to Front Seat Outer Recliner Upper Finish Cover Replacement 2. Remove the driver or passenger seat recliner handle. Refer to Driver or Passenger Seat Recliner Handle Replacement 3. Remove the front seat adjuster handle. Refer to Driver or Passenger Seat Adjuster Handle Replacement	
1	Front Seat Cushion Outer Trim Panel Fasteners (Qty: 3) Caution: Refer to Fastener Caution . Tighten 8N·m (71lbin)
2	Front Seat Cushion Outer Trim Panel Procedure 1. Make sure the seat is in the full up position. 2. Gently pull outboard on the front half of the finish cover to disengage the panel rib from the seat frame. 3. Firmly grasp the upper area of the finish cover that folds over the seat cushion frame, this area needs to be flexed outward while sliding the finish cover upward. 4. If replacing the cover, transfer components as necessary.

Front Seat Cushion Outer Trim Panel Replacement (4 Way Uplevel)

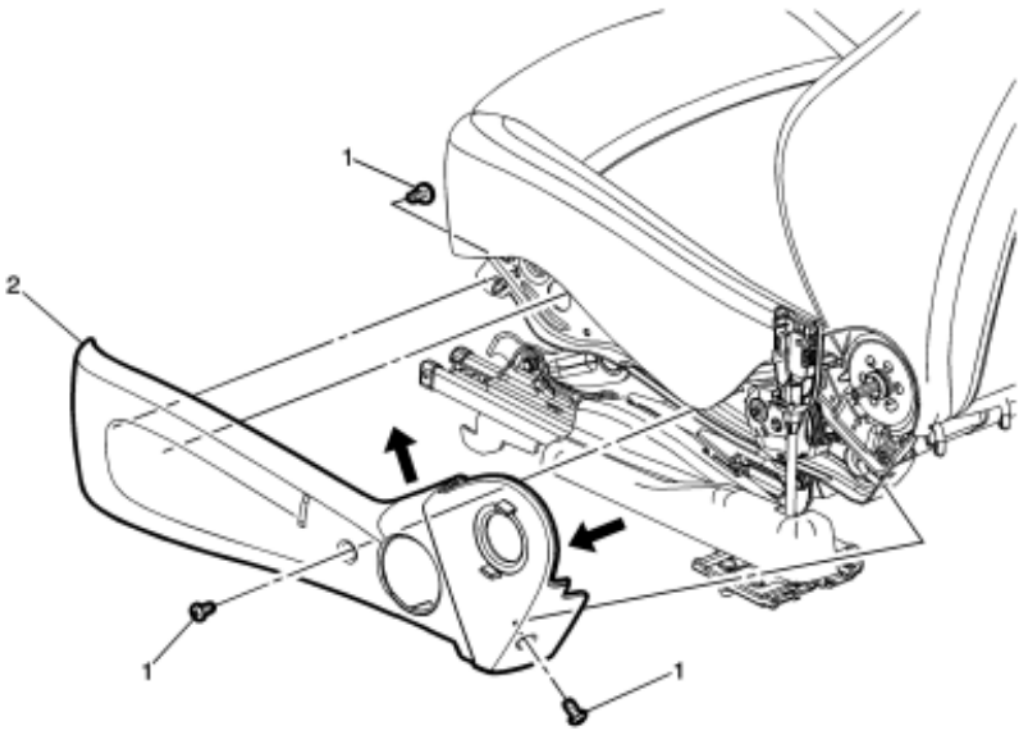


Callout	Component Name
Preliminary Procedures 1. Remove the front seat outer recliner upper finish cover. Refer to Front Seat Outer Recliner Upper Finish Cover Replacement 2. Remove the driver or passenger seat recliner handle. Refer to Driver or Passenger Seat Recliner Handle Replacement 3. Remove the front seat adjuster handle. Refer to Driver or Passenger Seat Adjuster Handle Replacement	
1	Front Seat Cushion Outer Trim Panel Fasteners (Qty: 3) Caution: Refer to Fastener Caution . Tighten 8N·m (71lbin)
2	Front Seat Cushion Outer Trim Panel Procedure 1. Make sure the seat is in the full up position. 2. Gently pull outboard on the front half of the finish cover to disengage the panel rib from the seat frame. 3. Firmly grasp the upper area of the finish cover that folds over the seat cushion frame, this area needs to be flexed outward while sliding the finish cover upward. 4. If replacing the cover, transfer components as necessary.

Front Seat Cushion Outer Trim Panel Replacement (2 Way Uplevel)

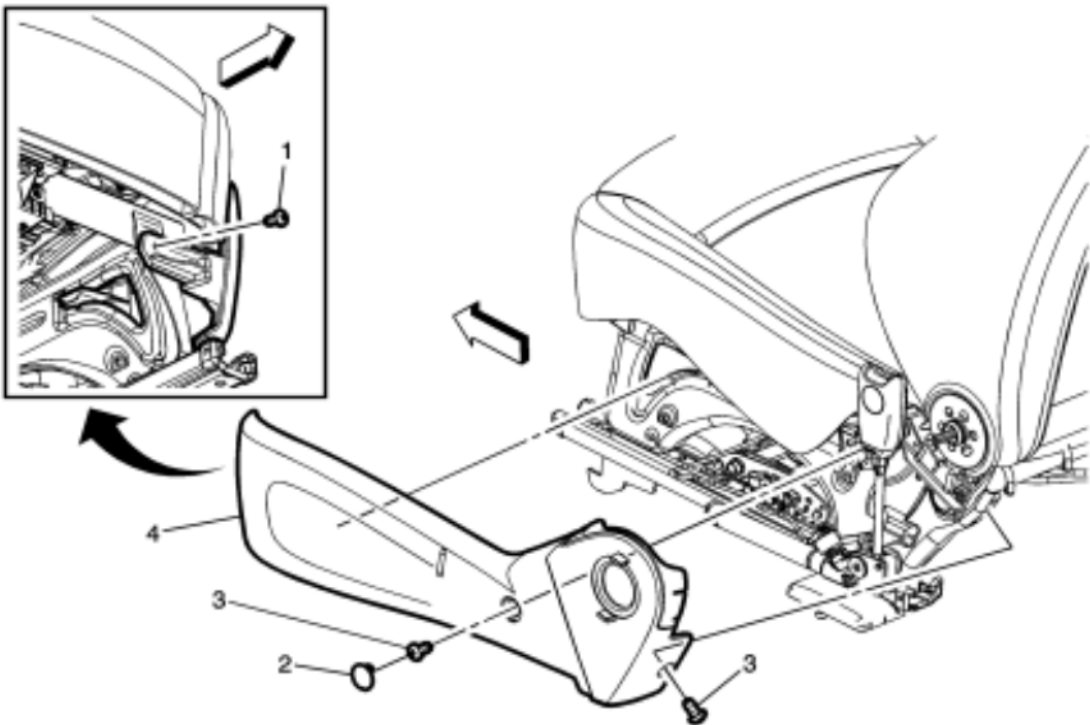


Callout	Component Name
Preliminary Procedures 1. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Replacement 2. Remove the front seat outer recliner upper finish cover. Refer to Front Seat Outer Recliner Upper Finish Cover Replacement 3. Remove the driver or passenger seat recliner handle. Refer to Driver or Passenger Seat Recliner Handle Replacement 4. Remove the front seat adjuster handle. Refer to Driver or Passenger Seat Adjuster Handle Replacement	
1	Front Seat Cushion Outer Trim Panel Front Fastener Caution: Refer to Fastener Caution . Tighten 8N·m (71lbin)
2	Front Seat Cushion Outer Trim Panel Cap
3	Front Seat Cushion Outer Trim Panel Fasteners (Qty: 2) Tighten 8N·m (71lbin)
4	Front Seat Cushion Outer Trim Panel Procedure 1. Make sure the seat is in the full up position. 2. Gently pull outboard on the front half of the finish cover to disengage the panel rib from the seat frame. 3. Firmly grasp the upper area of the finish cover that folds over the seat cushion frame, this area needs to be flexed outward while sliding the finish cover upward. 4. If replacing the cover, transfer components as necessary.

Front Seat Cushion Outer Trim Panel Replacement (2 Way Standard)

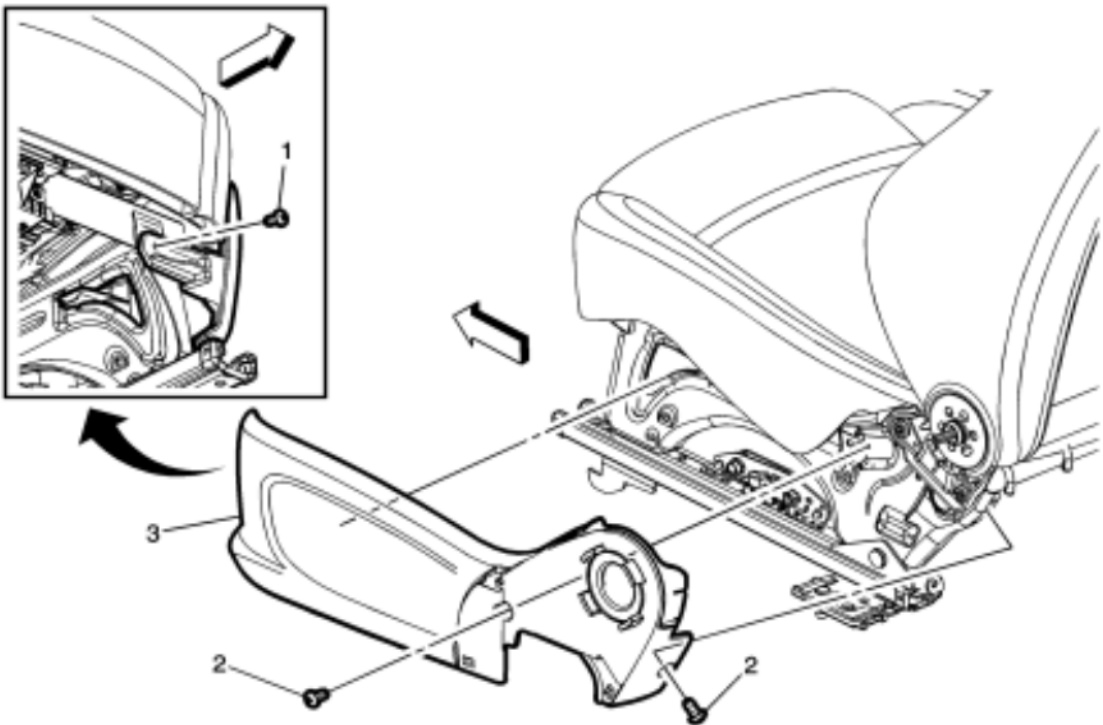


Callout	Component Name
Preliminary Procedures 1. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Replacement 2. Remove the front seat outer recliner upper finish cover. Refer to Front Seat Outer Recliner Upper Finish Cover Replacement 3. Remove the driver or passenger seat recliner handle. Refer to Driver or Passenger Seat Recliner Handle Replacement 4. Remove the front seat adjuster handle. Refer to Driver or Passenger Seat Adjuster Handle Replacement	
1	Front Seat Cushion Outer Trim Panel Front Fastener Caution: Refer to Fastener Caution . Tighten 8N·m (71lbin)
2	Front Seat Cushion Outer Trim Panel Fasteners (Qty: 2) Tighten 8N·m (71lbin)
3	Front Seat Cushion Outer Trim Panel Procedure 1. Make sure the seat is in the full up position. 2. Gently pull outboard on the front half of the finish cover to disengage the panel rib from the seat frame. 3. Firmly grasp the upper area of the finish cover that folds over the seat cushion frame, this area needs to be flexed outward while sliding the finish cover upward. 4. If replacing the cover, transfer components as necessary.

Front Seat Cushion Inner Trim Panel Replacement

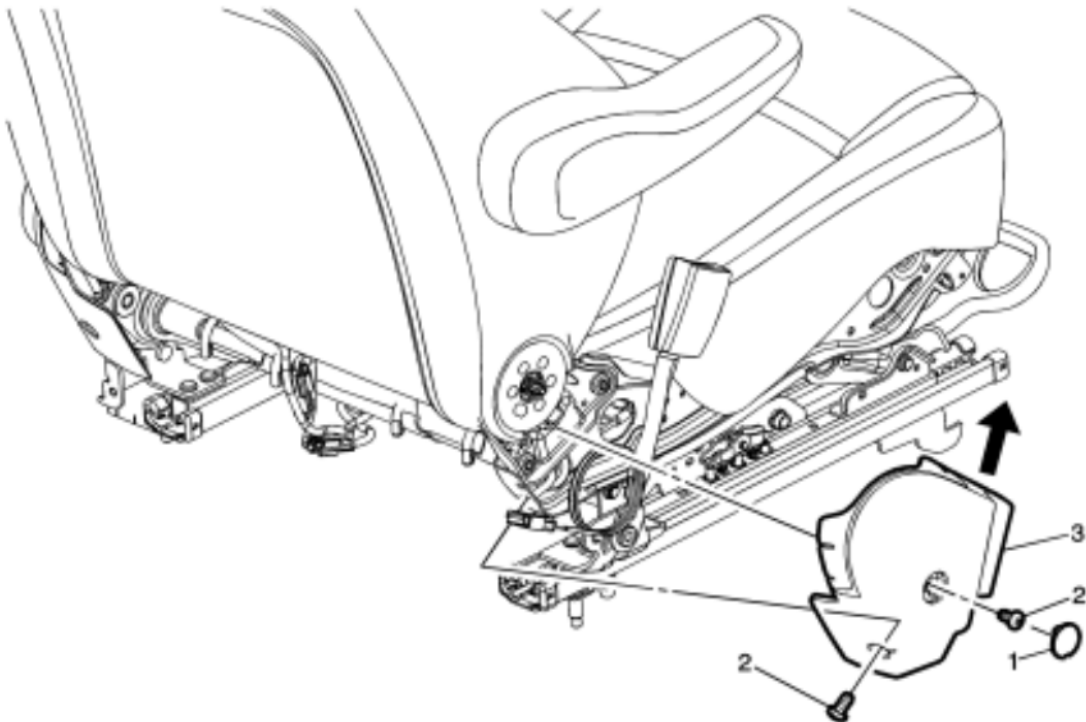


Callout	Component Name
1	Driver or Passenger Seat Inner Recliner Finish Cover Cap Procedure Use a flat-bladed tool to release the cap from the recliner cover.
2	Driver or Passenger Seat Inner Recliner Finish Cover Fastener (Qty: 2) Caution: Refer to Fastener Caution . Tighten 8N·m (71lbin)
3	Driver or Passenger Seat Inner Recliner Finish Cover Procedure Firmly grasp the upper area of the finish cover that folds over the seat cushion frame, pull upward and then outboard to disengage the finish cover from the seat cushion frame.

Front Seat Cushion Cover and Pad Replacement

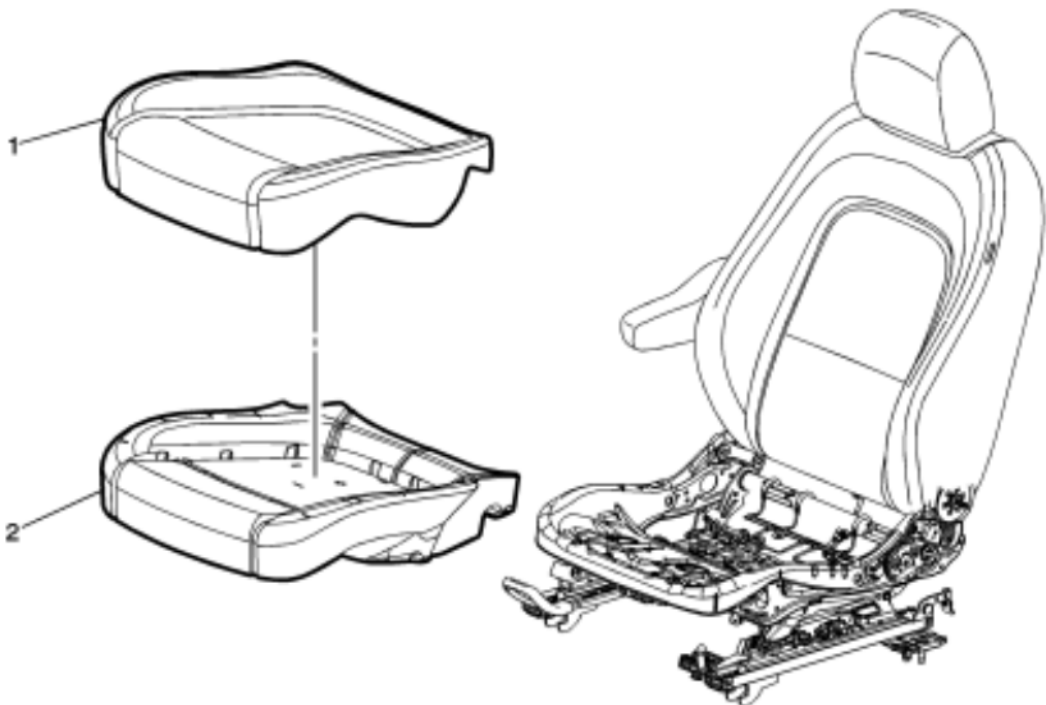

Callout	Component Name
Warning: Refer to SIR Warning SIR Warning . Preliminary Procedures 1. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Replacement . 2. Remove the front seat cushion outer trim panel. Refer to Front Seat Cushion Outer Trim Panel Replacement . 3. Remove the front seat cushion inner trim panel. Refer to Front Seat Cushion Inner Trim Panel Replacement .	
1	Front Seat Cushion Cover Procedure 1. Disengage the J-channel and hog ring retainers from the seat cushion frame. 2. Disconnect the electrical connectors that attach to the seat cushion, if equipped. 3. Remove the seat cushion cover and pad from the seat cushion frame as an assembly. 4. Separate the seat cushion from the seat cushion pad by pulling the cover away from the pad.
2	Front Seat Cushion Pad Note: The seat belt presence sensor and heat mat, if equipped are integral parts of the seat cushion pad.

Driver or Passenger Seat Back Cushion Cover and Pad Replacement

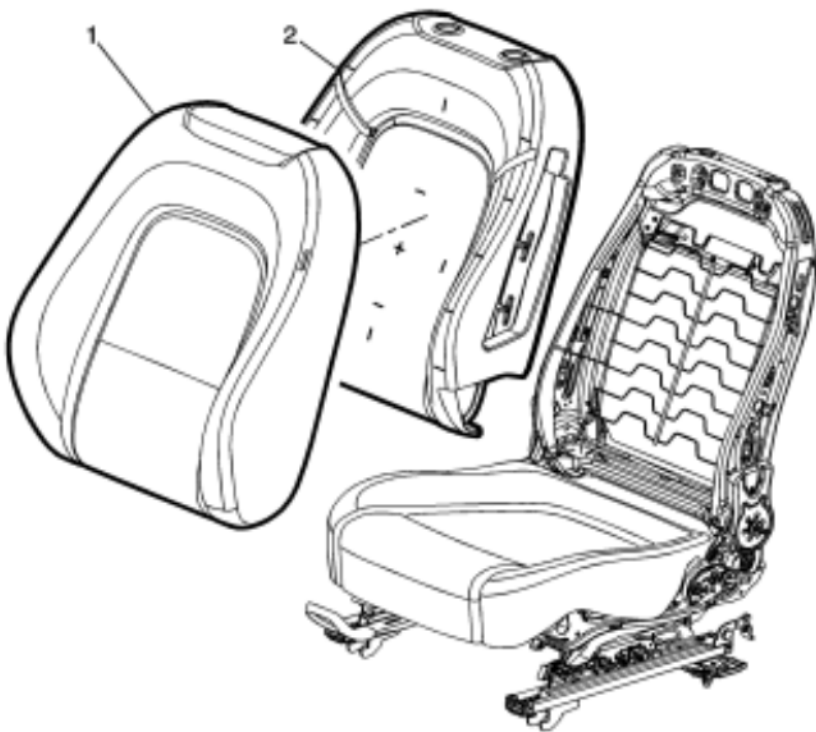


Callout	Component Name
Warning: Refer to SIR Warning . Warning: Do not repair or replace the seat stitching or seams in the seat back trim cover with an internal mounted seat side airbag module. Replace the complete seat back trim cover from the OEM. Non-OEM seat stitching may cause improper airbag deployment which could result in personal injury. Preliminary Procedure 1. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Replacement . 2. Remove the front seat cushion outer trim panel. Refer to Front Seat Cushion Outer Trim Panel Replacement . 3. Remove the front seat cushion inner trim panel. Refer to Front Seat Cushion Inner Trim Panel Replacement . 4. Remove the front seat armrest. Refer to Front Seat Armrest Replacement . 5. Remove the driver or passenger seat head restraint guide. Refer to Driver or Passenger Seat Head Restraint Guide Replacement .	
1	Seat Back Cushion Cover Procedure 1. Disengage the j-channel retainers and tabs at the bottom of the seat back cover from the seat back cushion frame. 2. Disconnect the electrical connector that is attached to the seat back cushion, if equipped. 3. Remove the seat back cushion cover and pad from the seat cushion frame as an assembly.
2	Front Seat Back Cushion Pad Procedure Pull the cushion cover assembly off of the pad. Tip Seat back cover can be damaged upon reinstalling cover to seat back pad. When reinstalling the seat cushion cover to the seat pad, start in upper outboard corner and install outboard side of the cover. Then start at the upper inboard corner and install inboard side of cover.

Driver or Passenger Seat Back Cushion Frame Replacement




Callout	Component Name
Preliminary Procedures 1. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Replacement 2. Remove the front seat cushion outer trim panel. Refer to Front Seat Cushion Outer Trim Panel Replacement 3. Remove the front seat cushion inner recliner. Refer to Front Seat Cushion Inner Trim Panel Replacement	
1	Front Seat Back Cushion Frame Bolt (Qty: 4) Caution: Refer to Fastener Caution . Tighten 22 N·m(16 lbft)
2	Driver or Passenger Seat Back Cushion Frame Procedure 1. Disconnect electrical connectors as needed. 2. If replacing with a new front seat back cushion frame, transfer components as necessary.

Driver or Passenger Seat Recliner Handle Replacement (4 Way Standard)

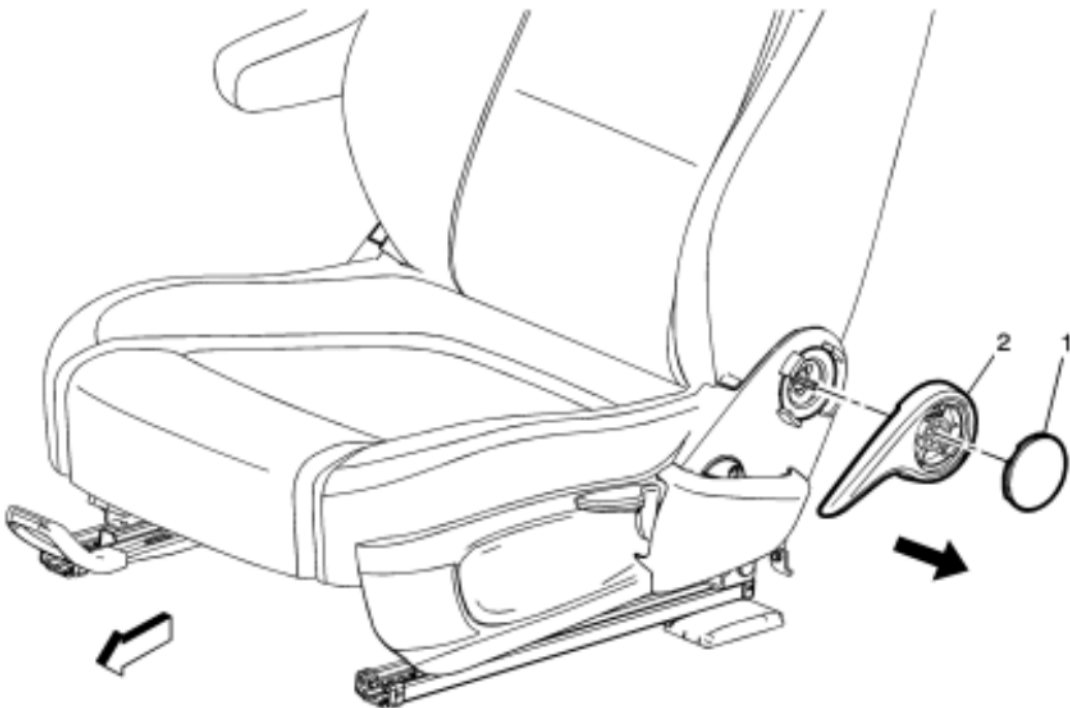


Callout	Component Name
1	Front Seat Recliner Handle Cover Cap Procedure Use a flat-bladed tool to release the handle cover from the handle assembly.
2	Front Seat Recliner Handle Procedure Use a flat-bladed tool to release the handle from the seat.

Driver or Passenger Seat Recliner Handle Replacement (2 Way Uplevel)

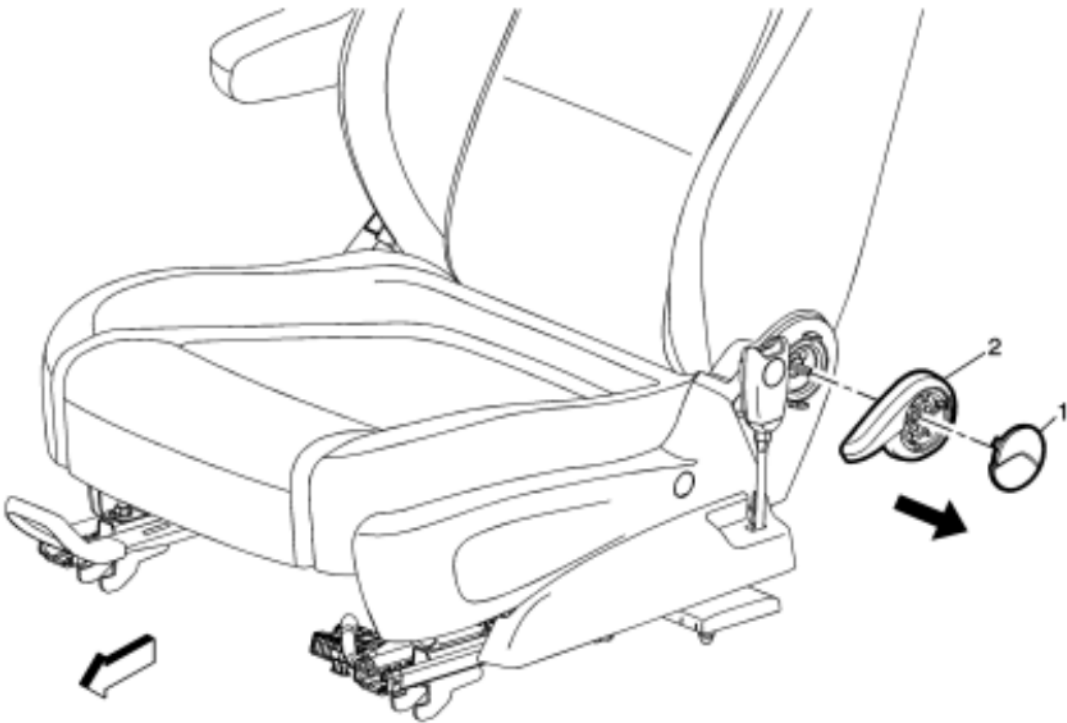


Callout	Component Name
1	Front Seat Recliner Handle Cover Cap Procedure Use a flat-bladed tool to release the handle cover from the handle assembly.
2	Front Seat Recliner Handle Procedure Use a flat-bladed tool to release the handle from the seat.

Child Seat Back Cushion Cover Replacement

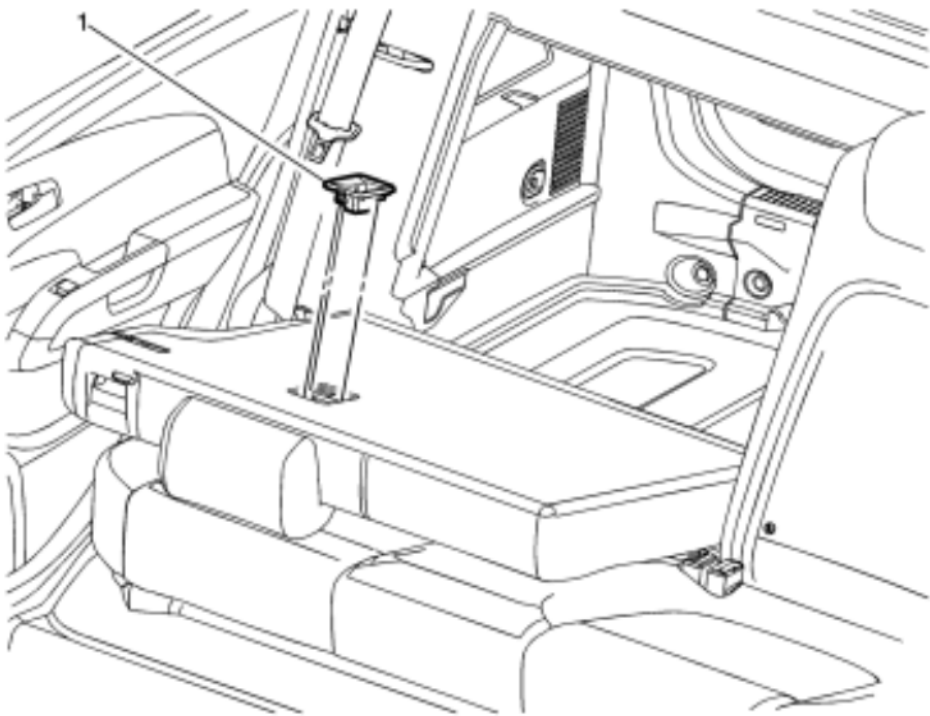


Callout	Component Name
1	Child Seat Back Cushion Cover Procedure Remove the child seat bracket trim cover using a suitable flat-bladed tool.

Rear Seat Head Restraint Replacement

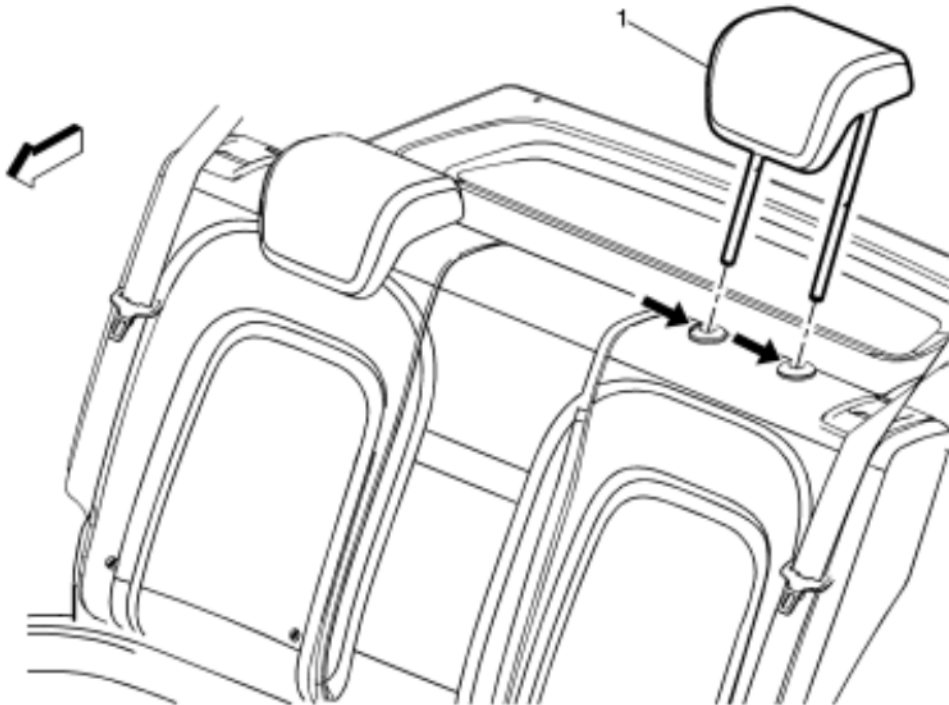


Callout	Component Name
1	Rear Seat Head Restraint Preliminary Procedures 1. Depress the large button on the head restraint guide and raise the head restraint to the full up position. 2. Depress the small button on the opposite head restraint guide and pull upward to remove from the seat.

Rear Seat Head Restraint Guide Replacement

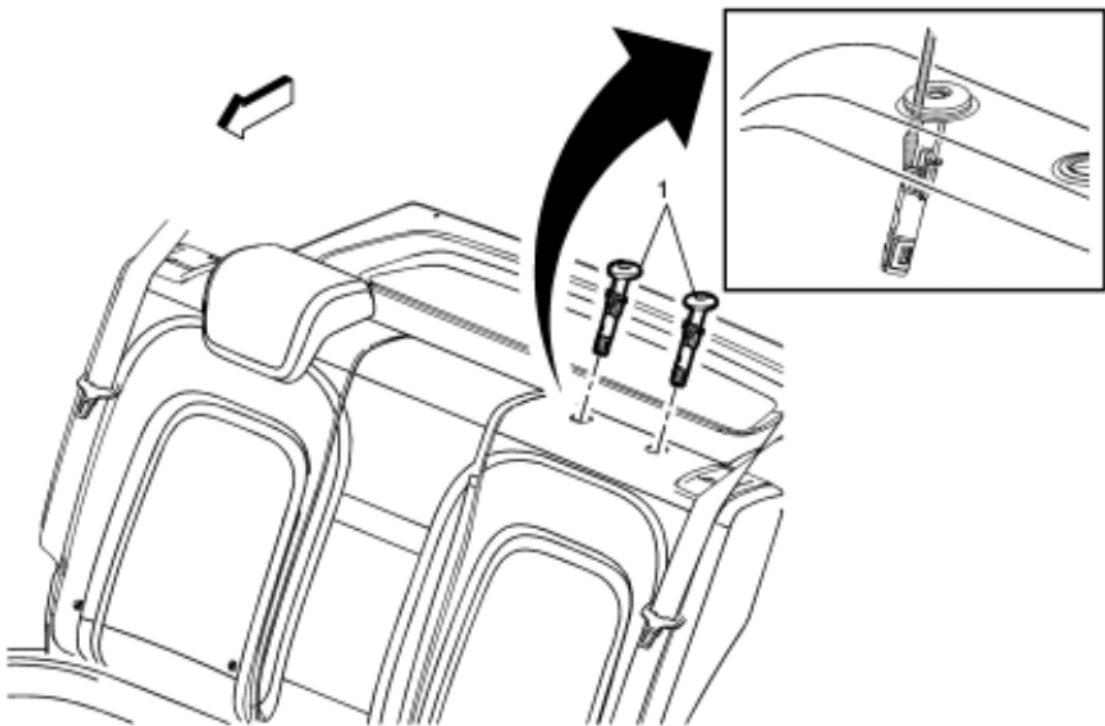


Callout	Component Name
Preliminary Procedure Remove the rear seat head restraint. Refer to Rear Seat Head Restraint Replacement	
1	Rear Seat Head Restraint Guide Procedure Using a suitable flat-bladed tool, slide the tool between the cushion and the guide until you find the slot on the outboard side of the guide. Push inward on the guide slot tab , while pulling upward to remove the guide from the seat back frame.

Rear Seat Back Cushion Pivot Support Replacement

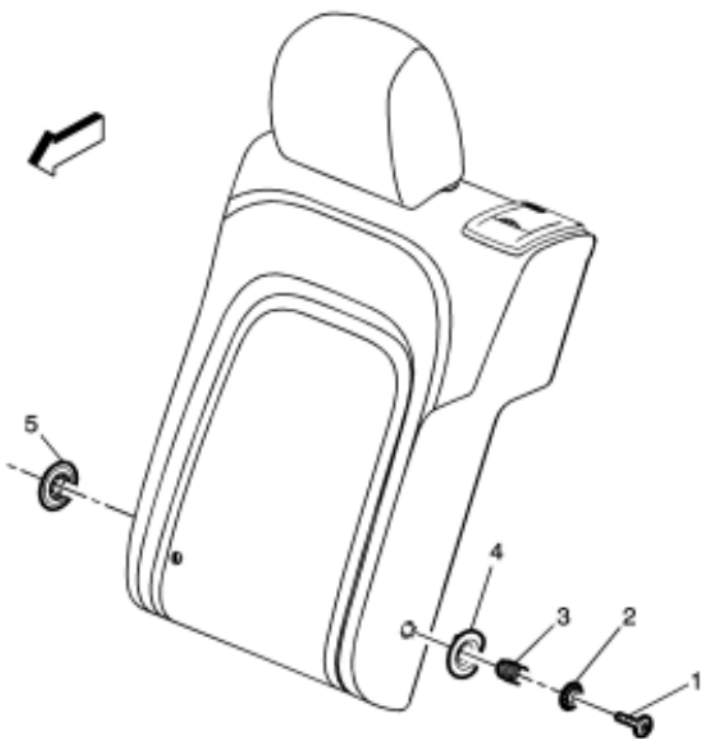


Callout	Component Name
Preliminary Procedure Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement	
1	Rear Seat Back Outer Pivot Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 23 N·m (17 lb ft)
2	Rear Seat Back Cushion Outer Pivot Bushing
3	Rear Seat Back Cushion Outer Pivot Bolt Spring
4	Rear Seat Back Cushion Pivot Support Housing
5	Rear Seat Back Center Finish Cover

Rear Seat Center Head Restraint Replacement

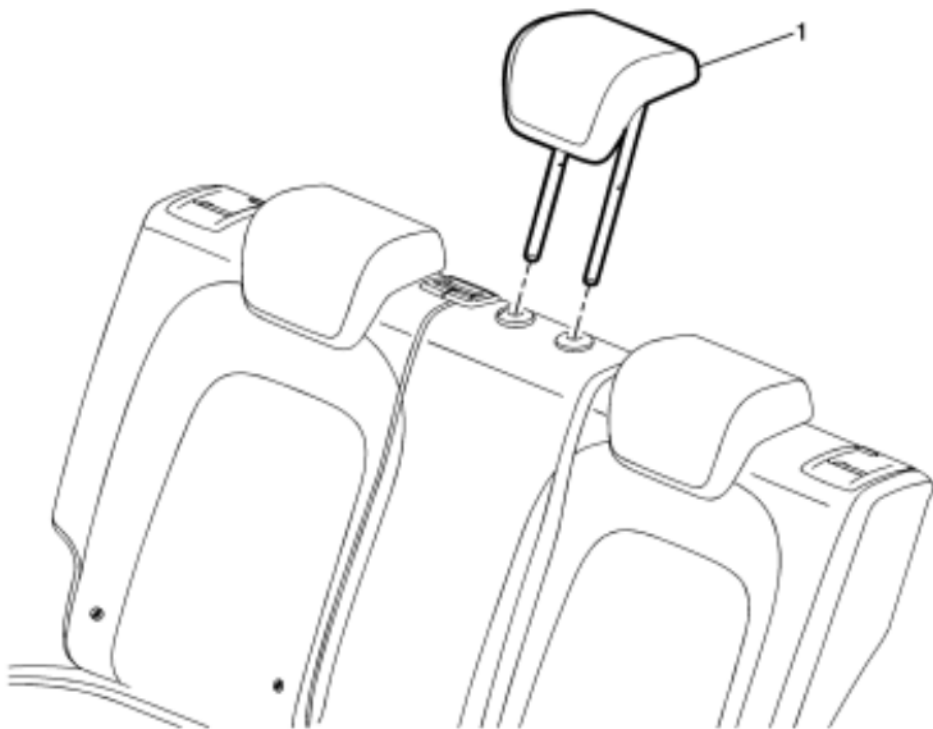


Callout	Component Name
1	Rear Seat Center Head Restraint Procedure 1. Depress the large button on the head restraint guide and raise the head restraint to the full up position. 2. Depress the small button on the opposite head restraint guide and pull upward to remove from the seat.

Rear Seat Cushion Cover and Pad Replacement

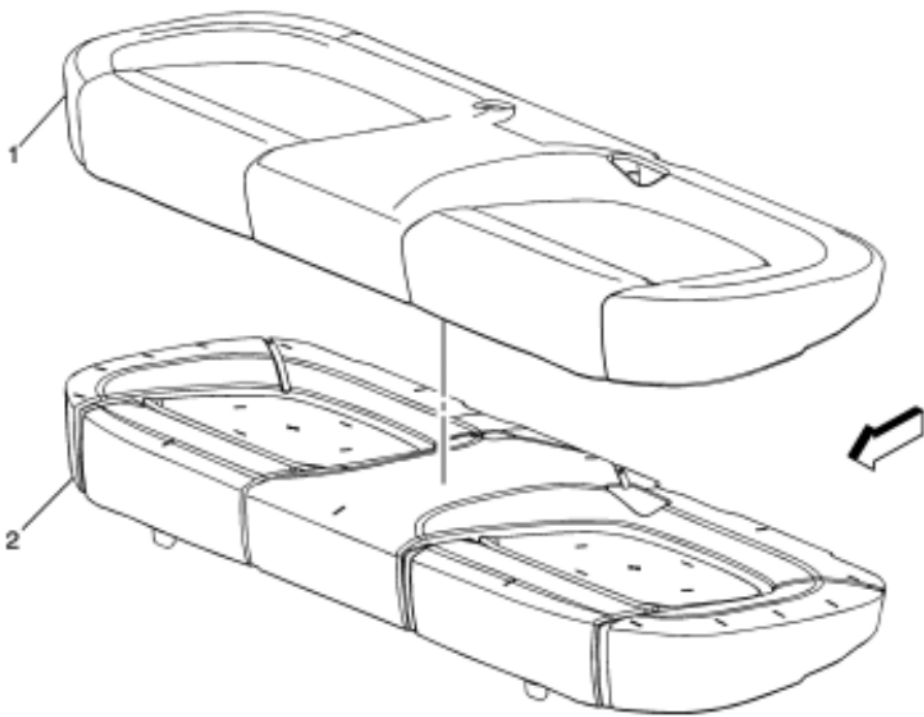


Callout	Component Name
Preliminary Procedure Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement	
1	Rear Seat Cushion Cover Procedure 1. Remove the hog rings that secure the rear seat cushion cover to the pad. 2. Pull the cover away from the pad to disengage any retainers. Note: When installing the rear seat cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.
2	Rear Seat Cushion Pad

Rear Seat Cushion Replacement

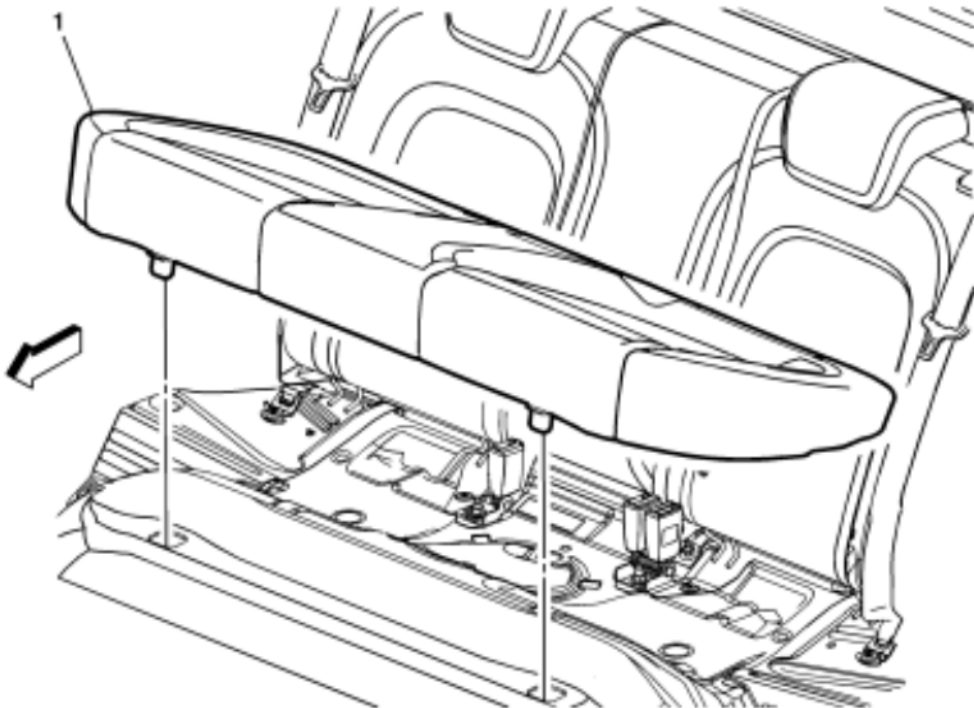


Callout	Component Name
1	Rear Seat Cushion Replacement Preliminary Procedures 1. Release the rear seat center seat belts. 2. Lift up on the front of the seat cushion at the latch locations to disengage the cushion retainers from the floor. 3. Push down on the rear of the seat cushion to unhook the cushion from the floor wires.

Rear Seat Latch Replacement

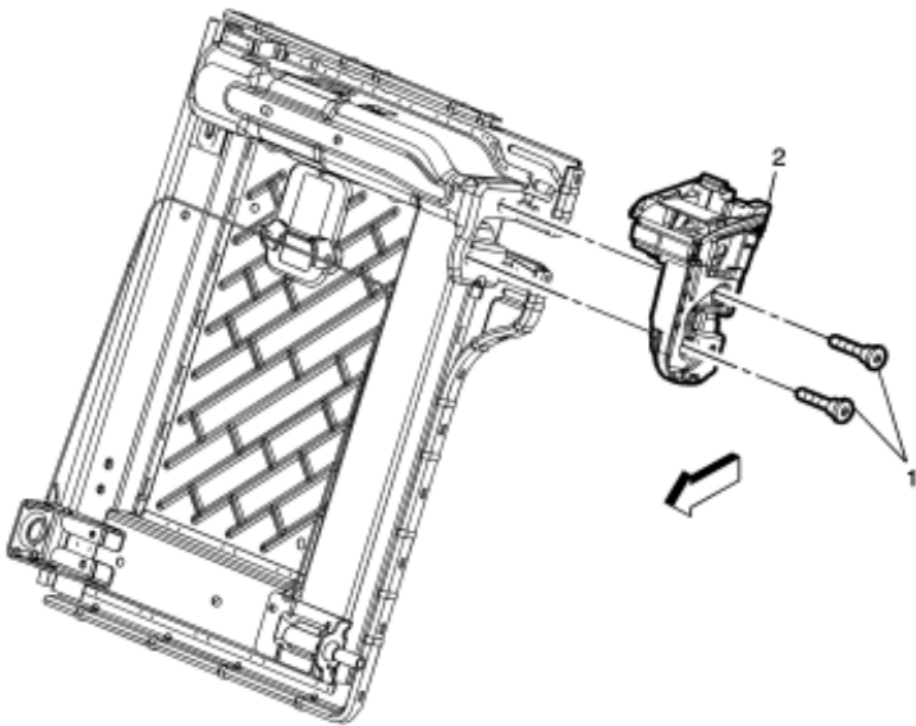


Callout	Component Name
Preliminary Procedures 1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement . 2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement .	
1	Rear Seat Latch Fasteners (Qty: 2) Caution: Refer to Fastener Caution . Tighten 45N·m (33lbft)
2	Rear Seat Latch

Rear Seat Back Cushion Replacement (AN1 Fixed Bench)

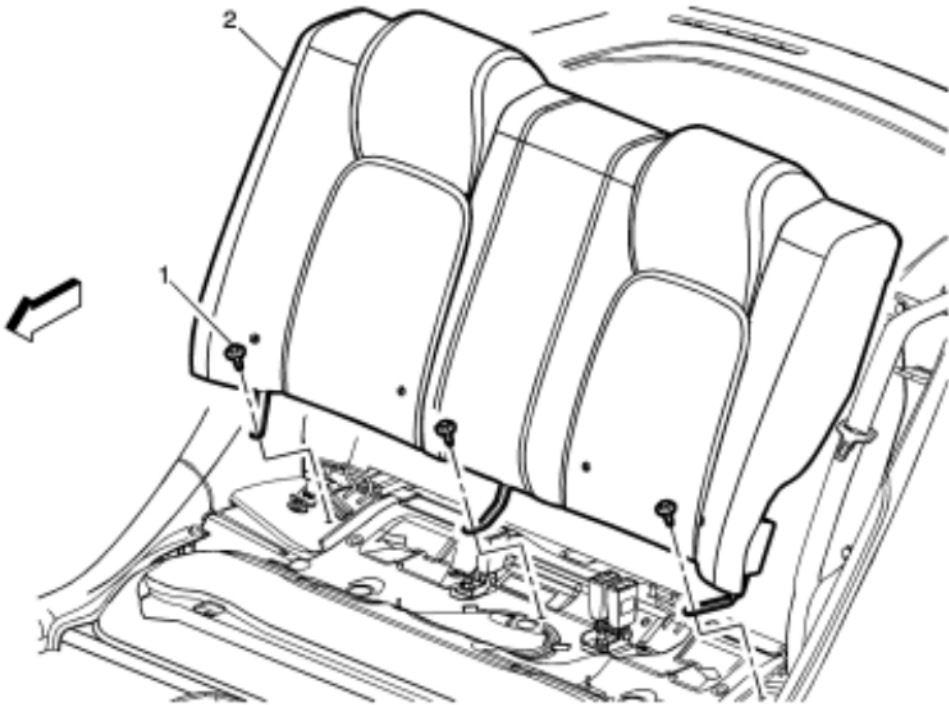


Callout	Component Name
Preliminary Procedure Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement	
1	Rear Seat Back Cushion Bolt (Qty: 3) Caution: Refer to Fastener Caution . Tighten 22N·m (16lbft)
2	Rear Seat Back Cushion Procedure 1. Remove the rear outboard shoulder belts from the shoulder belt bezel and position it out of the way, if equipped. 2. Pull the seat back cushion forward and upward to remove from the vehicle. 3. Transfer components as necessary.

Rear Seat Back Cushion Replacement (AMA 40% w/Split Back)

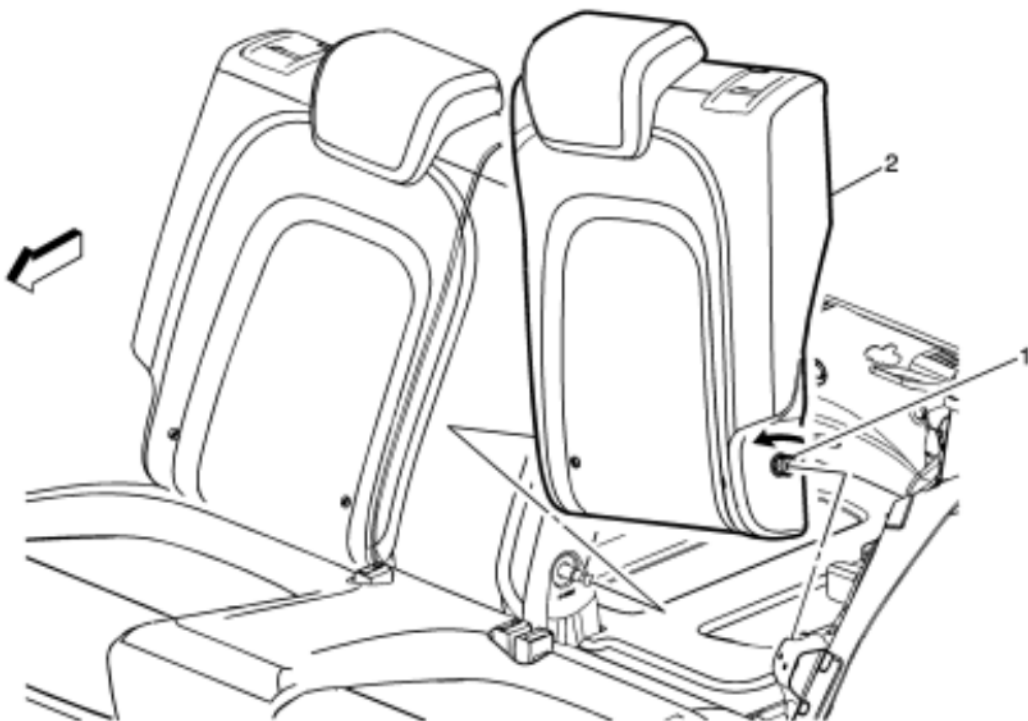


Callout	Component Name
Procedure Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement	
1	Rear Seat Back Cushion Pivot Support Procedure 1. Remove the rear outboard shoulder belts from the shoulder belt bezel and position it out of the way. 2. Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward. 3. Push in on the rear seat back cushion pivot support, and release from bracket.
2	Rear Seat Back Cushion Procedure 1. Pull up on the outer side of the rear seat back cushion and remove the rear seat back cushion from the bracket and hinge. 2. Transfer components as necessary.

Rear Seat Back Cushion Replacement (AMA 60% w/Split Back)

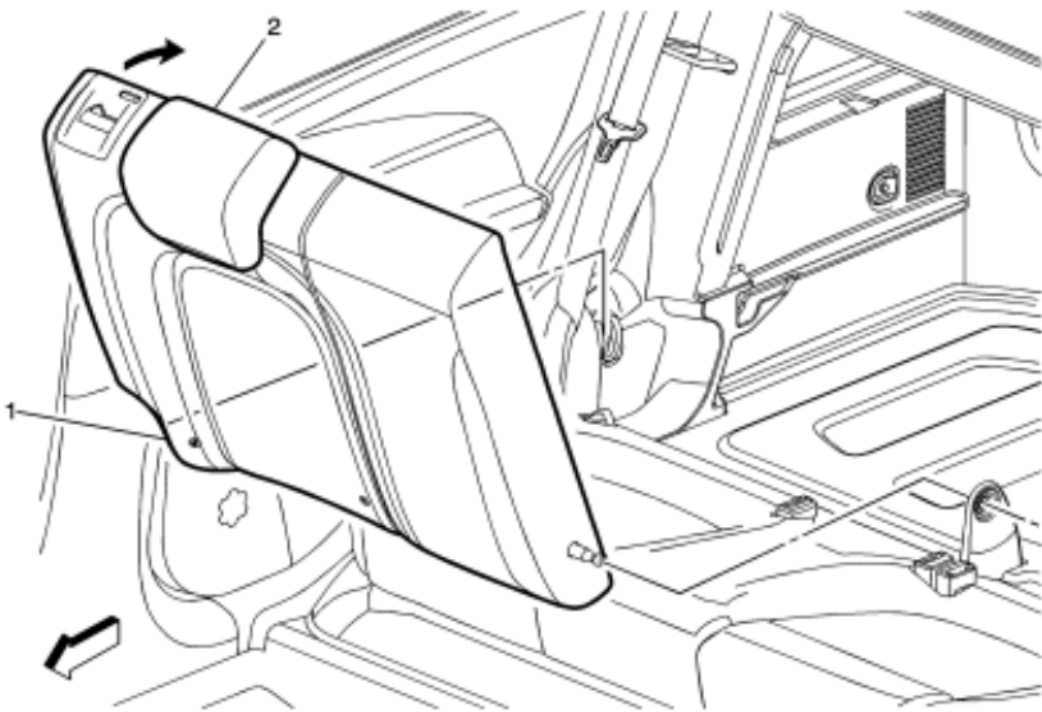


Callout	Component Name
Procedure Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement	
1	Rear Seat Back Cushion Pivot Support Procedure 1. Remove the rear seat back cushion 40% side. 2. Remove the rear outboard shoulder belts from the shoulder belt bezel and position it out of the way. 3. Remove the rear seat center seat belt nut from the rear floor. Refer to Rear Seat Center Shoulder Belt Replacement 4. Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward. 5. Push in on the rear seat back cushion pivot support, and release from bracket.
2	Rear Seat Back Cushion Procedure 1. Pull up on the outer side of the rear seat back cushion and remove the rear seat back cushion from the bracket and hinge. 2. Transfer components as necessary.

Rear Seat Back Cushion Replacement (AM7 Non Split Folding)

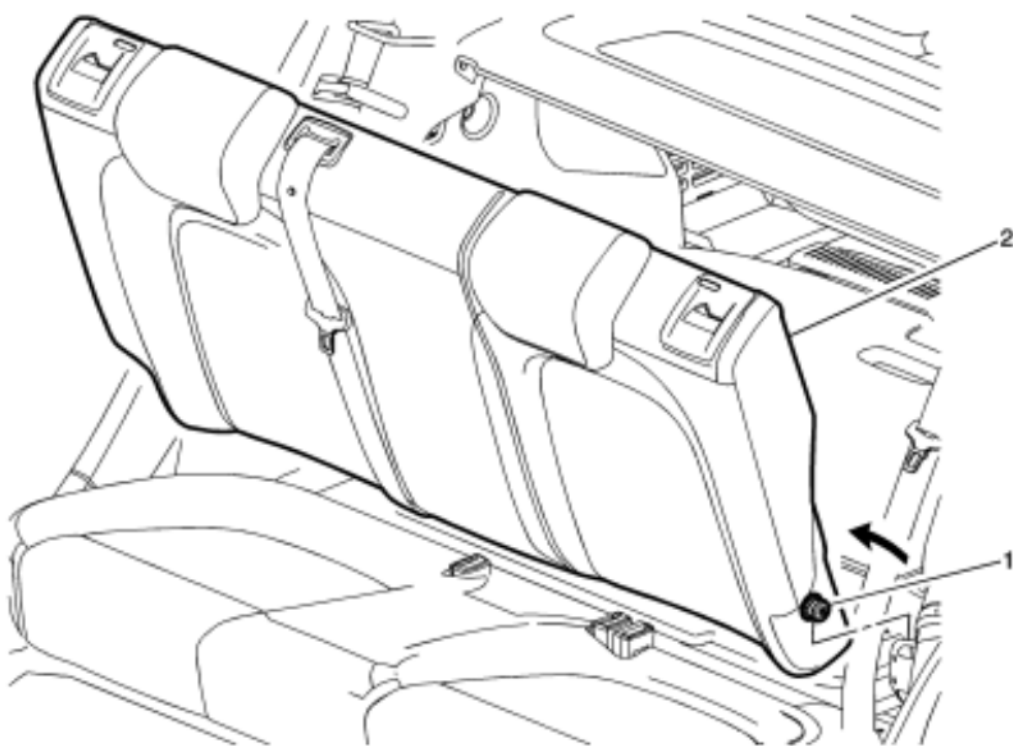


Callout	Component Name
1	Rear Seat Back Cushion Pivot Support Procedure 1. Remove the rear outboard shoulder belts from the shoulder belt bezel and position it out of the way, if equipped. 2. Remove the rear seat center seat belt nut from the rear floor, if equipped. Refer to Rear Seat Center Shoulder Belt Replacement 3. Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward. 4. Push in on the rear seat back cushion pivot support, and release from bracket.
2	Rear Seat Back Cushion Procedure 1. Pull up on the outer side of the rear seat back cushion and remove the rear seat back cushion from the bracket and hinge. 2. Transfer components as necessary.

Rear Seat Shoulder Belt Guide Opening Bezel Replacement

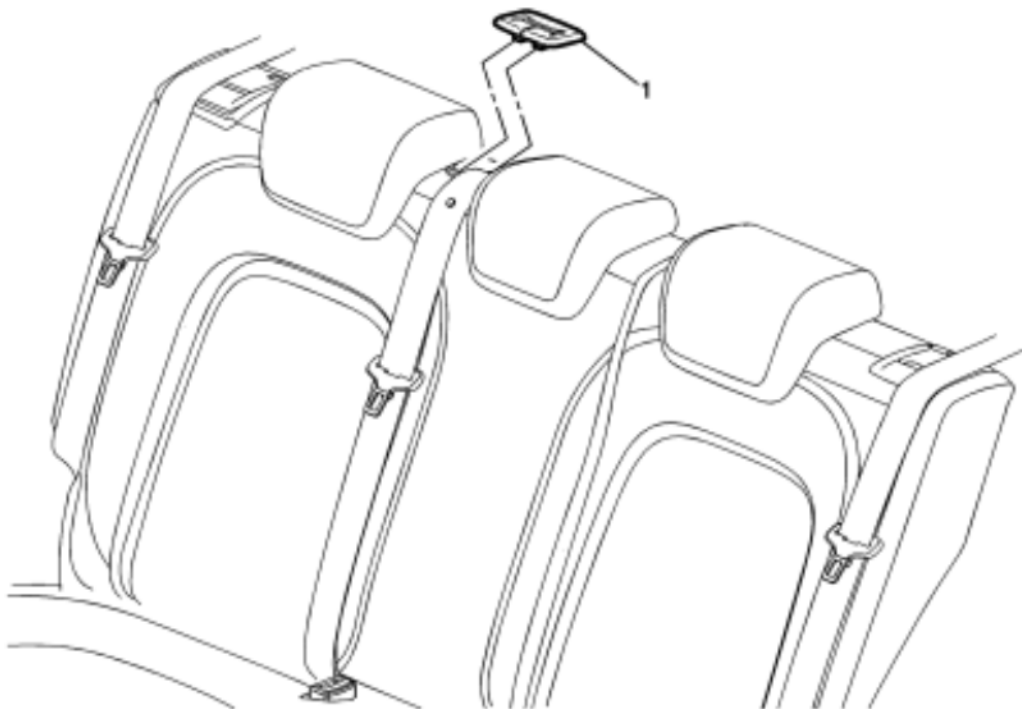


Callout	Component Name
1	Rear Seat Shoulder Belt Opening Bezel Procedure Push inward and upward from the front of the bezel to release from the seat back. Note: The rear seat shoulder belt opening bezel is part of the rear seat center belt assembly and is replaced as an assembly.

Rear Seat Back Cushion Panel Replacement

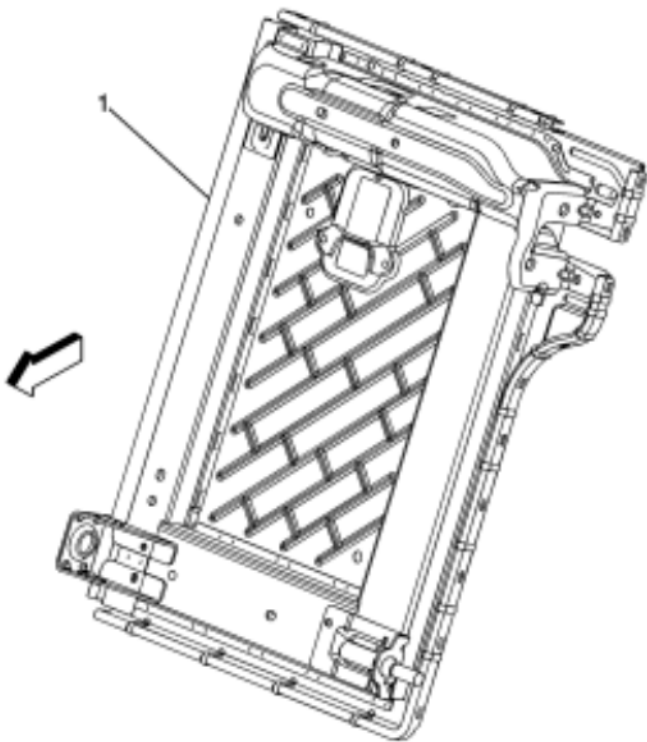


Callout	Component Name
Preliminary Procedure 1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement 2. Remove the rear seat head restraint guide. Refer to Rear Seat Head Restraint Guide Replacement 3. Remove the rear seat back cushion latch release knob bezel. Refer to Rear Seat Back Cushion Latch Release Knob Bezel Replacement 4. Remove the child seat back cushion cover. Refer to Child Seat Back Cushion Cover Replacement 5. Remove the rear seat back cushion pivot support. Refer to Rear Seat Back Cushion Pivot Support Replacement 6. Remove the rear seat latch. Refer to Rear Seat Latch Replacement	
1	Rear Seat Back Cushion Panel Procedure 1. Remove the seat back carpet. 2. If replacing the seat back panel, transfer components as necessary.

Rear Seat Back Cushion Cover and Pad Replacement (AMA 40% w/Split Back)

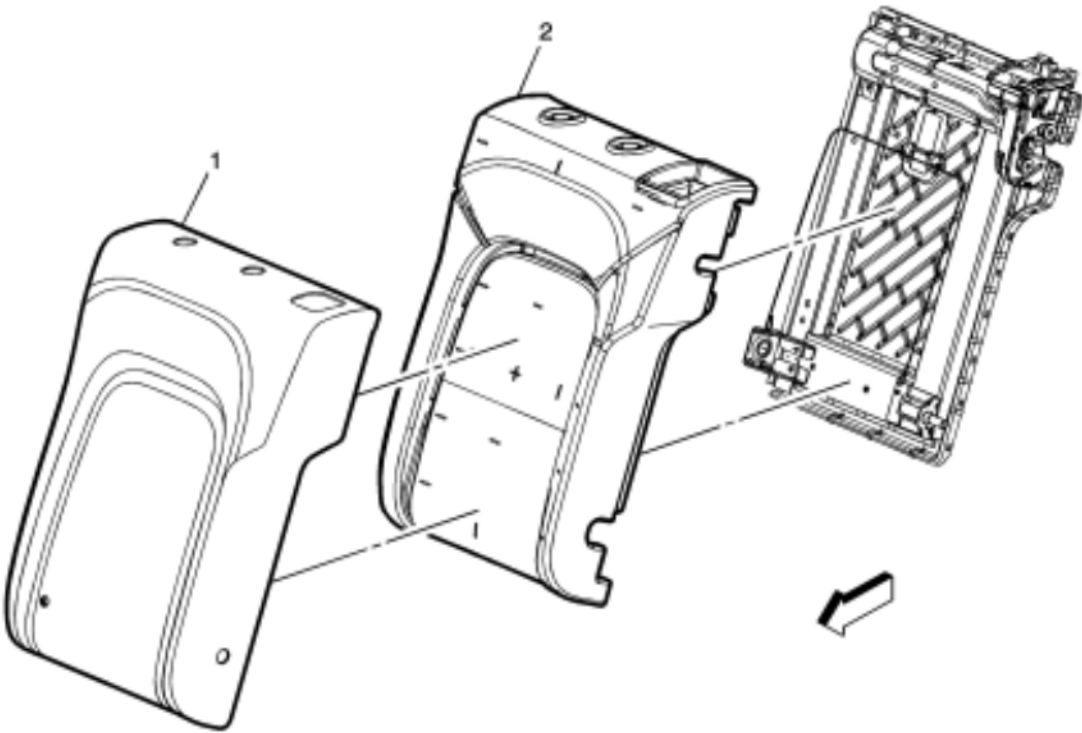


Callout	Component Name
Preliminary Procedures 1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement . 2. Remove the rear seat head restraint guide. Refer to Rear Seat Head Restraint Guide Replacement . 3. Remove the rear seat back cushion latch release handle bezel. Refer to Rear Seat Back Cushion Latch Release Knob Bezel Replacement 4. Remove the child seat back cushion cover. Refer to Child Seat Back Cushion Cover Replacement 5. Remove the rear seat back cushion pivot support. Refer to Rear Seat Back Cushion Pivot Support Replacement .	
1	Rear Seat Back Cushion Cover Procedure 1. Remove the seat back carpet. 2. Disengage the J-channel retainers from the seat back cushion frame. 3. Remove the hog rings from the under side of the rear seat back cushion cover. 4. Pull the cover away from the pad to disengage the hook and loop retainers. 5. If replacing the seat back panel, transfer components as necessary. Note: When installing the rear seat back cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.
2	Rear Seat Back Cushion Pad

Rear Seat Back Cushion Cover and Pad Replacement (AMA 60% w/Split Back)

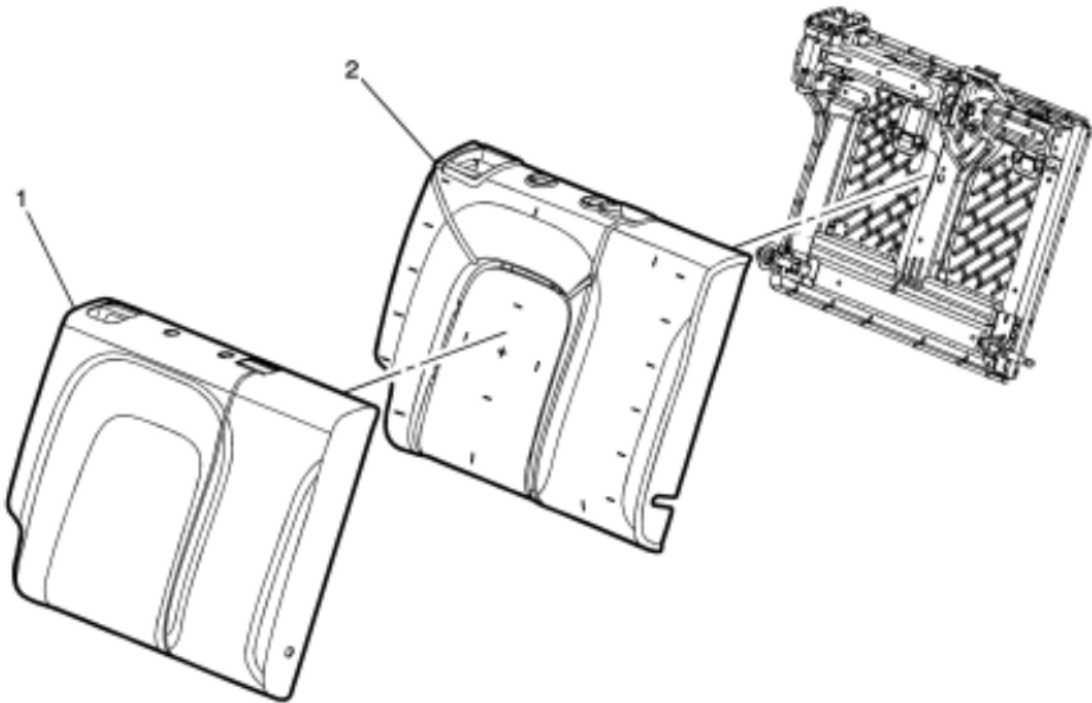


Callout	Component Name
Preliminary Procedure 1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement 2. Remove the rear seat head restraint guide. Refer to Rear Seat Head Restraint Guide Replacement 3. Remove the rear seat back cushion latch release knob bezel. Refer to Rear Seat Back Cushion Latch Release Knob Bezel Replacement 4. Remove the child seat back cushion cover. Refer to Child Seat Back Cushion Cover Replacement 5. Remove the rear seat back cushion pivot support. Refer to Rear Seat Back Cushion Pivot Support Replacement 6. Remove the rear seat shoulder belt guide opening bezel, if equipped. Refer to Rear Seat Shoulder Belt Guide Opening Bezel Replacement	
1	Rear Seat Back Cushion Cover Procedure 1. Remove the seat back carpet. 2. Remove the rear seat center head restraint, if equipped. 3. Disengage the J-channel retainers from the seat back cushion frame. 4. Remove the hog rings from the under side of the rear seat back cushion cover. 5. Pull the cover away from the pad to disengage the hook and loop retainers. 6. If replacing the seat back panel, transfer components as necessary. Note: When installing the rear seat back cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.
2	Rear Seat Back Cushion Pad

Rear Seat Back Cushion Cover and Pad Replacement (AN1 Fixed Bench)

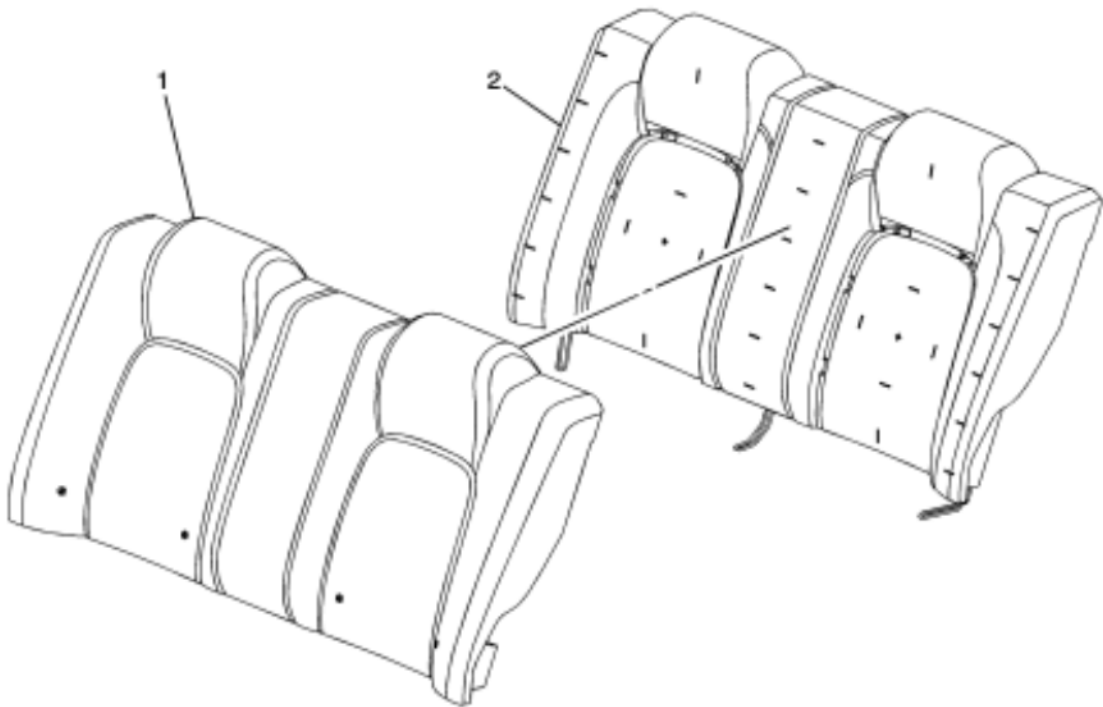


Callout	Component Name
Preliminary Procedure Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement	
1	Rear Seat Back Cushion Cover Procedure 1. Remove the seat back carpet. 2. Disengage the J-channel retainers from the seat back cushion frame. 3. Remove the hog rings from the under side of the rear seat back cushion cover. 4. Pull the cover away from the pad to disengage the hook and loop retainers. 5. If replacing the seat back panel, transfer components as necessary. Note: When installing the rear seat back cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.
2	Rear Seat Back Cushion Pad

Rear Seat Back Cushion Cover and Pad Replacement (AM7 Non Split Folding)

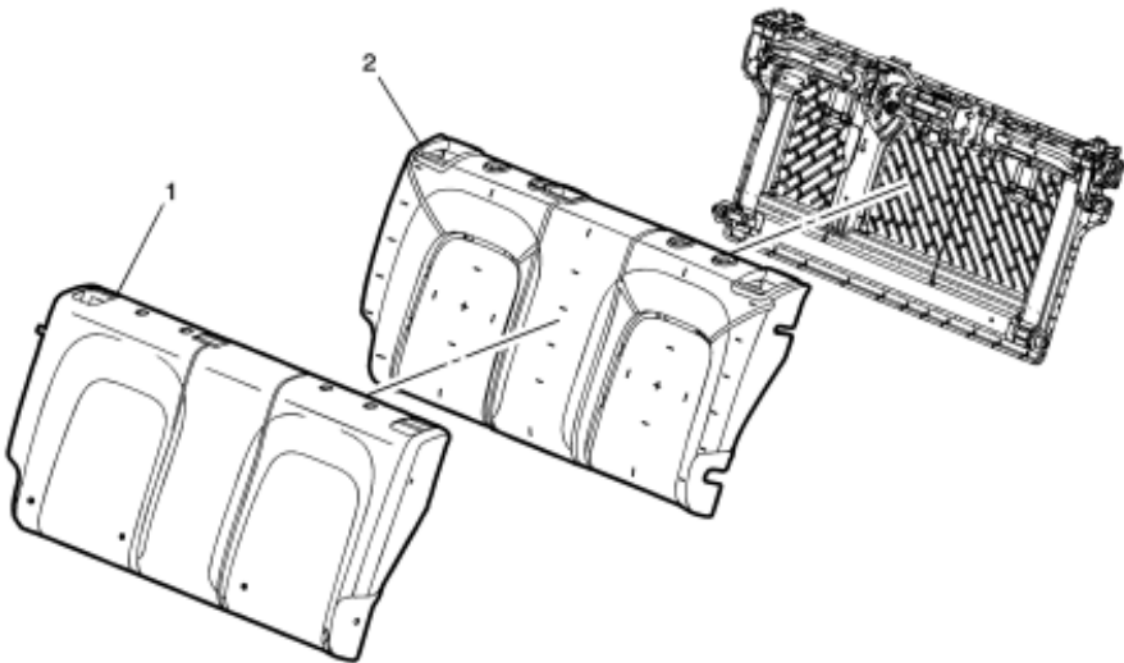


Callout	Component Name
Preliminary Procedures 1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement 2. Remove the rear seat head restraint guide. Refer to Rear Seat Head Restraint Guide Replacement 3. Remove the rear seat back cushion latch release knob bezel. Refer to Rear Seat Back Cushion Latch Release Knob Bezel Replacement 4. Remove the child seat back cushion cover. Refer to Child Seat Back Cushion Cover Replacement 5. Remove the rear seat back cushion pivot support. Refer to Rear Seat Back Cushion Pivot Support Replacement	
1	Rear Seat Back Cushion Cover Procedure 1. Disengage the J-channel retainers from the seat back cushion frame. 2. Remove the seat back carpet. 3. Remove the hog rings from the under side of the rear seat back cushion cover. 4. Pull the cover away from the pad to disengage the hook and loop retainers. Note: When installing the rear seat back cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.
2	Rear Seat Back Cushion Pad

Rear Seat Back Cushion Hinge Replacement

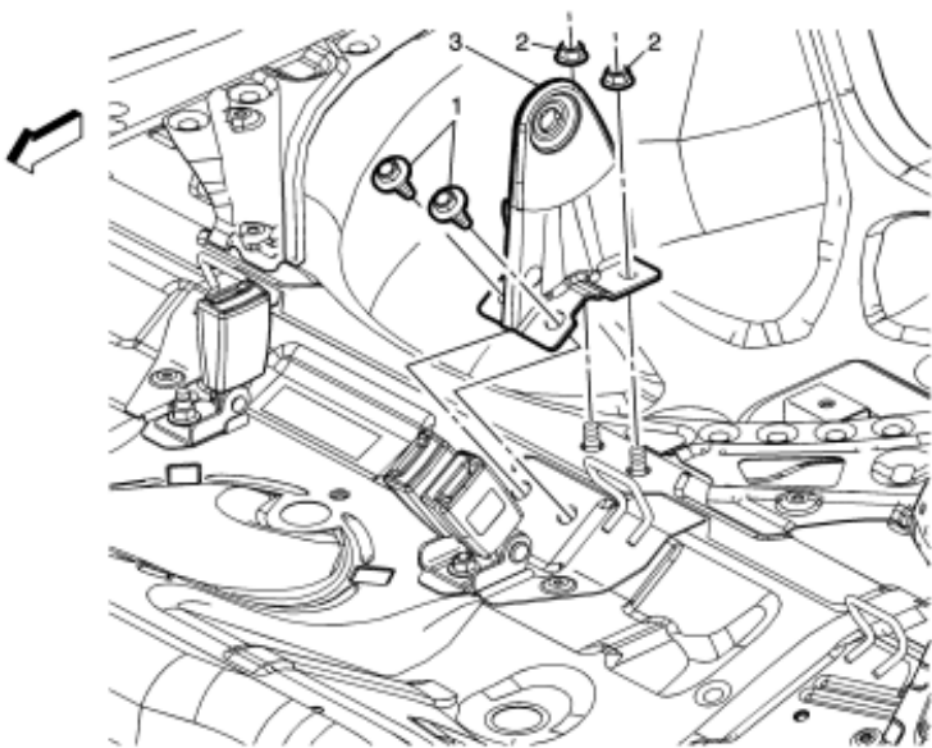

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement 2. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement 3. Remove the rear compartment floor panel carpet. Refer to Rear Compartment Floor Panel Carpet Replacement	
1	Rear Seat Back Cushion Hinge Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 43 N·m (32 lb ft)
2	Rear Seat Back Cushion Hinge Nut (Qty: 2) Tighten 43 N·m (32 lb ft)
3	Rear Seat Back Cushion Hinge

Rear Seat Back Cushion Latch Release Knob Bezel Replacement

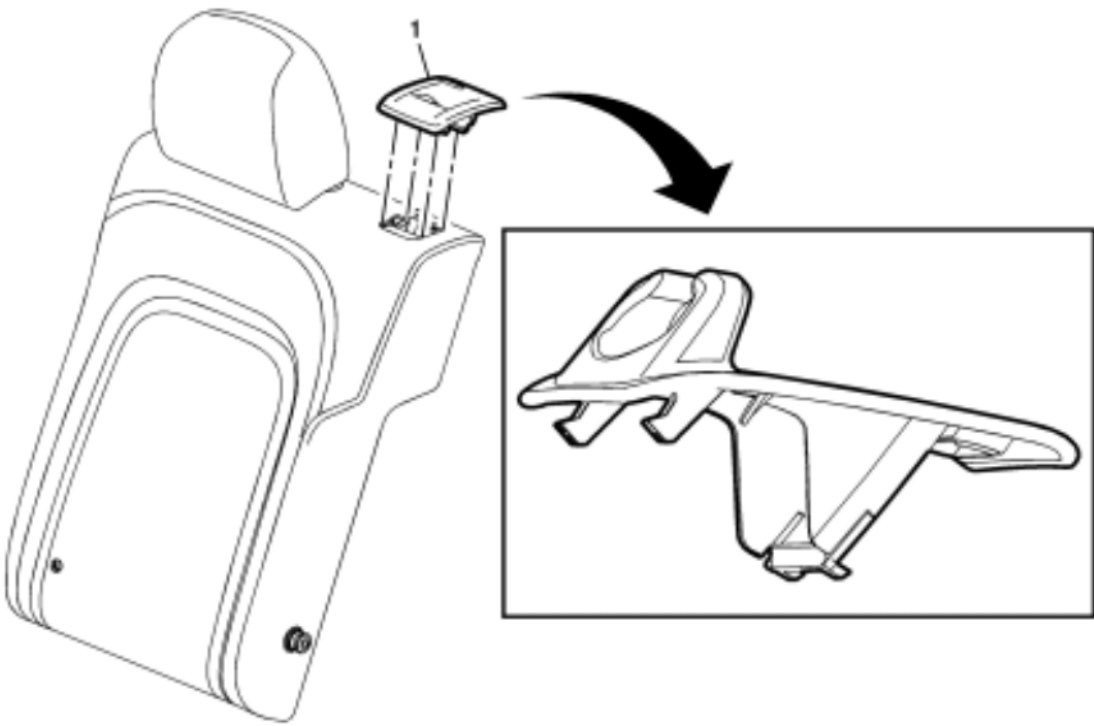

Callout	Component Name
1	Rear Seat Back Cushion Latch Release Handle Bezel Procedure Use a flat-bladed tool to tilt the rear of the handle upward, then lifting and pulling the bezel rearward to disengage the front hooks.

Manual Seats Description

Note: Do not attempt to change the designed seat position by altering the designed seat adjuster-to-floor pan anchor provisions or the seat adjuster-to-seat frame anchor provisions. Changing the seat position could affect the performance of the seat system.

This vehicle is equipped with low-backed front seats with separate head restraints and a three-passenger folding rear seat. Split folding rear seat is optional. Seat cushions and seatbacks have formed foam pads, which fit the contours of the full-panel seatback frame assembly and the designed contour of the seat cushion frame. There are no front seat forward or rearward relocation provisions provided at either the seat adjuster-to-seat frame or the seat adjuster-to-floor pan anchor attachments.

cardiagn.com