

ARTICLE BEGINNING 

DEFOGGERS 

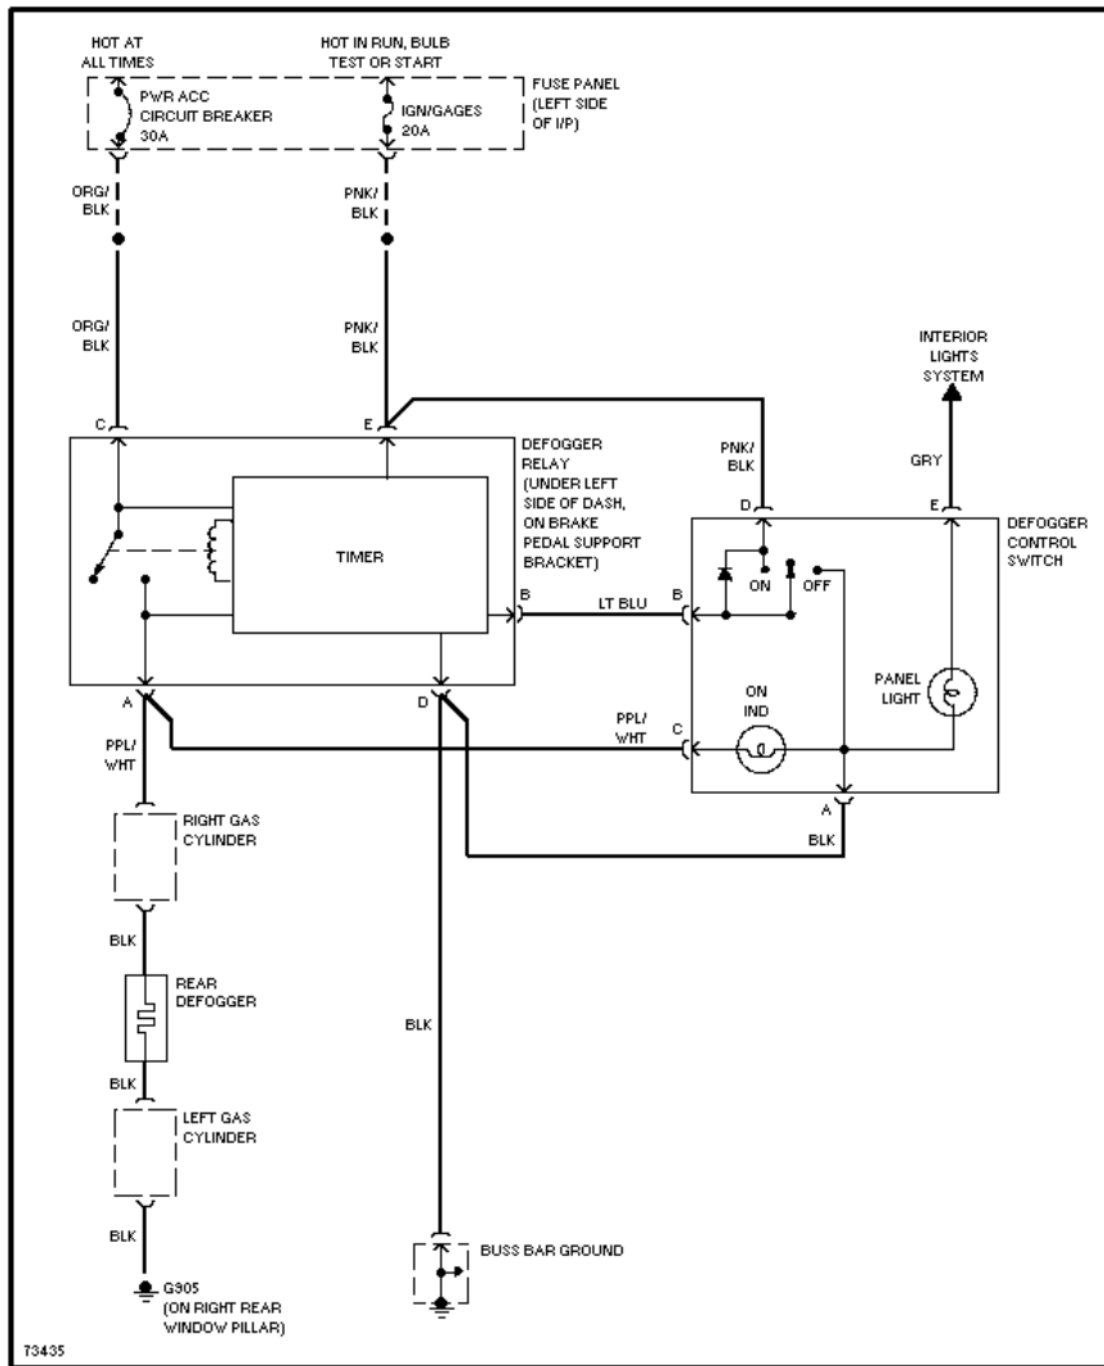


Fig. 1: Defogger Circuit

HORN

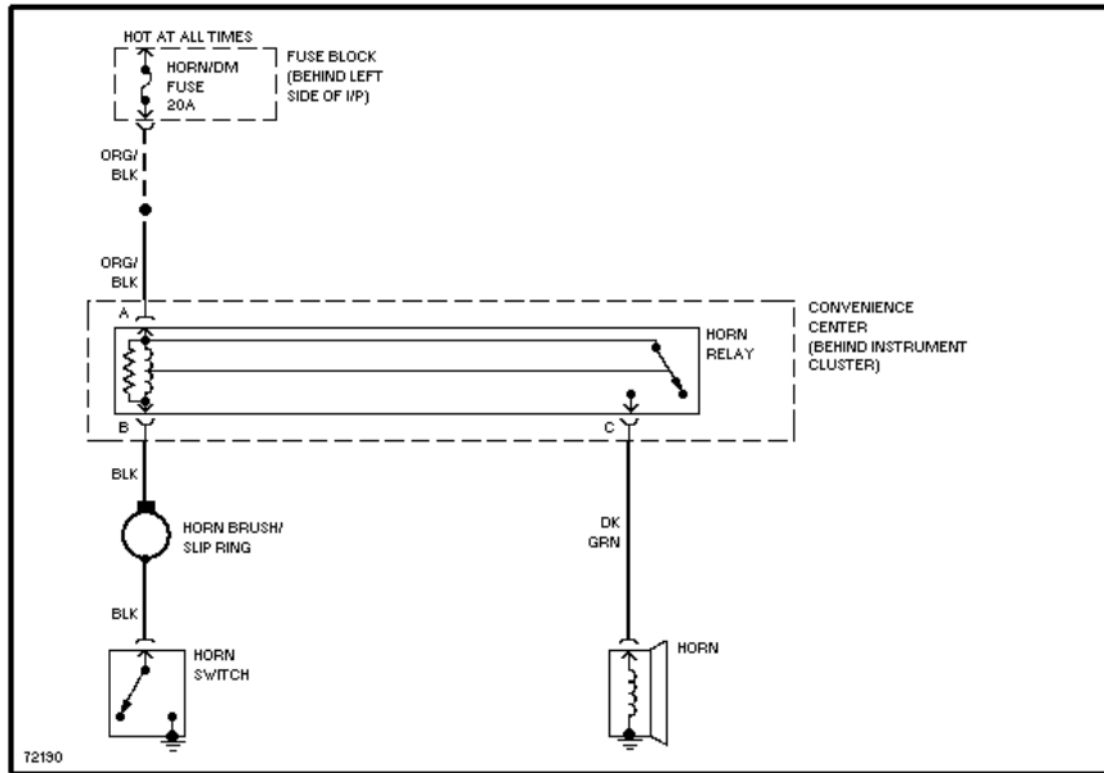


Fig. 2: Horn Circuit

POWER DOOR LOCKS

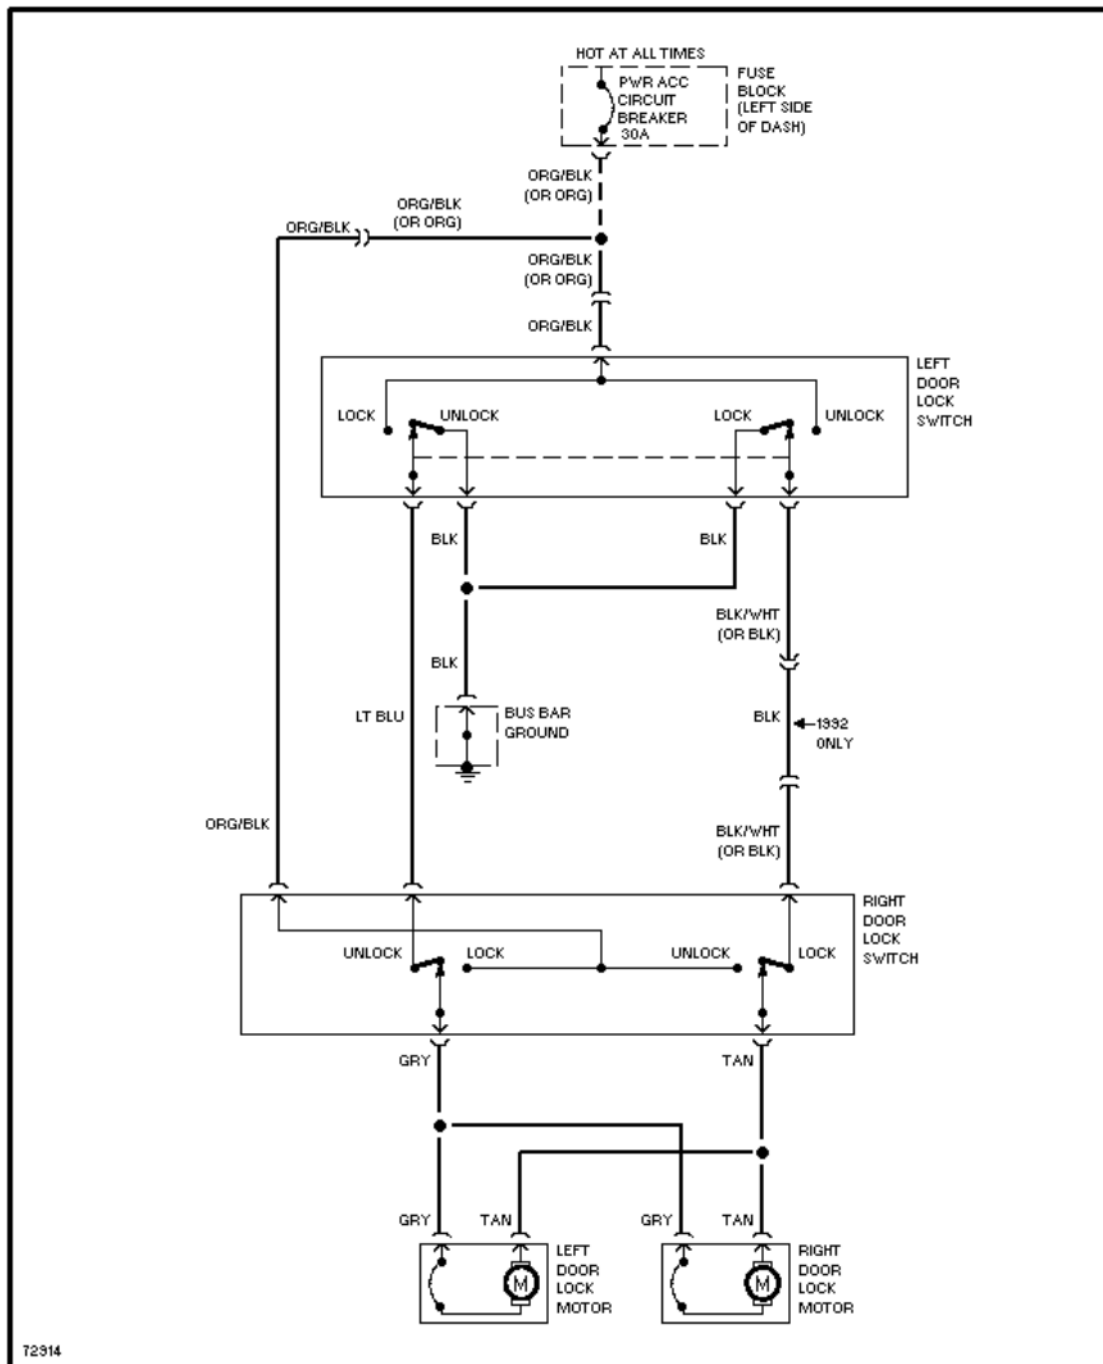


Fig. 3: Power Door Lock Circuit, 2 Door

POWER WINDOWS

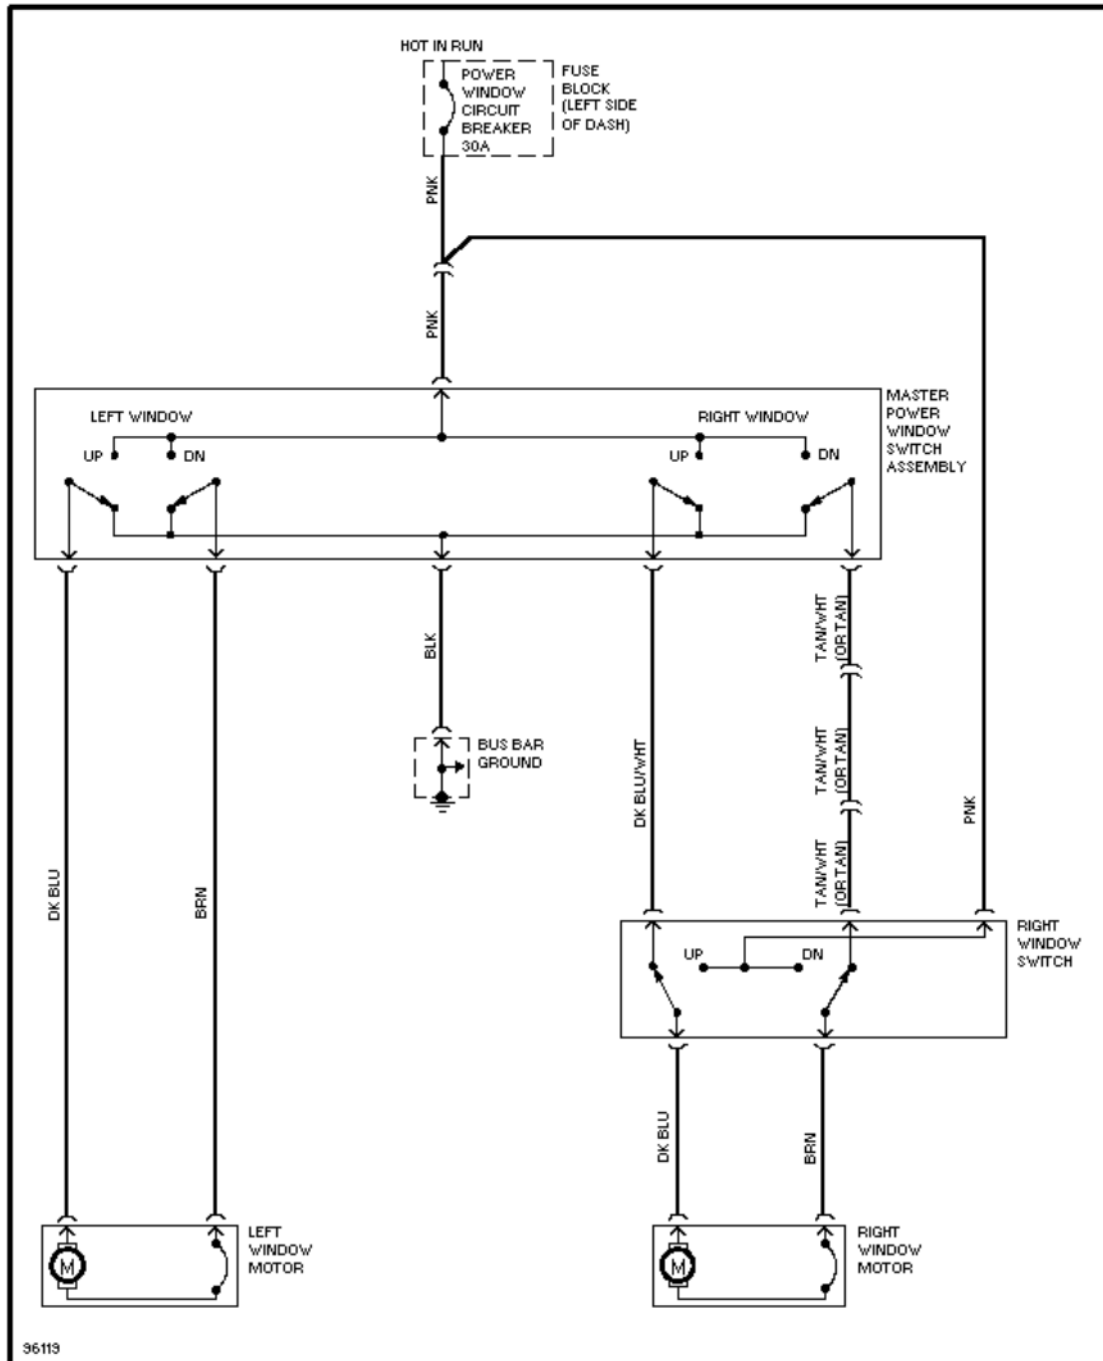
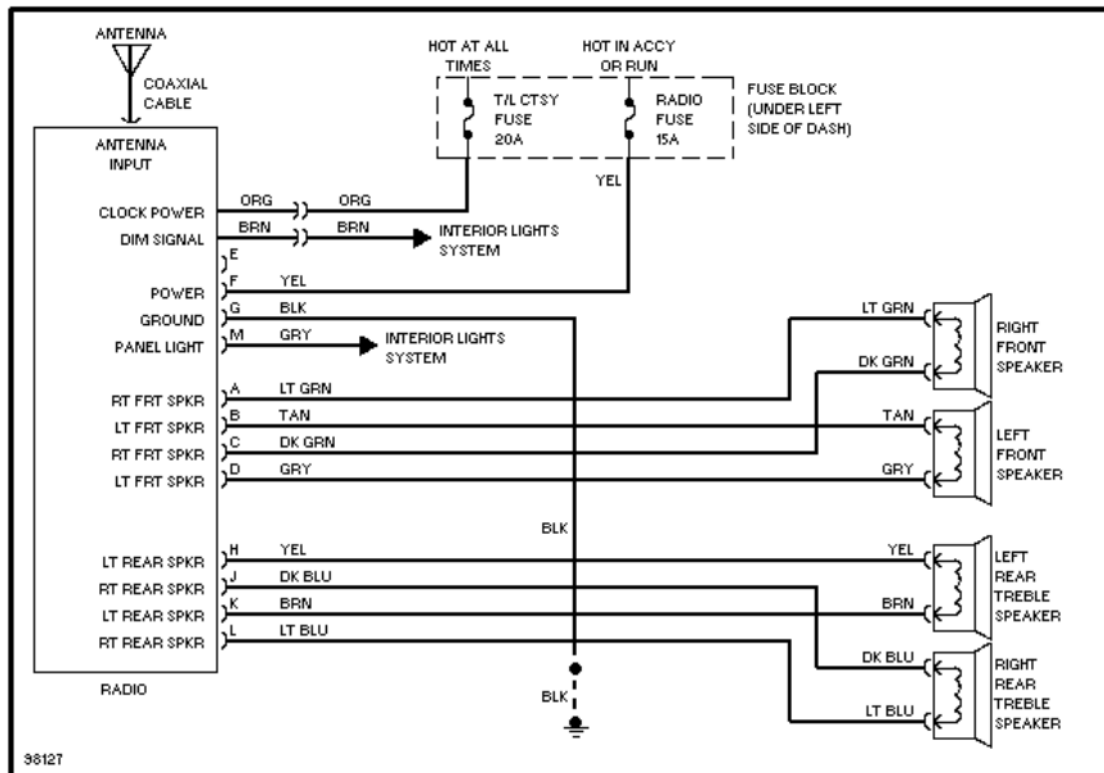


Fig. 4: Power Window Circuit**RADIO** **Fig. 5: 4-Speaker System Circuit****STARTING/CHARGING** 

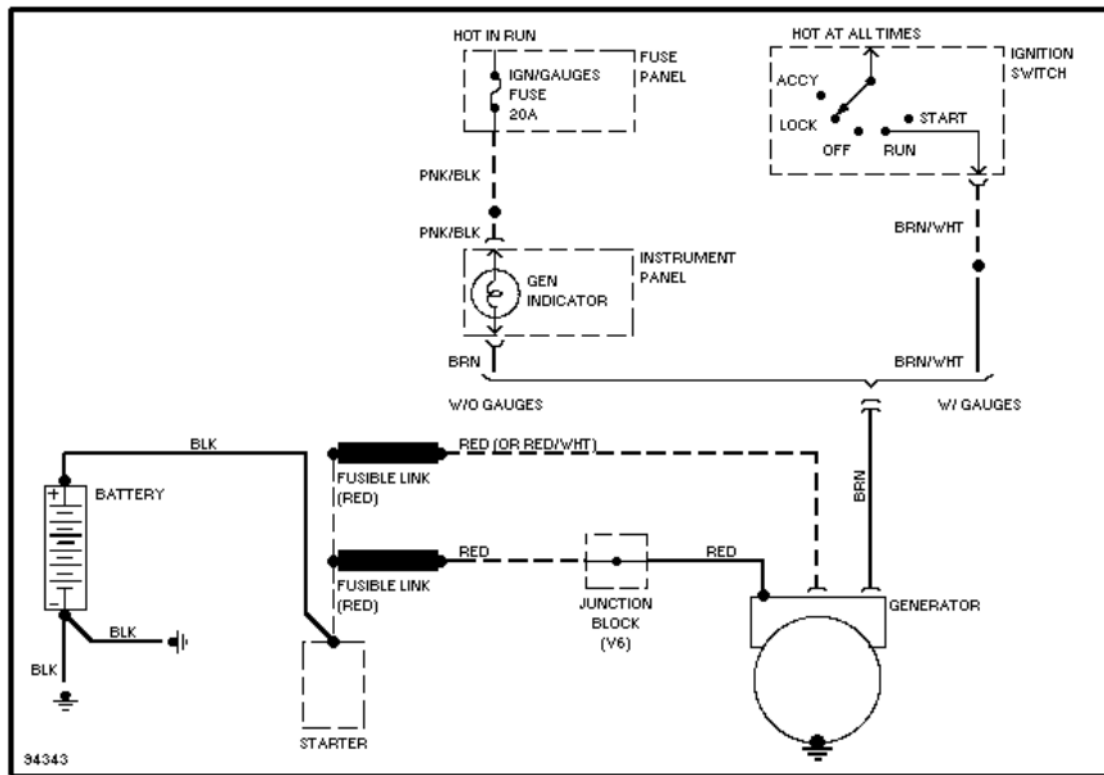


Fig. 6: Charging Circuit

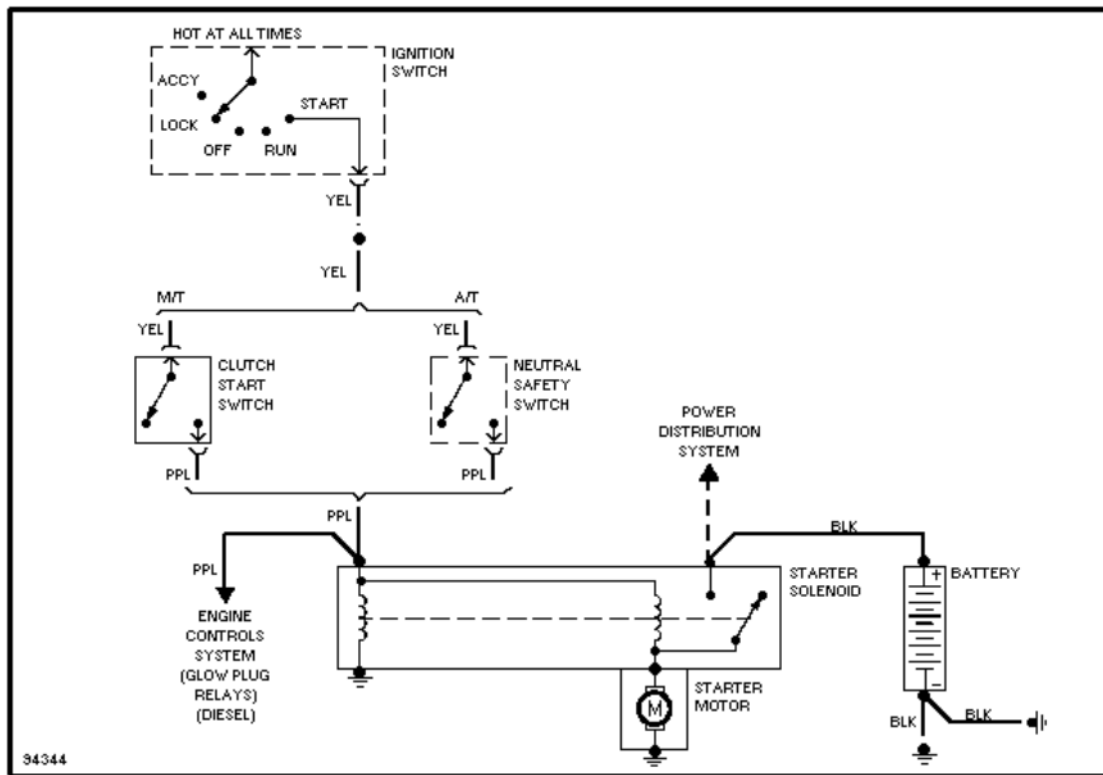


Fig. 7: Starting Circuit

TRUNK, TAILGATE, FUEL DOOR 


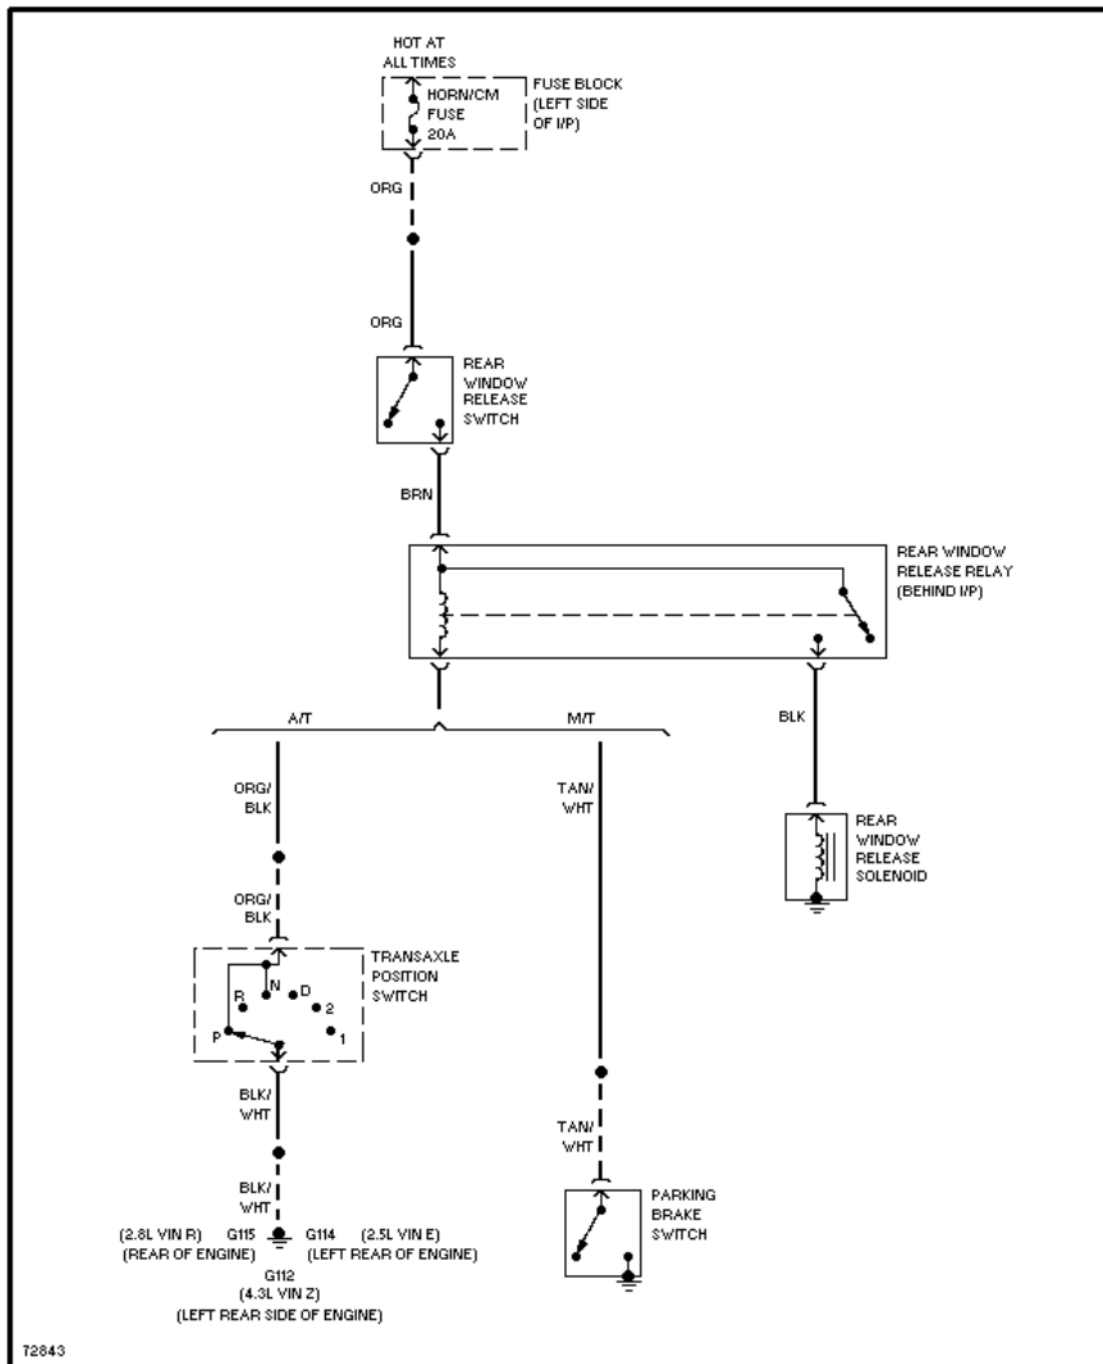


Fig. 8: Trunk, Tailgate, Fuel Door Circuits

WIPER/WASHER

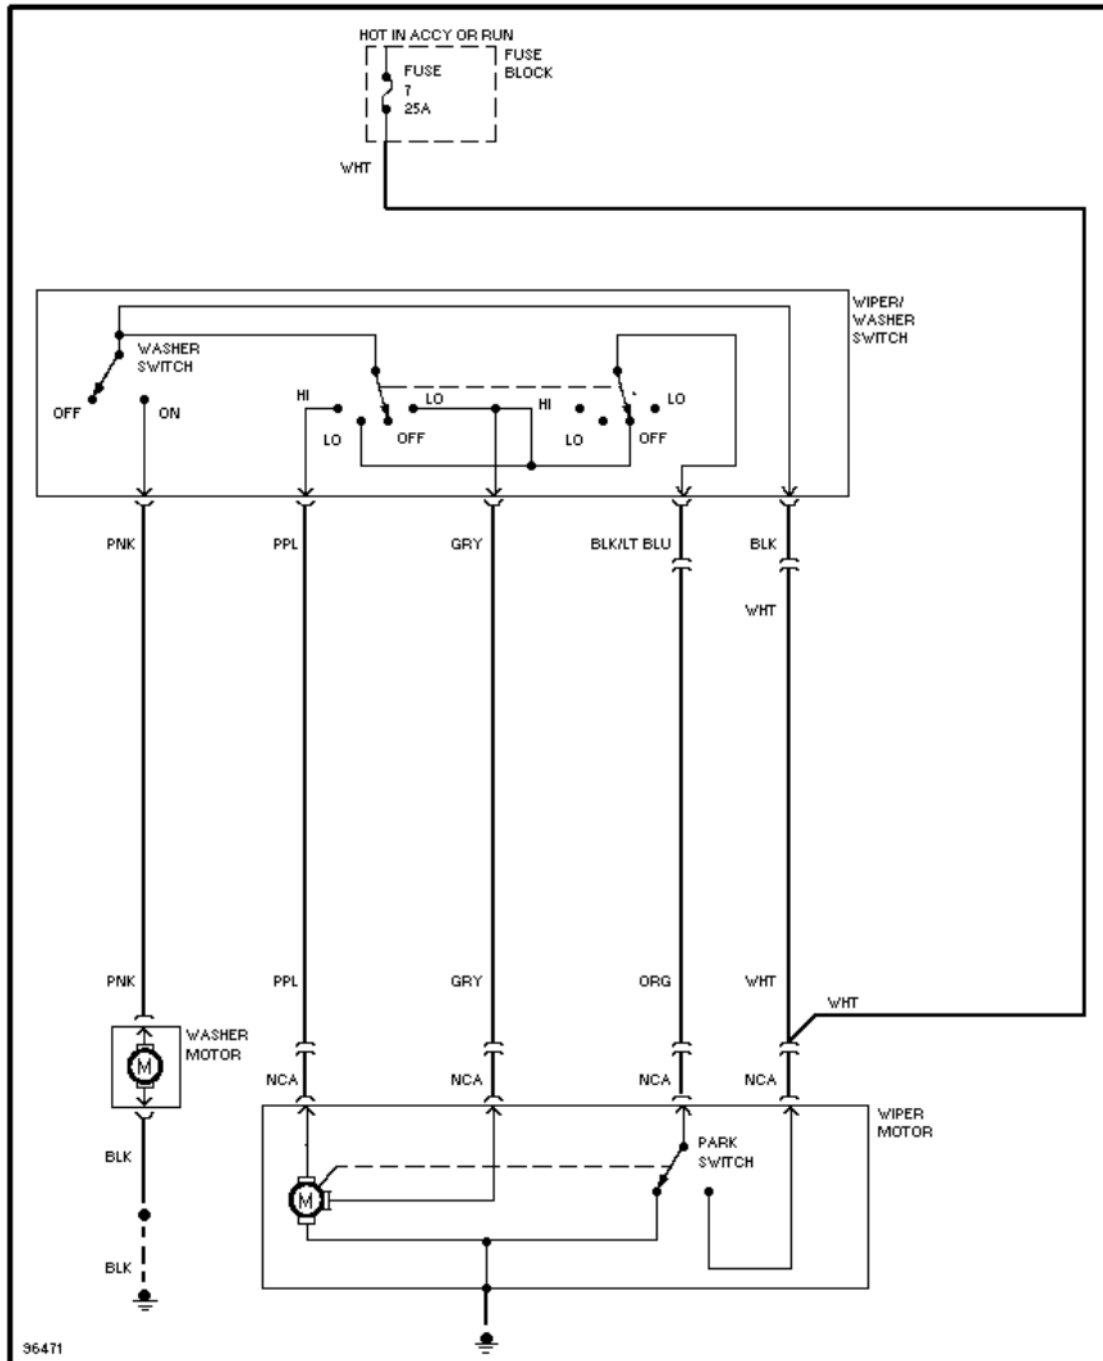

cardiagn.com

 


Fig. 10: Interval Wiper/Washer Circuit

© 2008 Mitchell Repair Information Co., LLC.

ARTICLE BEGINNING **IDENTIFICATION** **COMPONENT LOCATION MENU** **COMPONENT LOCATIONS**

Component	Figure No. (Location)
ALTERNATOR	(1) B 2
A/C SELECTOR SW	(5) B 20
A/C SYSTEM	(4) A 18
A/T CIRCUIT	(5) F 22
BATTERY	(1) A 2
BLOWER SW (W/A/C)	(5) A 20
CRUISE CTRL SYS	(4) B 15
DIESEL CTRL UNIT	(3) F 13
DIR HAZ HORN SW	(5) F 20
DISTRIBUTOR 1.9L	(1) B 4
DISTRIBUTOR 2.5L	(2) E 6
DISTRIBUTOR 2.8L	(3) C 10
EGR CTRL UNIT (DIESEL)	(3) F 13
ELECT CTRL MOD SYS 1.9L	(1) E 4
ELECT CTRL MOD SYS 2.5L	(2) D 9
ELECT CTRL MOD SYS 2.8L	(3) B 14
ENG SPEED SENS	(1) F 2
4WD IND ASSY	(5) E 22
FUSE BLOCK	(4) F 17
HAZAD FLASHER	(4) C 16
HEADLT SW	(5) E 20
HEATER SYS	(4) A 16
HEAVY DUTY TRAILER HARN CONN	(5) F 24
HEI MODULE (2.8L)	(3) C 11
HORN RELAY	(1) C 1
IGNITION SW	(5) E 20
INST PANEL P/C	(5) D 21
POWER LOCK SYS	(5) B 22
POWER WDO SYS	(5) B 22
RELAY 1 & 2 (DIESEL)	(3) F 10
SEATBELT & HEADLT BUZZER	(4) B 16
STARTER	(1) B 2
TAILGATE RELEASE SYS (BLAZER)	(5) D 23

Component	Figure No. (Location)
WASHER MTR	(4) C 18
WIPER DELAY UNIT	(4) C 17
WIPER MTR	(4) C 18
WIPER/WASH DIM SW	(5) C 20

WIRING DIAGRAM

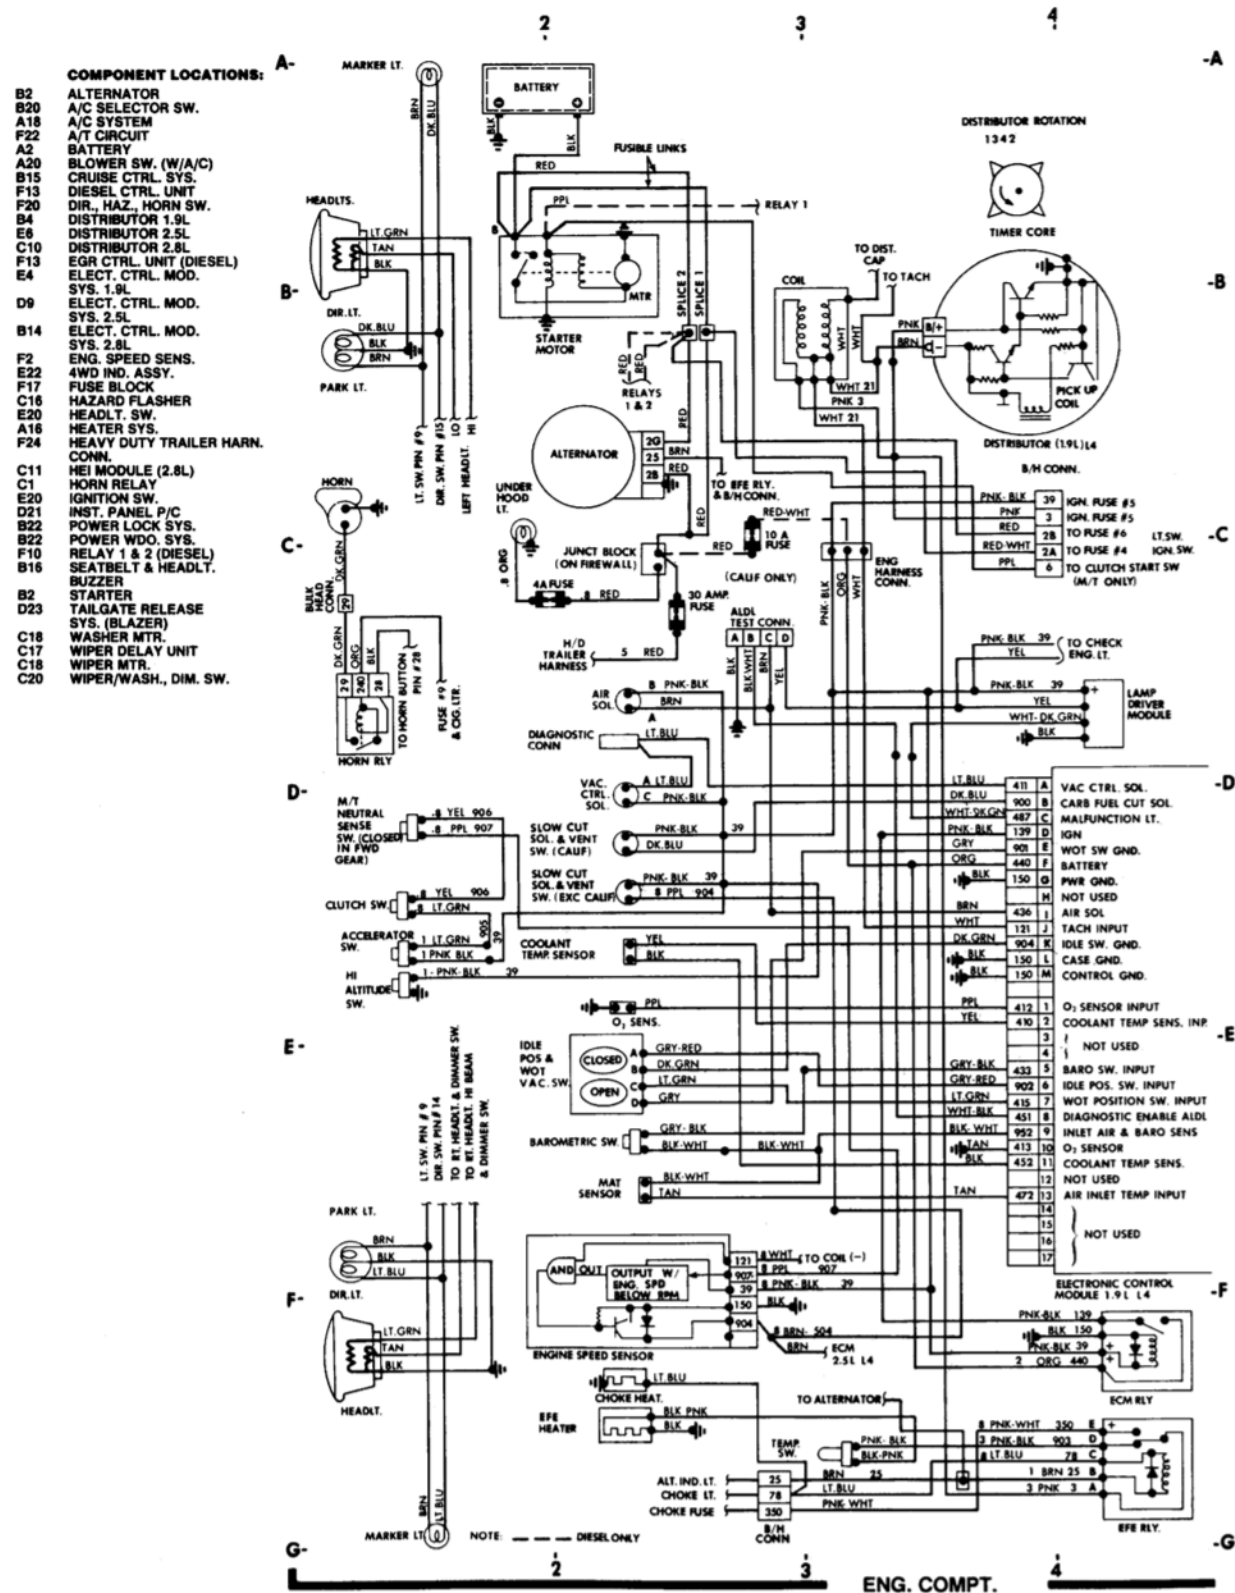
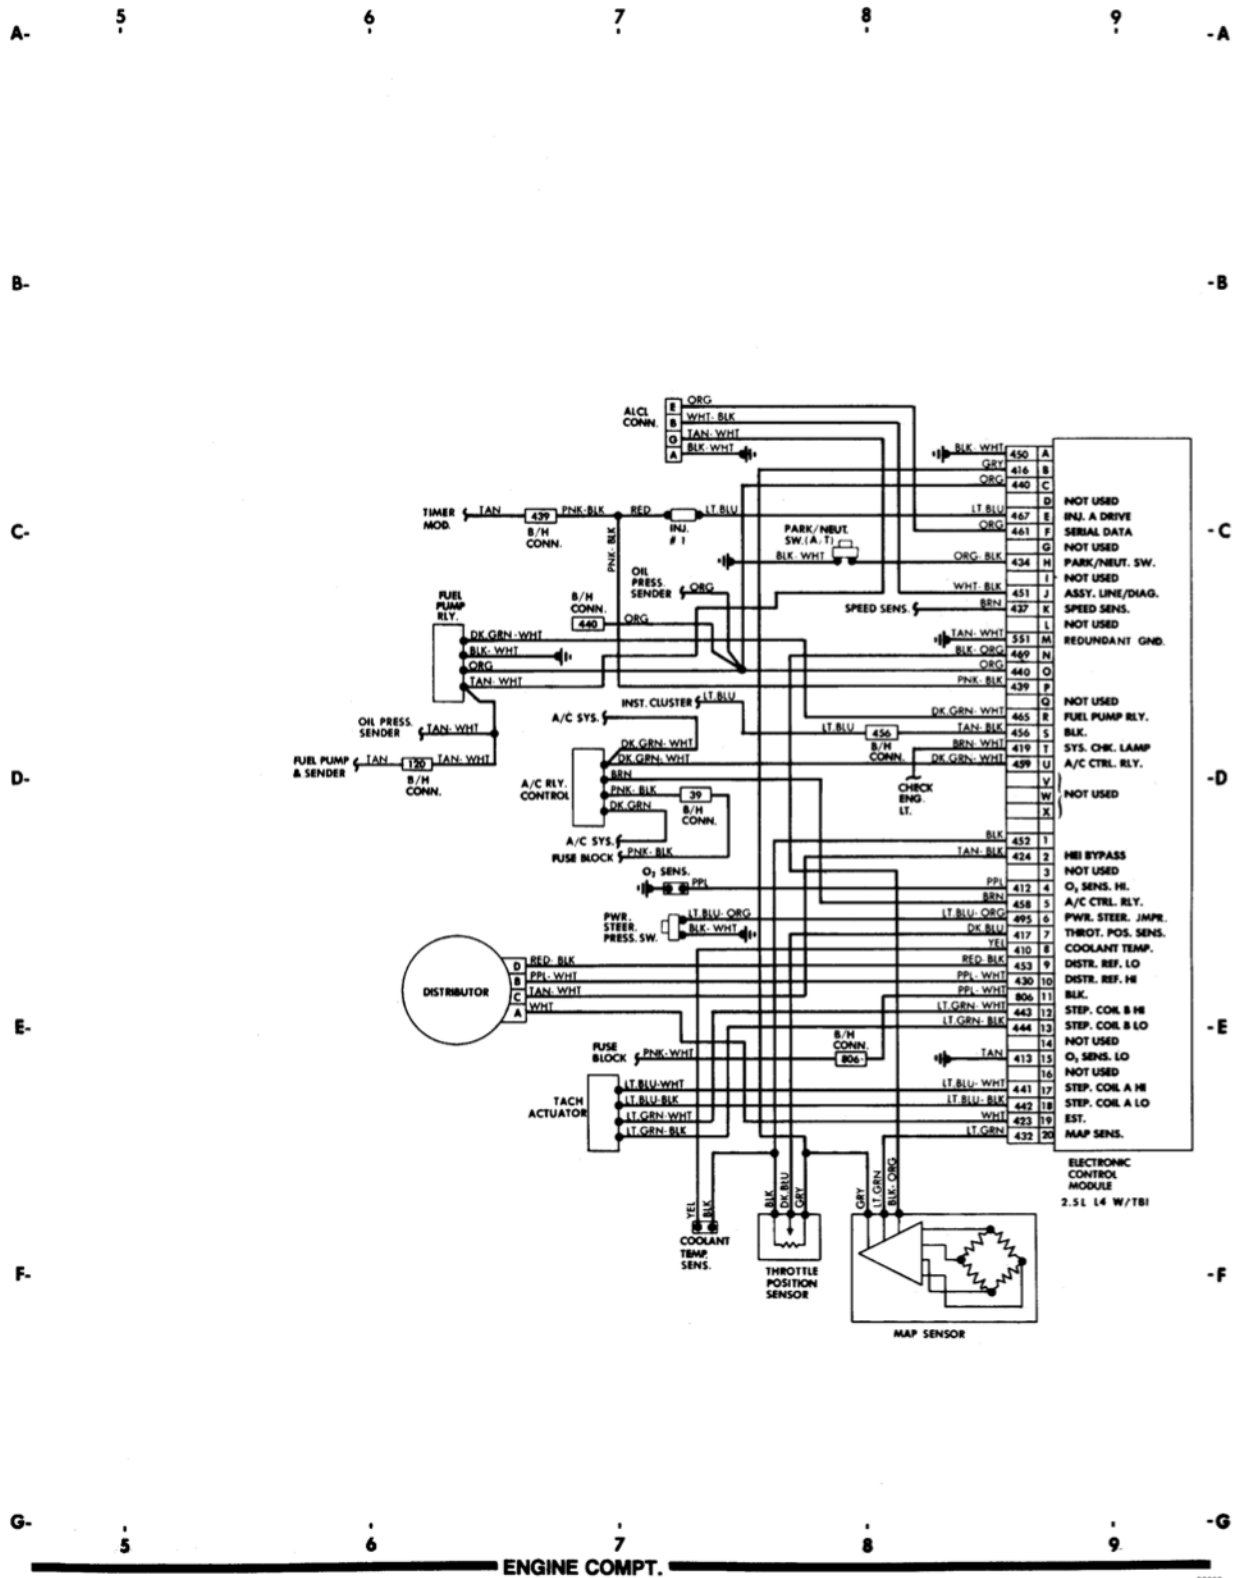


Fig. 1: Engine Compartment



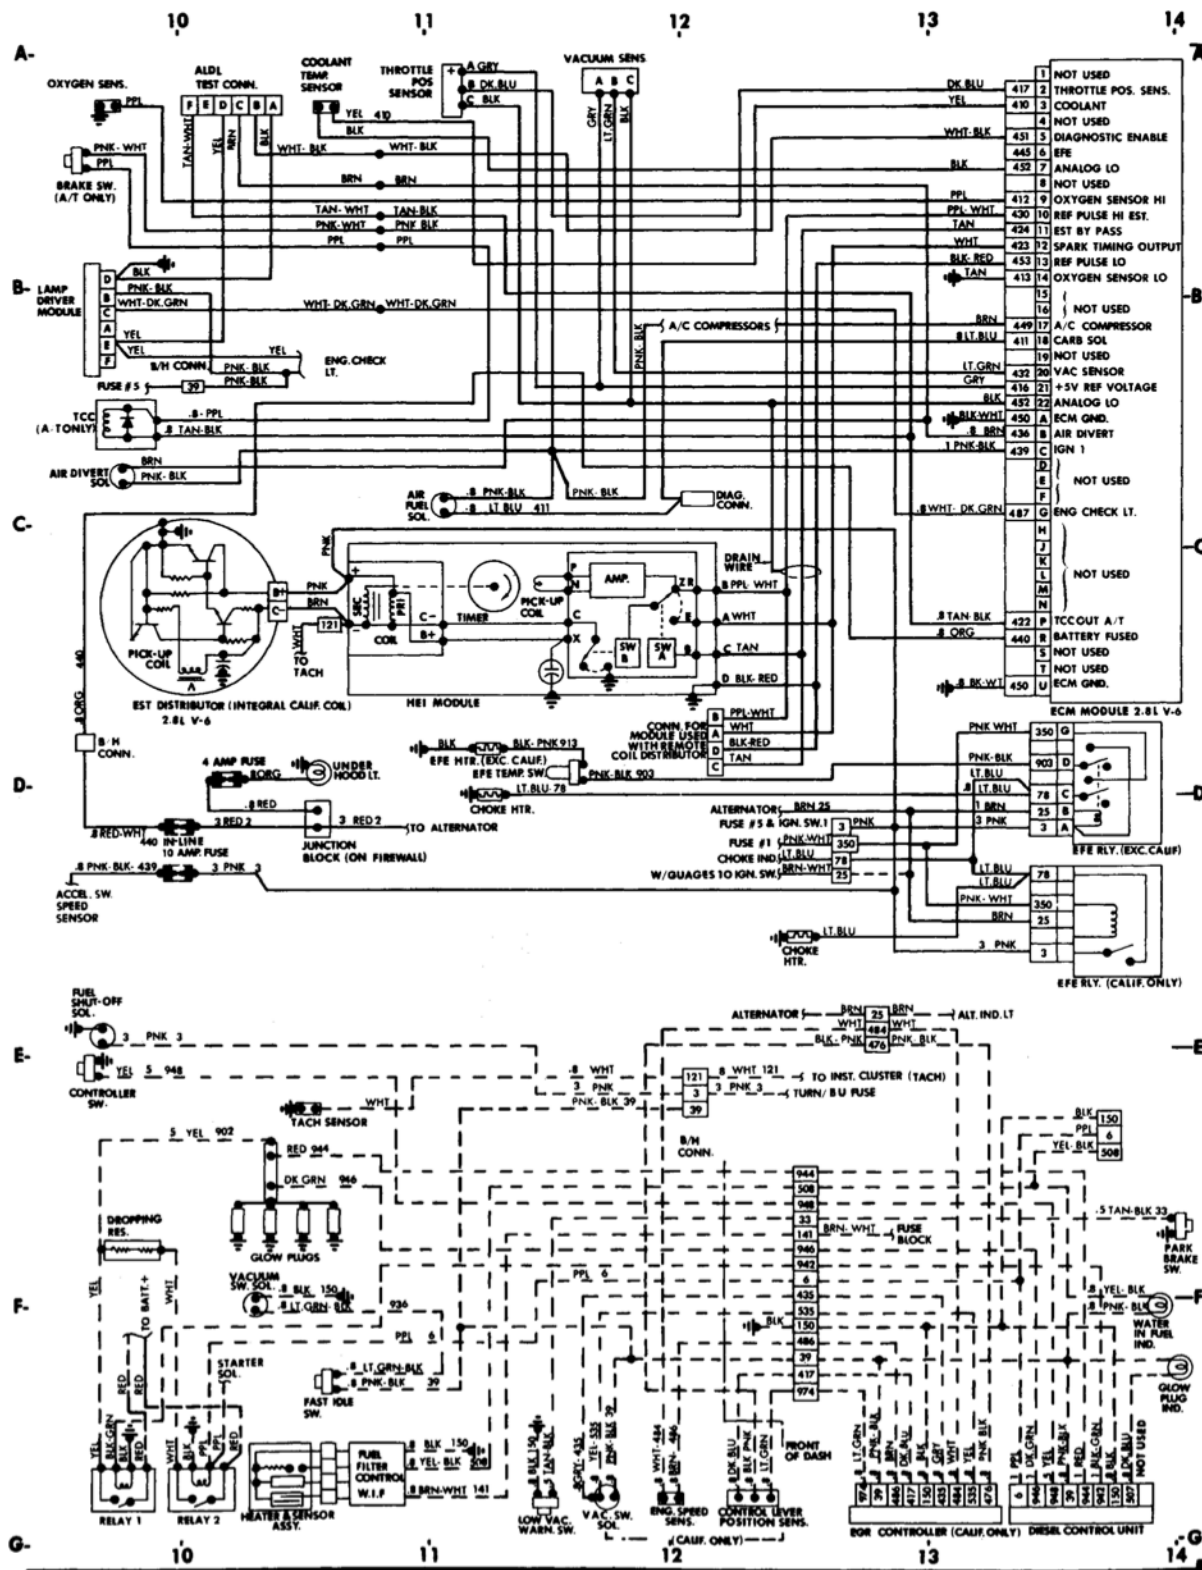


Fig. 3: Engine Compartment (Cont.)



10/30/2009

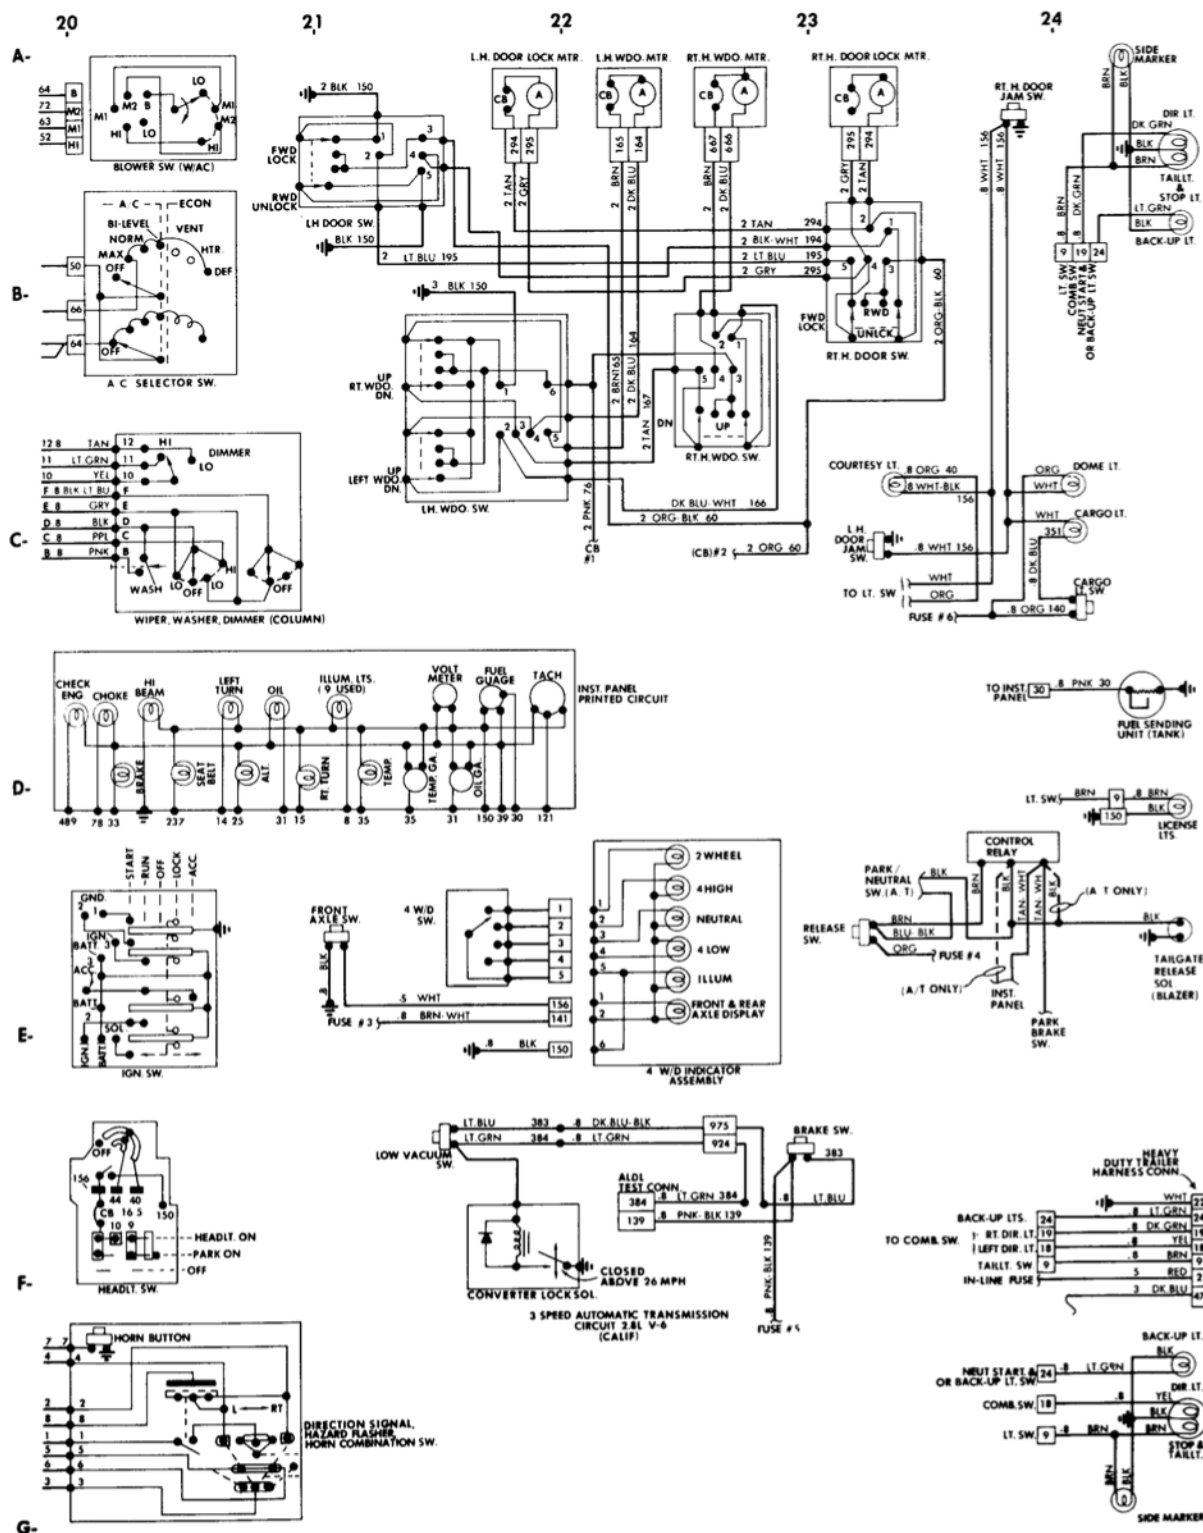


Fig. 5: Instrument Panel, Passenger Compartment & Rear Lights