


POWER DISTRIBUTION

Component Index

- Alarm and Relay Control Unit
- Anti-theft Horn
- Condenser Fan Relay
- Dash Fuse Box
- Data Link Connector (DLC) C-39 (16-BLK)
- Electronic Hydraulic Control Unit (EHCU)
- Fog Lamp Relay
- Fuel Pump Relay
- Fuse/Relay Box
- Generator
- Heater-A/C Relay
- Ignition Switch
- Intelligent Suspension Control unit
- Junction Connector A
- Junction Connector B
- LH Headlamp Relay
- Meter Assembly
- Option Fuse Box
- PCM Main Relay
- Powertrain Control Module (PCM)
- Rear Defogger Relay
- RH Headlamp Relay
- Starter
- Starter Relay
- T.O.D. Control Unit


POWER DISTRIBUTION

Circuit Schematic

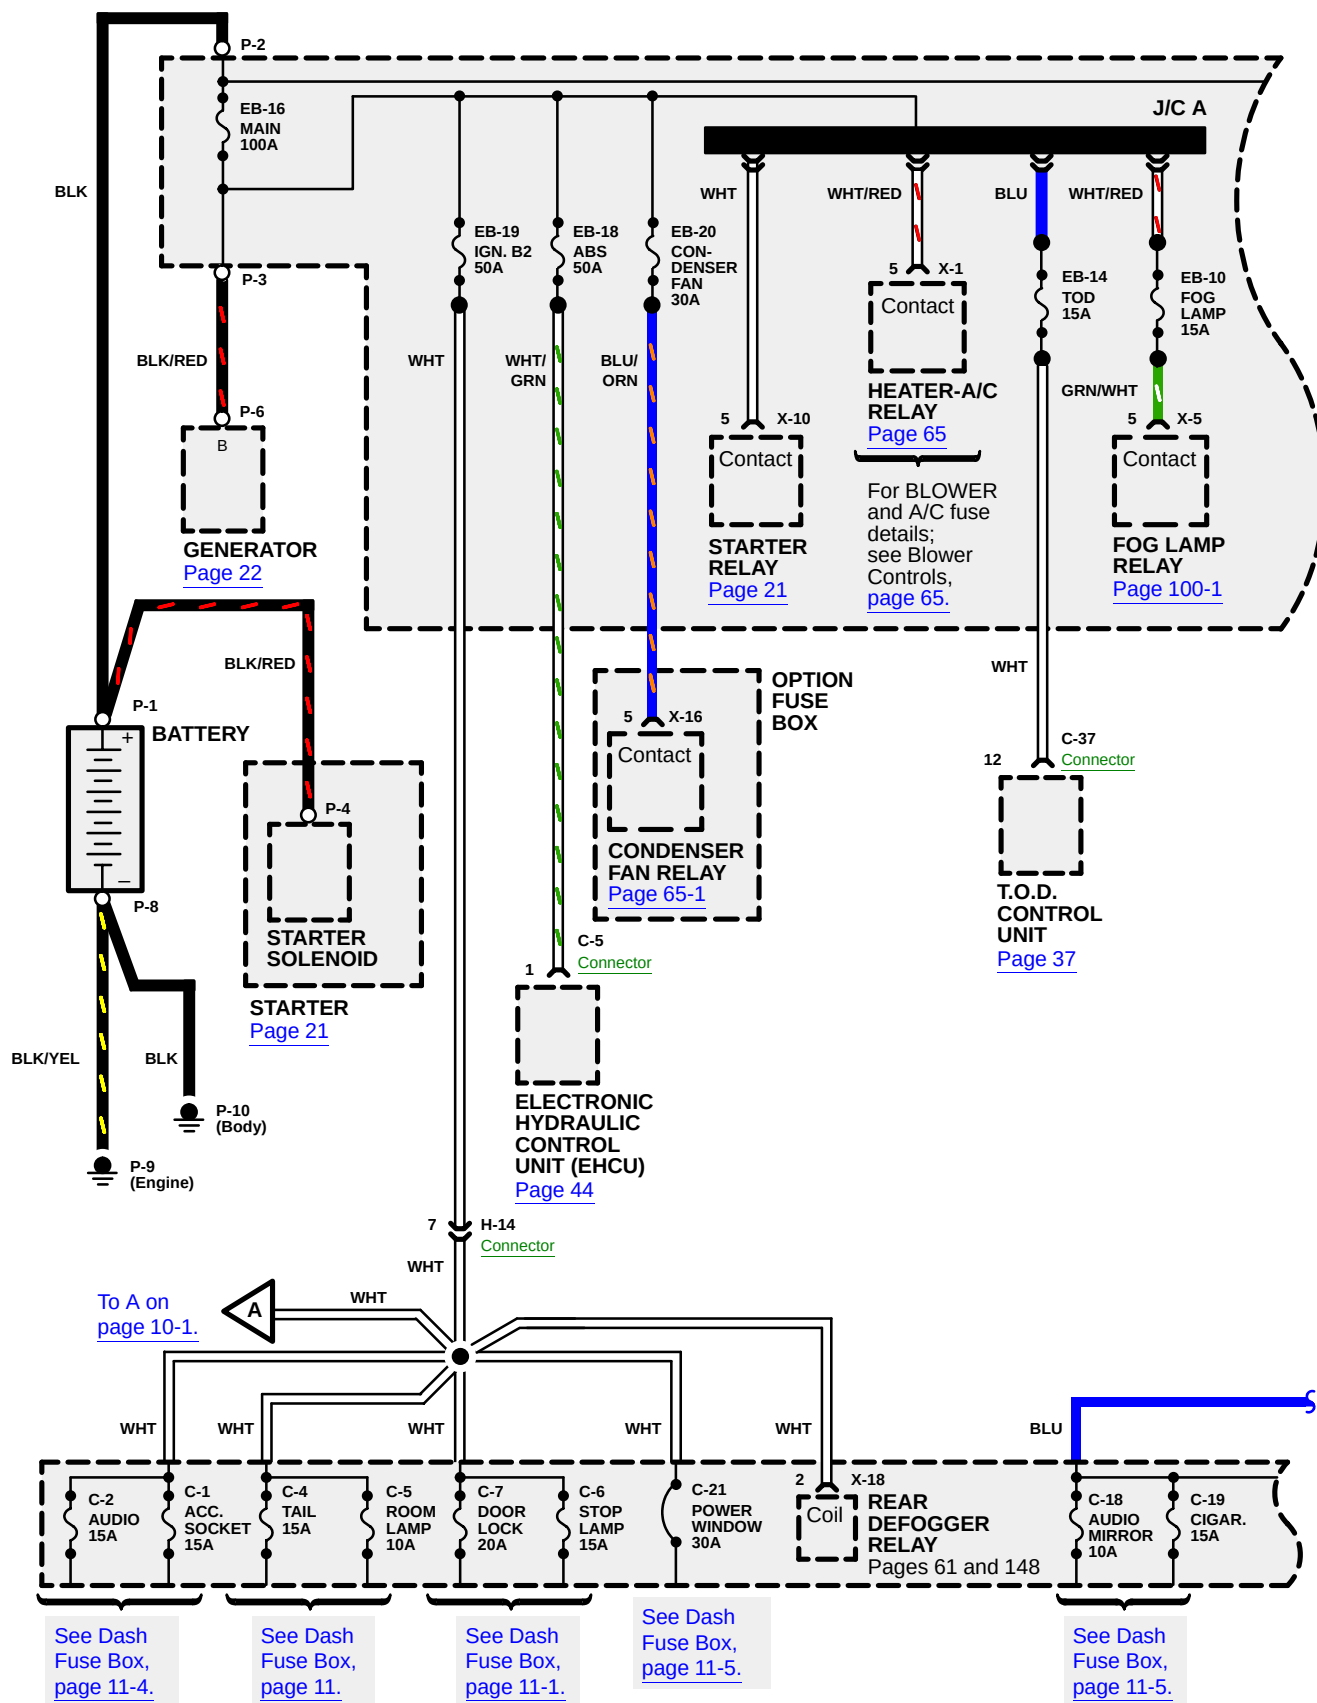


POWER DISTRIBUTION

Circuit Schematic

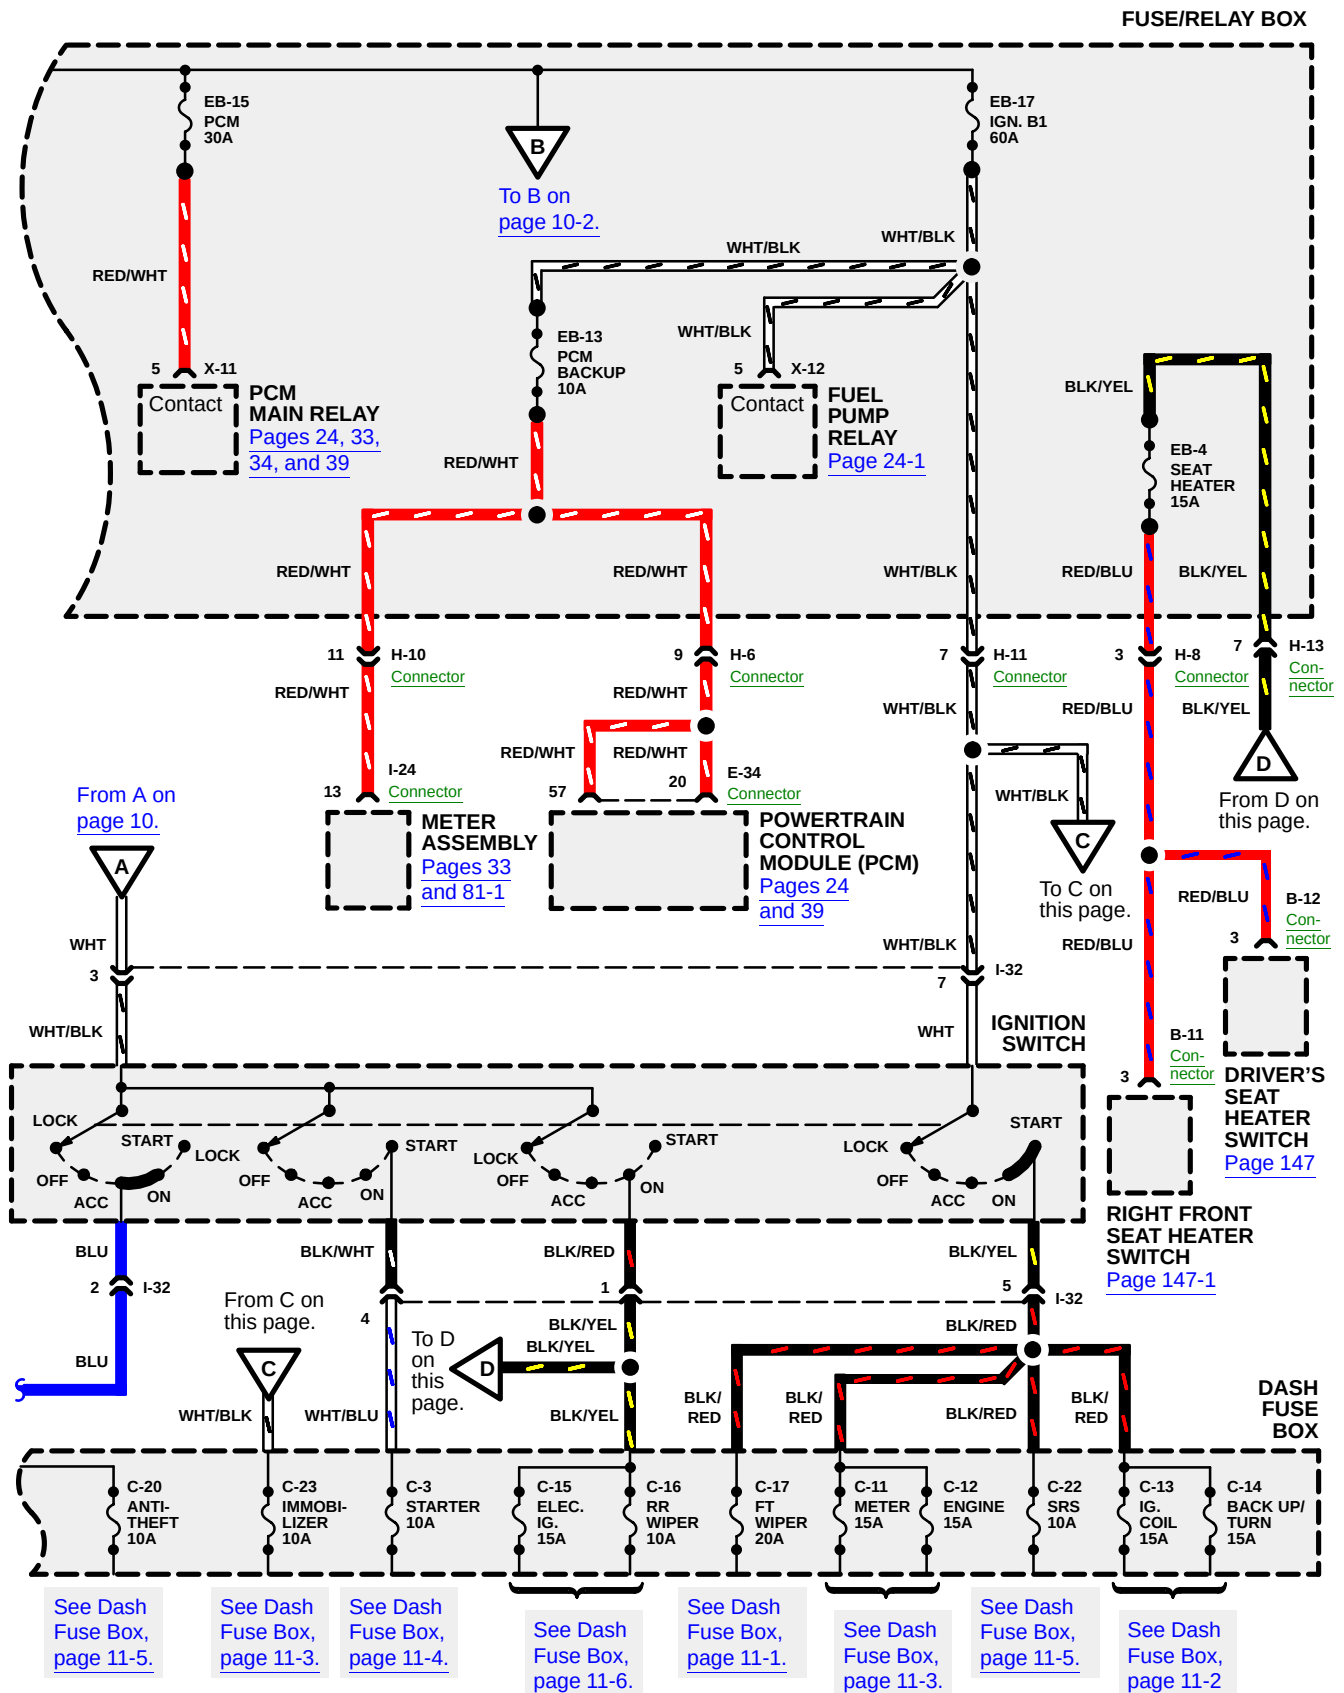

POWER DISTRIBUTION

Circuit Schematic

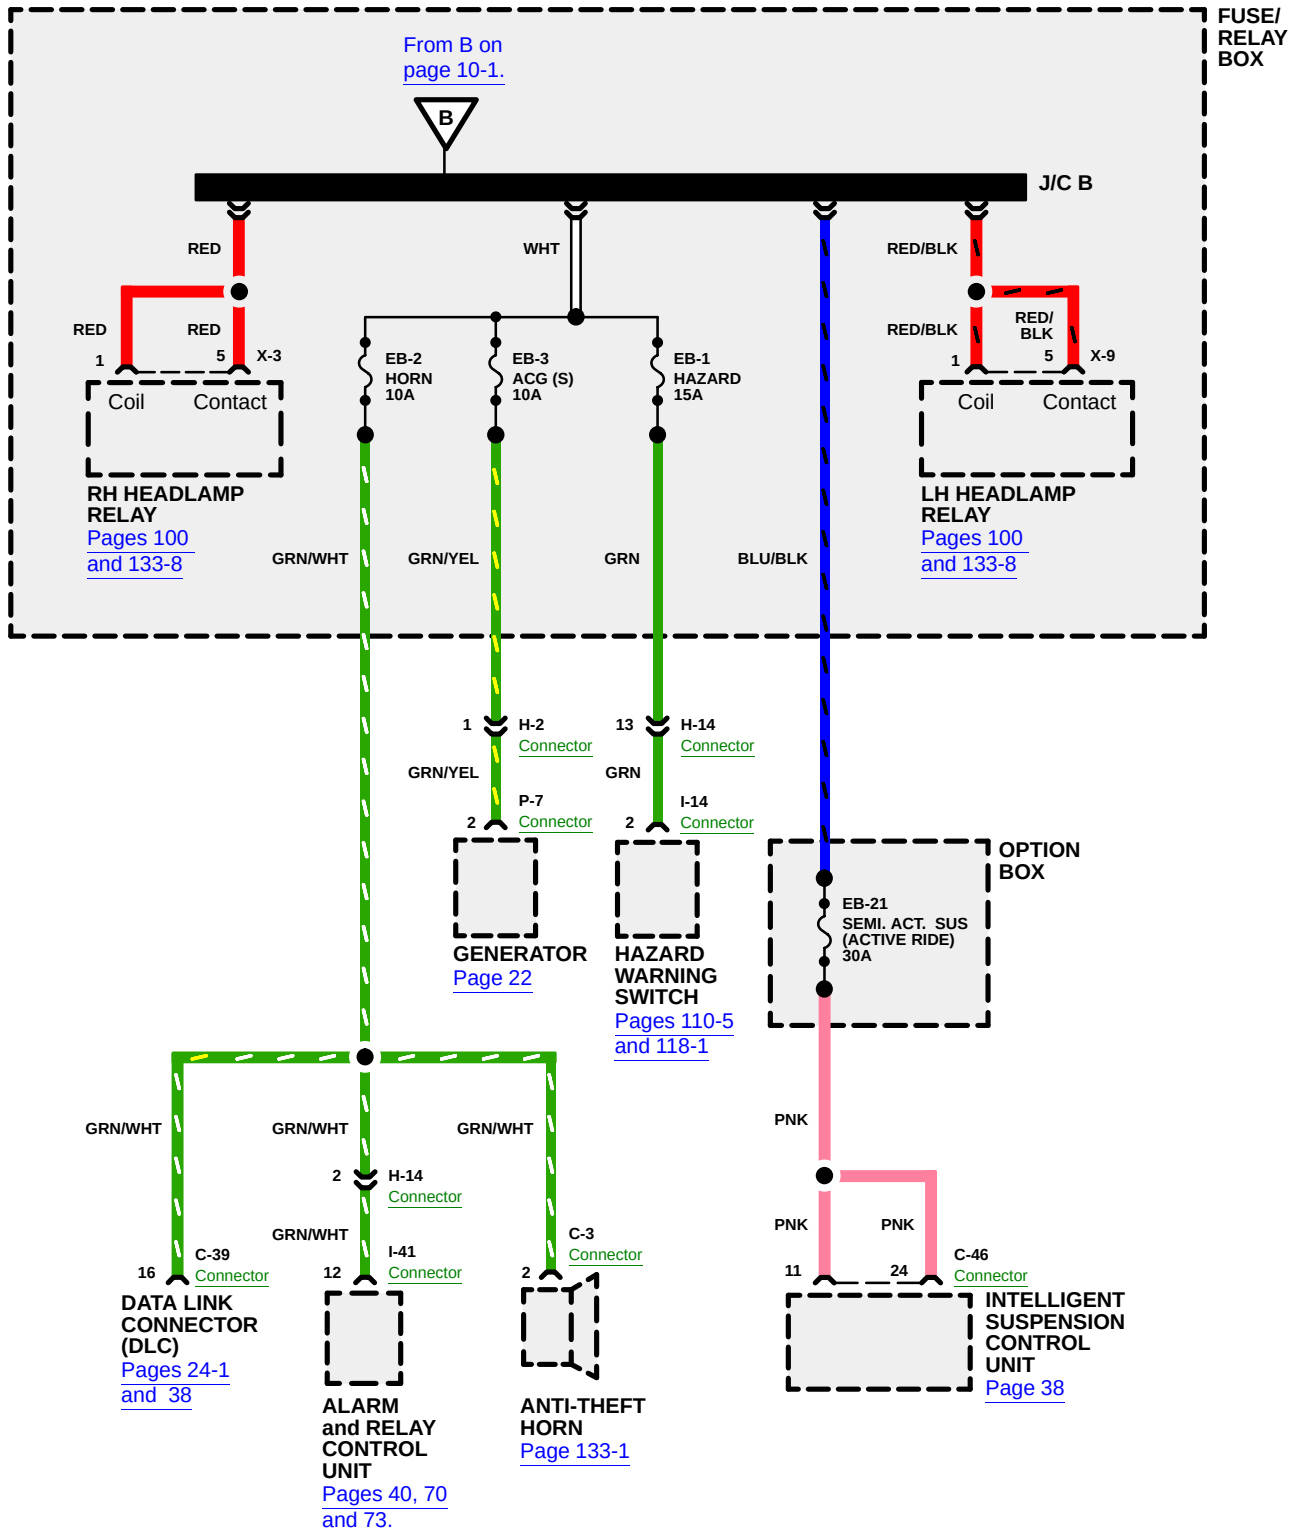

POWER DISTRIBUTION

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Alarm and Relay Control Unit . . . Right side of I/P	60
Anti-theft Horn Right rear of engine compartment	9
Condenser Fan Relay Right rear of engine compartment	10
Dash Fuse Box Behind left I/P side trim panel	42
Data Link Connector (DLC)	
C-39 (16-BLK) Below left side of I/P, near engine hood release	45
Electronic Hydraulic Control	
Unit (EHCU) Right rear corner of engine compartment	16
Fog Lamp Relay In the fuse & relay box	
Fuel Pump Relay In the fuse & relay box	13
Fuse/Relay Box Right side of engine compartment	8
Generator Lower right front of engine	35
Heater-A/C Relay In the fuse & relay box	13
Ignition Switch On the steering column	
Intelligent Suspension	
Control unit Below center of I/P	68
Junction Connector A In the fuse & relay box	14
Junction Connector B In the fuse & relay box	14
LH Headlamp Relay In the fuse & relay box	11
Meter Assembly Left side of I/P	55
Option Box Right side of the engine compartment	8
PCM Main Relay In the fuse & relay box	12
Powertrain Control Module	
(PCM) Left side of engine compartment	26
Rear Defogger Relay In the dash fuse box	43
RH Headlamp Relay In the fuse & relay box	12
Starter Bottom left side of engine	37
Starter Relay In the fuse & relay box	11
T.O.D. Control Unit Below left side of I/P	51
Connector	
C-3 (2-BLK) Right rear of engine compartment	9
H-2 (2-GRY) Right rear of engine compartment	10
H-4 (52-GRY) Left side of engine compartment	31
H-6 (16-BLK) Left side of engine compartment	31
H-8 (12-BLU) Right side of engine compartment	31
H-10 (22-BLK) Behind left kick panel	46
H-13 (19-WHT) Behind right kick panel	62
H-14 (19-BLK) Behind right kick panel	62
H-17 (12-WHT) Behind right kick panel	61
I-24 (30-GRN) Top of meter assembly	54
I-32 (8-WHT) Under left side of I/P	48
P-1 Positive battery terminal	
P-2 In the fuse & relay box	14
P-3 In the fuse & relay box	14
P-4 Bottom left side of engine	37
P-6 Lower right front of engine	35
P-7 (2-BLK) Lower right front of engine	35
P-8 Negative battery terminal	
Ground	
P-9 Right side of engine compartment	15
P-10 Right side of engine compartment	15