


DASH FUSE BOX

Component Index

Accessory Socket Relay	MID Display
Alarm and Relay Control Unit	Multi-plexed Indicator Control Unit
Audio and Switch Assembly	No. 1 Ignition Coil
Auto A/C Control Unit	No. 2 Ignition Coil
Automatic Transmission Mode Switch	No. 3 Ignition Coil
Brake Switch	No. 4 Ignition Coil
Condenser	No. 5 Ignition Coil
Dash Fuse Box	No. 6 Ignition Coil
Electronic Hydraulic Control Unit (EHCU)	PCM Main Relay
Evaporative Emissions (EVAP) Canister Cut Valve	Power Window Relay
Evaporative Emissions (EVAP) Canister Purge Valve	Powertrain Control Module (PCM)
Fuse/Relay Box	Rear Defogger Relay
GPS Receiver Unit	Rear Wiper Motor
Heater-A/C Relay	Sensing and Diagnostic Module (SDM)
Immobilizer Control Unit	Shift Lock Relay
Intelligent Suspension Control Unit	Shift-On-The-Fly Controller
Ion Sensing Module	T.O.D. Control Unit
Keyless Entry and Anti-Theft Control Unit	Taillamp Relay
Mass Air Flow (MAF) Sensor	Variable Intake Manifold Vacuum Switching Valve
Meter Assembly	Windshield Wiper Motor
MID Control Unit	


DASH FUSE BOX

Circuit Schematic

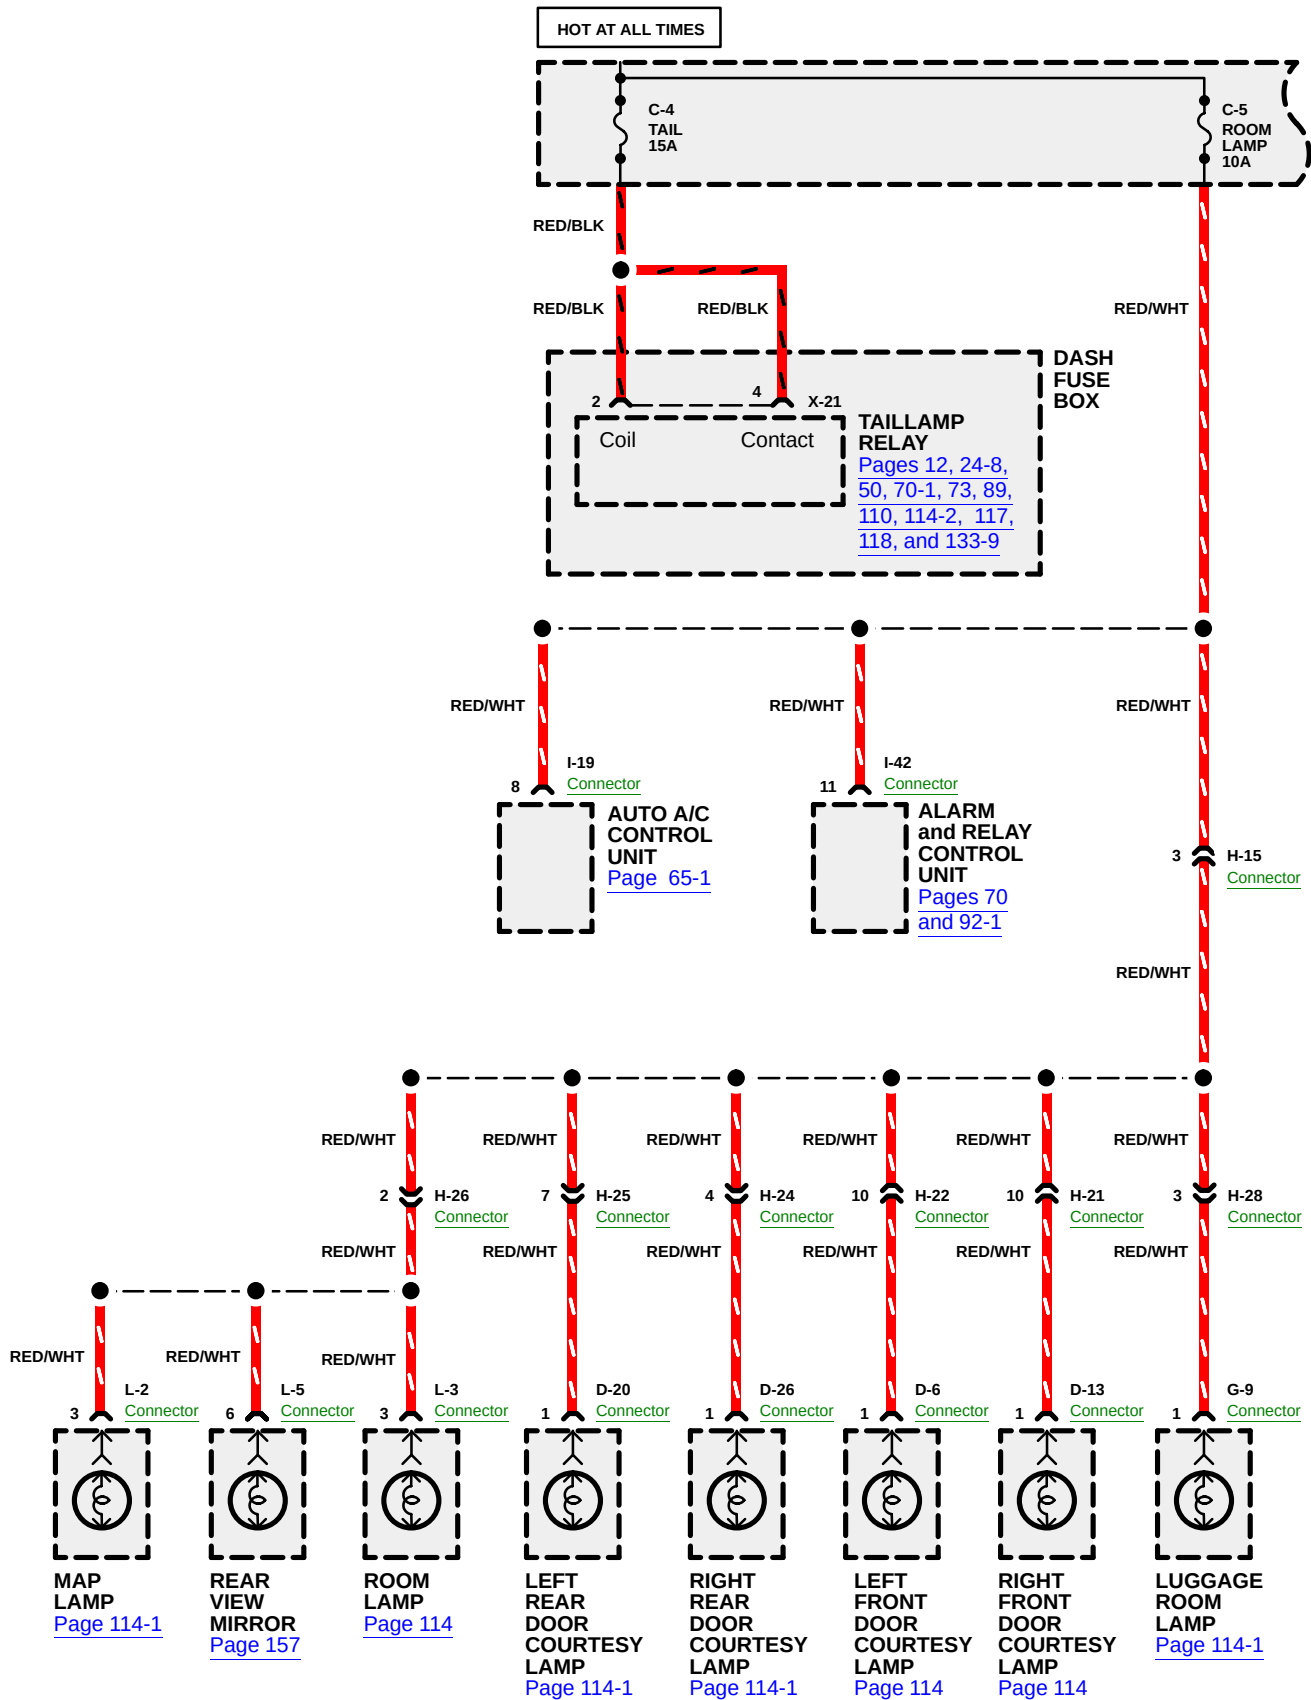


DASH FUSE BOX

Circuit Schematic

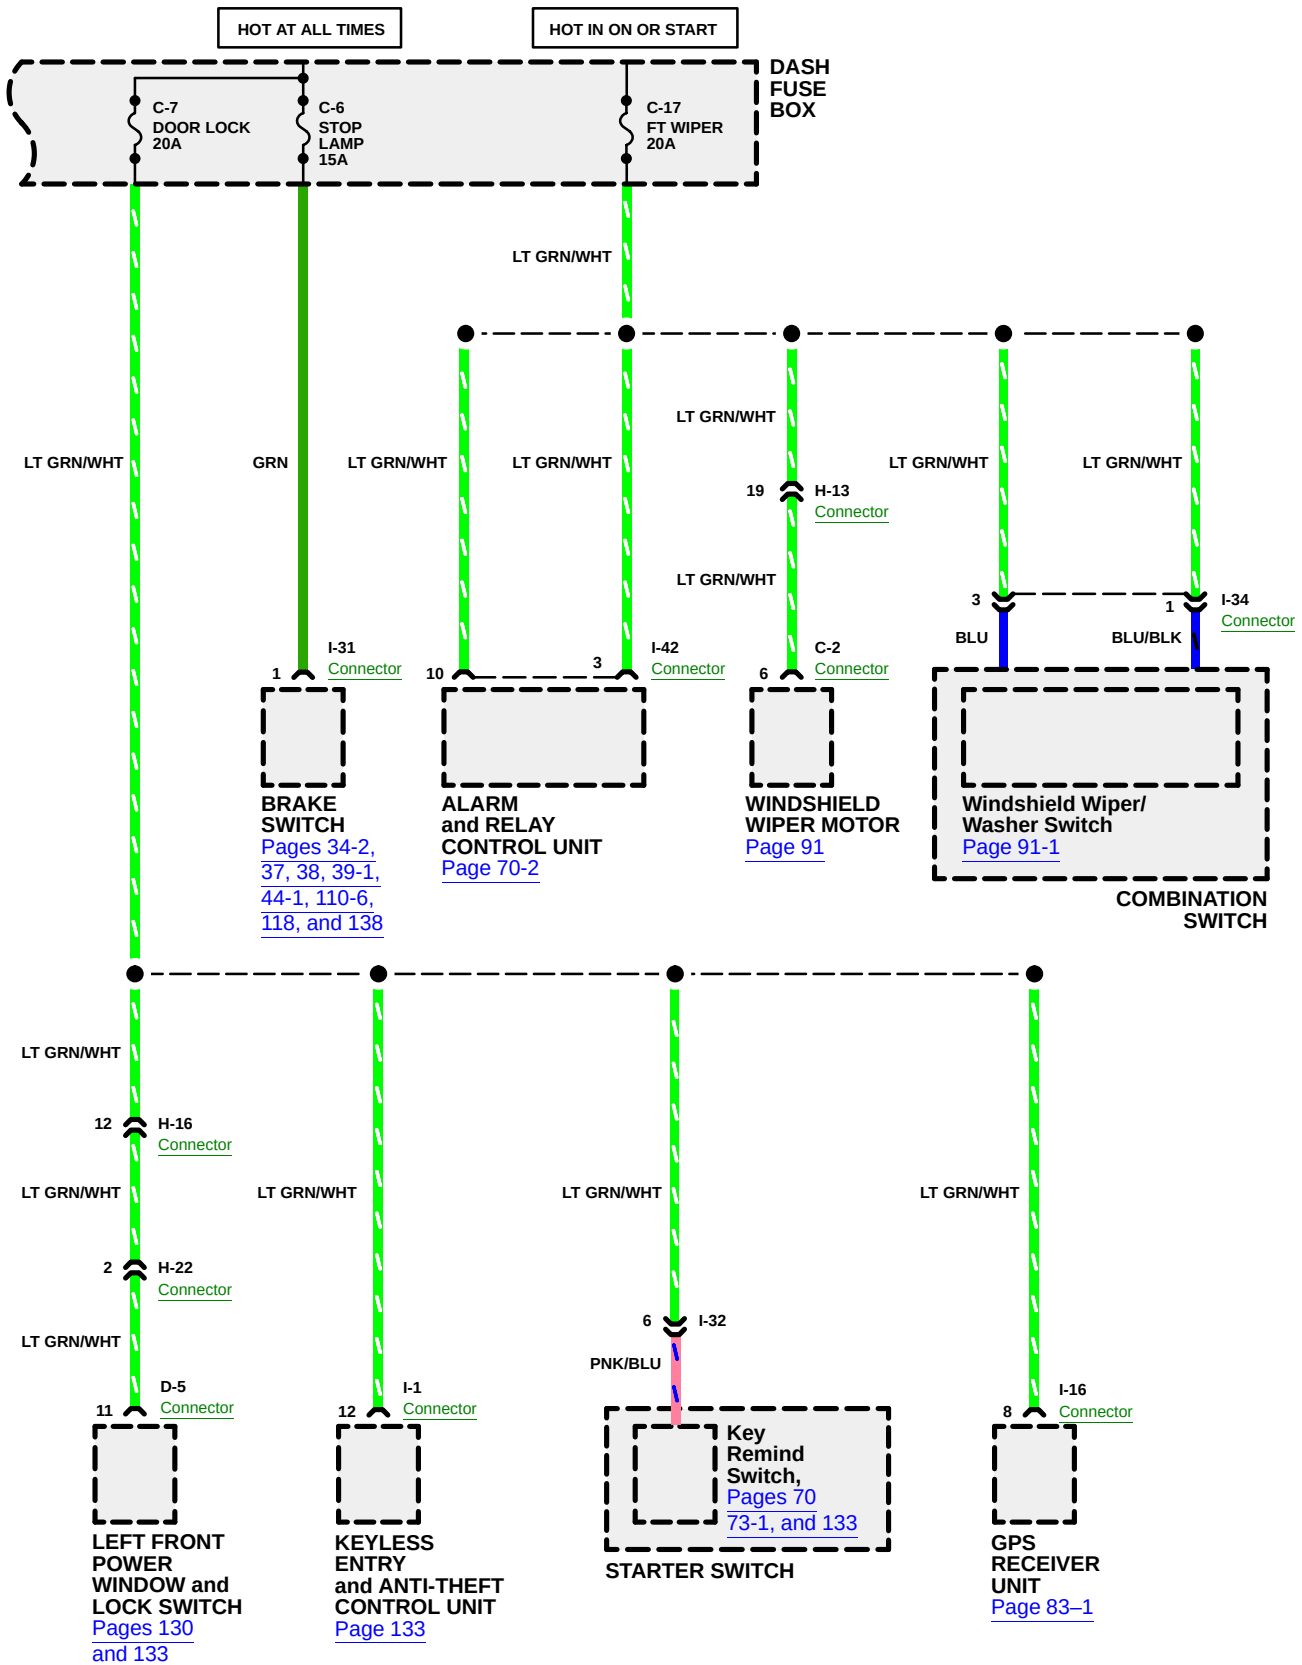


DASH FUSE BOX

Circuit Schematic

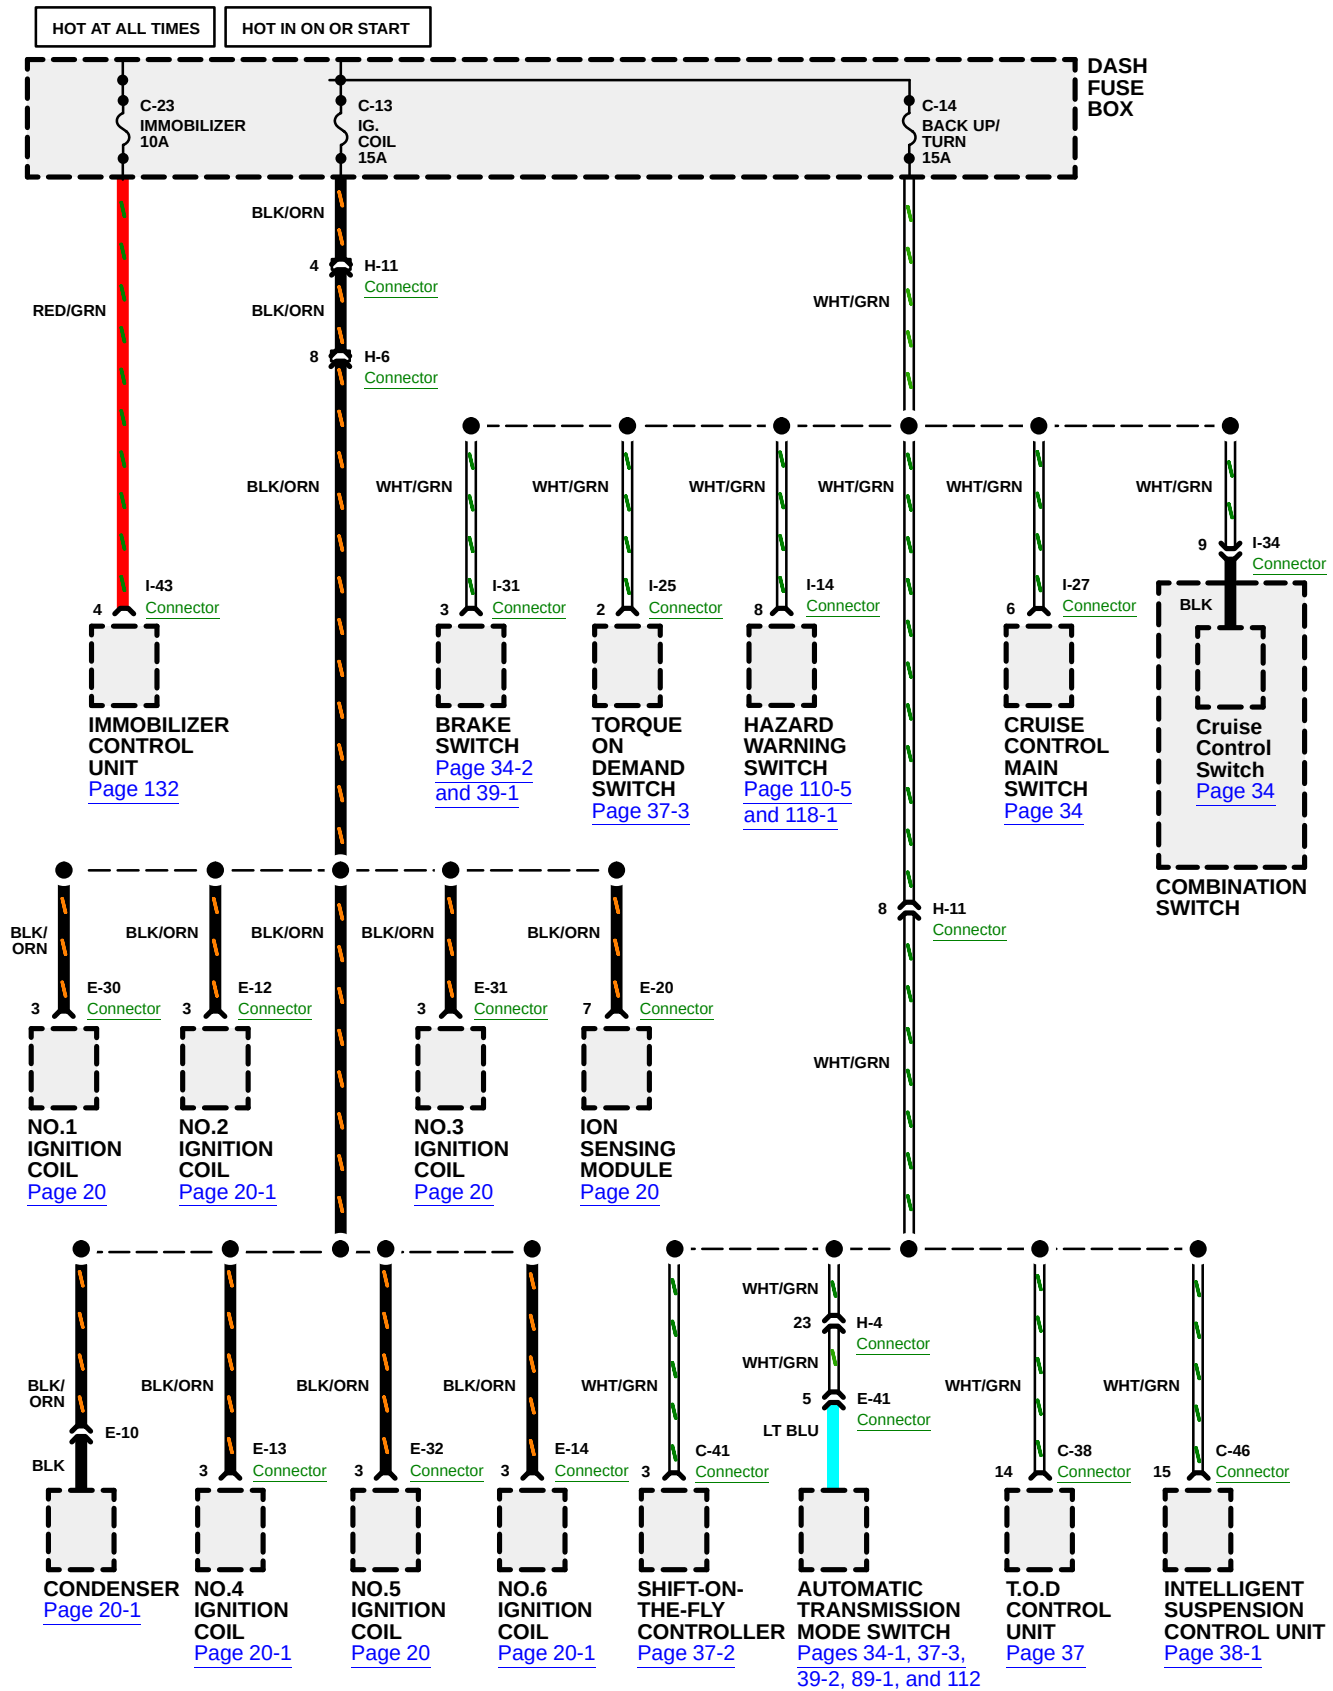


DASH FUSE BOX

Circuit Schematic

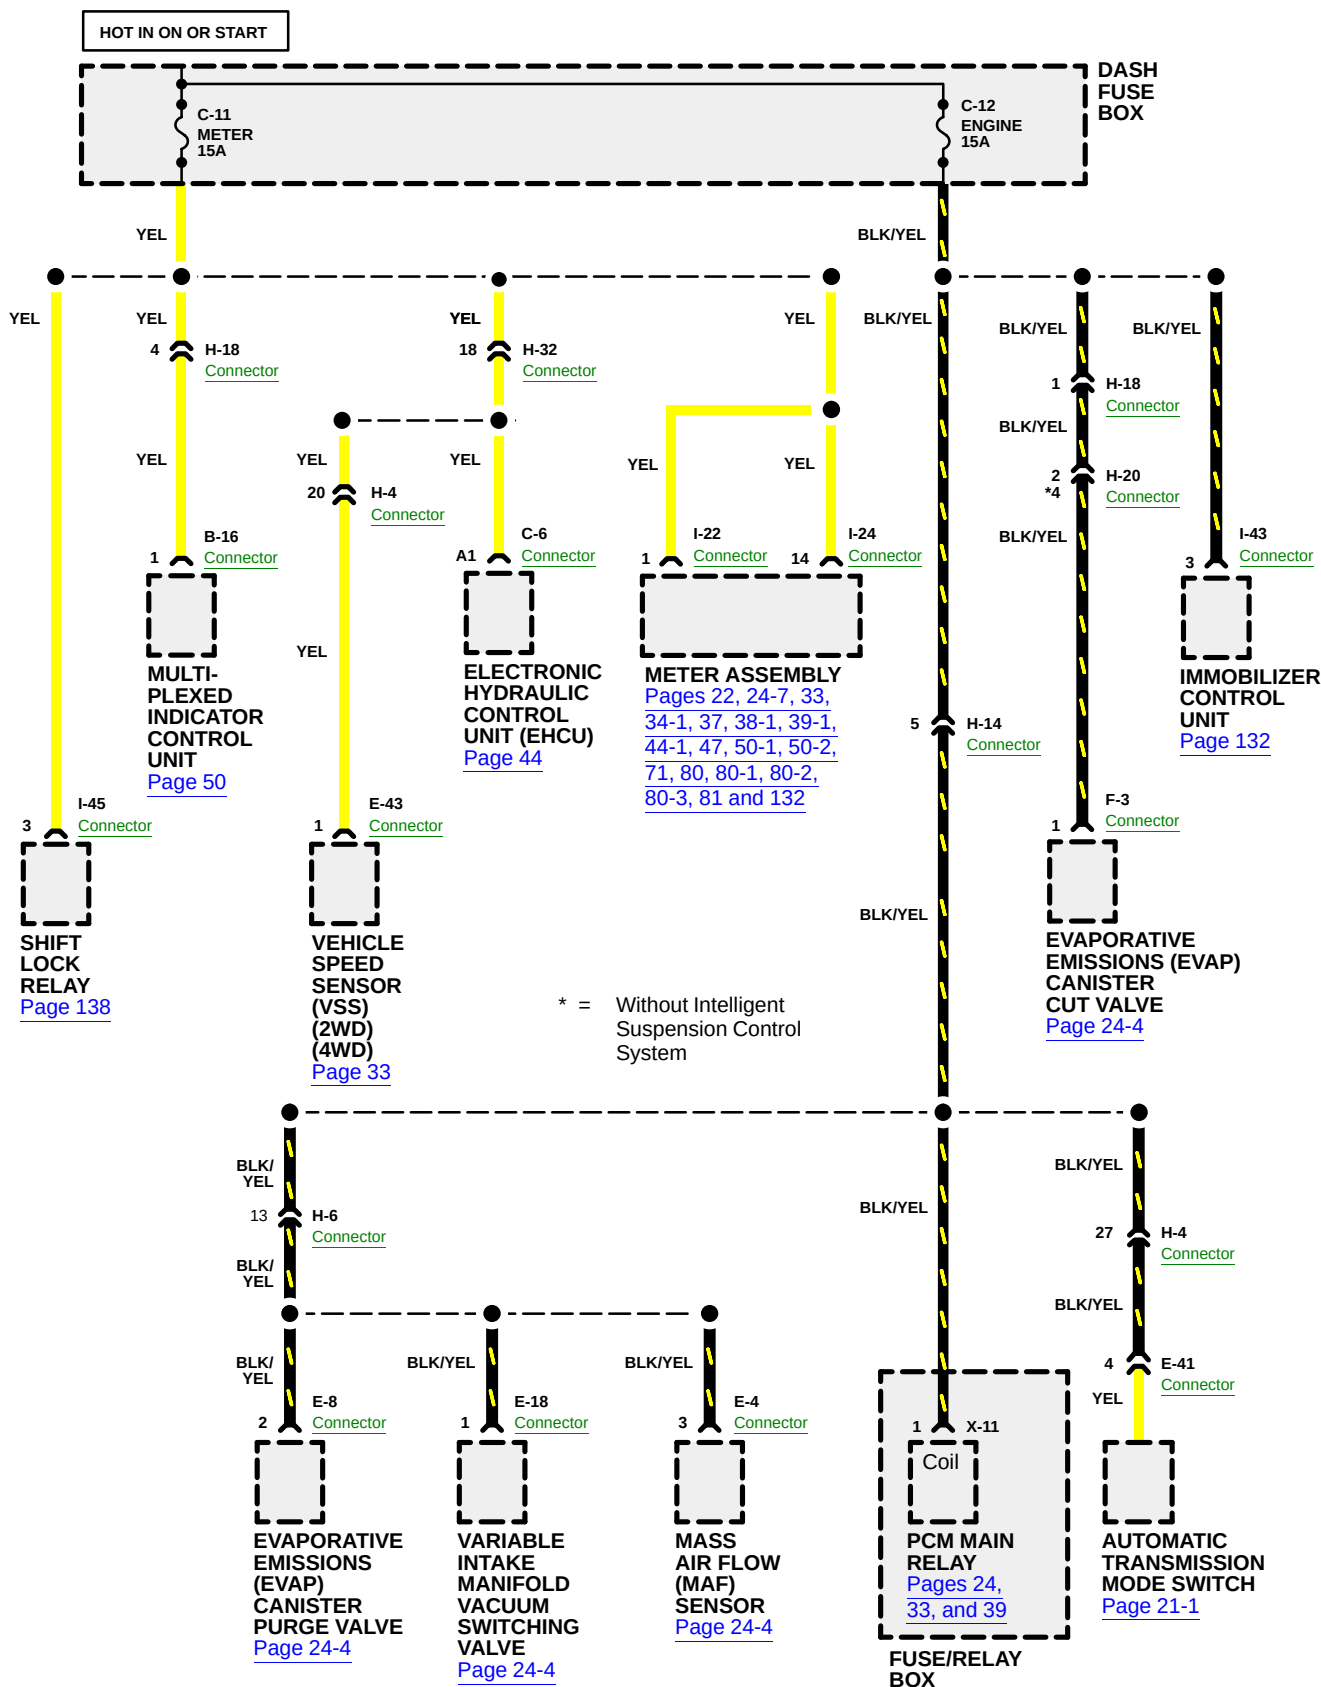


DASH FUSE BOX

Circuit Schematic

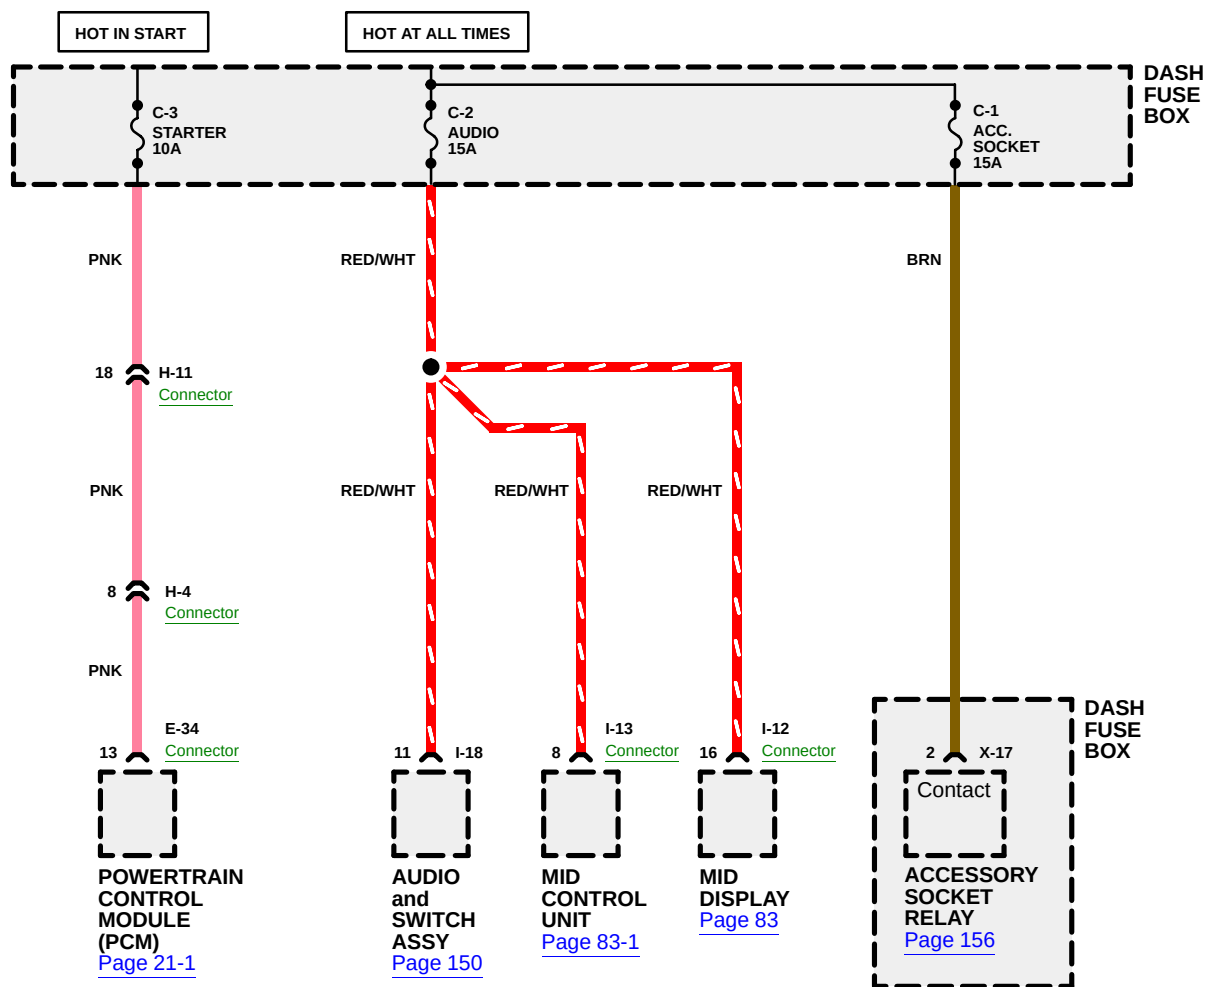


DASH FUSE BOX

Circuit Schematic

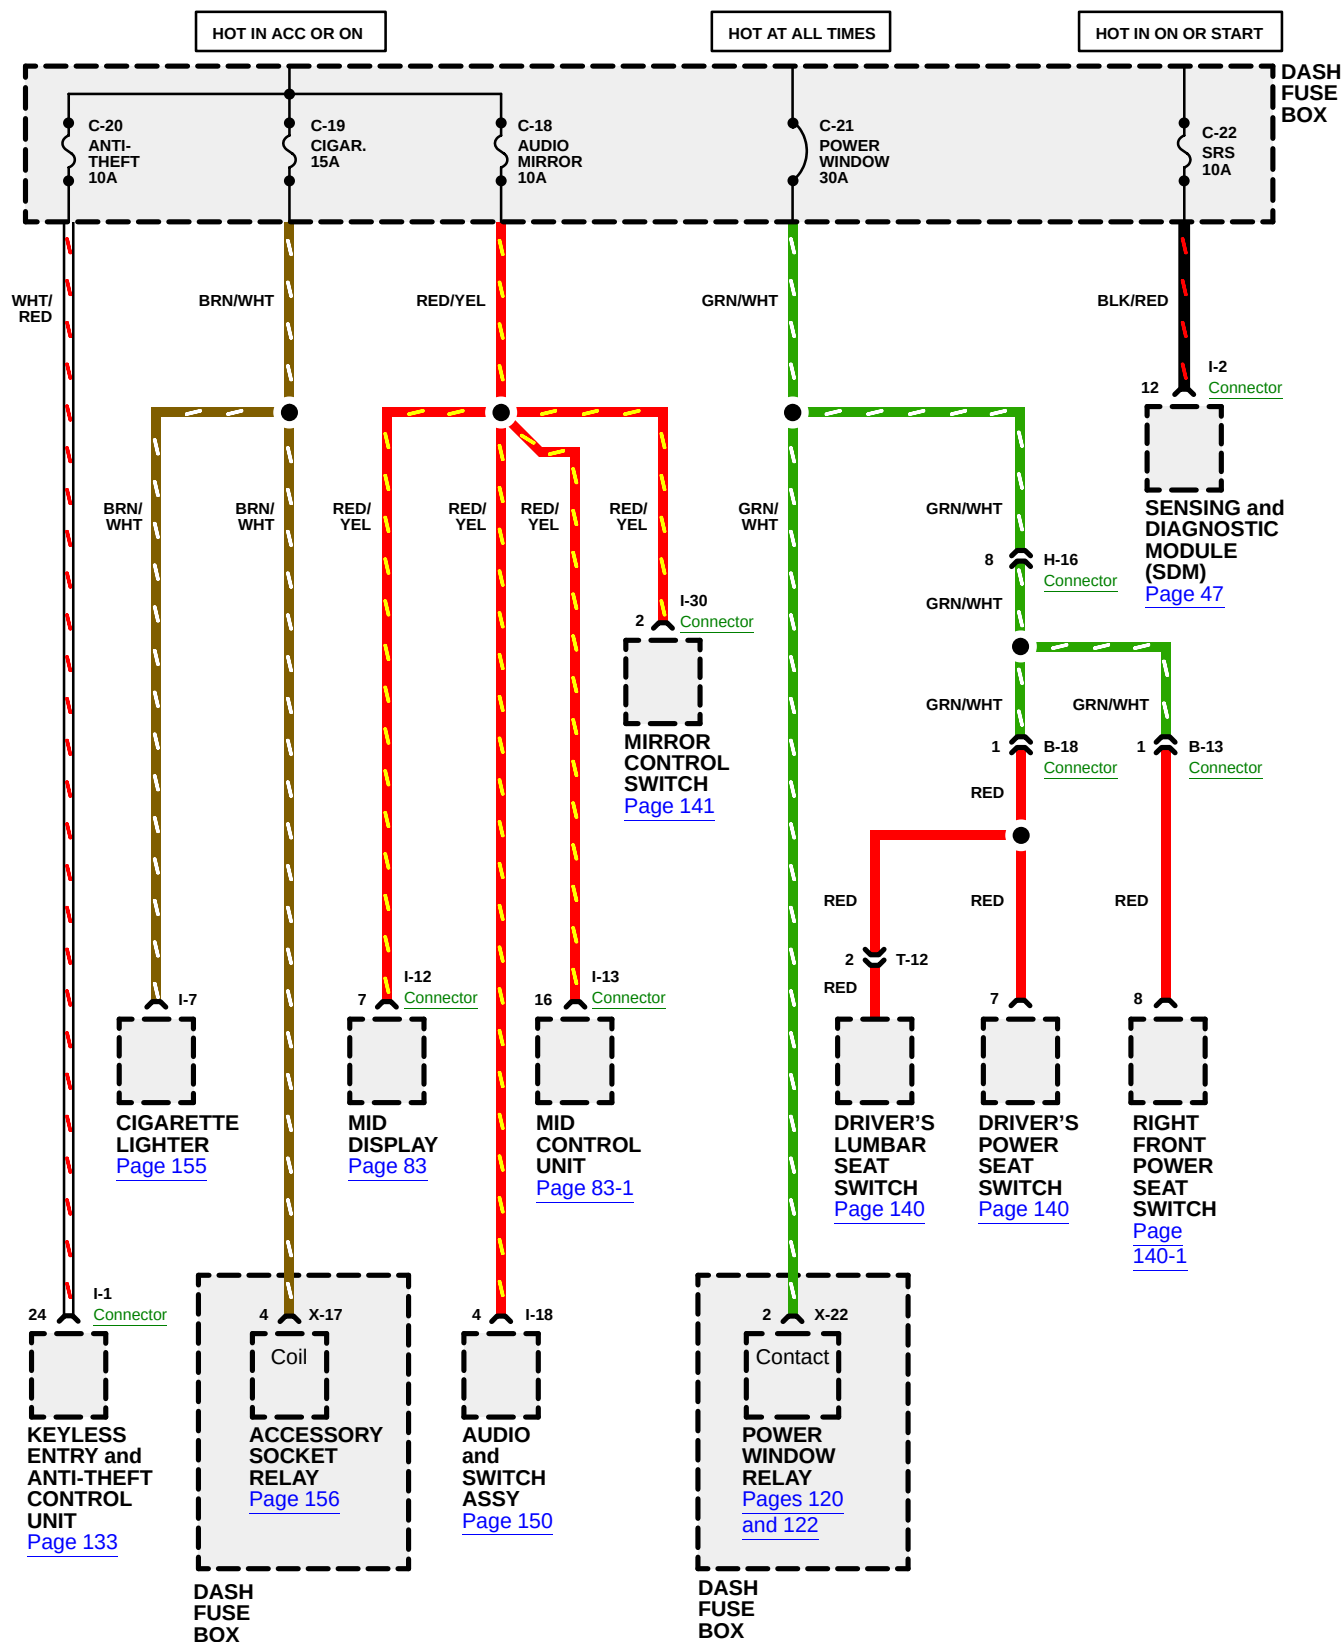

DASH FUSE BOX

Circuit Schematic

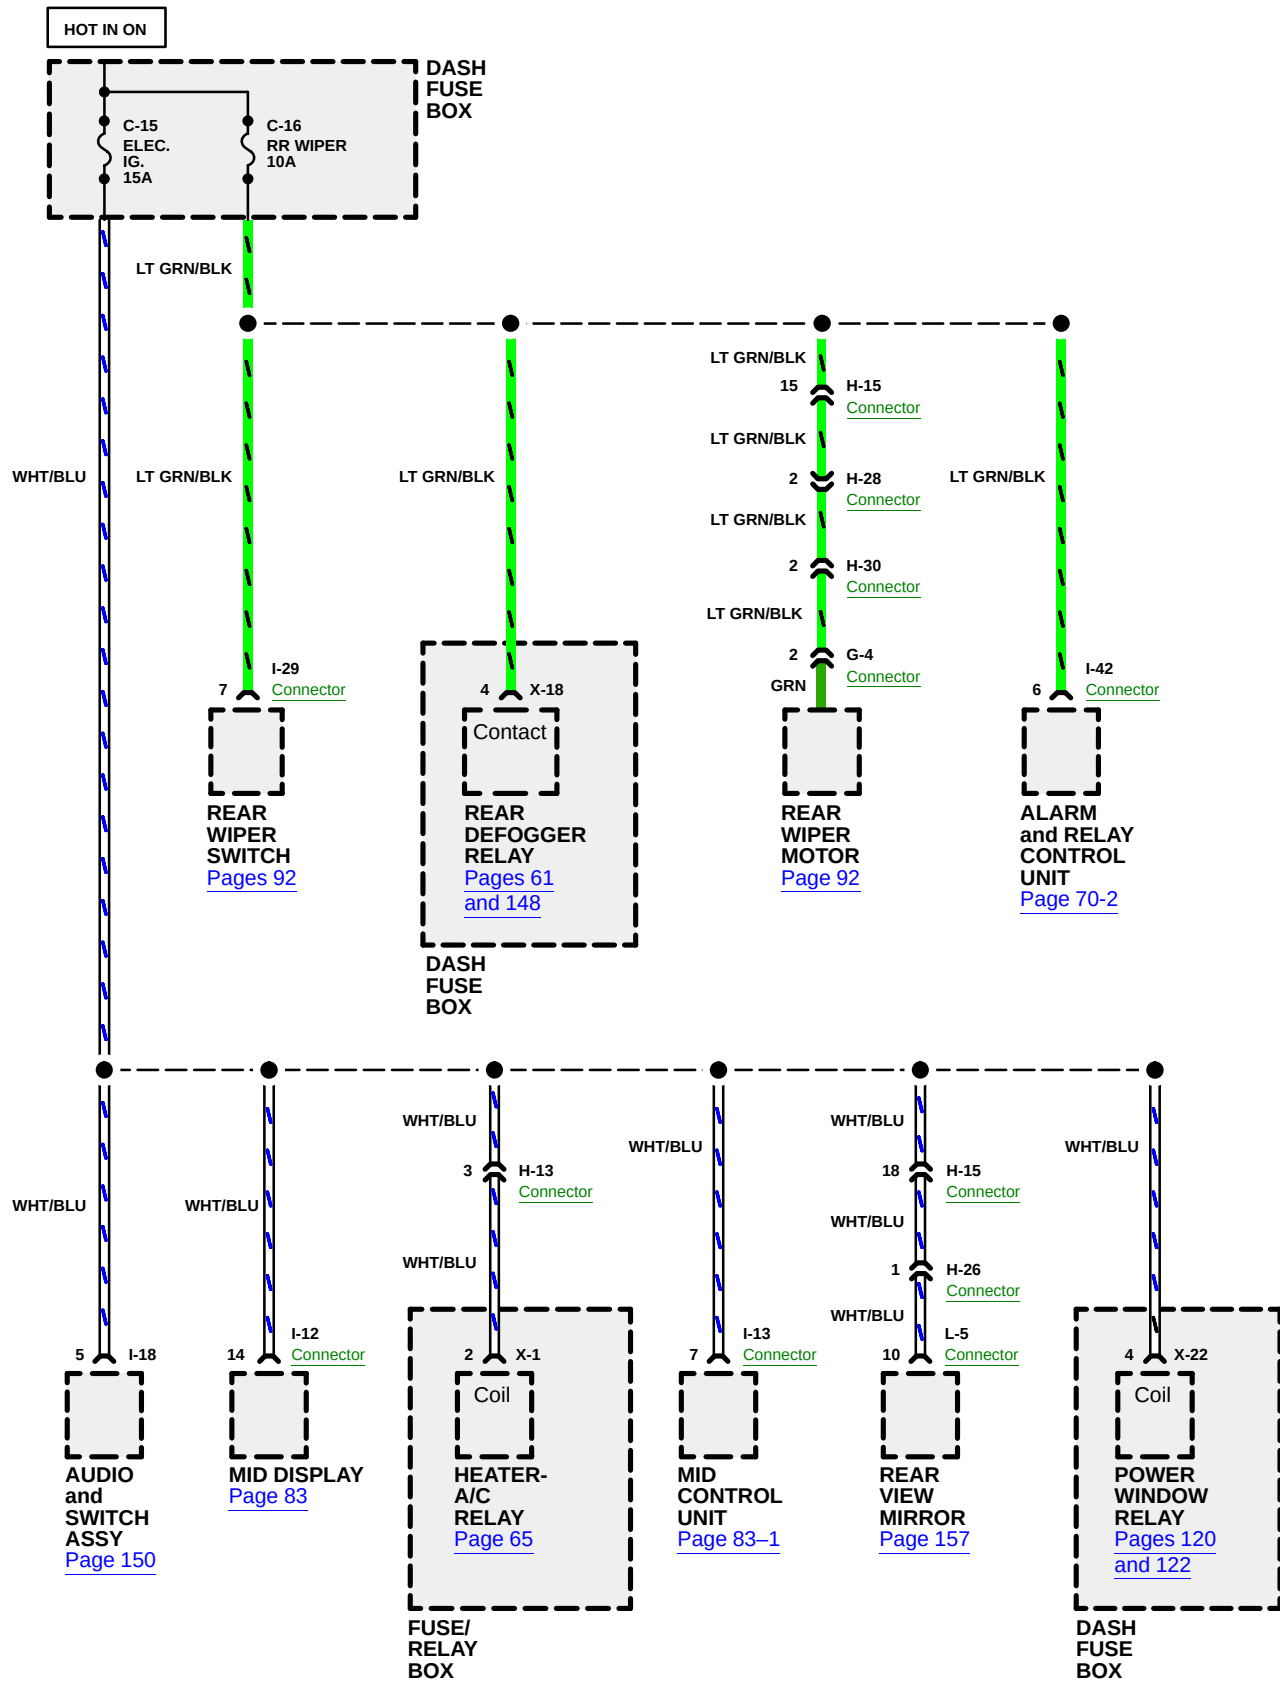

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Accessory Socket Relay	In the dash fuse box 43
Alarm and Relay Control Unit . . .	Right side of I/P 60
Audio and Switch Assembly	Center of I/P
Auto A/C Control Unit	Center of I/P
Automatic Transmission	
Mode Switch	Left side of automatic transmission 101
Brake Switch	Below left side of I/P 51
Condenser	Right front of engine 32
Dash Fuse Box	Behind left I/P side trim panel 42
Electronic Hydraulic Control	
Unit (EHCU)	Right rear corner of engine compartment 16
Evaporative Emissions (EVAP)	
Canister Cut Valve	Rear underside of vehicle 114
Evaporative Emissions (EVAP)	
Canister Purge Valve	Top front of engine 17
Fuse/Relay Box	Right side of engine compartment 8
GPS Receiver Unit	Top center of I/P 64
Heater-A/C Relay	In the fuse & relay box 13
Immobilizer Control Unit	In right side of steering column 118
Intelligent Suspension	
Control Unit	Below center of I/P 68
Ion Sensing Module	Top rear of engine 18
Keyless Entry and	
Anti-Theft Control Unit	Right side of I/P 60
Mass Air Flow (MAF) Sensor . . .	Left front of engine 28
Meter Assembly	Left side of I/P 55
MID Control Unit	Center of I/P 65
MID Display	Center of I/P 65
Multi-plexed Indicator	
Control Unit	Under rear of console 72
No. 1 Ignition Coil	Right side of engine 21
No. 2 Ignition Coil	Left side of engine 22
No. 3 Ignition Coil	Right side of engine 21
No. 4 Ignition Coil	Left side of engine 22
No. 5 Ignition Coil	Right side of engine 21
No. 6 Ignition Coil	Left side of engine 22
PCM Main Relay	In the fuse & relay box 12
Power Window Relay	In the dash fuse box 43
Powertrain Control Module	
(PCM)	Left side of engine compartment 26
Rear Defogger Relay	In the dash fuse box 43
Rear Wiper Motor	On tailgate door, panel removed 92
Sensing and Diagnostic	
Module (SDM)	Under front of center console 69
Shift Lock Relay	Under center console 70
Shift-On-The-Fly Controller	Behind audio unit 67
T.O.D. Control Unit	Below left side of I/P 51
Taillamp Relay	In the dash fuse box 44
Variable Intake Manifold	
Vacuum	Left side of engine 24
Switching Valve	
Windshield Wiper Motor	Right rear of engine compartment 9

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Connector	Photo No.
B-10 (5-BLK)	Under center console 70
B-13 (6-WHT)	Under passenger seat 116
B-18 (6-WHT)	Under driver's seat 116
C-2 (6-NAT)	Right rear of engine compartment 9
C-41 (6-WHT)	Behind audio unit 67
D-13 (2-GRY)	Right front door 82
D-6 (2-GRY)	Left front door 82
E-10 (1-BLK)	Left front of engine 32
E-12 (3-BLK)	Left side of engine 22
E-13 (3-BLK)	Left side of engine 22
E-14 (3-BLK)	Left side of engine 22
E-30 (3-BLK)	Right side of engine 21
E-31 (3-BLK)	Right side of engine 21
E-32 (3-BLK)	Right side of engine 21
E-41 (8-BLK)	Left side of transmission 101
G-4 (4-NAT)	On tailgate door 92
G-9 (2-WHT)	Center rear of roof 78
H-4 (52-GRY)	Left side of engine compartment 31
H-6 (16-BLK)	Left side of engine compartment 31
H-8 (12-BLU)	Behind right kick panel 61
H-9 (12-BLU)	Behind left kick panel 47
H-10 (22-BLK)	Behind left kick panel 46
H-11 (19-BLK)	Behind left kick panel 46
H-13 (19-WHT)	Behind right kick panel 62
H-14 (19-BLK)	Behind right kick panel 62
H-15 (22-WHT)	Behind left kick panel 47
H-16 (16-WHT)	Behind left kick panel 46
H-17 (12-WHT)	Behind right kick panel 61
H-20 (10-WHT)	Below driver's seat 56
H-21 (22-WHT)	Right front door jam 79
H-22 (22-WHT)	Left front door jam 79
H-24 (6-WHT)	Right "B" pillar 86
H-25 (10-WHT)	Left "B" pillar 85
H-26 (8-WHT)	Behind left side of I/P 52
H-28 (6-WHT)	Left rear side of roof 91
H-30 (6-WHT)	Upper left side of tailgate (panel removed) 89
I-12 (16-WHT)	Center of I/P 65
I-13 (16-WHT)	Center of I/P 65
I-16 (8-BLK)	Center of I/P 64
I-18 (26-GRY)	Center of I/P 66
I-19 (16-GRY)	Center of I/P 66
I-22 (14-GRN)	Top of meter assembly 54
I-24 (30-GRN)	Top of meter assembly 54
I-31 (4-WHT)	Below left side of I/P 51
I-32 (8-WHT)	Under left side of I/P 48
I-34 (13-WHT)	Under left side of I/P 49
L-2 (3-GRY)	Front center of ceiling 75
L-3 (3-NAT)	Center of roof 77
L-5 (2-BLK)	Front of roof 76