


Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views	
INTELLIGENT SUSPENSION SYSTEM Component Index Brake Switch Dash Fuse Box Data Link Connector (DLC) C-39 (16-BLK) Fuse/Relay Box G-Sensor Intelligent Suspension Control unit Junction Connector B Left Front Actuator Assembly Left Rear Actuator Assembly Meter Assembly Option Fuse Box Powertrain Control Module (PCM) Right Front Actuator Assembly Right Rear Actuator Assembly Vehicle Speed Sensor					
Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views	Contd


INTELLIGENT SUSPENSION SYSTEM

Circuit Schematic

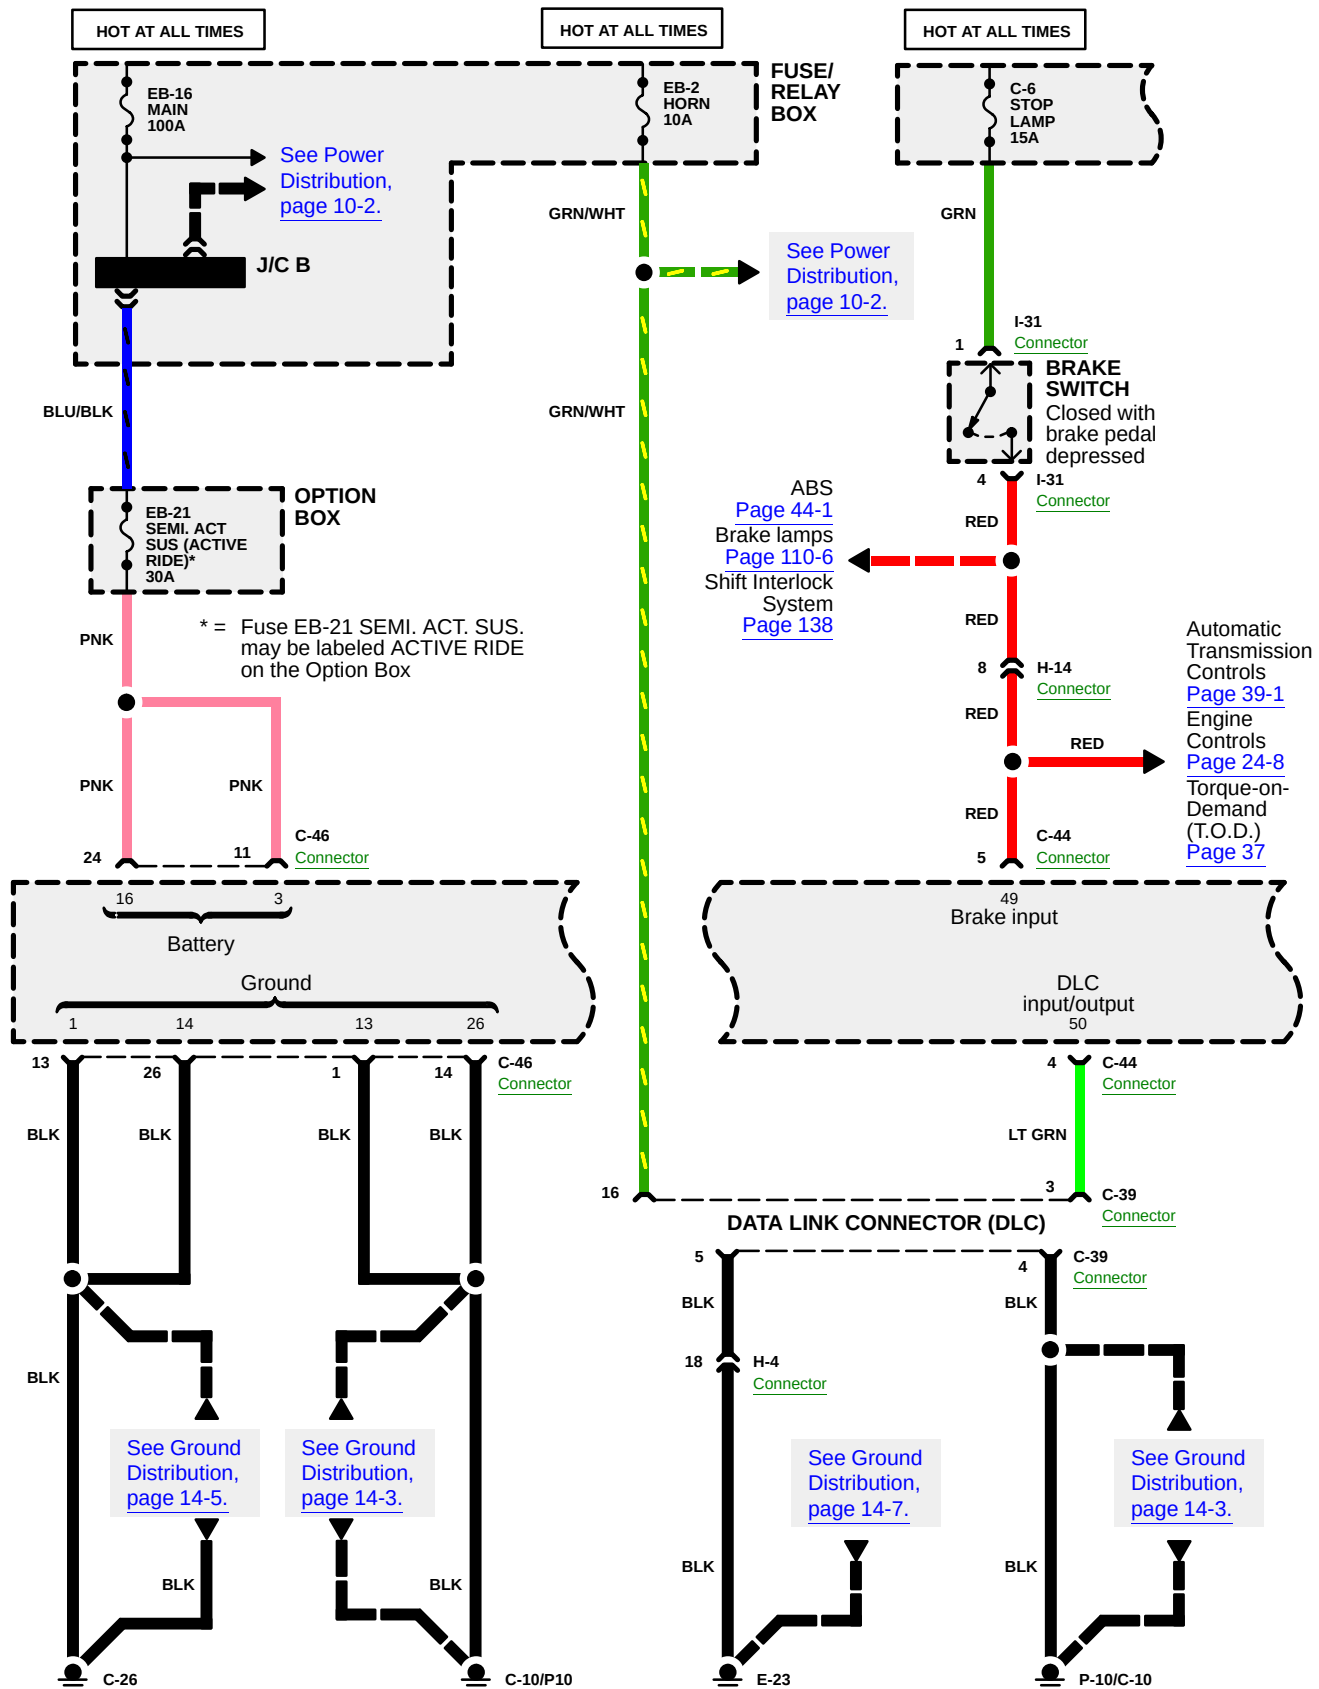


INTELLIGENT SUSPENSION SYSTEM

Circuit Schematic

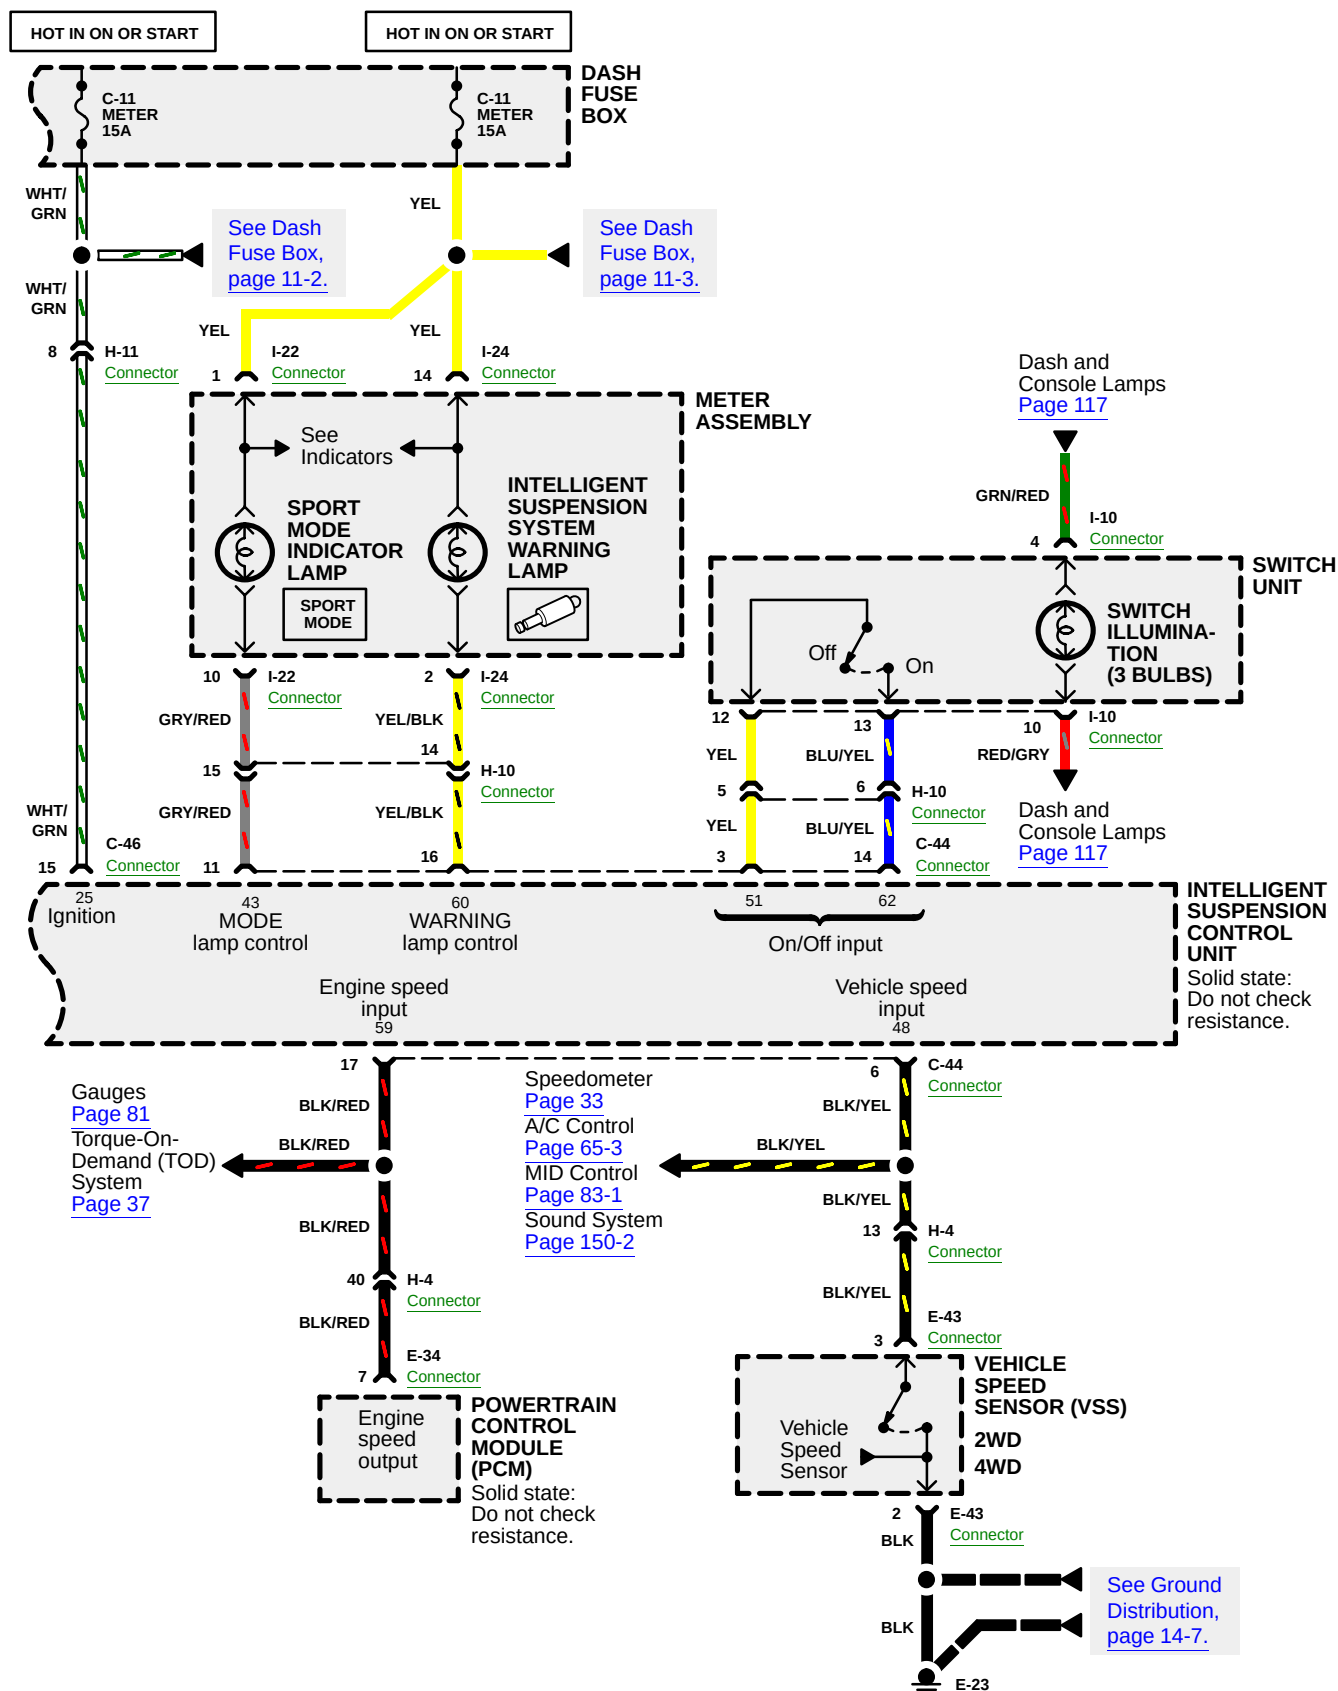


INTELLIGENT SUSPENSION SYSTEM

Circuit Schematic

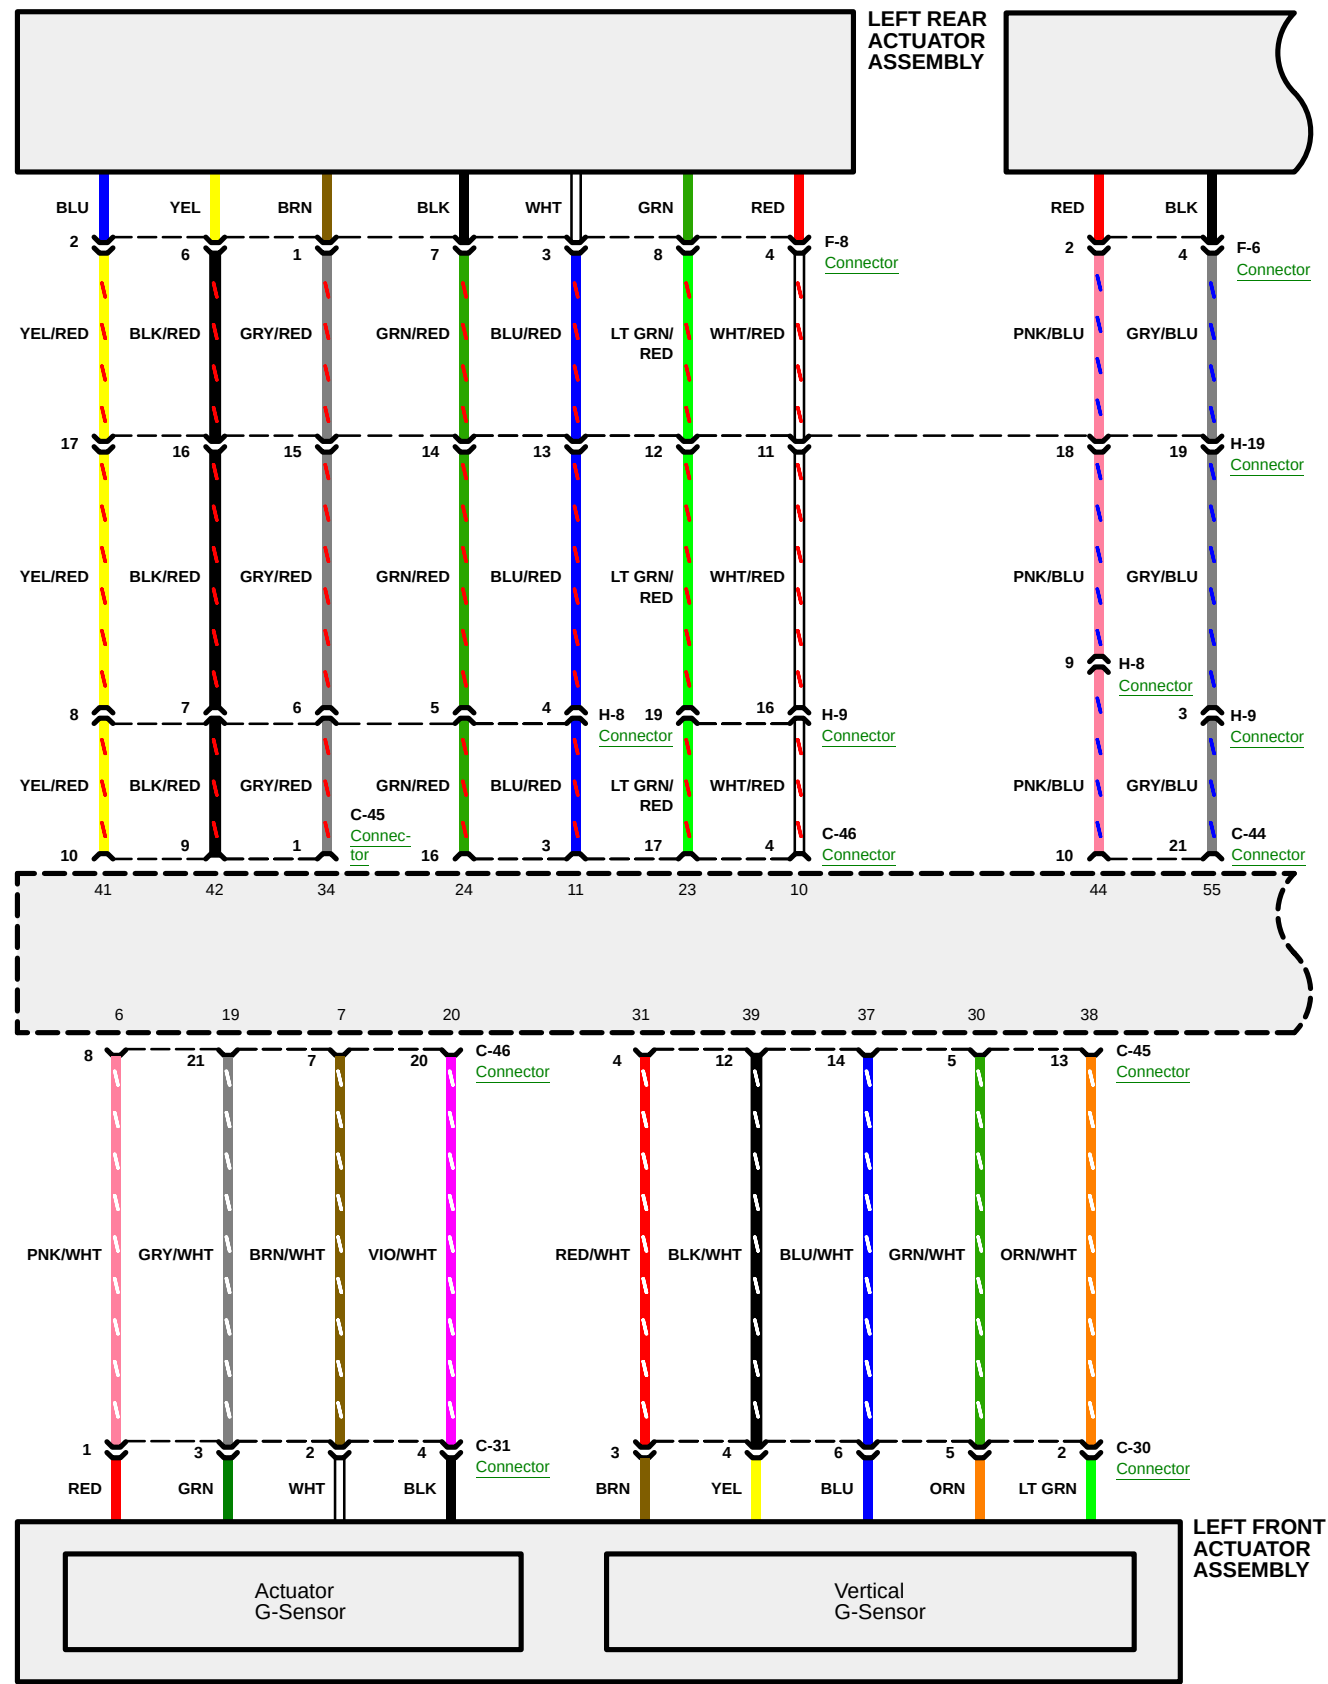

INTELLIGENT SUSPENSION SYSTEM

Circuit Schematic

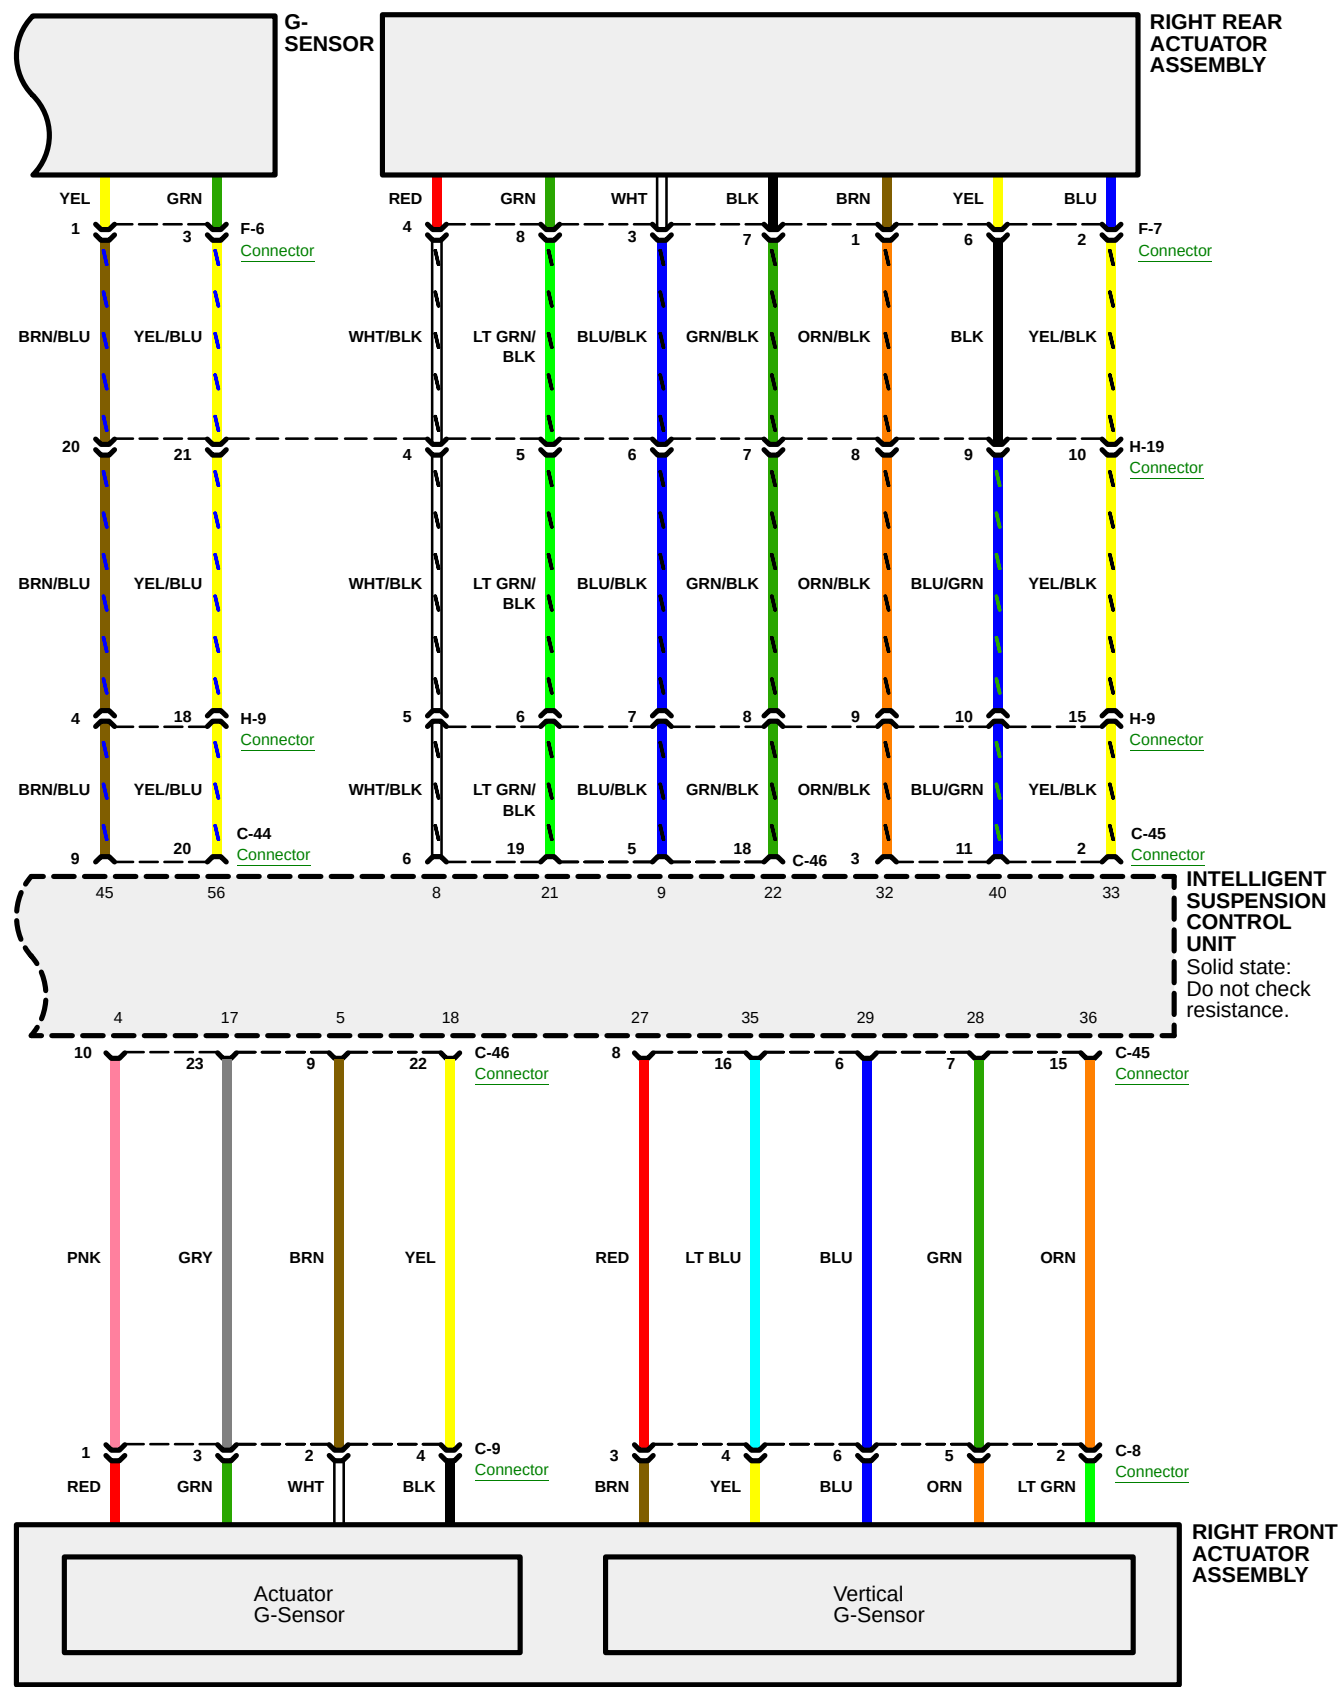

INTELLIGENT SUSPENSION SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Brake Switch	Below left side of I/P 51
Dash Fuse Box	Behind left I/P side trim panel 42
Data Link Connector (DLC)	
C-39 (16-BLK)	Below left side of I/P, near engine hood release 45
Fuse/Relay Box	Right side of engine compartment 8
G-Sensor	Below left rear of vehicle 111
Intelligent Suspension	
Control unit	Below center of I/P 68
Junction Connector B	In the fuse & relay box 14
Left Front Actuator Assembly ...	Inside of left front wheelwell 41
Left Rear Actuator Assembly ...	Below left rear of vehicle 112
Meter Assembly	Left side of I/P 55
Option Box	Right side of the engine compartment 8
Powertrain Control Module	
(PCM)	Left side of engine compartment 26
Right Front Actuator Assembly ..	Inside of right front wheelwell 41
Right Rear Actuator Assembly ...	Below right rear of vehicle 112
Vehicle Speed Sensor (2WD) ...	Right side of transmission 99
Vehicle Speed Sensor (4WD) ...	Rear of transfer case 109
Connector	
C-8 (6-GRY)	Right side of engine compartment 15
C-9 (4-BLK)	Right side of engine compartment 15
C-30 (6-GRY)	Left side of engine compartment 29
C-31 (4-BLK)	Left side of engine compartment 29
F-6 (4-BLK)	Below left rear of vehicle 111
F-7 (8-GRY)	Below right rear of vehicle 112
H-4 (52-GRY)	Left side of engine compartment 31
H-8 (20-BLU)	Behind right kick panel 61
H-9 (20-BLU)	Behind left kick panel 47
H-10 (22-BLK)	Behind left kick panel 46
H-11 (19-BLK)	Behind left kick panel 46
H-14 (19-BLK)	Behind right kick panel 62
H-19 (22-WHT)	Below driver's seat 56
I-10 (14-GRY)	Center of I/P 66
I-22 (14-GRN)	Top of meter assembly 54
I-24 (30-GRN)	Top of meter assembly 54
I-31 (4-WHT)	Below left side of I/P 51
Ground	
C-10	At the rear of the battery tray, right side of engine compartment 15
C-26	Left side of engine compartment 25
E-23	Right side of engine 19