


ALARM AND RELAY CONTROLS

Component Index

- [Alarm and Relay Control Unit](#)
- [Dash Fuse Box](#)
- [Fuse/Relay Box](#)
- [Left Front Door Switch](#)
- [Taillamp Relay](#)


ALARM AND RELAY CONTROLS

Circuit Schematic

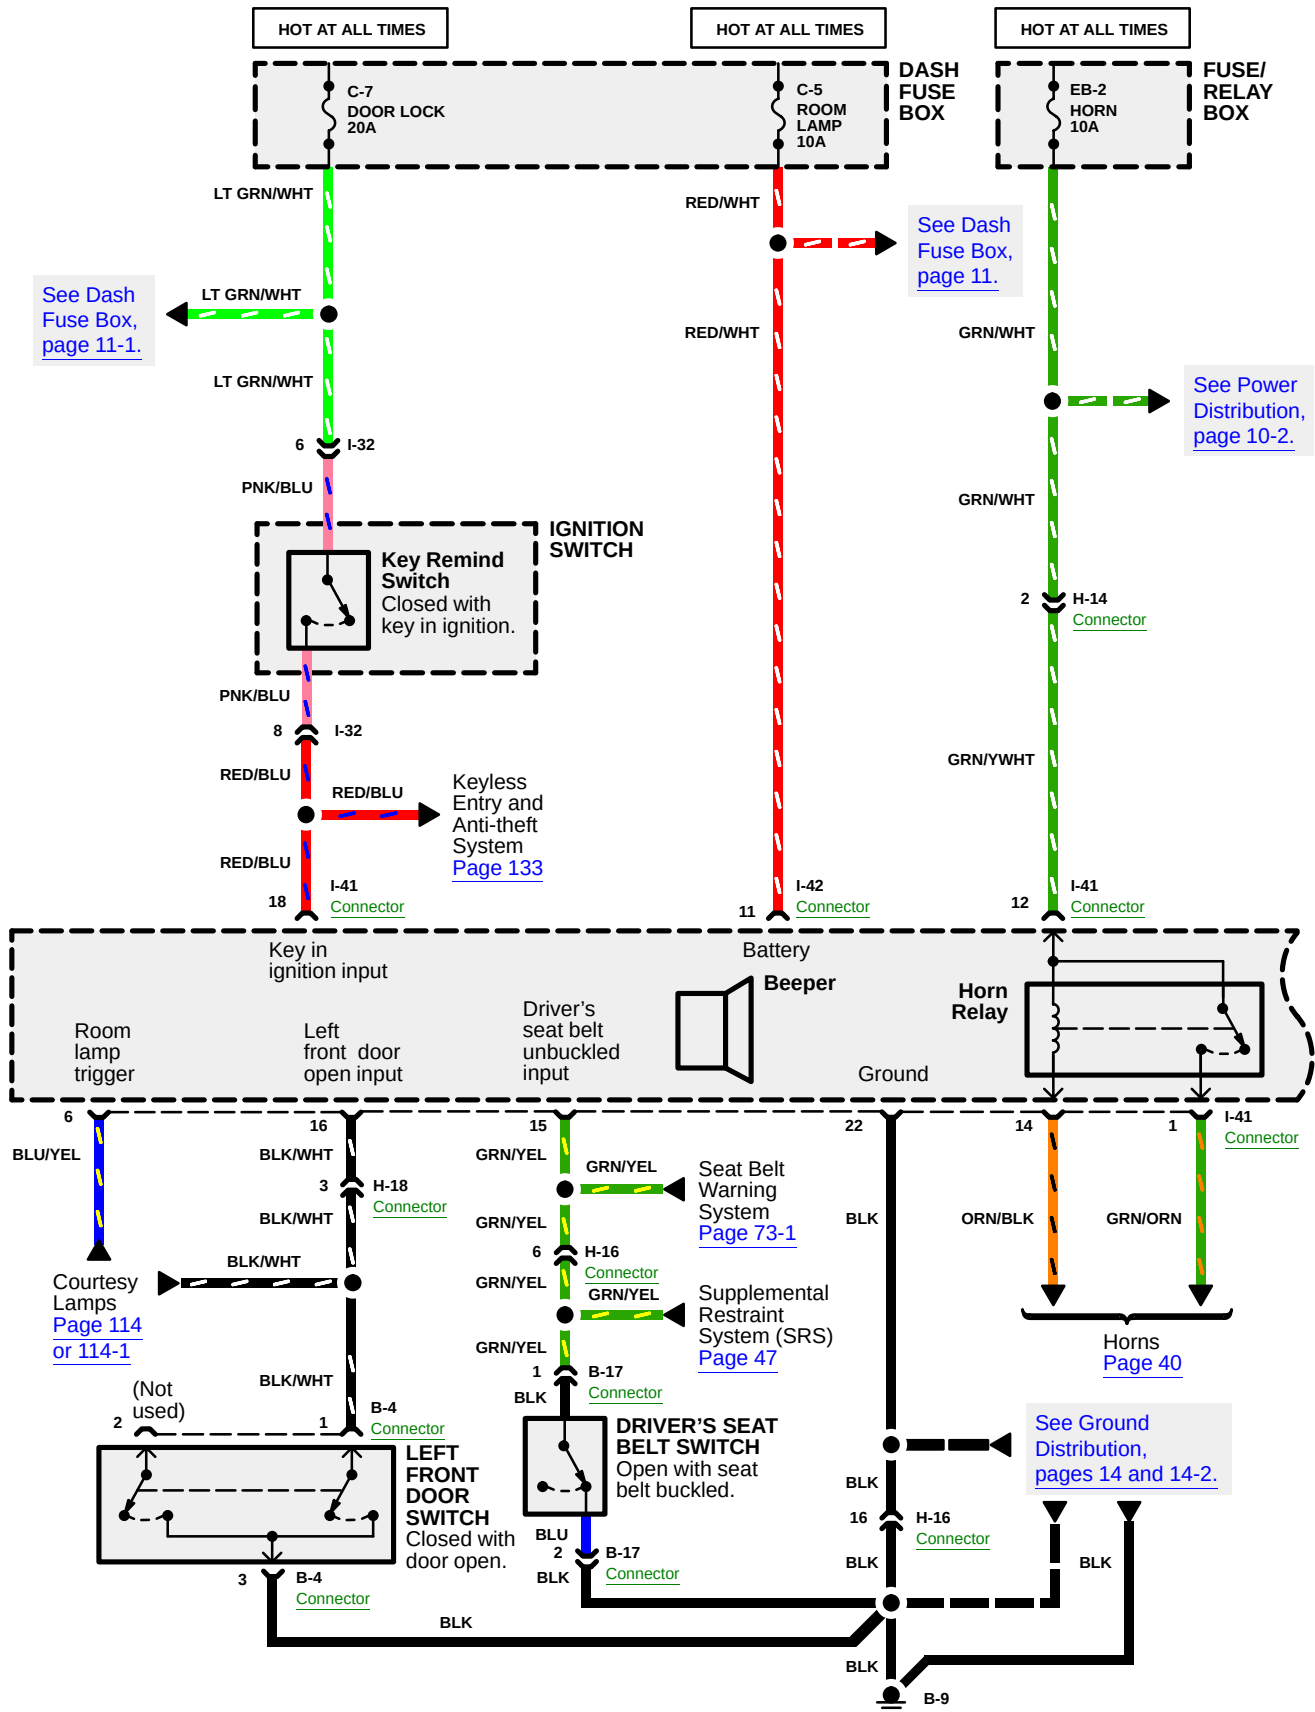


ALARM AND RELAY CONTROLS

Circuit Schematic

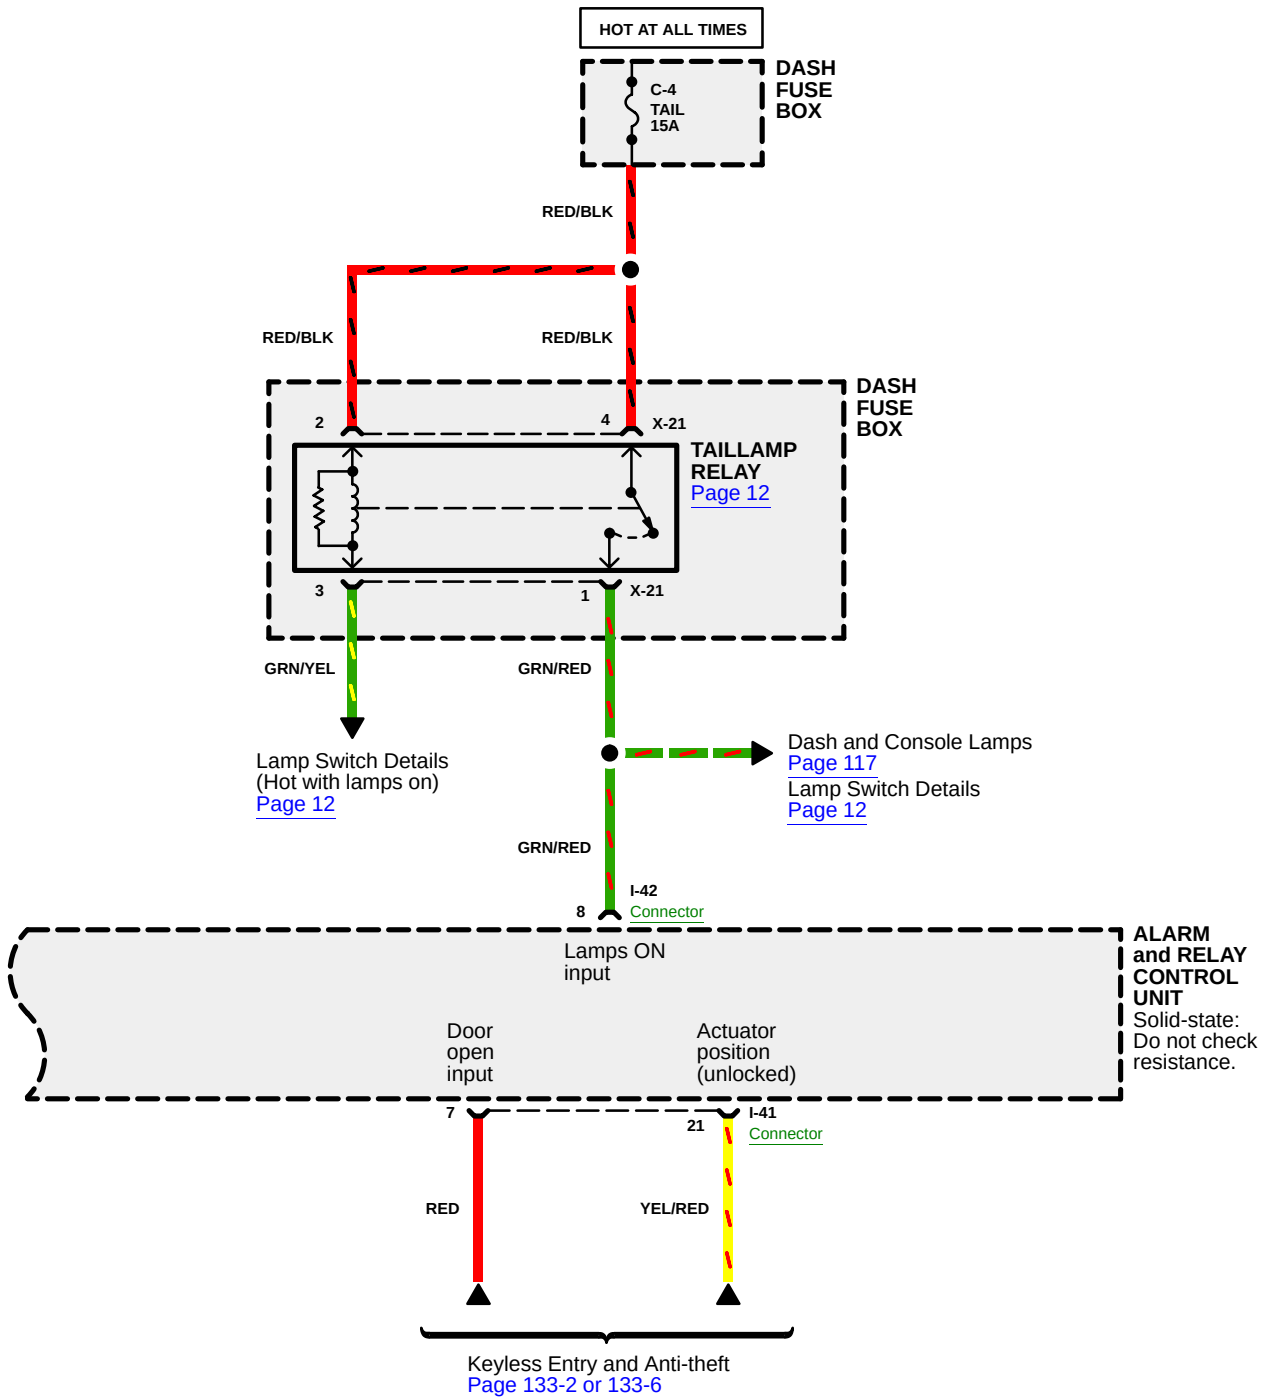

ALARM AND RELAY CONTROLS

Circuit Schematic

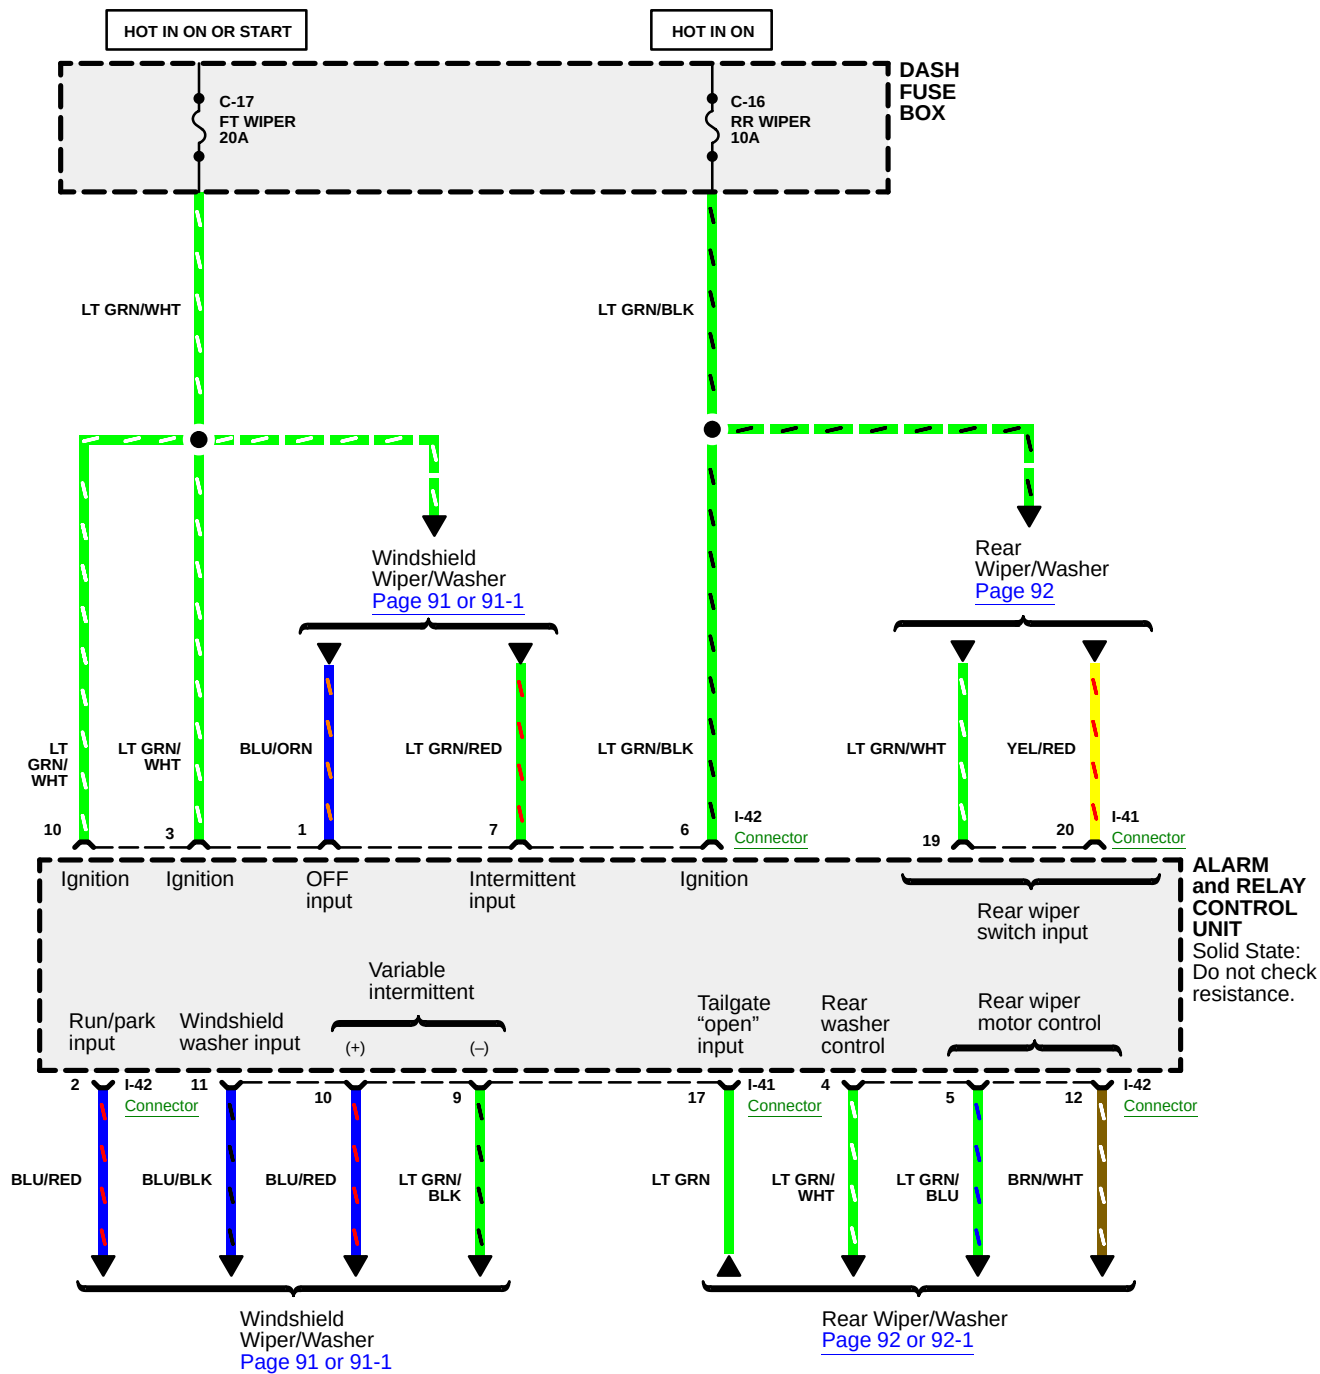

ALARM AND RELAY CONTROLS

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Alarm and Relay Control Unit . . . Right side of I/P	60
Dash Fuse Box Behind left I/P side trim panel	42
Fuse/Relay Box Right side of engine compartment	8
Left Front Door Switch Left "B" pillar	85
Taillamp Relay In the dash fuse box	44
 <u>Connector</u>	
B-17 (2-WHT) Under driver's seat	116
B-4 (3-WHT) Left "B" pillar	85
H-14 (19-BLK) Behind right kick panel	62
H-16 (16-WHT) Behind left kick panel	46
H-17 (12-WHT) Behind right kick panel	61
I-32 (8-WHT) Under left side of I/P	48
 <u>Ground</u>	
B-9 Under center console	71

Circuit Operation

The alarm and relay control unit controls the Key-in ignition warning, seat belt warning, horns, windshield wiper/washer system, and the rear wiper/washer system.