


SEAT BELT, LAMPS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Component Index

- [Alarm and Relay Control Unit](#)
- [Dash Fuse Box](#)
- [Fuse/Relay Box](#)
- [Left Front Door Switch](#)
- [Meter Assembly](#)
- [Taillamp Relay](#)


SEAT BELT, LAMPS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Circuit Schematic

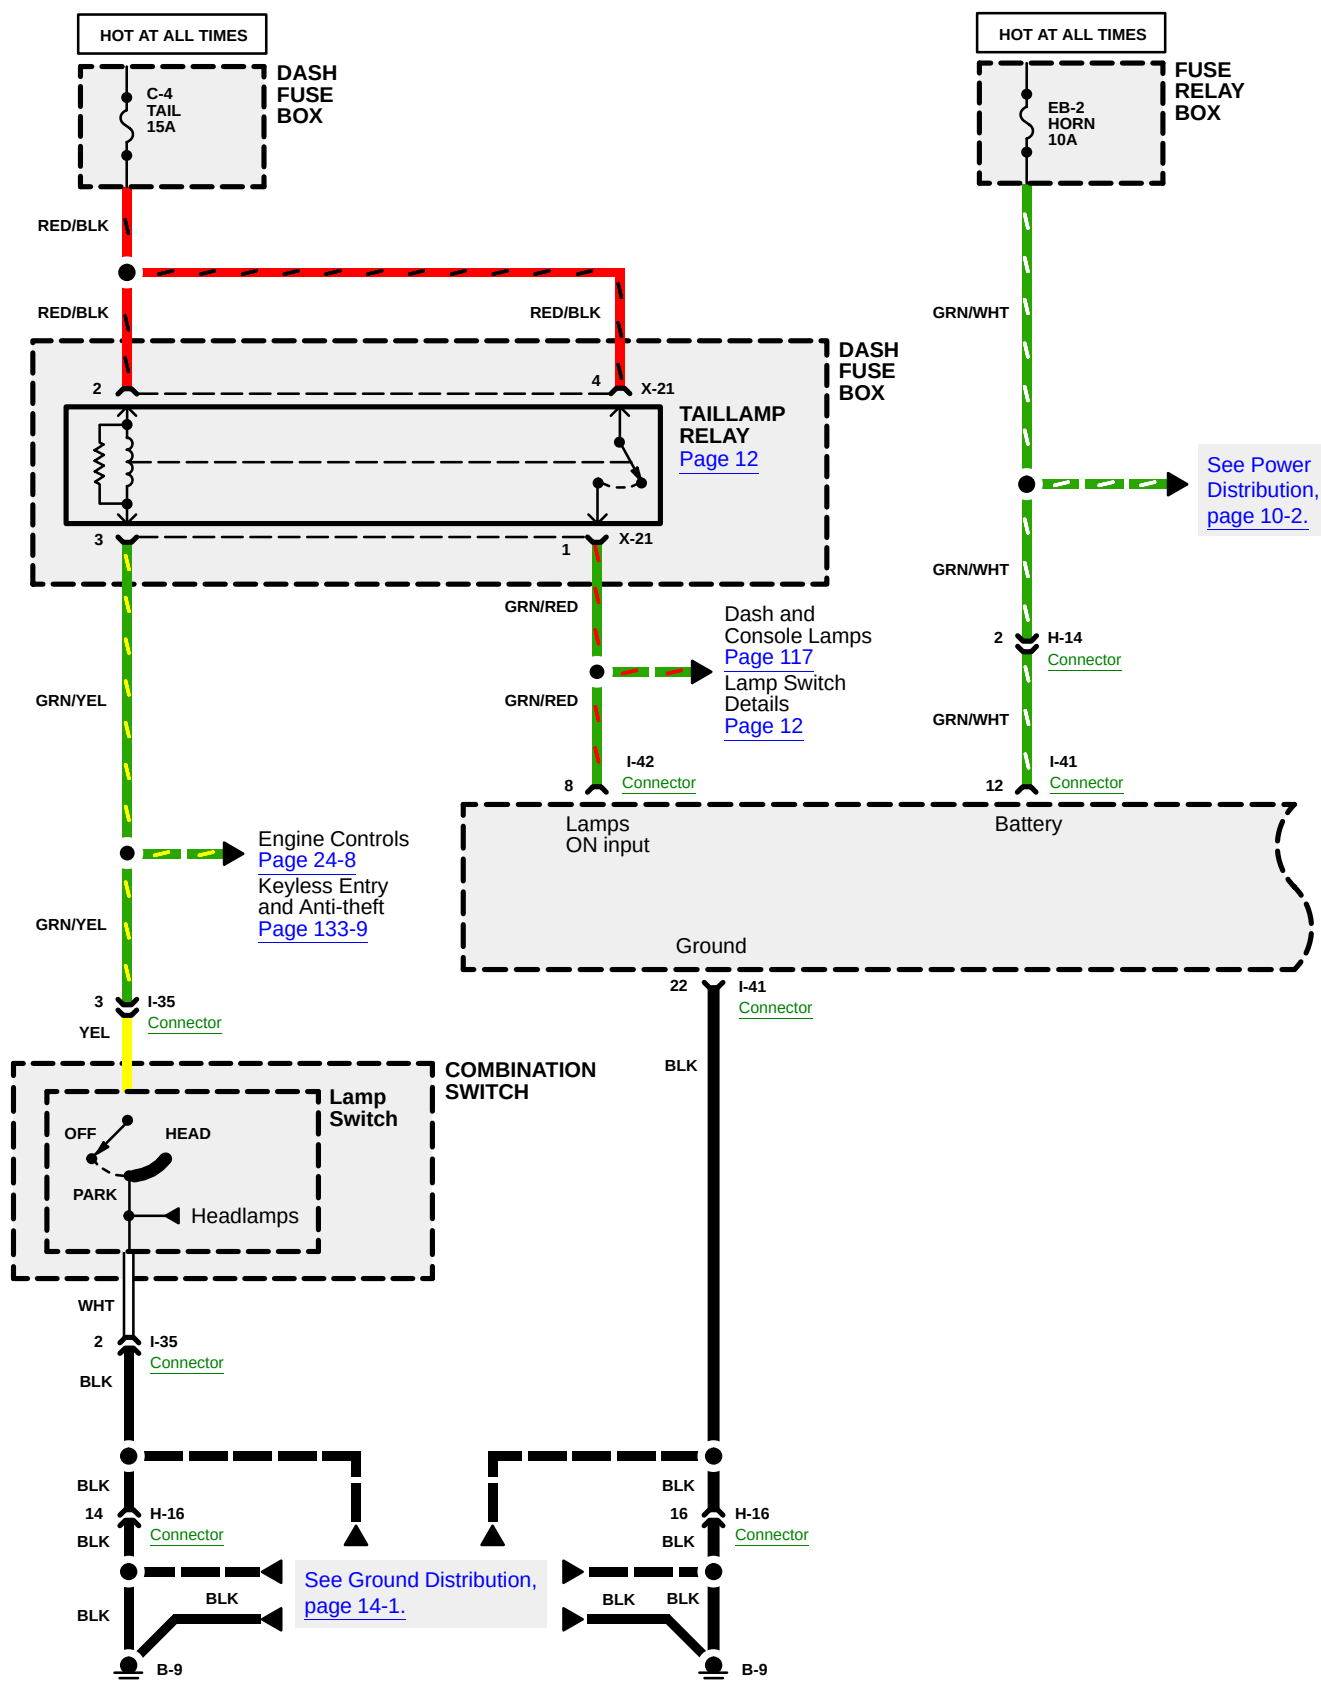

SEAT BELT, LAMPS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Circuit Schematic

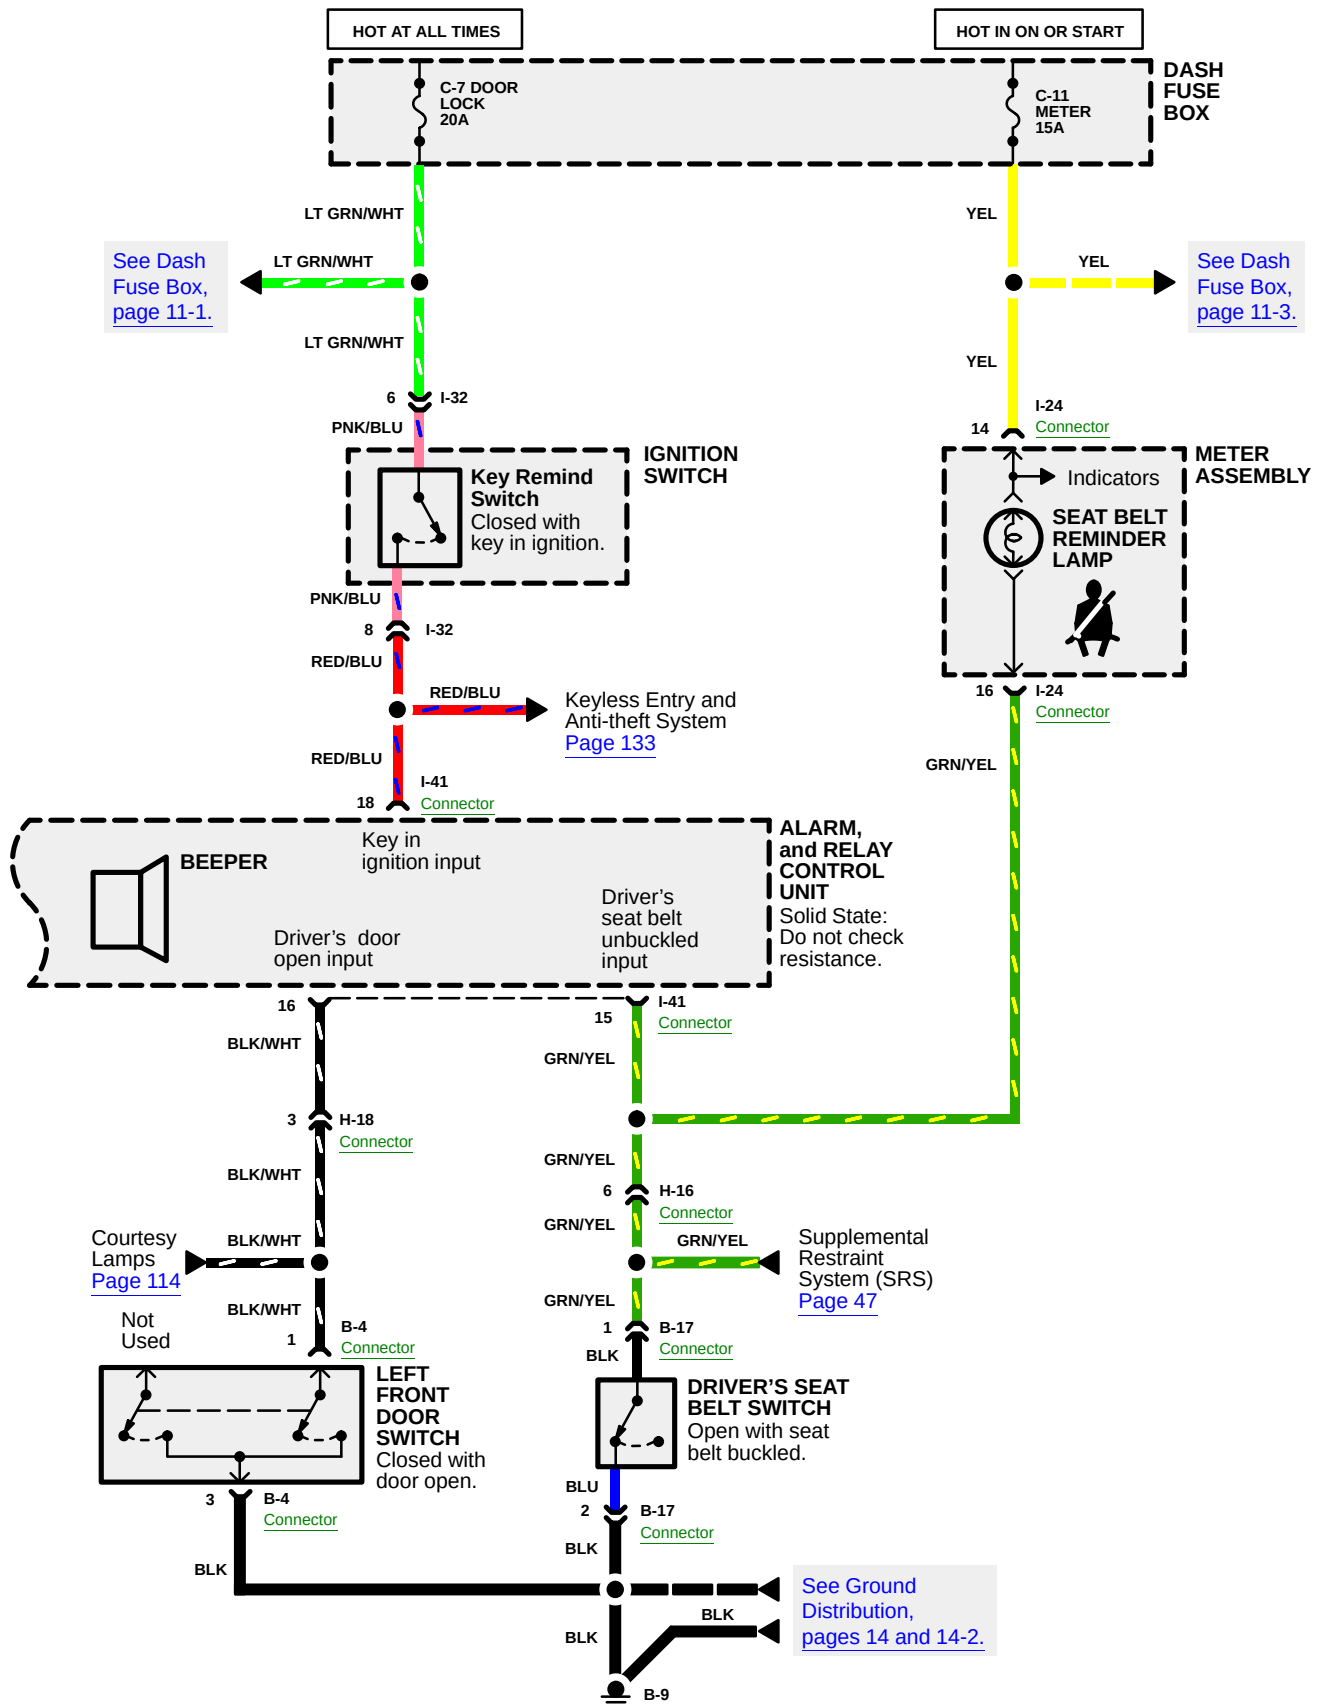

SEAT BELT, LAMPS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

Component		Photo No.
Alarm and Relay Control Unit . . .	Right side of I/P	60
Dash Fuse Box	Behind left I/P side trim panel	42
Fuse/Relay Box	Right side of engine compartment	8
Left Front Door Switch	Left "B" pillar	85
Meter Assembly	Left side of I/P	55
Taillamp Relay	In the dash fuse box	44
Connector		
B-4 (3-WHT)	Left "B" pillar	85
B-17 (2-WHT)	Under driver's seat	116
H-14 (19-BLK)	Behind right kick panel	62
H-16 (16-WHT)	Behind left kick panel	46
H-17 (12-WHT)	Behind right kick panel	61
I-24 (30-GRN)	Top of meter assembly	54
I-32 (8-WHT)	Under left side of I/P	48
Ground		
B-9	Under center console	71

Circuit Operation

Key-In Ignition Warning

The alarm and relay control unit sounds when the key remind switch is closed, with the starter switch in the OFF position, and the key left in.

Seat Belt Warning

With the starter switch in ON or START, voltage is applied to the seat belt reminder lamp. If the driver does not fasten his or her seat belt, the switch remains closed, which grounds the circuit, illuminating the seat belt reminder lamp.

lamps-on Warning

With the lamp switch in HEAD or PARK, the alarm and relay control unit sounds when the starter switch is in the OFF position.