


REAR WIPER/WASHER

Component Index

- Alarm and Relay Control Unit
- Dash Fuse Box
- Rear Washer Motor
- Rear Wiper Motor
- Tailgate Open Switch


REAR WIPER/WASHER

Circuit Schematic

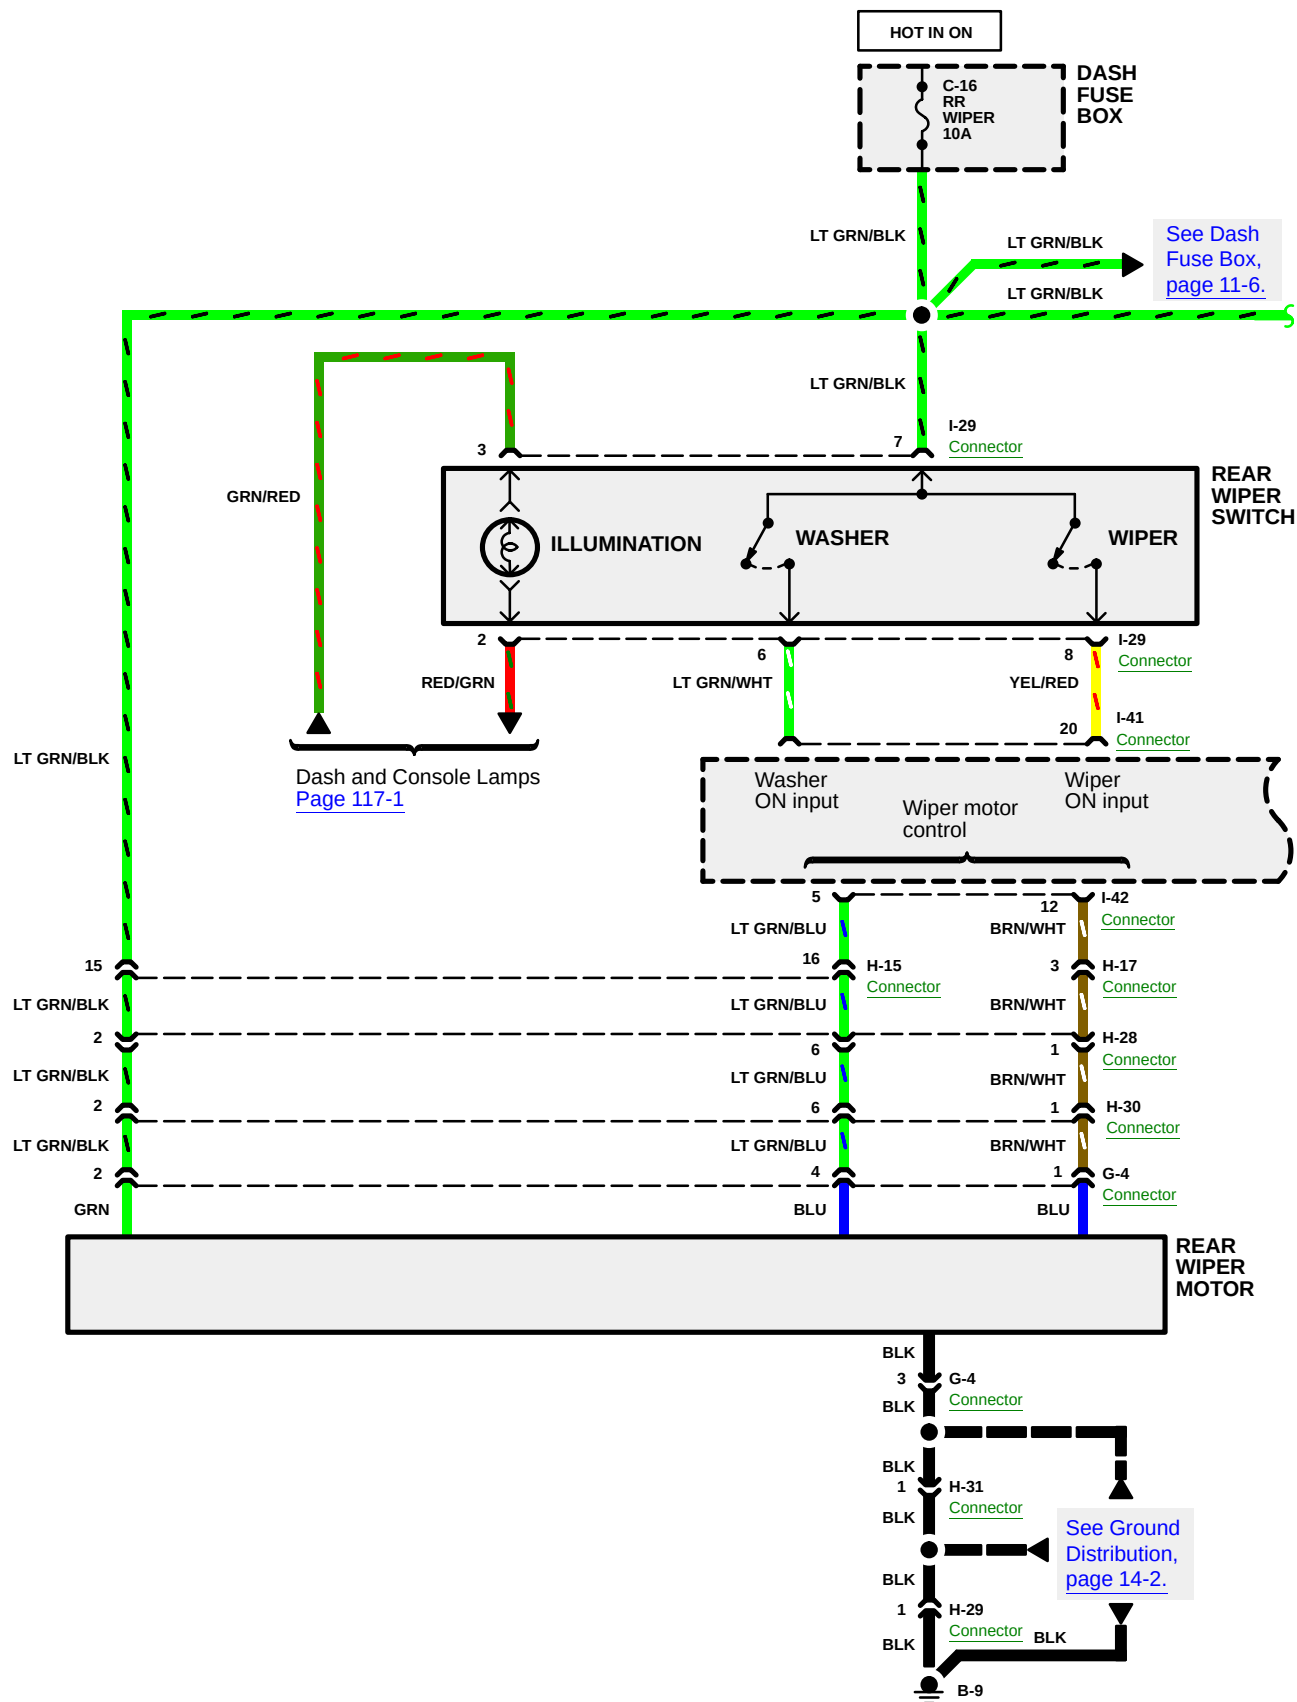

REAR WIPER/WASHER

Circuit Schematic

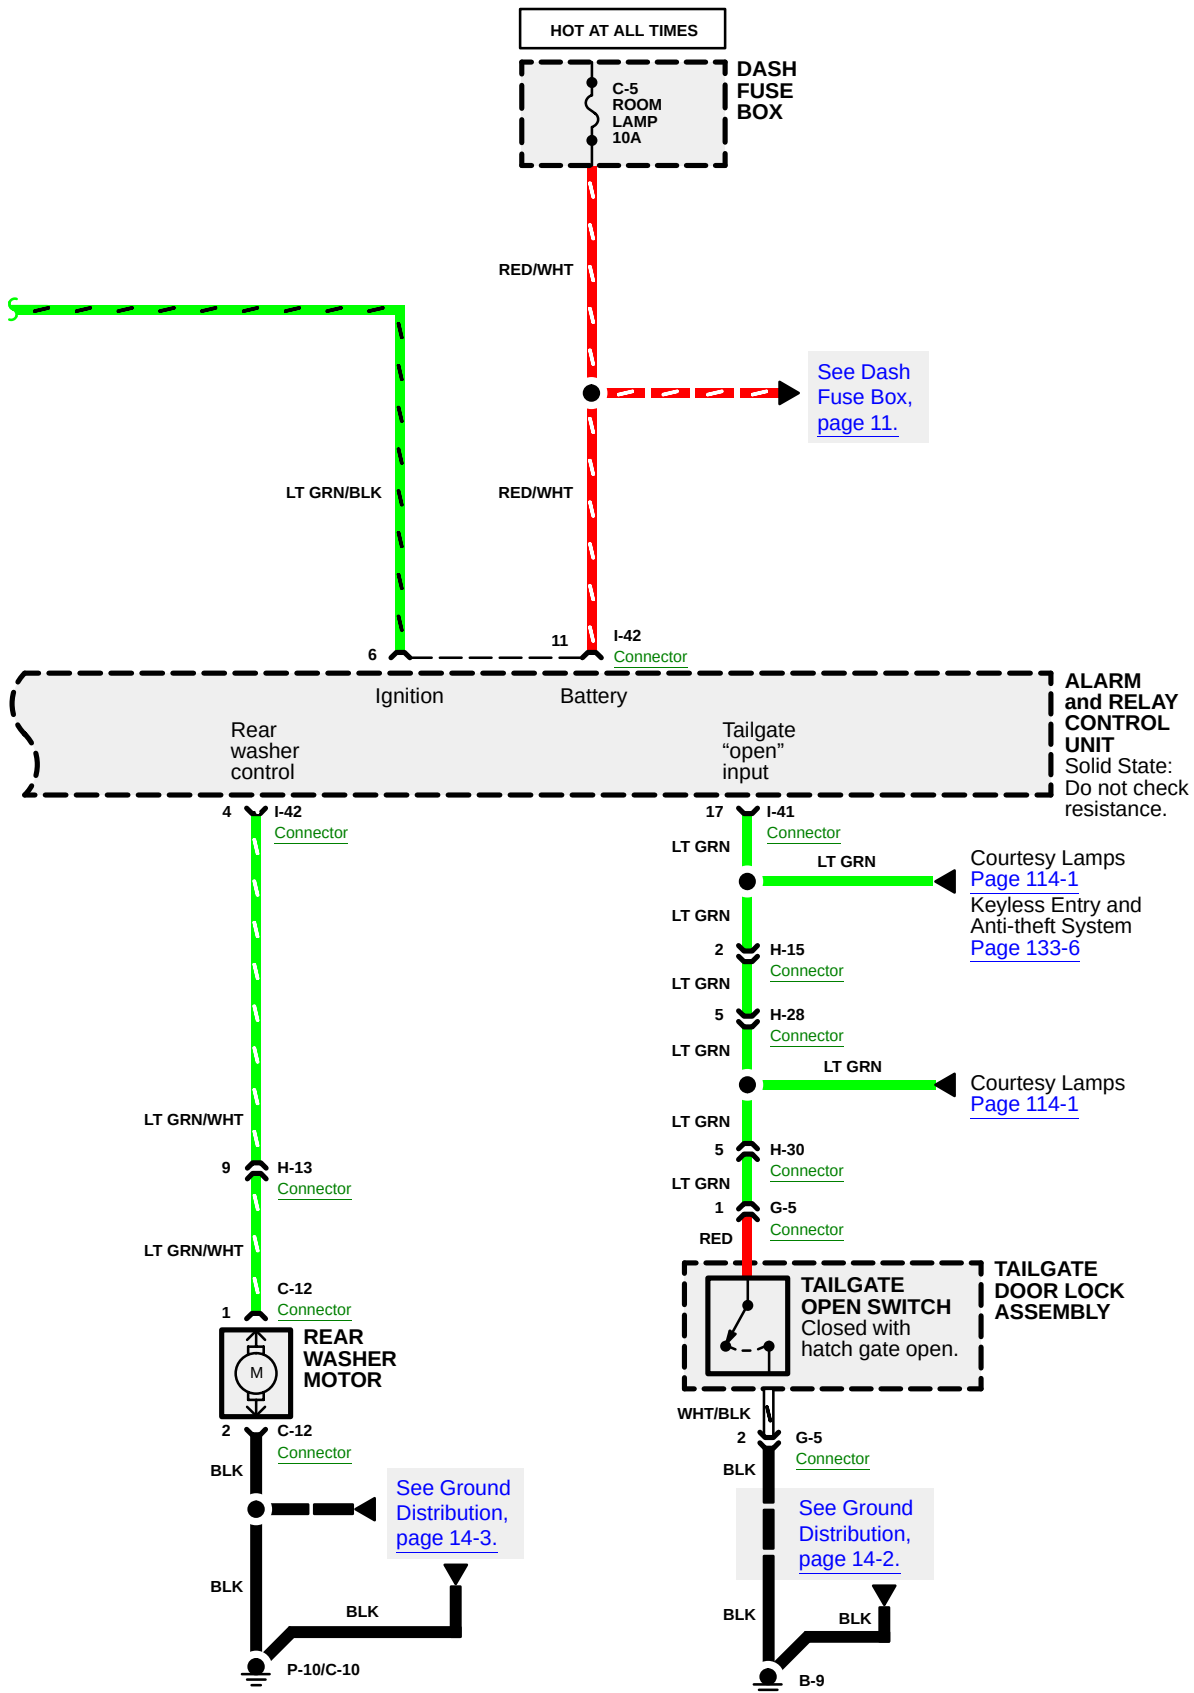

REAR WIPER/WASHER

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Alarm and Relay Control Unit . . . Right side of I/P	60
Dash Fuse Box Behind left I/P side trim panel	42
Rear Washer Motor Right front of engine compartment	7
Rear Wiper Motor On tailgate door, panel removed	92
Tailgate Open Switch Bottom of tailgate door	
Connector	
G-4 (4-NAT) On tailgate door	92
H-13 (19-WHT) Behind right kick panel	62
H-15 (22-WHT) Behind left kick panel	47
H-17 (4-WHT) Behind right kick panel	61
H-20 (10-WHT) Below driver's seat	56
H-28 (6-WHT) Left rear side of roof	91
H-29 (6-BLK) Left rear side of roof	91
H-30 (6-WHT) Upper left side of tailgate (panel removed)	89
H-31 (6-BLK) Upper left side of tailgate (panel removed)	89
Ground	
B-9 Under center console	71
C-10 At the rear of the battery tray, right side of engine compartment	15
P-10 Right side of engine compartment	15

Circuit Operation

With the starter switch in ON, battery voltage is applied through the C-16 (RR WIPER) fuse to the alarm and relay control unit and the rear washer switch.

Once the rear wiper switch is pressed, the alarm and relay control unit energizes the wiper motor. The rear wiper motor will run intermittently until the rear wiper switch is depressed.