


TURN AND HAZARD LAMPS

Component Index

- [Dash Fuse Box](#)
- [Flasher Unit](#)
- [Fuse/Relay Box](#)
- [Meter Assembly](#)
- [Trailer Connector](#)


TURN AND HAZARD LAMPS

Circuit Schematic

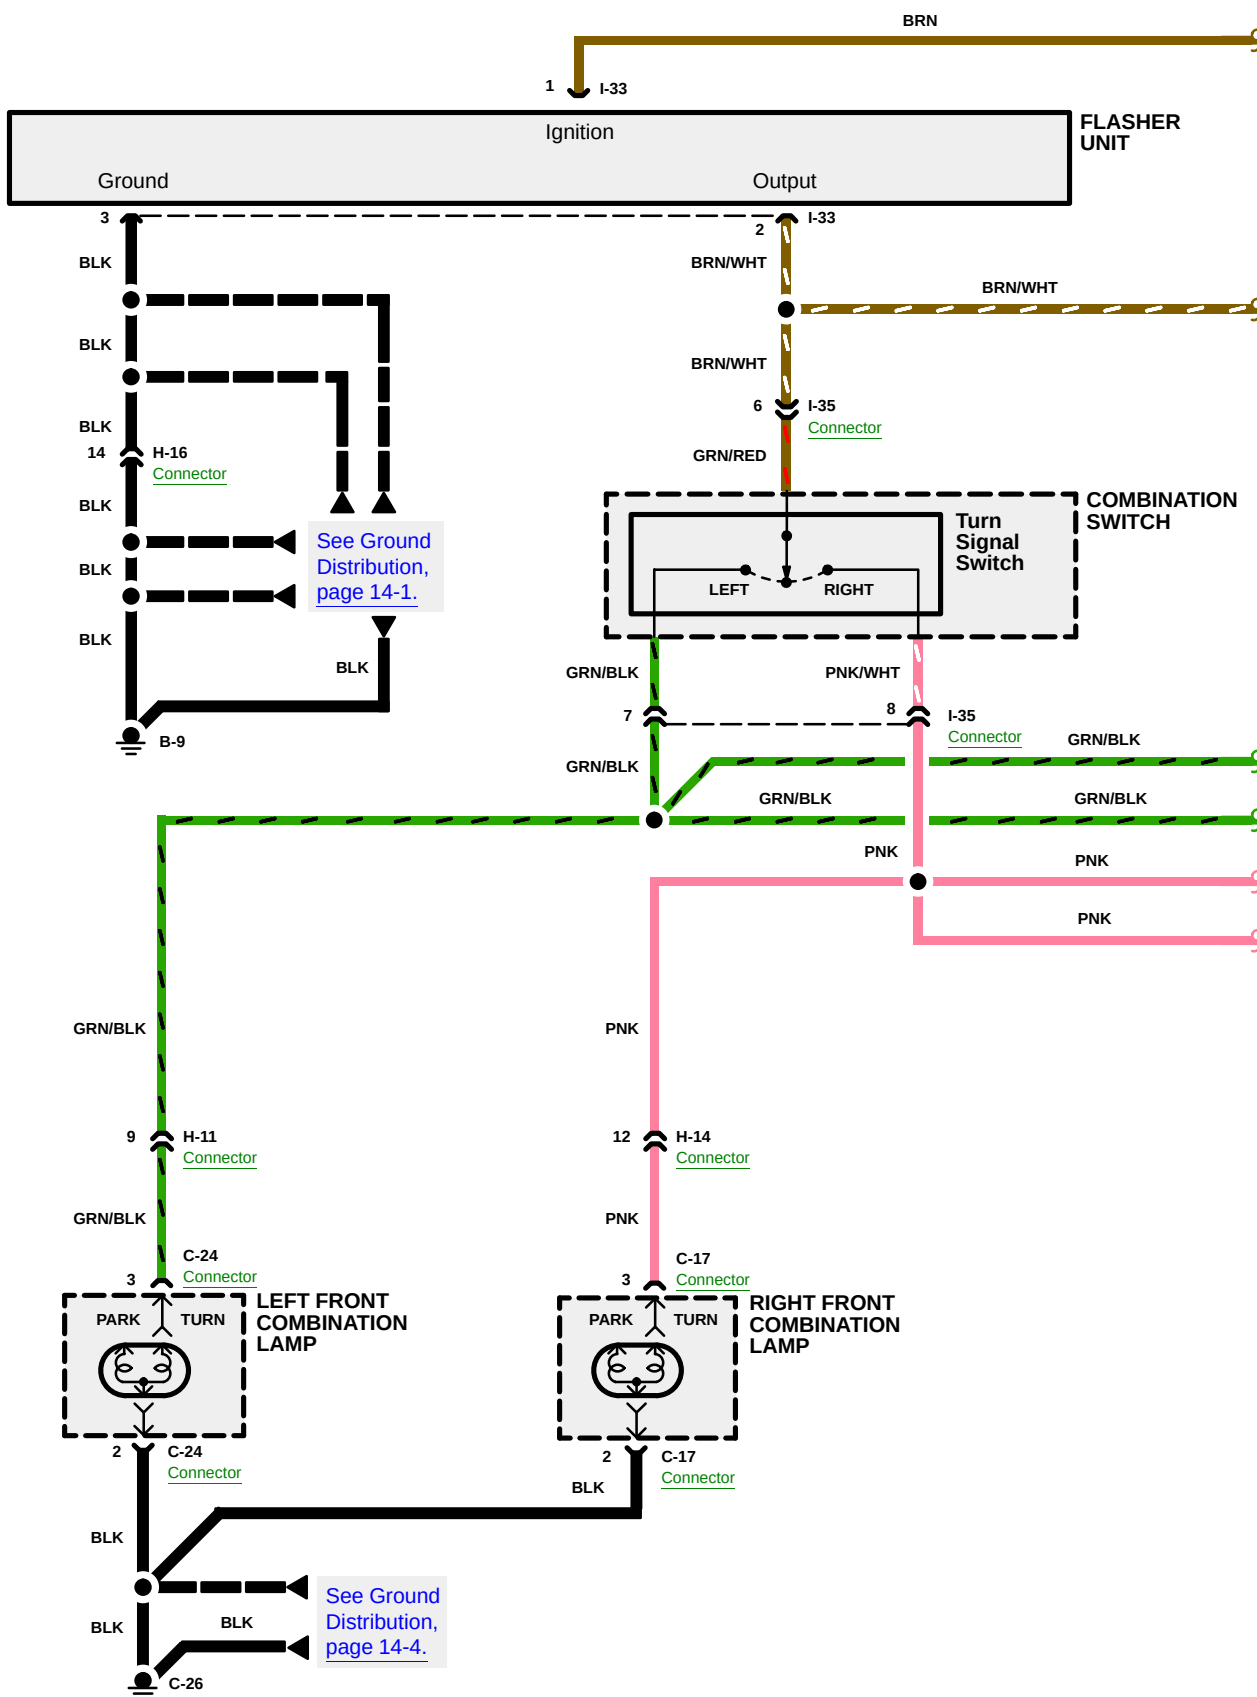

TURN AND HAZARD LAMPS

Circuit Schematic

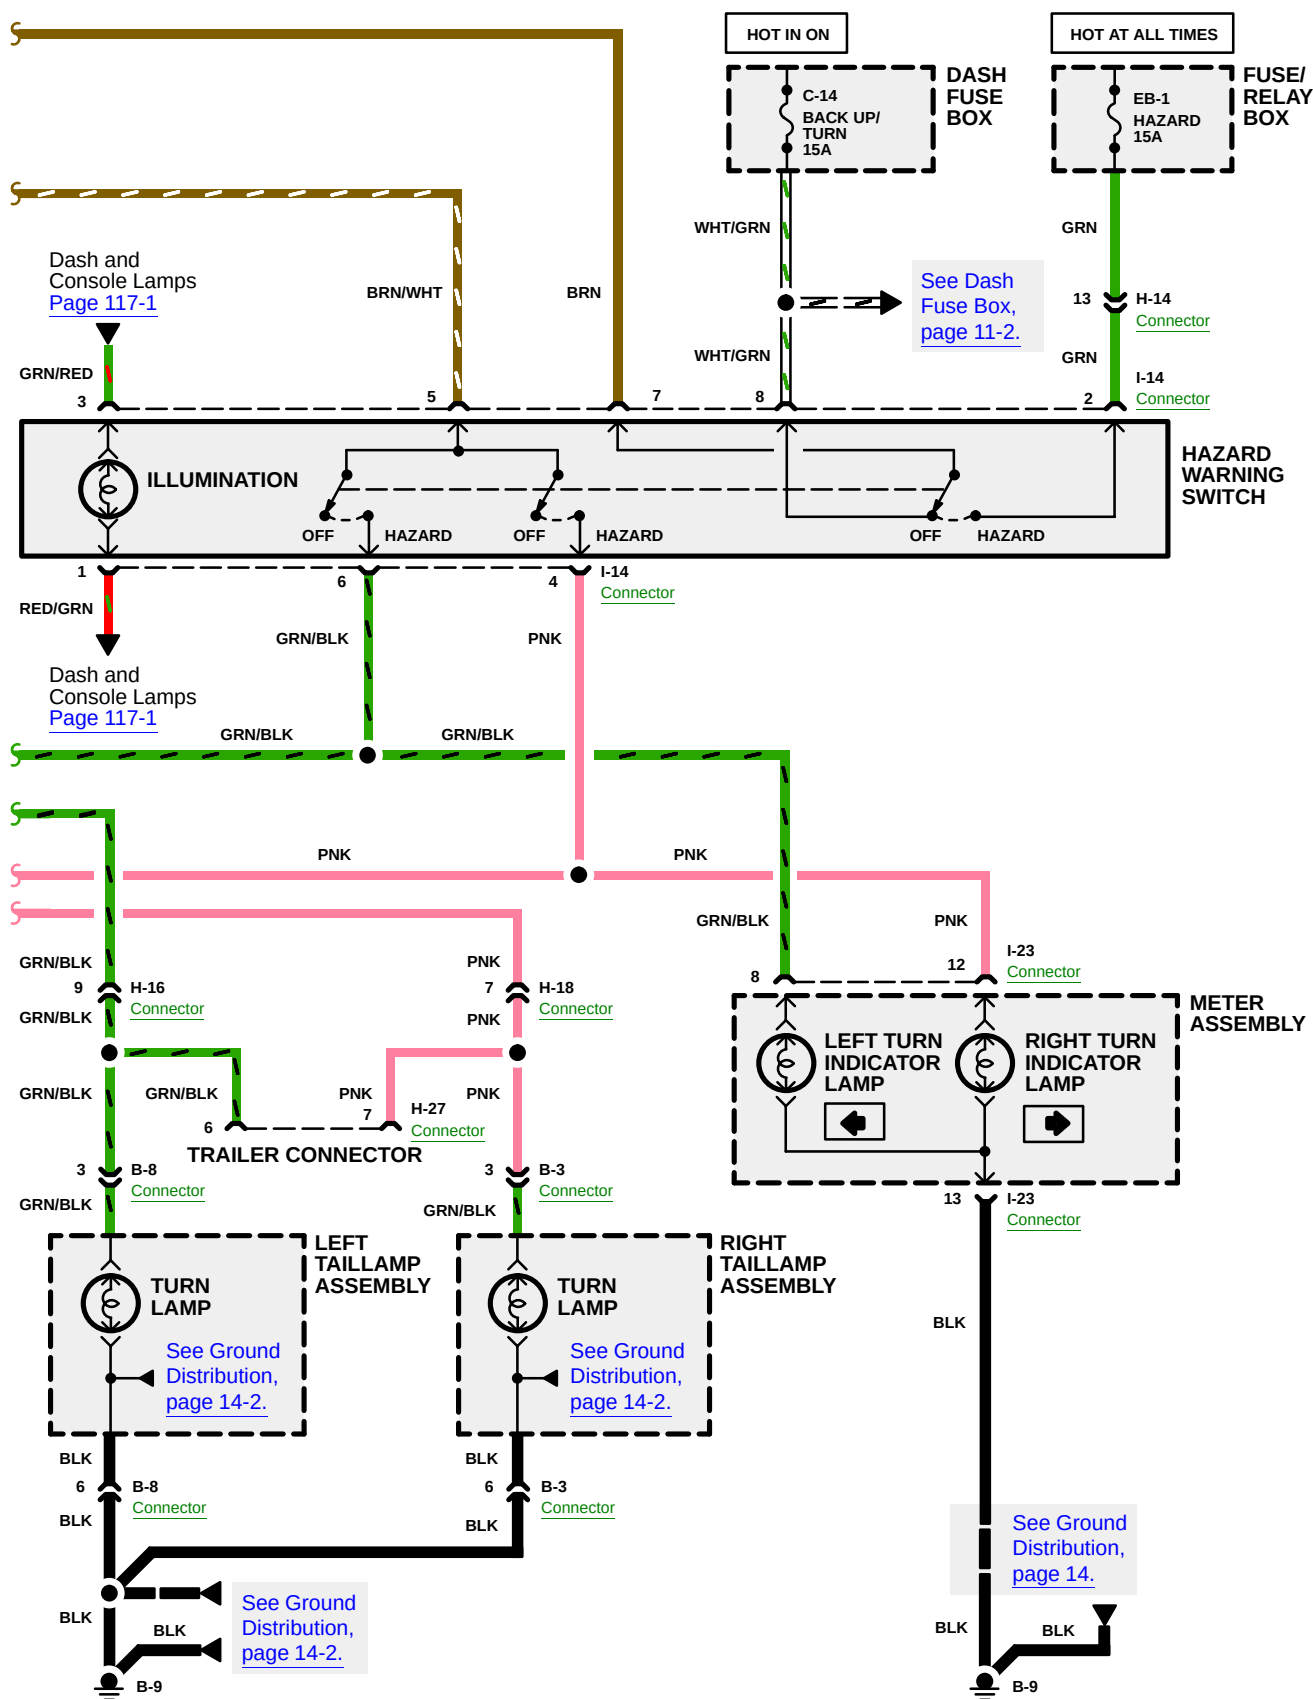

TURN AND HAZARD LAMPS

Component Location Index

(Refer to Section 201 for photographs.)

Component		Photo No.
Dash Fuse Box	Behind left I/P side trim panel	42
Flasher Unit	Behind left side of I/P, above kick panel	48
Fuse/Relay Box	Right side of engine compartment	8
Meter Assembly	Left side of I/P	55
Trailer Connector	Left rear cargo compartment	88
Connector		
B-3 (6-BLK)	Behind right tail lamp	94
B-8 (6-BLK)	Behind left tail lamp	94
C-17 (3 GRY)	Right front side of vehicle	4
C-24 (3 GRY)	Left front side of vehicle	4
H-11 (19-BLK)	Behind left kick panel	46
H-14 (19-BLK)	Behind right kick panel	62
H-16 (16-WHT)	Behind left kick panel	46
H-18 (22-BLK)	Behind right kick panel	61
I-23 (16-GRN)	Top of meter assembly	54
I-33 (3-WHT)	Under left side of I/P	
I-35 (13-BLK)	Under left side of I/P	49
Ground		
B-9	Under center console	71
C-26	Left side of engine compartment	25

Circuit Operation

Turn Operation

With the starter switch in ON, battery voltage is applied to the hazard warning switch from the C-14 BACKUP fuse. When the hazard warning switch is in the OFF position, battery voltage is applied to the flasher unit. Its output is pulsing voltage which is directed to either the RIGHT or LEFT position on the turn signal switch and causes the turn lamps and turn indicator lamps to flash in either direction.

Hazard Operation

Battery voltage is applied to the hazard warning switch at all times from the EB-1 HAZARD fuse. When the hazard warning switch is in the HAZARD position, battery voltage is applied to the flasher unit. Its output is pulsing voltage which is directed to the hazard warning switch and causes the turn lamps and turn indicator lamps to flash in both directions.