


BRAKE LAMPS

Component Index

- [Brake Switch](#)
- [Dash Fuse Box](#)
- [Trailer Connector](#)

BRAKE LAMPS

Circuit Schematic

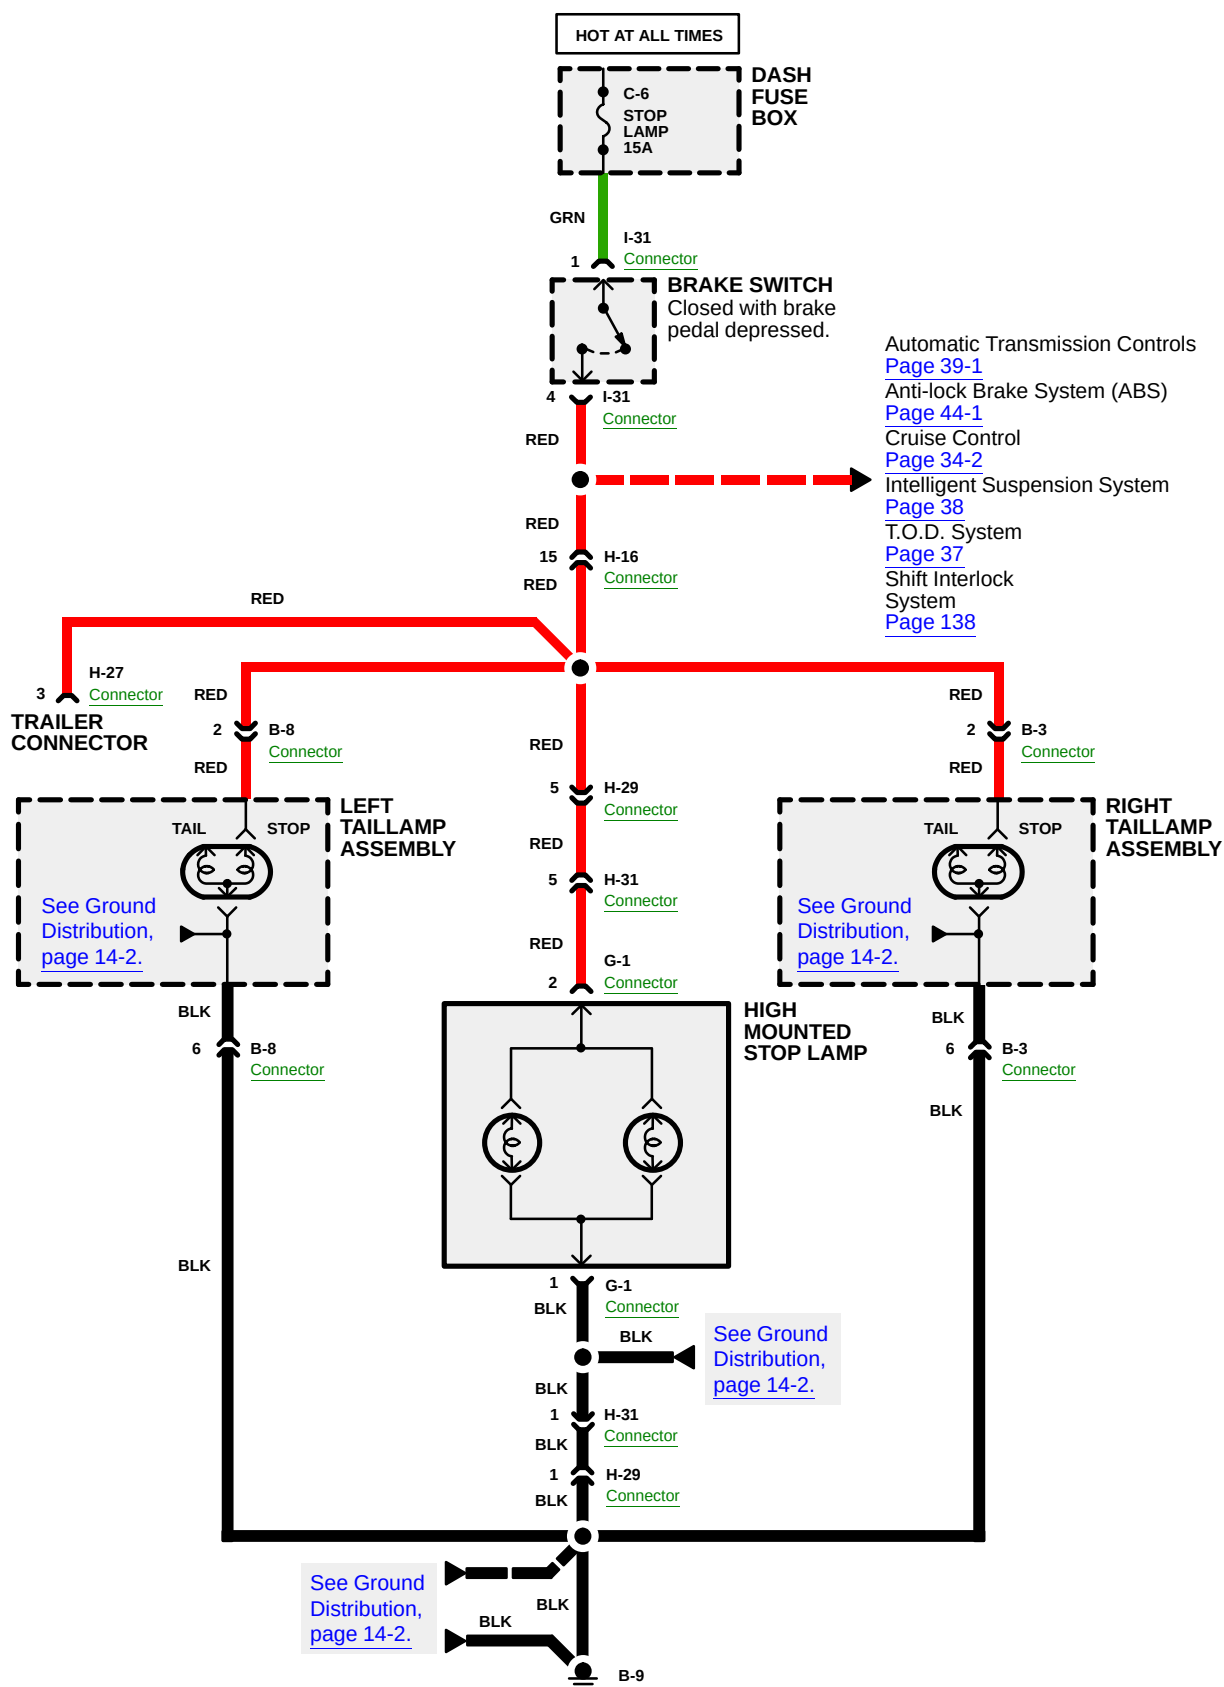

BRAKE LAMPS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Brake Switch	Below left side of I/P 51
Dash Fuse Box	Behind left I/P side trim panel 42
Trailer Connector	Left rear cargo compartment 88
Connector	
B-3 (6-BLK)	Behind right tail lamp 94
B-8 (6-BLK)	Behind left tail lamp 94
I-31 (4-WHT)	Below left side of I/P 51
H-16 (16-WHT)	Behind left kick panel 46
H-29 (6-BLK)	Left rear side of roof 91
H-31 (6-BLK)	Upper left side of tailgate (panel removed) 89
G-1 (2-WHT)	Upper center of tailgate 90
Ground	
B-9	Under center console 71

Circuit Operation

Battery voltage is applied to the brake switch at all times from the C-6 STOP LAMP fuse. With the brake pedal depressed, the brake switch is closed and battery voltage is applied to the brake lamps, and the brake lamps go on.