


BACK UP LAMPS

Component Index

- [Automatic Transmission Mode Switch](#)
- [Dash Fuse Box](#)

BACK UP LAMPS

Circuit Schematic

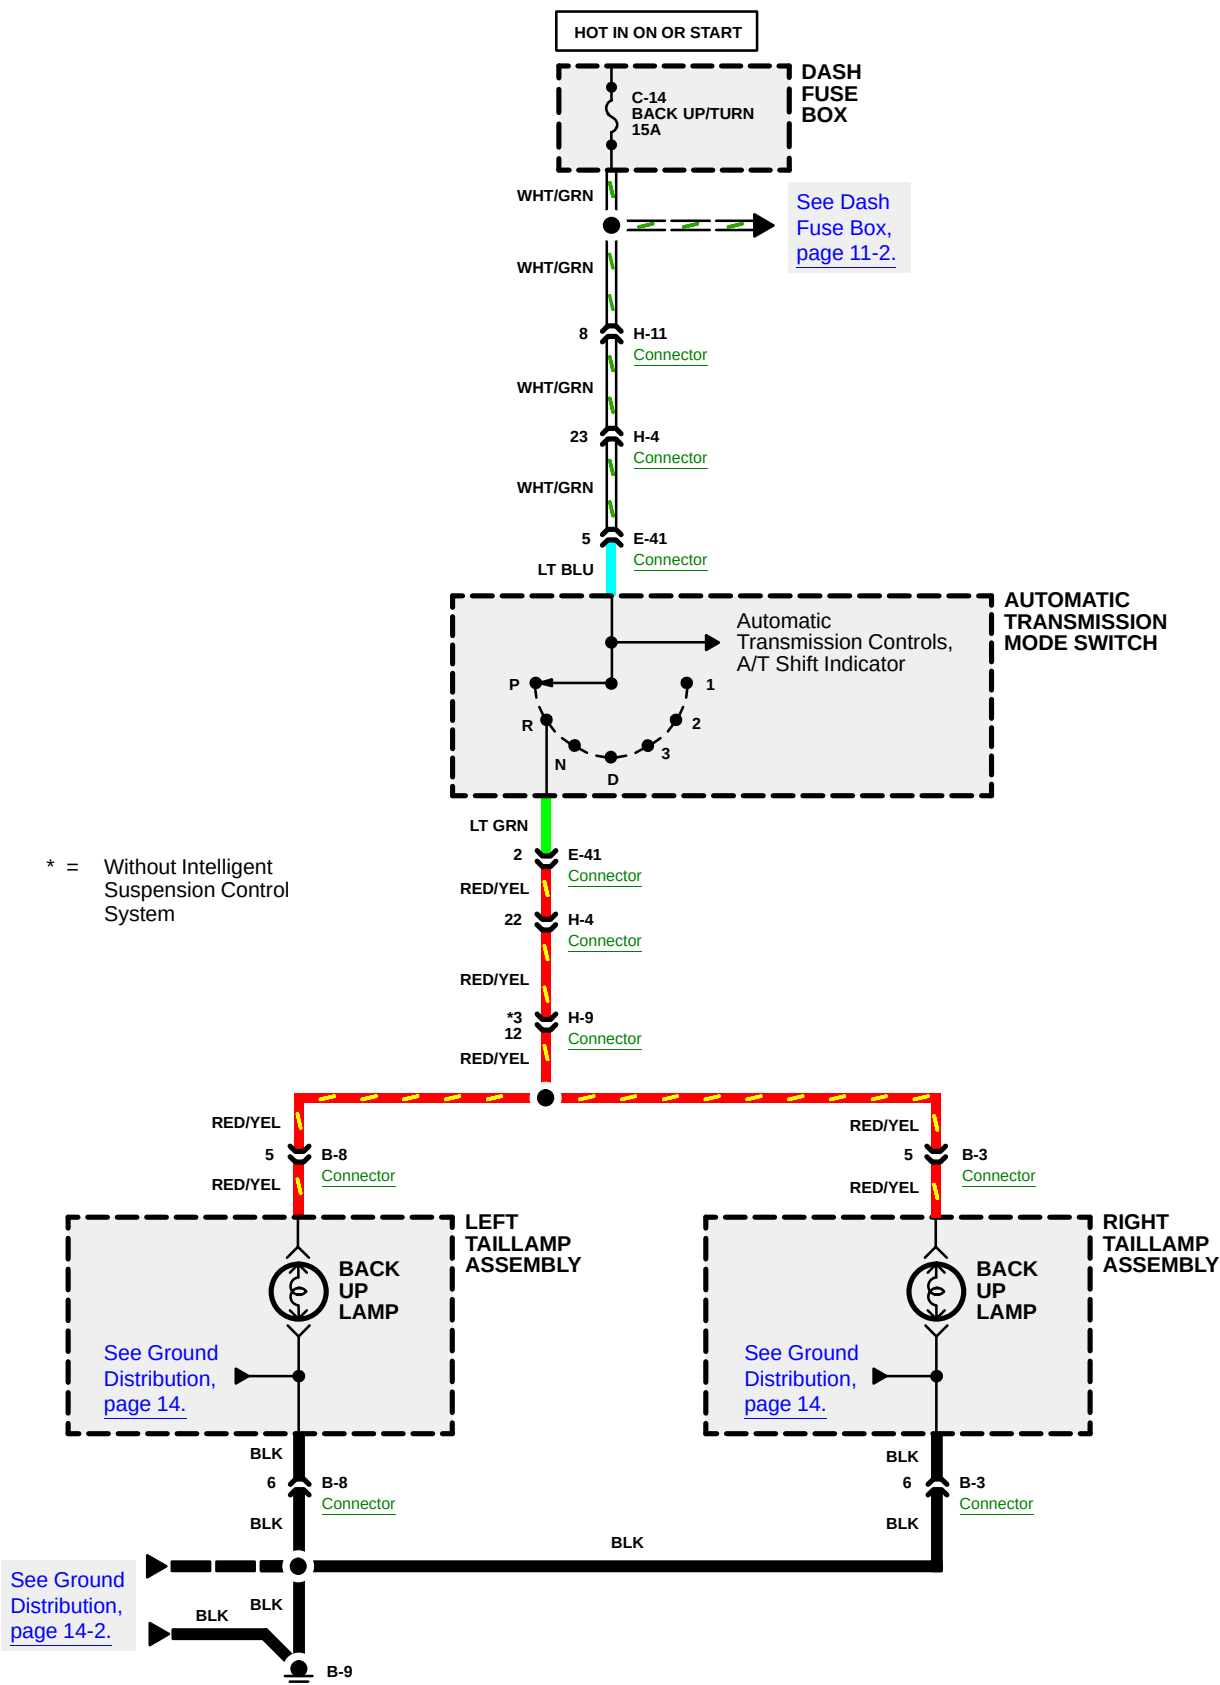

BACK UP LAMPS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Automatic Transmission	
Mode Switch	Left side of automatic transmission 101
Dash Fuse Box	Behind left I/P side trim panel 42
Connector	
B-3 (6-BLK)	Behind right tail lamp 94
B-8 (6-BLK)	Behind left tail lamp 94
E-41 (8-BLK)	Left side of transmission 101
H-11 (19-BLK)	Behind left kick panel 46
H-4 (52-GRY)	Left side of engine compartment 31
H-9 (20-BLU)	Behind left kick panel 47
Ground	
B-9	Under center console 71

Circuit Operation

Automatic Transmission

With the starter switch in ON or START, battery voltage is applied through the C-14 BACK UP fuse to the automatic transmission mode switch. With the transmission in reverse, the automatic transmission mode switch closes and battery voltage is applied to the back up lamps and they go on.