


DASH AND CONSOLE LAMPS

Component Index

- [Audio and Switch Assembly](#)
- [Dash Fuse Box](#)
- [Meter Assembly](#)
- [Shift Lock Controller](#)
- [Taillamp Relay](#)


DASH AND CONSOLE LAMPS

Circuit Schematic

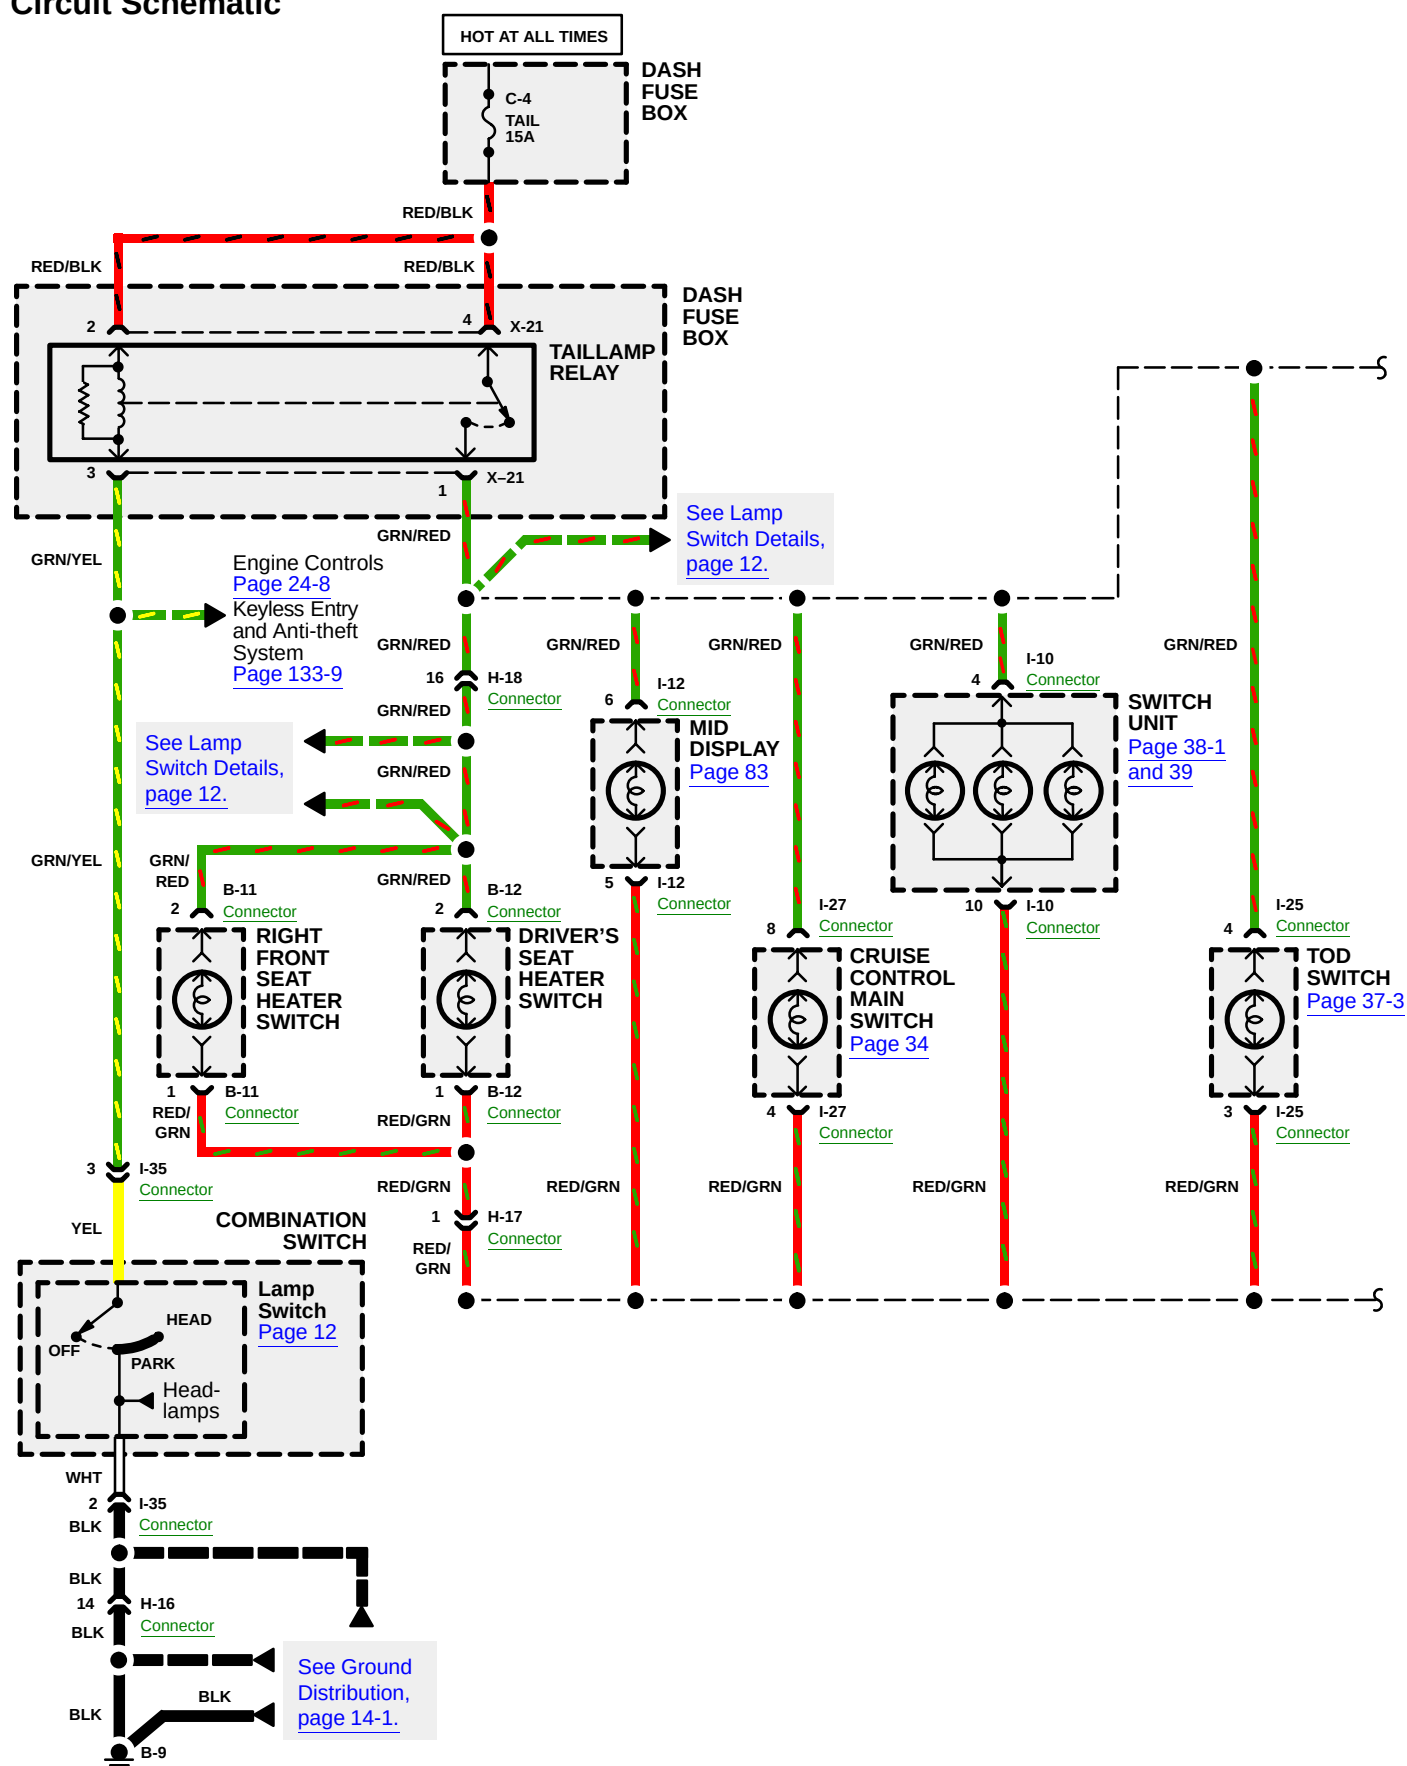

DASH AND CONSOLE LAMPS

Circuit Schematic

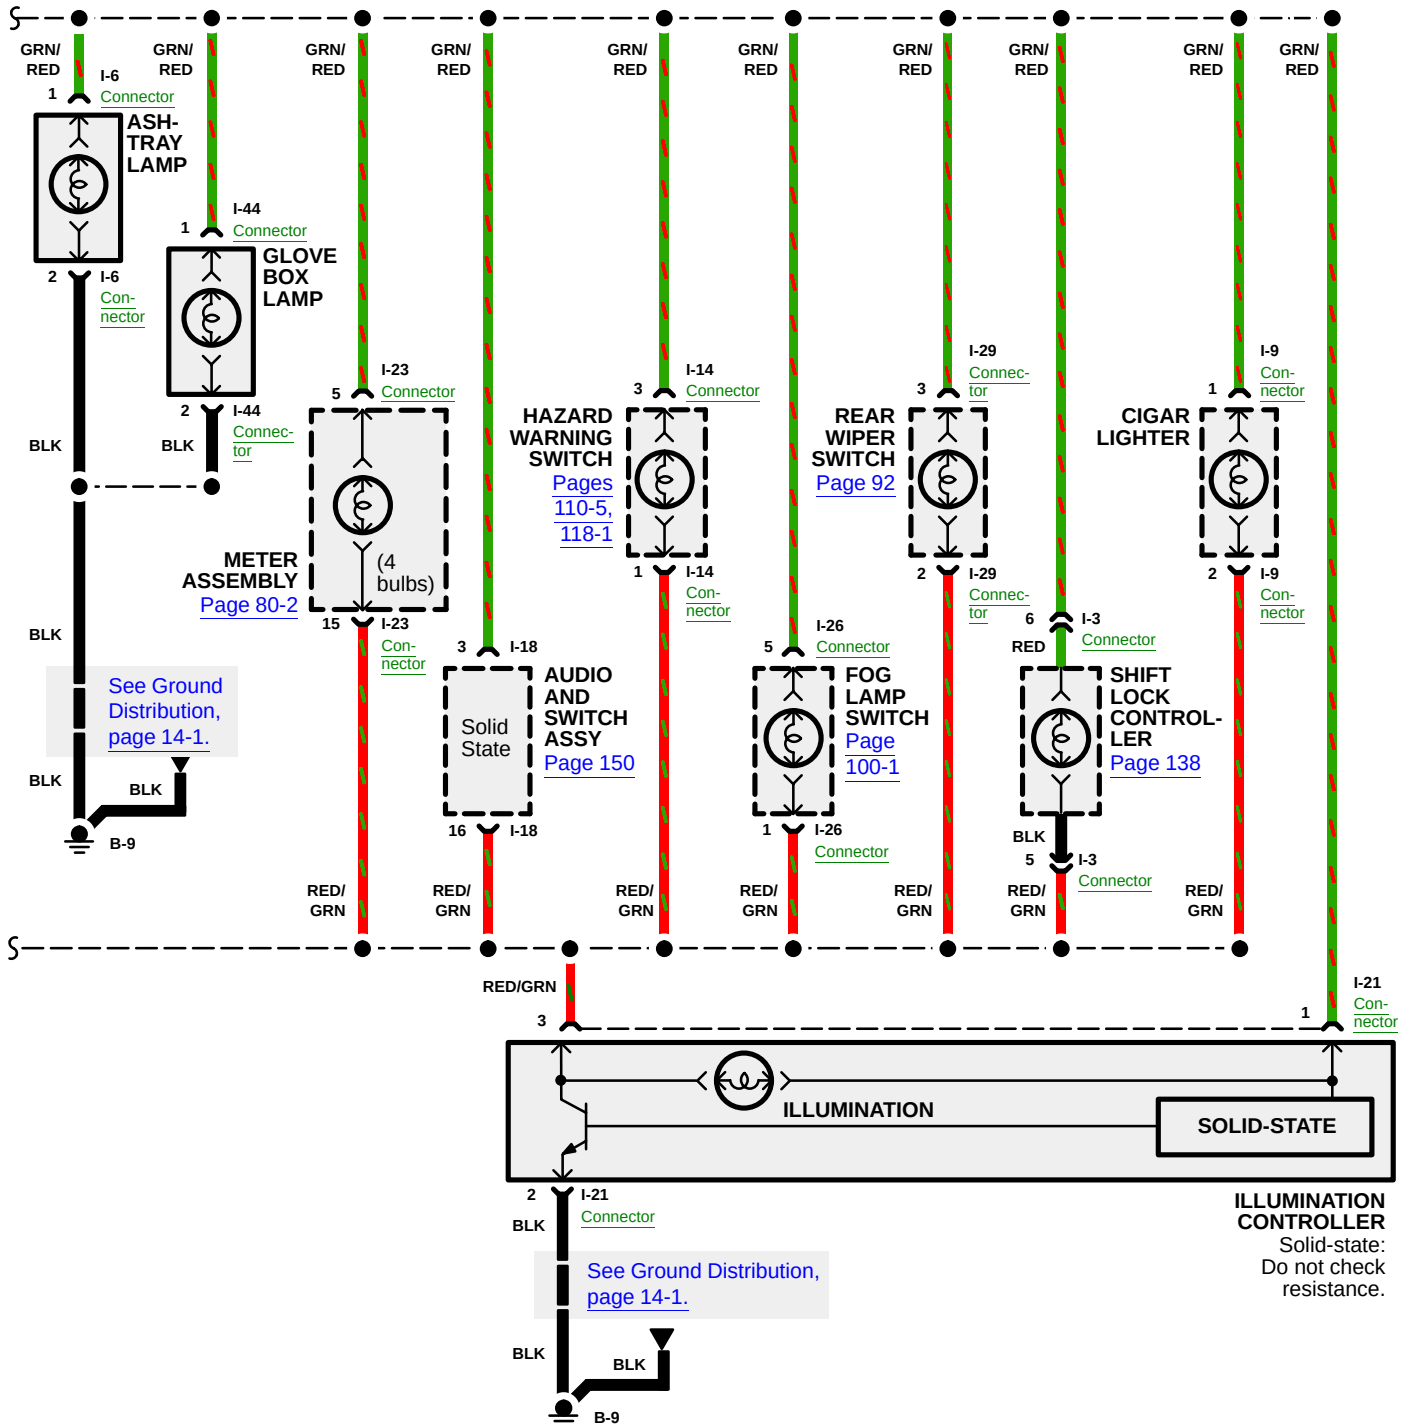

DASH AND CONSOLE LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Audio and Switch Assembly	Center of I/P
Dash Fuse Box	Behind left I/P side trim panel 42
Meter Assembly	Left side of I/P 55
Shift Lock Controller	Under center console 70
Taillamp Relay	In the dash fuse box 44
Connector	
H-16 (16-WHT)	Behind left kick panel 46
H-17 (12-WHT)	Behind right kick panel 61
H-18 (22-BLK)	Behind right kick panel 61
I-3 (6-WHT)	Under front center console 69
I-10 (14-GRY)	Center of I/P 66
I-12 (16-WHT)	Center of I/P 65
I-18 (26-GRY)	Center of I/P 66
I-21 (3-NAT)	Left side of I/P 55
I-23 (16-GRN)	Top of meter assembly 54
I-35 (13-BLK)	Under left side of I/P 49
Ground	
B-9	Under center console 71

Circuit Operation

The C-4 TAIL fuse applies battery voltage at all times to the taillamp relay. When the lamp switch is in the HEAD or PARK position, the lamp switch provides ground to the taillamp relay. The taillamp relay energizes, providing battery voltage to the dash and console lamps. The brightness of the lamps is controlled by the illumination controller. The illumination controller is a solid-state device which controls the ground path provided to the lamps.