


TRAILER ADAPTER

Component Index


- [Brake Switch](#)
- [Dash Fuse Box](#)
- [Flasher Unit](#)
- [Fuse/Relay Box](#)
- [Taillamp Relay](#)
- [Trailer Connector](#)

TRAILER ADAPTER

Circuit Schematic

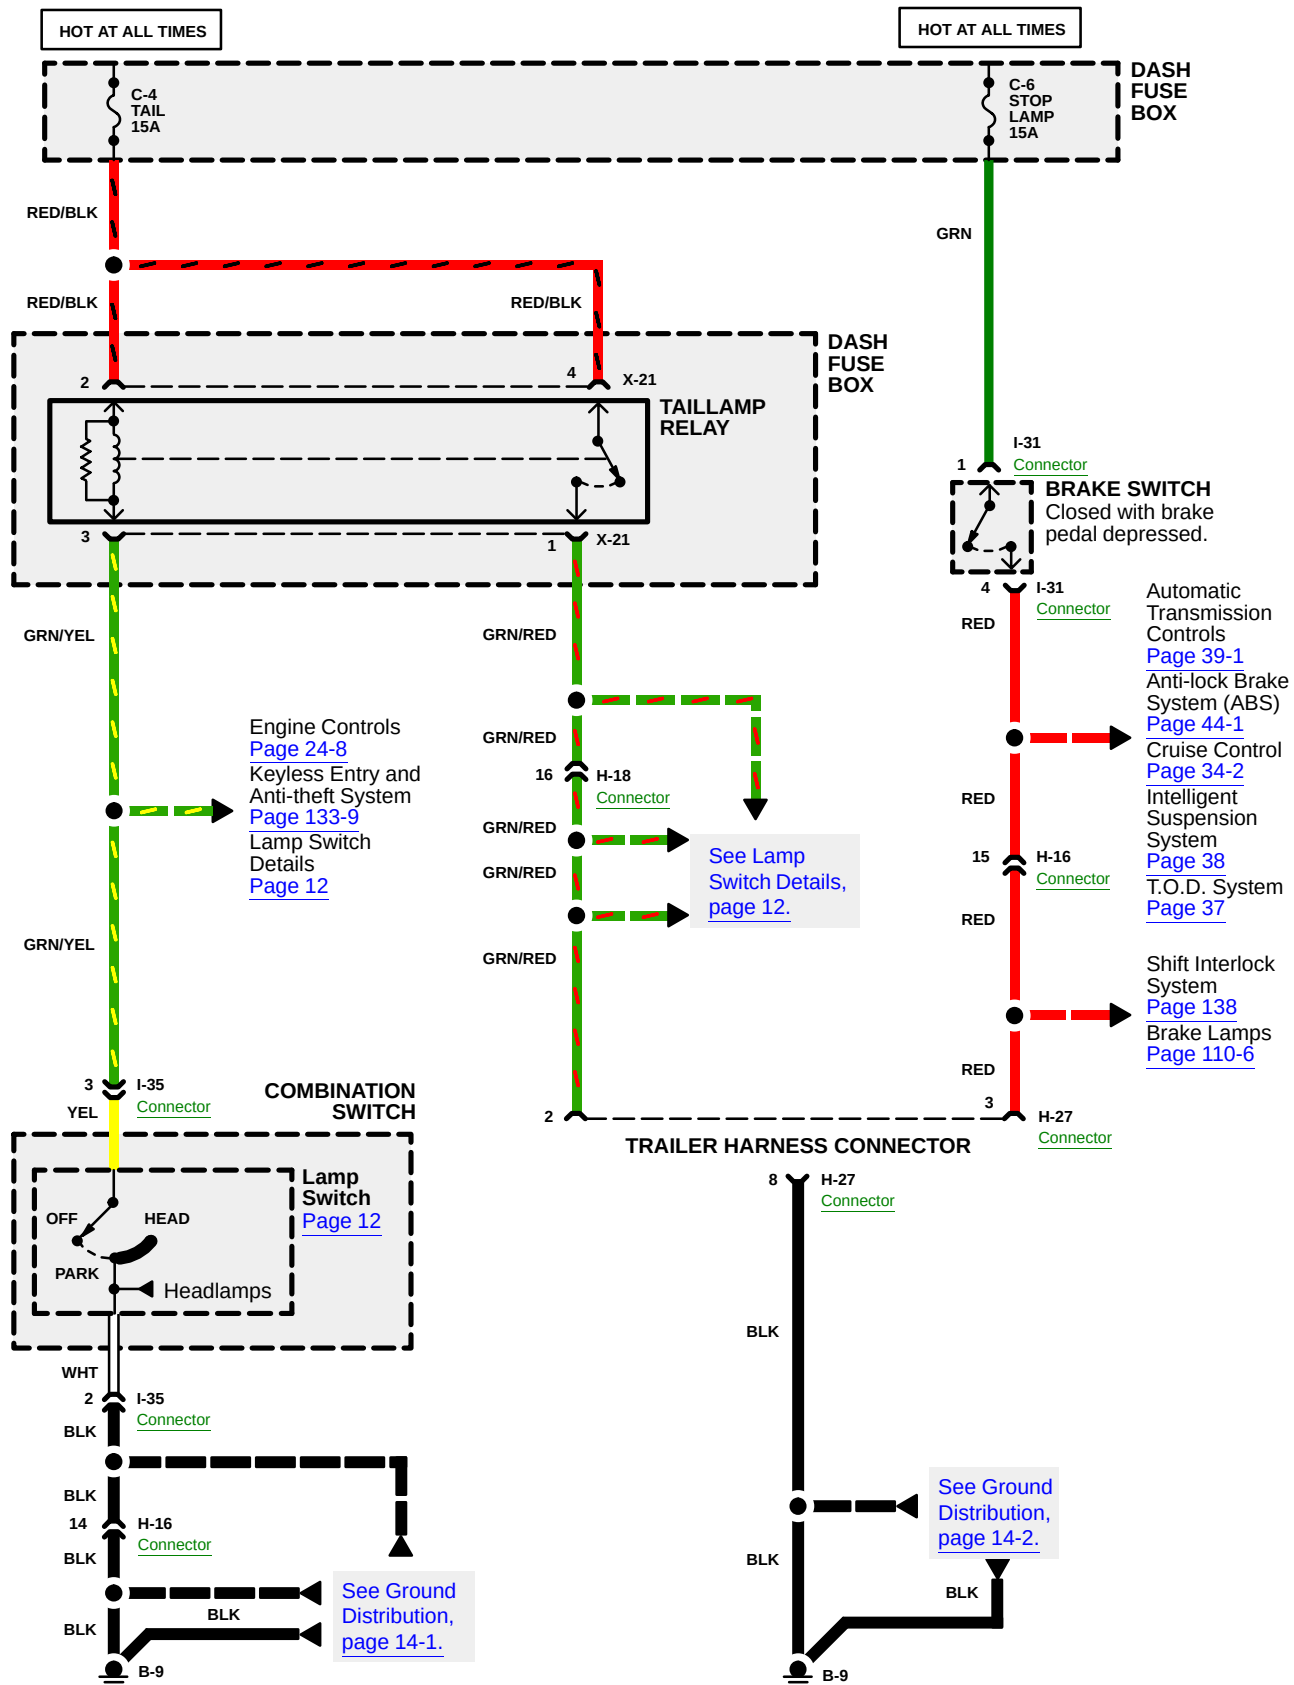

Circuit Schematic

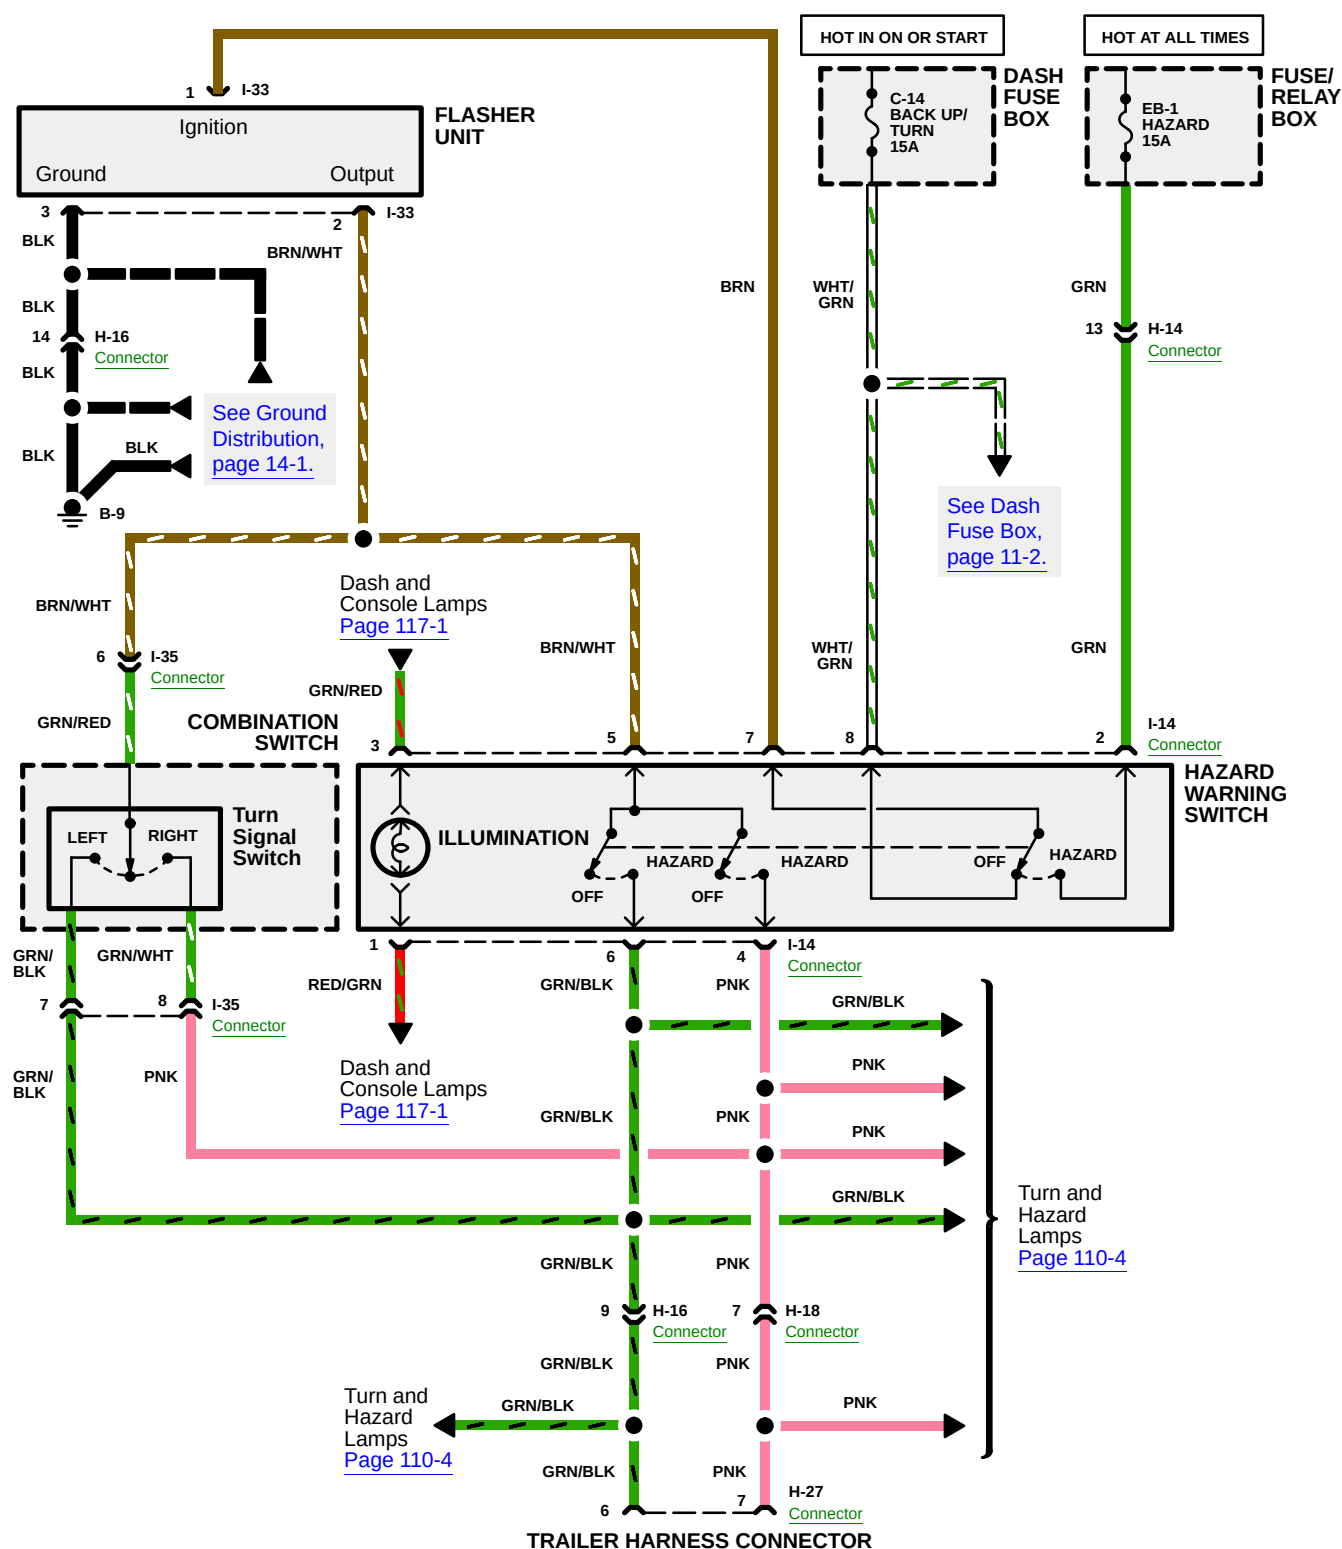

TRAILER ADAPTER

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Brake Switch	Below left side of I/P 51
Dash Fuse Box	Behind left I/P side trim panel 42
Flasher Unit	Behind left side of I/P, above kick panel 48
Fuse/Relay Box	Right side of engine compartment 8
Taillamp Relay	In the dash fuse box 44
Trailer Connector	Left rear cargo compartment 88
Connector	
H-14 (19-BLK)	Behind right kick panel 62
H-16 (16-WHT)	Behind left kick panel 46
H-18 (22-BLK)	Behind right kick panel 61
H-19 (22-WHT)	Below driver's seat 56
H-27 (8-WHT)	Trailer harness connector
I-33 (3-WHT)	Under left side of I/P
I-35 (13-BLK)	Under left side of I/P 49
Ground	
B-9	Under center console 71

Circuit Operation

The trailer connector is an extension of the main wiring harness. See corresponding exterior lamps cell for circuit operation.