


IMMOBILIZER SYSTEM

Component Index

- [Data Link Connector \(DLC\) C-39 \(16-BLK\)](#)
- [Immobilizer Antenna Coil](#)
- [Immobilizer Control Unit](#)
- [Meter Assembly](#)
- [Vehicle Speed Sensor](#)

IMMOBILIZER SYSTEM

Circuit Schematic

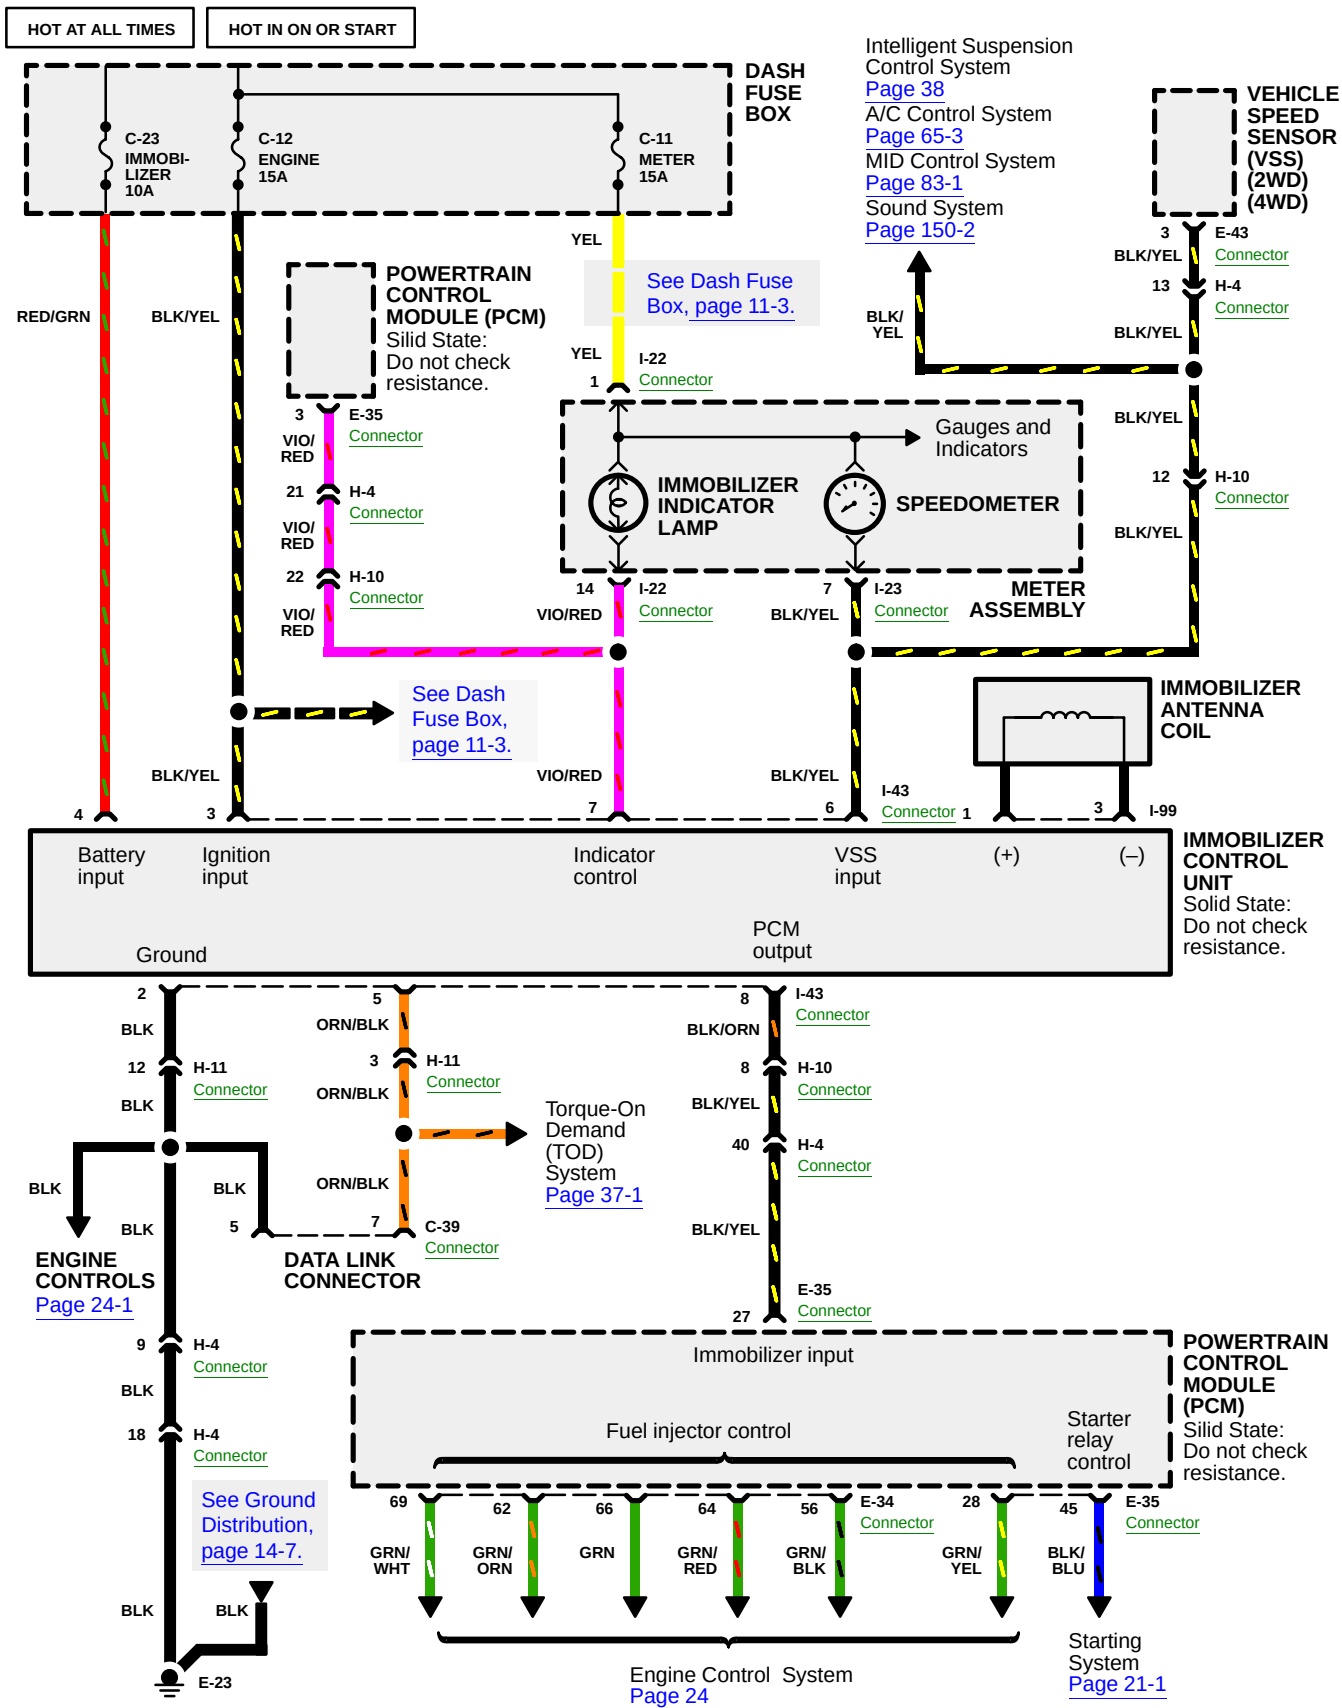

IMMOBILIZER SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Data Link Connector (DLC)		
C-39 (16-BLK)	Below left side of I/P, near hood release	45
Immobilizer Antenna Coil	In right side of steering column, around ignition lock cylinder	121
Immobilizer Control Unit	Below right side of center console	118
Meter Assembly	Left side of I/P	55
PCM Main Relay	In the fuse & relay box	12
Vehicle Speed Sensor (2WD) ...	Right side of transmission	99
Vehicle Speed Sensor (4WD) ...	Rear of transfer case	109
<u>Connector</u>		
H-4 (52-GRY)	Left side of engine compartment	31
H-10 (22-BLU)	Behind left kick panel	46
H-11 (19-BLK)	Behind left kick panel	46
<u>Ground</u>		
E-23	Right side of engine	19