


POWER SEATS

Component Index

[Dash Fuse Box](#)


POWER SEATS

Circuit Schematic

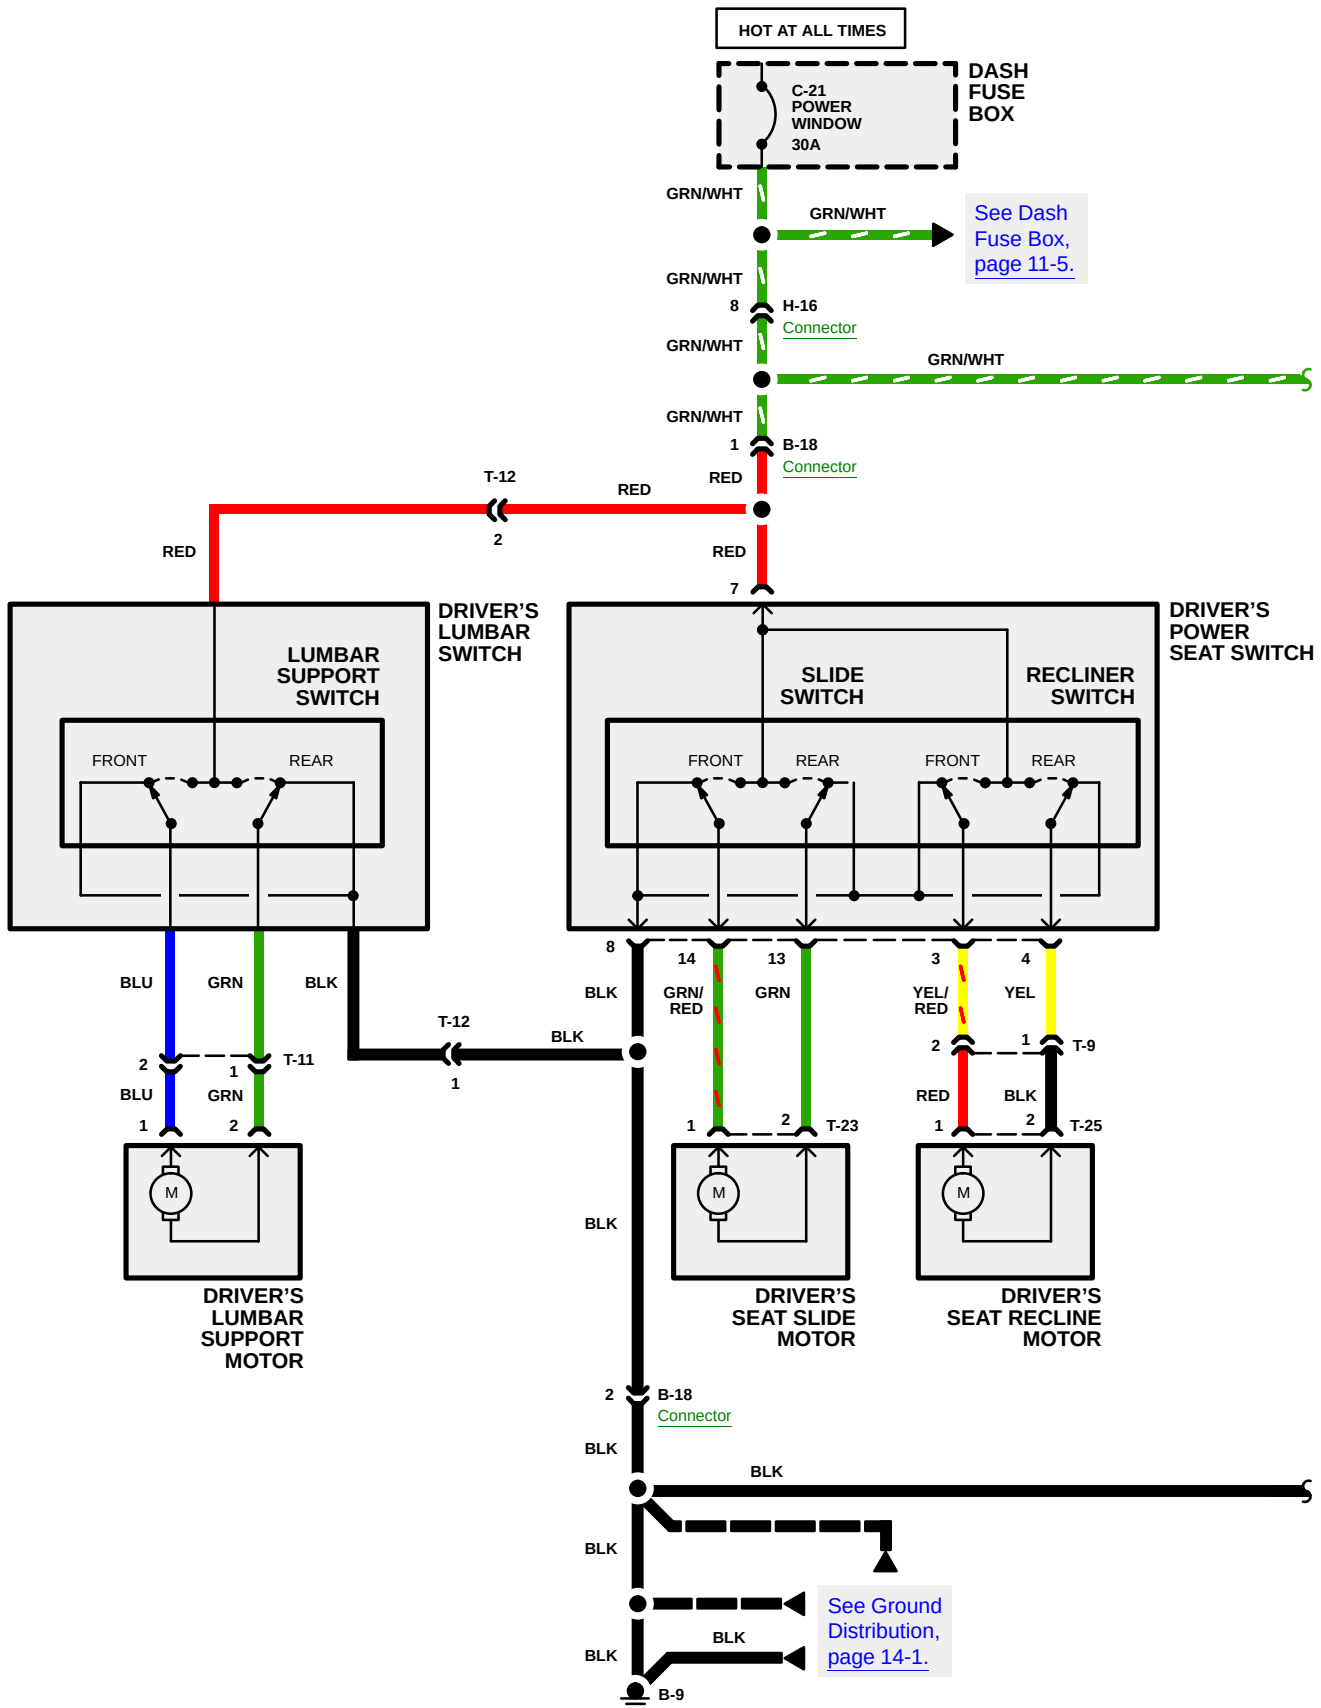

POWER SEATS

Circuit Schematic

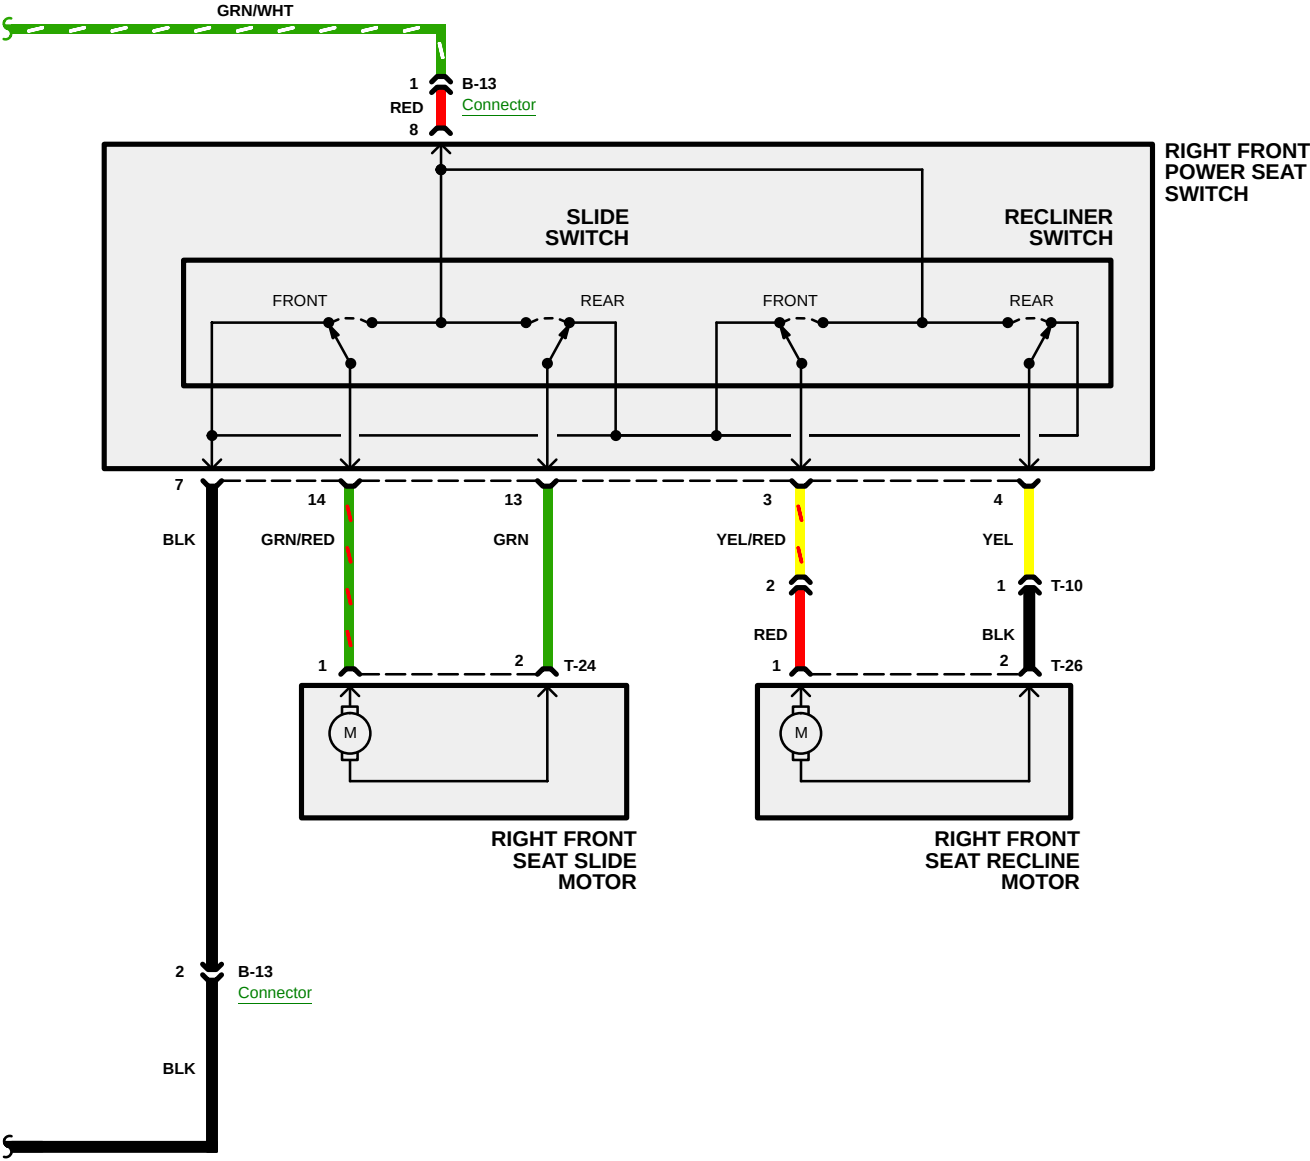

POWER SEATS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Dash Fuse Box Behind left I/P side trim panel	42
Connector	
B-13 (6-WHT) Under passenger seat	116
B-18 (6-WHT) Under driver's seat	116
H-16 (16-WHT) Behind left kick panel	46
T-9 (2-GRY) Right side of front passenger's seat	117
T-10 (2-GRY) Left side driver's seat	117
T-11 (2-NAT) Under driver's seat	115
T-12 (2-NAT) Under driver's seat	115
T-23 (2-GRY) Under driver's seat	116
T-24 (2-GRY) Under front passenger's seat	116
T-25 (2-BLK) Left side of driver's seat	117
T-26 (2-BLK) Right side of driver's seat	117
Ground	
B-9 Under center console	71

Circuit Operation

The circuit breaker C-21 POWER WINDOW applies battery voltage at all times to the driver's and right front power seat switches.

Recline Operation

When the respective recliner switch is moved to FRONT, battery voltage is applied to the respective recliner motor. The motor is grounded through the rear contact of the recline switch and the recliner motor's limit switch to B-9. The motor will run until the recline switch is released or the seat reaches the full recline position and the motor's limit switch opens. The contacts for REAR operation of the recline switch are wired the opposite way of the FRONT contacts, causing the motor to run in the opposite direction.

Slide Operation

When the tilt & slide switch (driver's) or slide switch (right front) is moved to FRONT, battery voltage is applied to the respective slide motor. The motor is grounded through the REAR contact of the slide switch to B-9. The motor will run until the slide switch is released. The contacts for REAR operation of the slide switch are wired the opposite way of the FRONT contacts, causing the motor to run in the opposite direction.