


SOUND SYSTEM

Component Index

- Audio and Switch Assembly
- Auto A/C Control Unit
- Dash Fuse Box
- MID Display
- Vehicle Speed Sensor


SOUND SYSTEM

Circuit Schematic

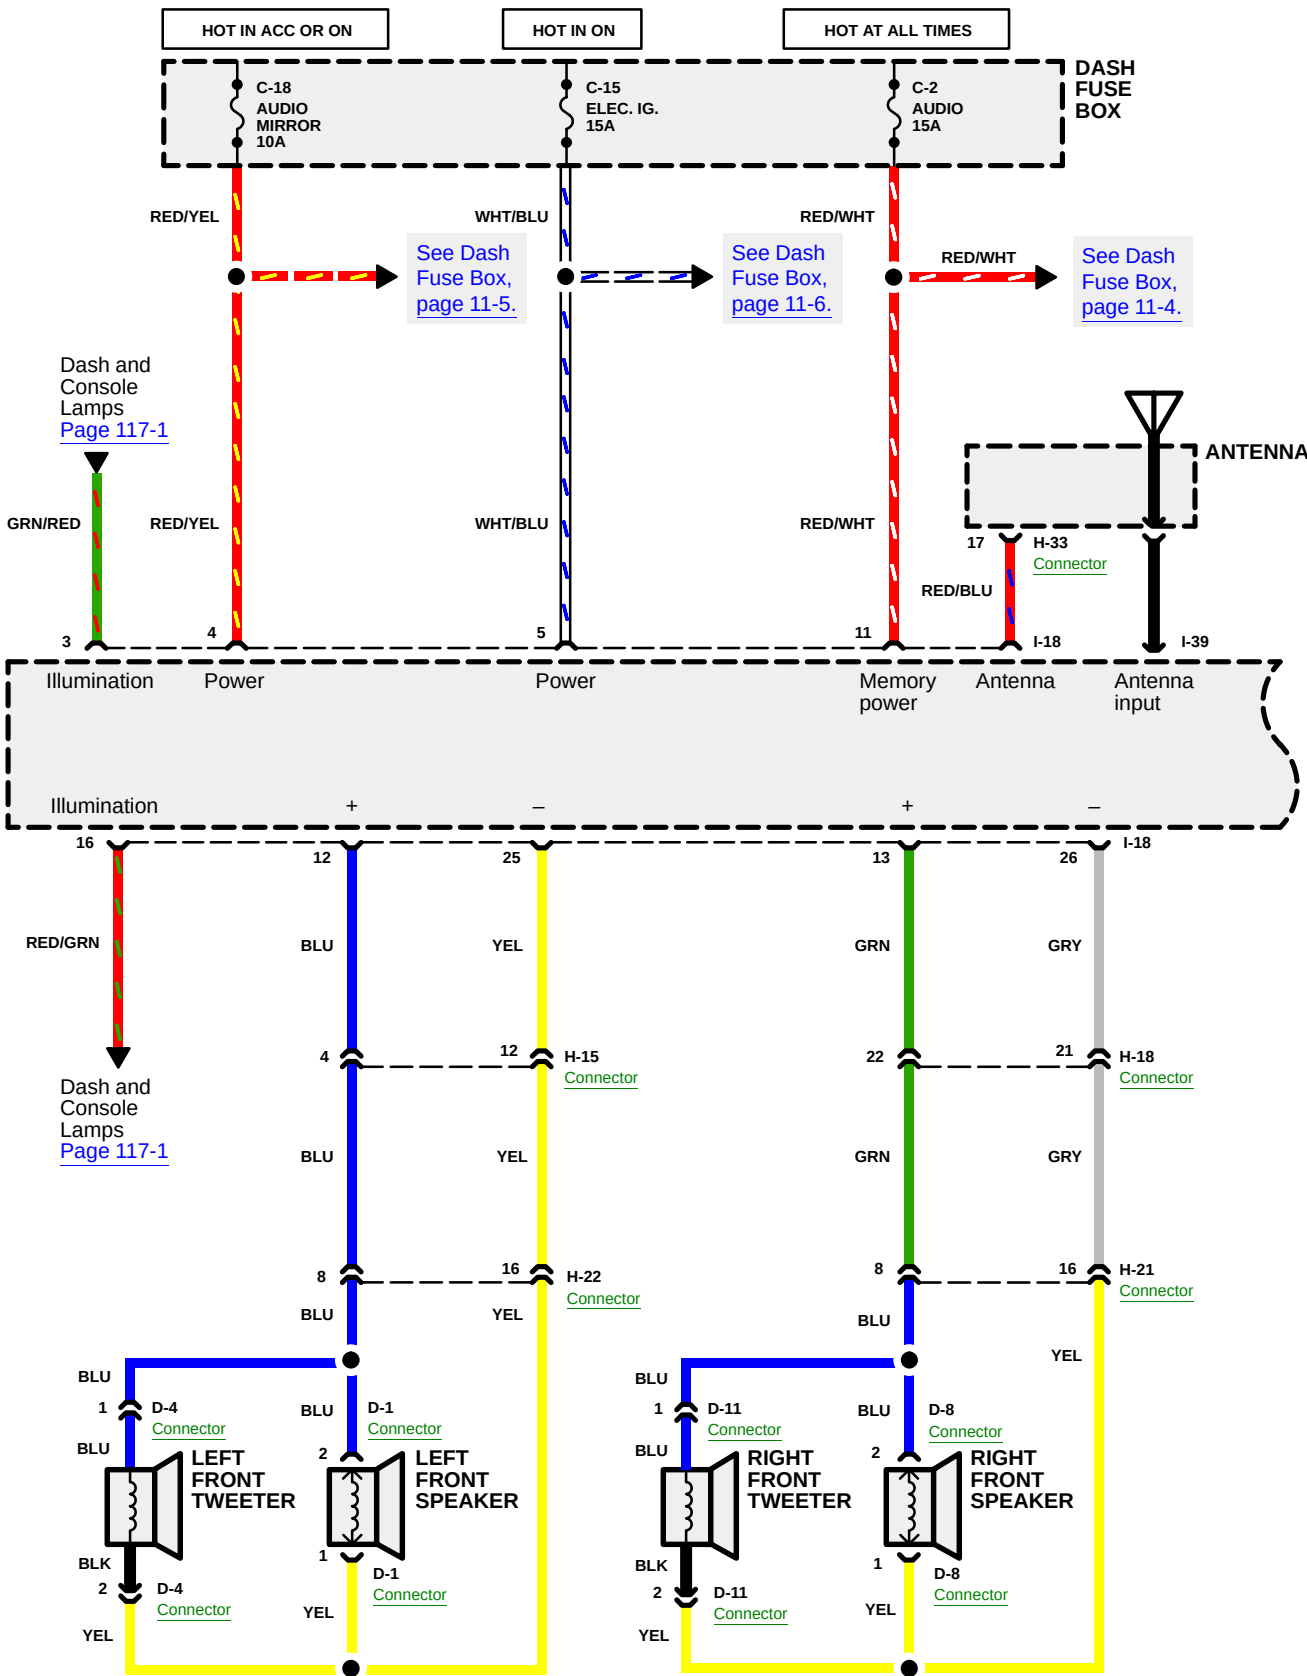


SOUND SYSTEM

Circuit Schematic

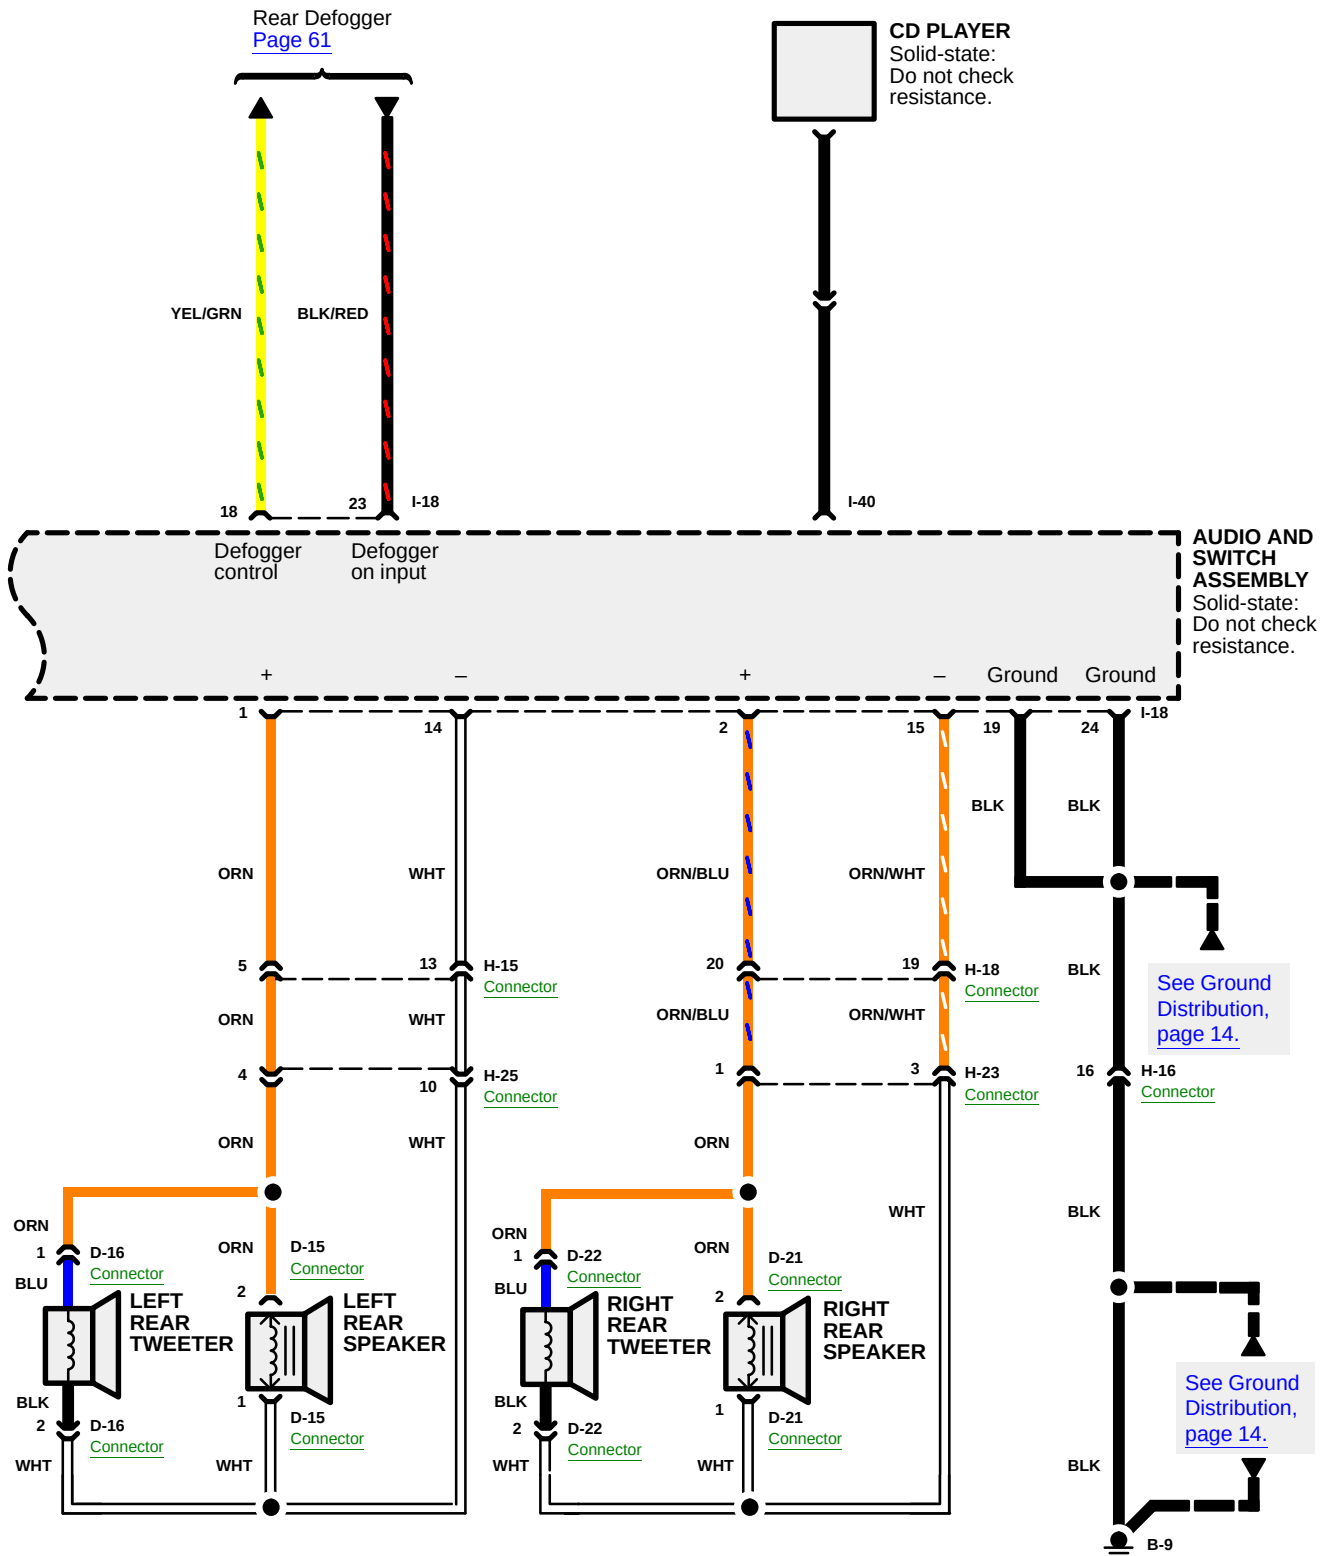

SOUND SYSTEM

Circuit Schematic

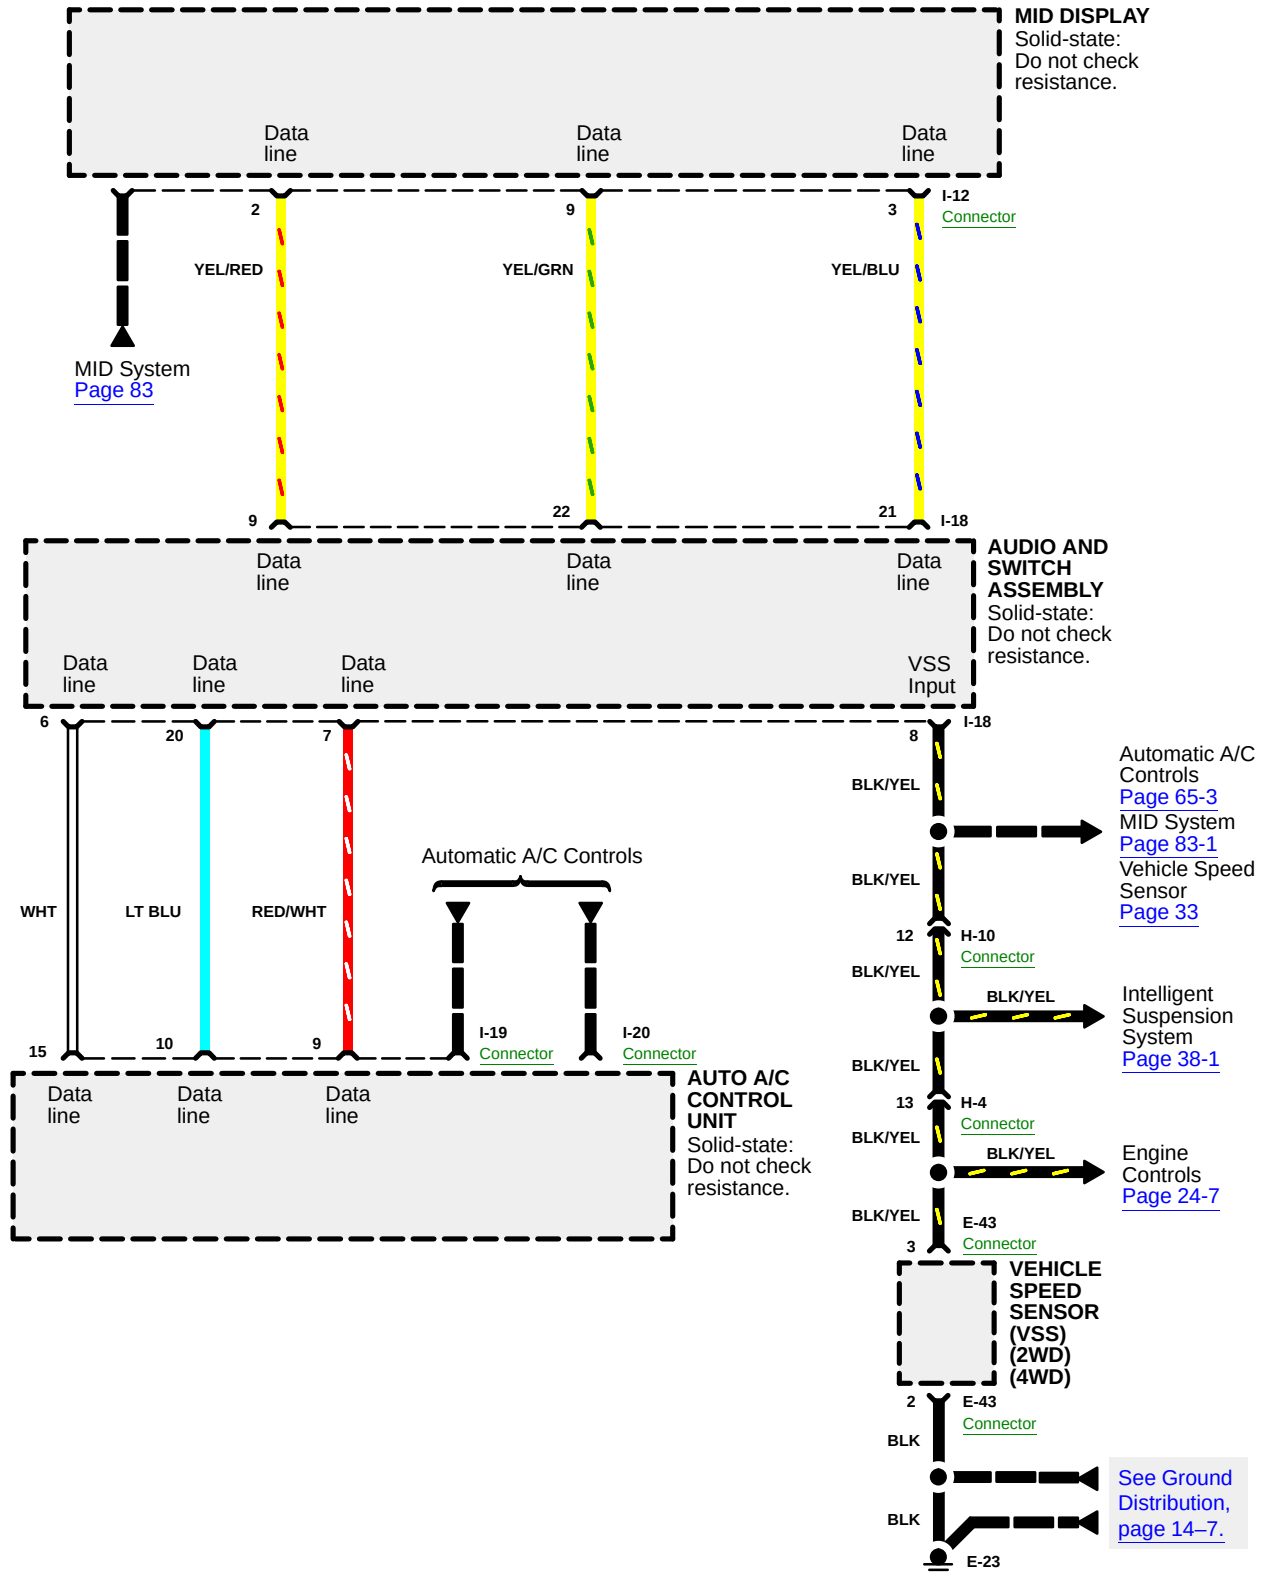

SOUND SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Audio and Switch Assembly	Center of I/P
Auto A/C Control Unit	Center of I/P
Dash Fuse Box	Behind left I/P side trim panel 42
MID Display	Center of I/P 65
Vehicle Speed Sensor (2WD) . . .	Right side of transmission 99
Vehicle Speed Sensor (4WD) . . .	Rear of transfer case 109
Connector	
D-4 (2-WHT)	Left front door 82
D-11 (2-WHT)	Right front door 82
H-4 (52-GRY)	Left side of engine compartment 31
H-10 (22-BLK)	Behind left kick panel 46
H-15 (22-WHT)	Behind left kick panel 47
H-16 (16-WHT)	Behind left kick panel 46
H-18 (22-BLK)	Behind right kick panel 61
H-21 (22-WHT)	Right front door jam 79
H-23 (6-BLK/WHT)	Right "B" pillar 86
H-28 (6-WHT)	Left rear side of roof 91
I-12 (16-WHT)	Center of I/P 65
I-18 (26-GRY)	Center of I/P 66
I-19 (16-GRY)	Center of I/P 66
I-20 (20-GRY)	Center of I/P 66
I-39	Center of I/P 66
I-40	Center of I/P 66
Ground	
B-9	Under center console 71
E-23	Right side of engine 19

Circuit Operation

Battery voltage is supplied through the AUDIO fuse C-2, voltage is applied with the starter switch in ON through the ELEC. IGN. fuse C-15 and voltage is applied with the starter switch in ON or START, through the AUDIO MIRROR fuse C-18. Battery voltage is applied to retain the system memory.

Refer to Section 8C of the Workshop Manual for further diagnosis.