

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

CIGARETTE LIGHTER


Component Index

[Dash Fuse Box](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views	Contd
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------	-----------------------

CIGARETTE LIGHTER

Circuit Schematic

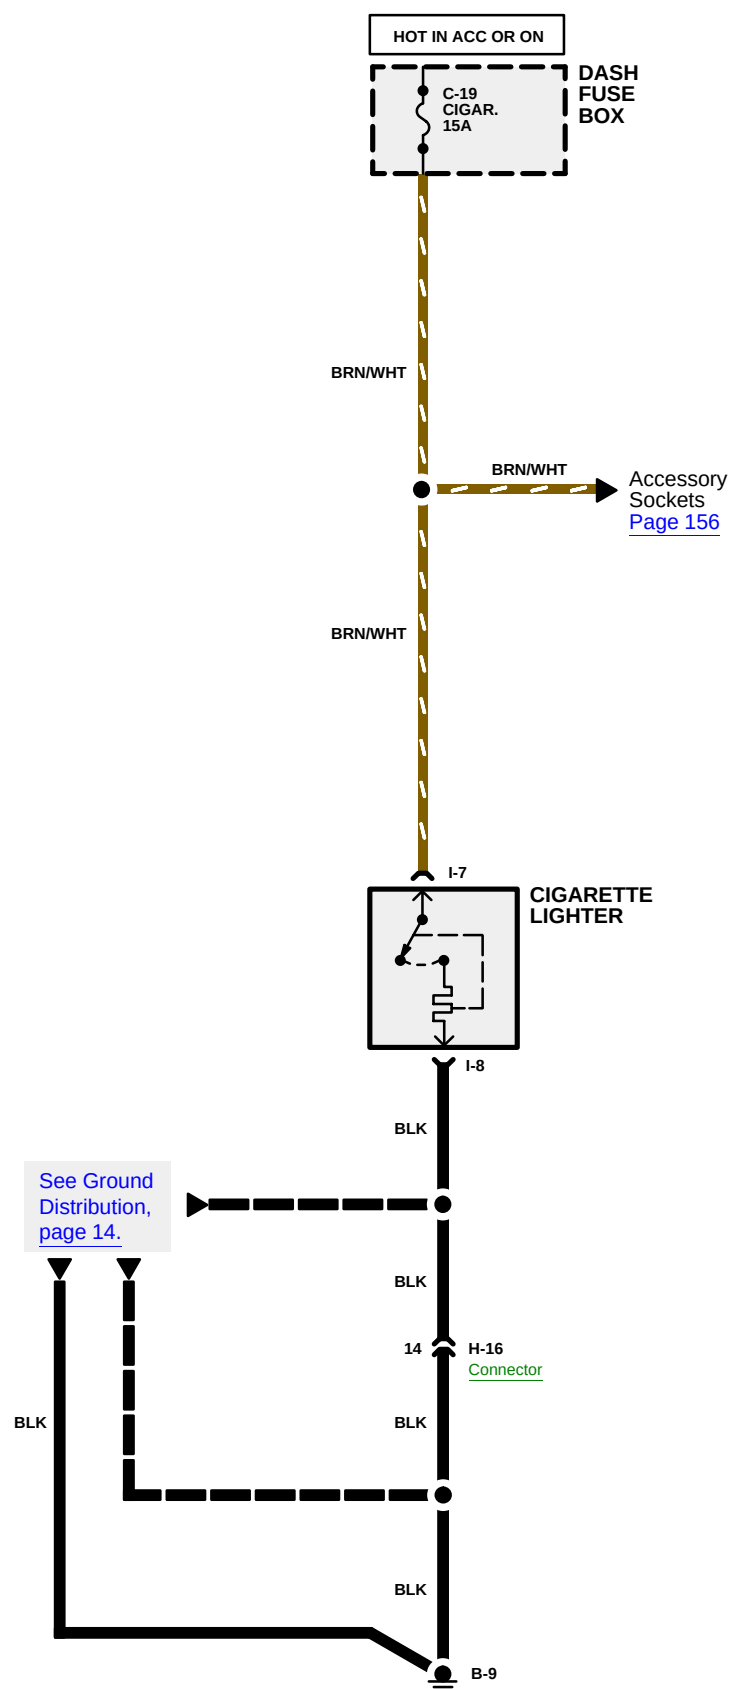

CIGARETTE LIGHTER

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Dash Fuse Box Behind left I/P side trim panel	42
Connector	
H-16 (16-WHT) Behind left kick panel	46
Ground	
B-9 Under center console	71

Circuit Operation

With the starter switch in ACC or ON, battery voltage is applied to the cigarette lighter through the C-19 CIGAR. fuse. When the cigarette lighter is depressed, the cigarette lighter element completes the circuit to ground. When the element becomes sufficiently heated, it is spring-released and the circuit opens.