

ACCESSORY SOCKETS


Component Index

[Accessory Socket Relay](#)

[Dash Fuse Box](#)

ACCESSORY SOCKETS

Circuit Schematic

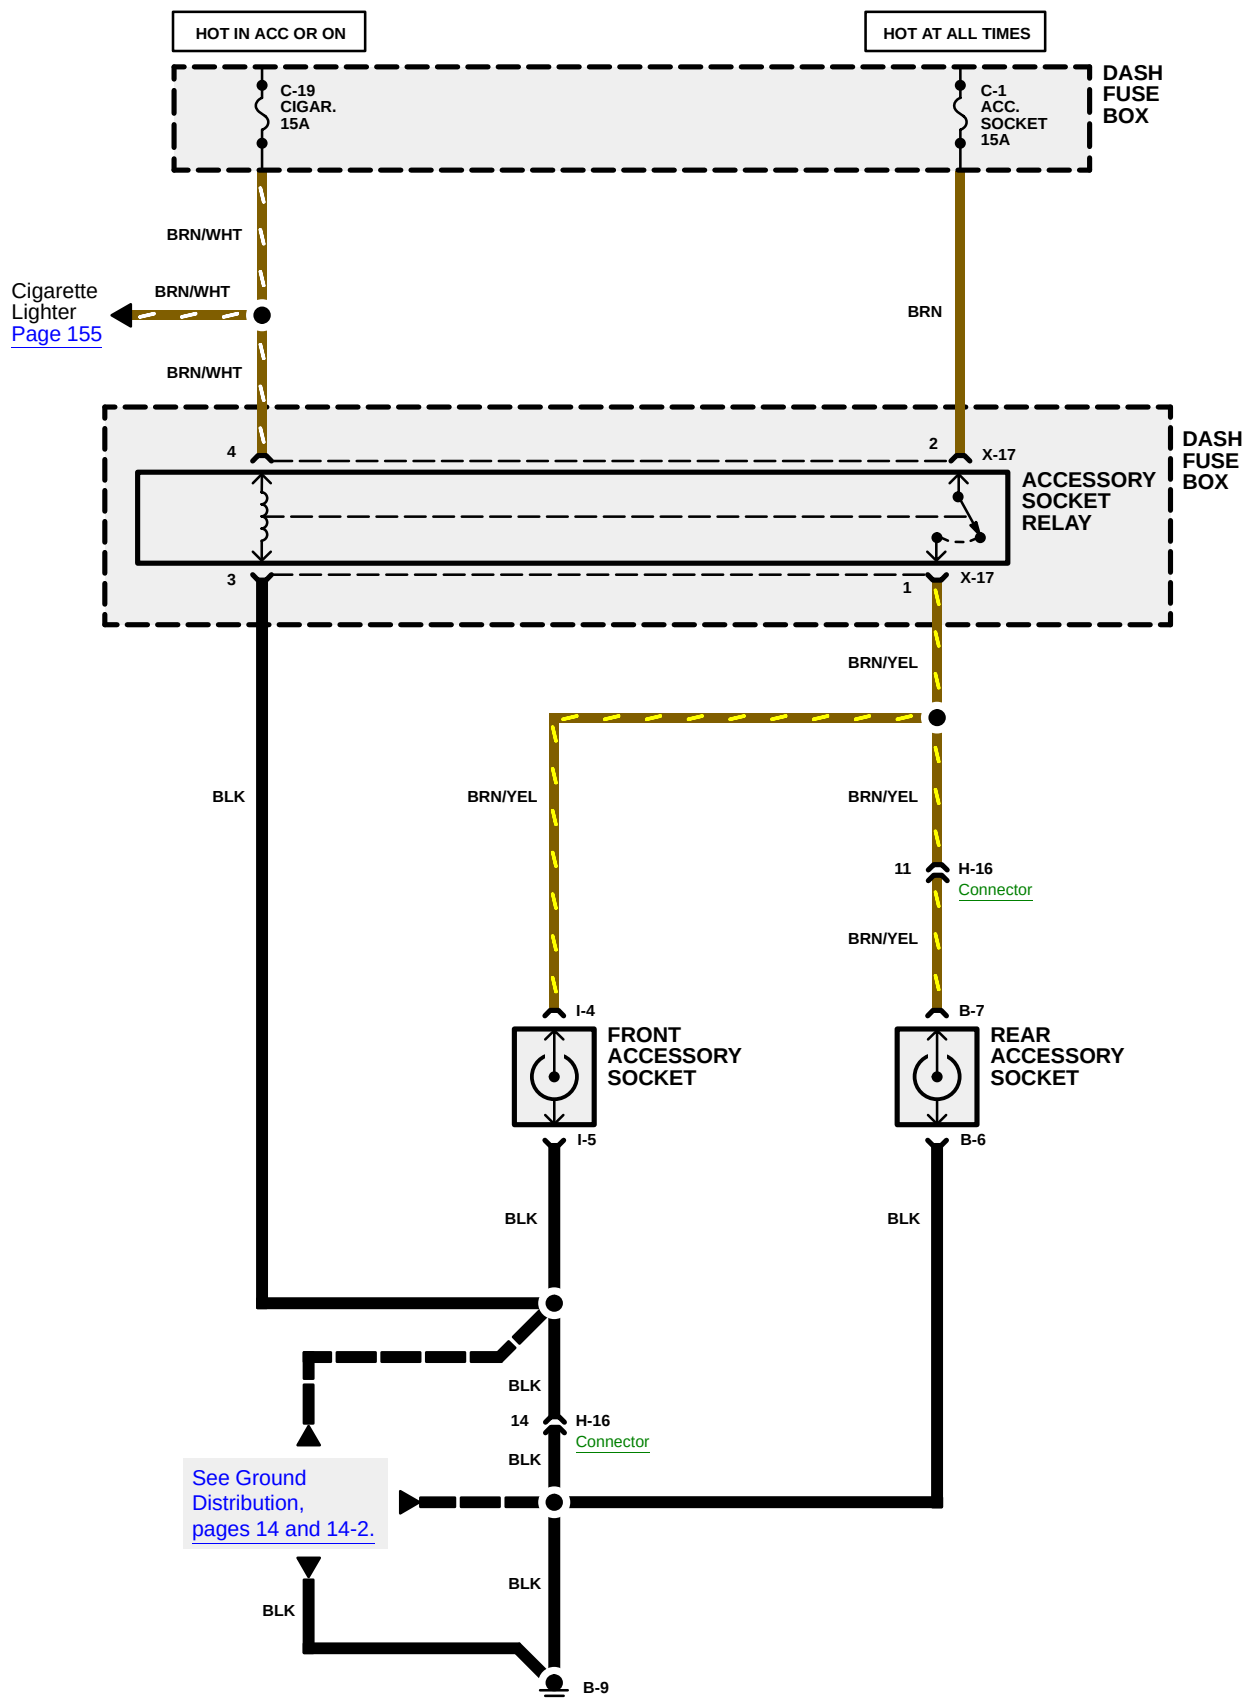

156-0

ACCESSORY SOCKETS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Accessory Socket Relay In the dash fuse box	43
Dash Fuse Box Behind left I/P side trim panel	42
Connector	
B-6 (1-NAT) Left rear of cargo compartment	88
B-7 (1-NAT) Left rear of cargo compartment	88
H-16 (16-WHT) Behind left kick panel	46
Ground	
B-9 Under center console	71

Circuit Operation

With the starter switch in ACC or ON, the accessory socket relay is energized from the C-19 CIGAR. fuse, applying voltage from the C-1 ACC. SOCKET fuse to the front and rear accessory sockets.