


POWER DISTRIBUTION

Component Index

- [Condenser Fan Relay](#)
- [Dash Fuse Box](#)
- [Data Link Connector \(DLC\) C-63](#)
- [Electronic Brake Control Module \(EBCM\)](#)
- [Fuel Pump Relay](#)
- [Fuse/Relay Box](#)
- [Generator](#)
- [Headlight Relay](#)
- [Heater and A/C Relay](#)
- [Horn Relay](#)
- [PCM Main Relay](#)
- [Powertrain Control Module \(PCM\)](#)
- [Starter](#)


POWER DISTRIBUTION

Circuit Schematic

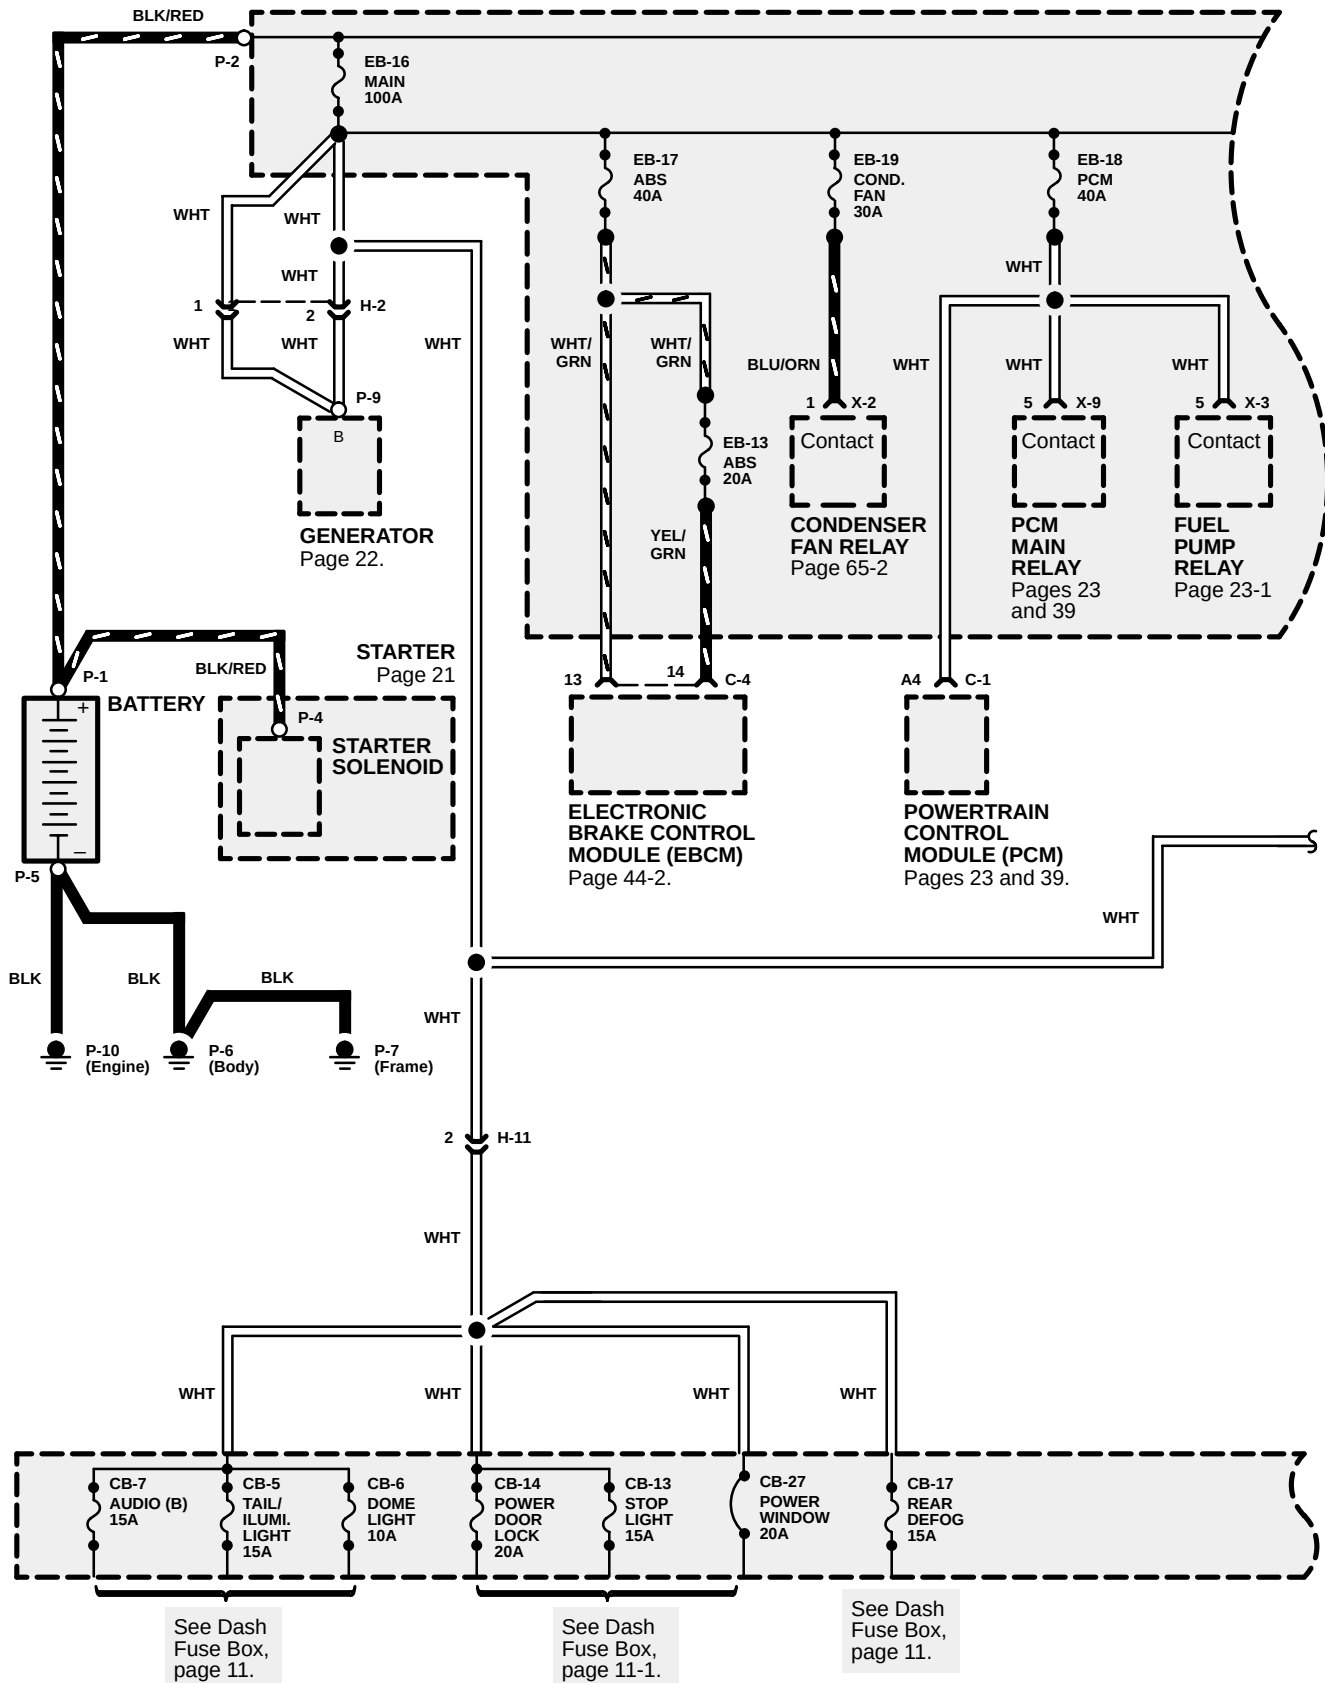

POWER DISTRIBUTION

Circuit Schematic

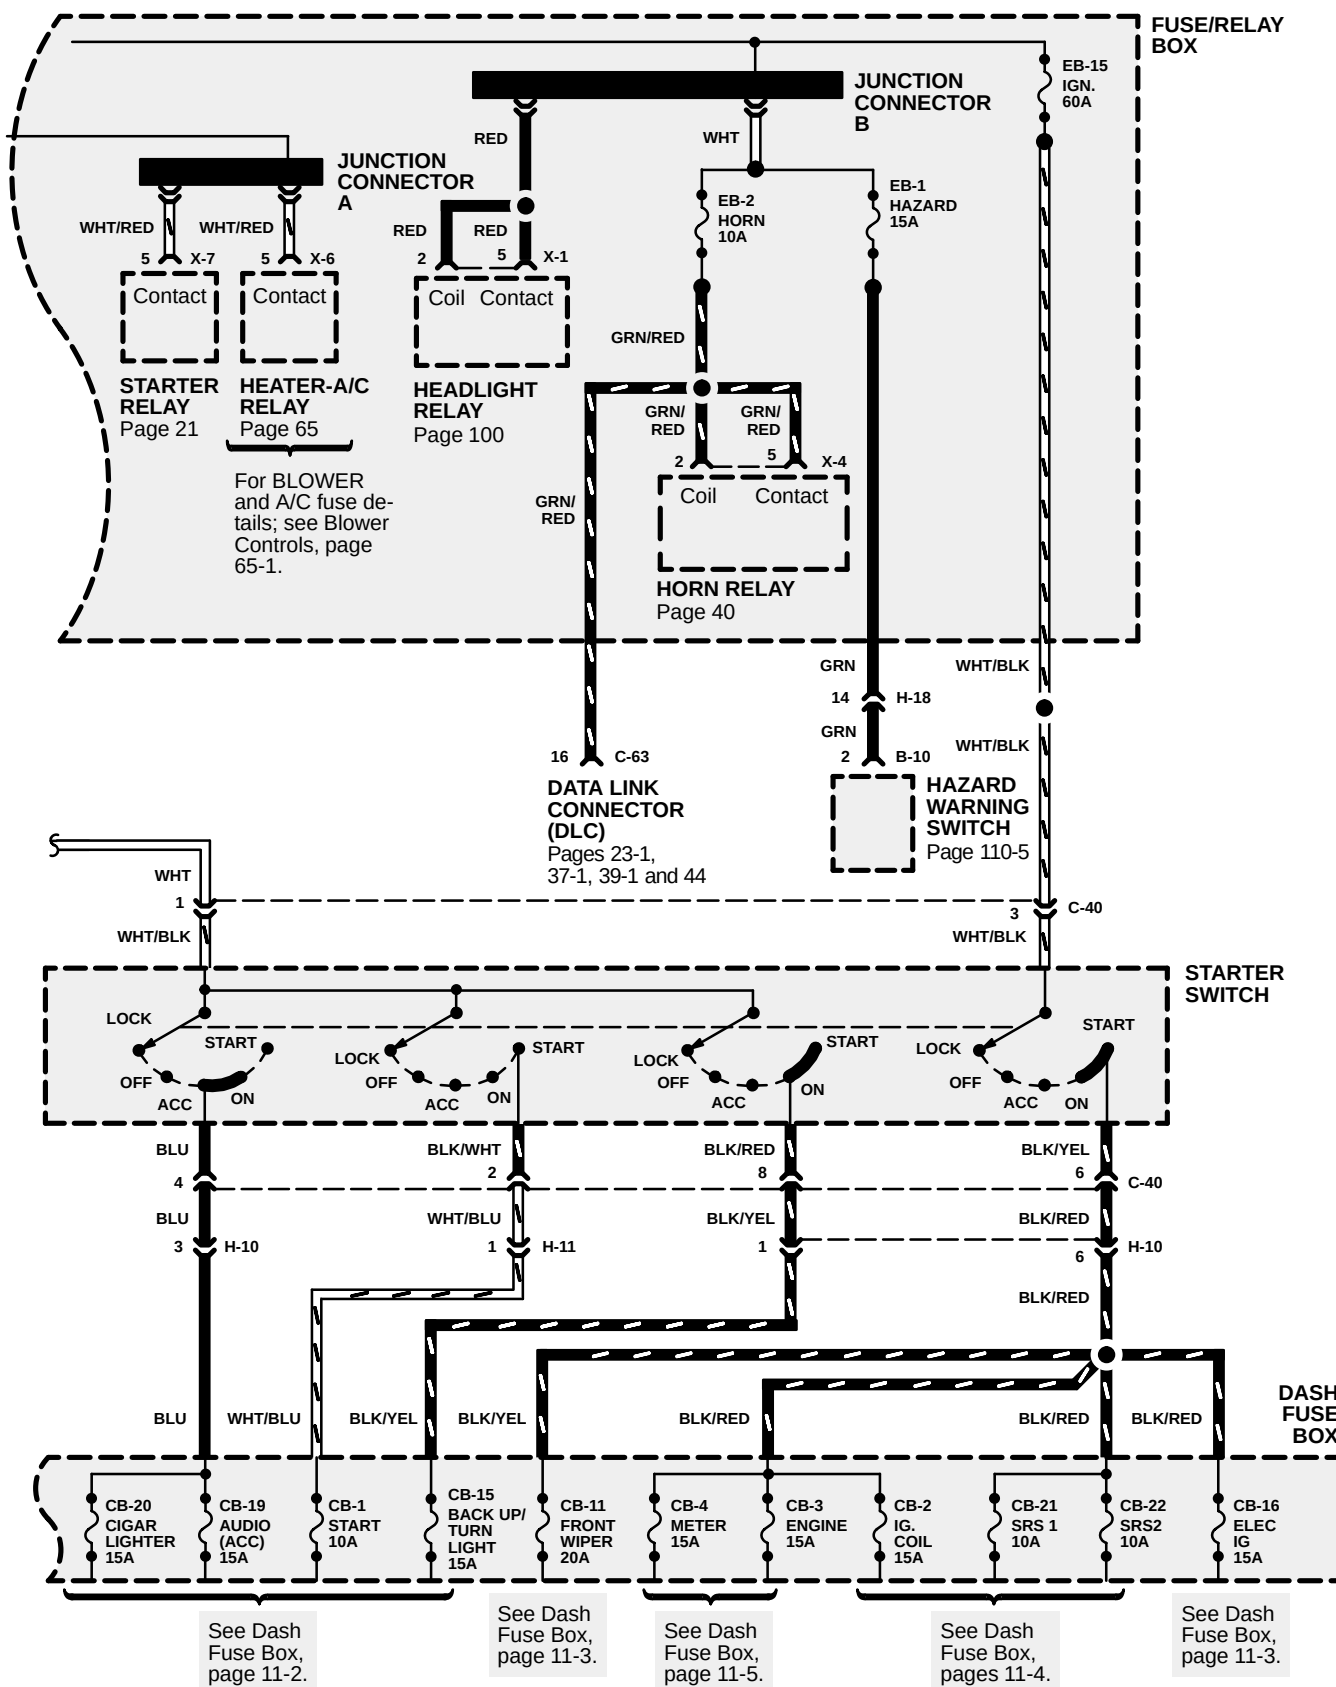

POWER DISTRIBUTION

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Condenser Fan Relay	Right side of engine compartment, in fuse/relay box 19
Dash Fuse Box	Behind left I/P side trim panel 36
Data Link Connector (DLC) C-63	Below left side of I/P, near engine hood release 38
Electronic Brake Control Module (EBCM)	In right rear of engine compartment 23
Fuel Pump Relay	Right side of engine compartment, in fuse/relay box 19
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 18
Generator	Lower right front of engine 11
Headlight Relay	Right side of engine compartment, in fuse/relay box 19
Heater and A/C Relay	Right side of engine compartment, in fuse/relay box 20
Horn Relay	Right side of engine compartment, in fuse/relay box 19
PCM Main Relay	Right side of engine compartment, in fuse/relay box 21
Powertrain Control Module (PCM)	Behind front console 52
Starter	Lower left rear of engine 35
<u>Connector</u>	
C-40 (8-BRN)	Behind lower left I/P, right of steering column 47
H-2 (2-GRY)	Right side of engine compartment, on bracket 22
H-10 (6-CLR)	Below left side of I/P, above left kick panel 45
H-11 (2-BLK)	Behind left side of I/P, above left kick panel on bracket 43
H-18 (20-WHT)	Behind I/P right side panel 58
Junction Connector A	Right side of engine compartment, in fuse/relay box
Junction Connector B	Right side of engine compartment, in fuse/relay box
P-1	On battery 18
P-2	In fuse/relay box 20
P-5	On battery 18
<u>Ground</u>	
P-6	Right side of engine compartment, on rear of battery tray 22
P-7	Lower right front of engine compartment, on frame rail 11
P-10	Lower right side of engine, above alternator 11