


DASH FUSE BOX

Component Index

Automatic Heater-A/C Control Unit	No. 4 Ignition Coil
A/T Shift Indicator Control Unit	No. 5 Ignition Coil
Anti-theft and Keyless Entry Control Unit	No. 6 Ignition Coil
Automatic Transmission Mode Switch	PCM Main Relay
Noise Suppression Filter #1	Power Window Relay
Condenser	Powertrain Control Module (PCM)
Cruise Control Unit	Rear Defogger Relay
Dash Fuse Box	Sensing and Diagnostic Module (SDM)
Electronic Brake Control Module (EBCM)	Shift Lock Controller
Evaporative Emission (EVAP) Canister Cut Valve	Starter Cut Relay
Evaporative Emission (EVAP) Canister Purge Valve	T.O.D. Control Unit
Exhaust Gas Recirculation (EGR) Solenoid Valve	Taillight Relay
Fuse/Relay Box	Variable Intake Manifold (VIM) Vacuum
Generator	Switching Valve
Mass Air Flow (MAF) Sensor	Vehicle Speed Sensor (VSS)
No. 1 Ignition Coil	Warning Buzzer
No. 2 Ignition Coil	Windshield Wiper Intermittent Relay
No. 3 Ignition Coil	


DASH FUSE BOX

Circuit Schematic

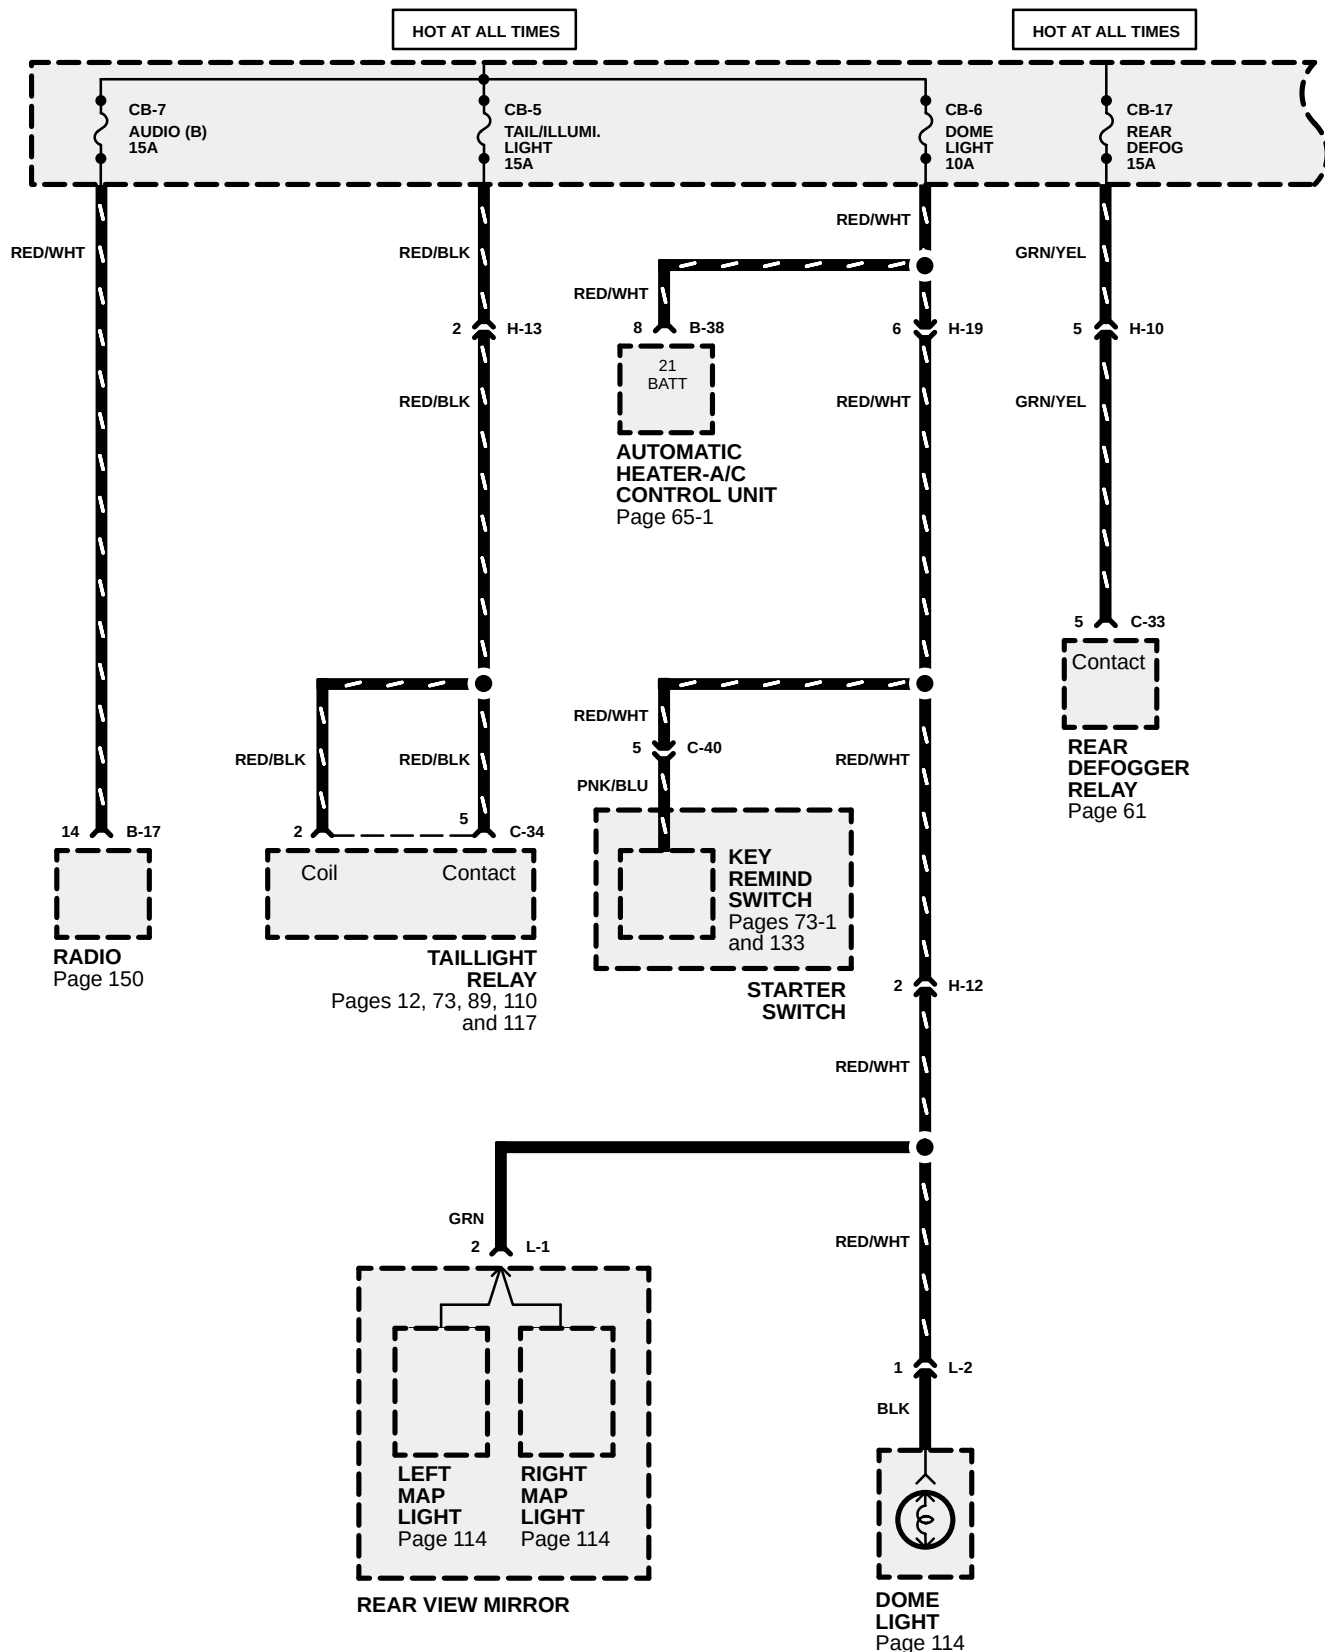


DASH FUSE BOX

Circuit Schematic

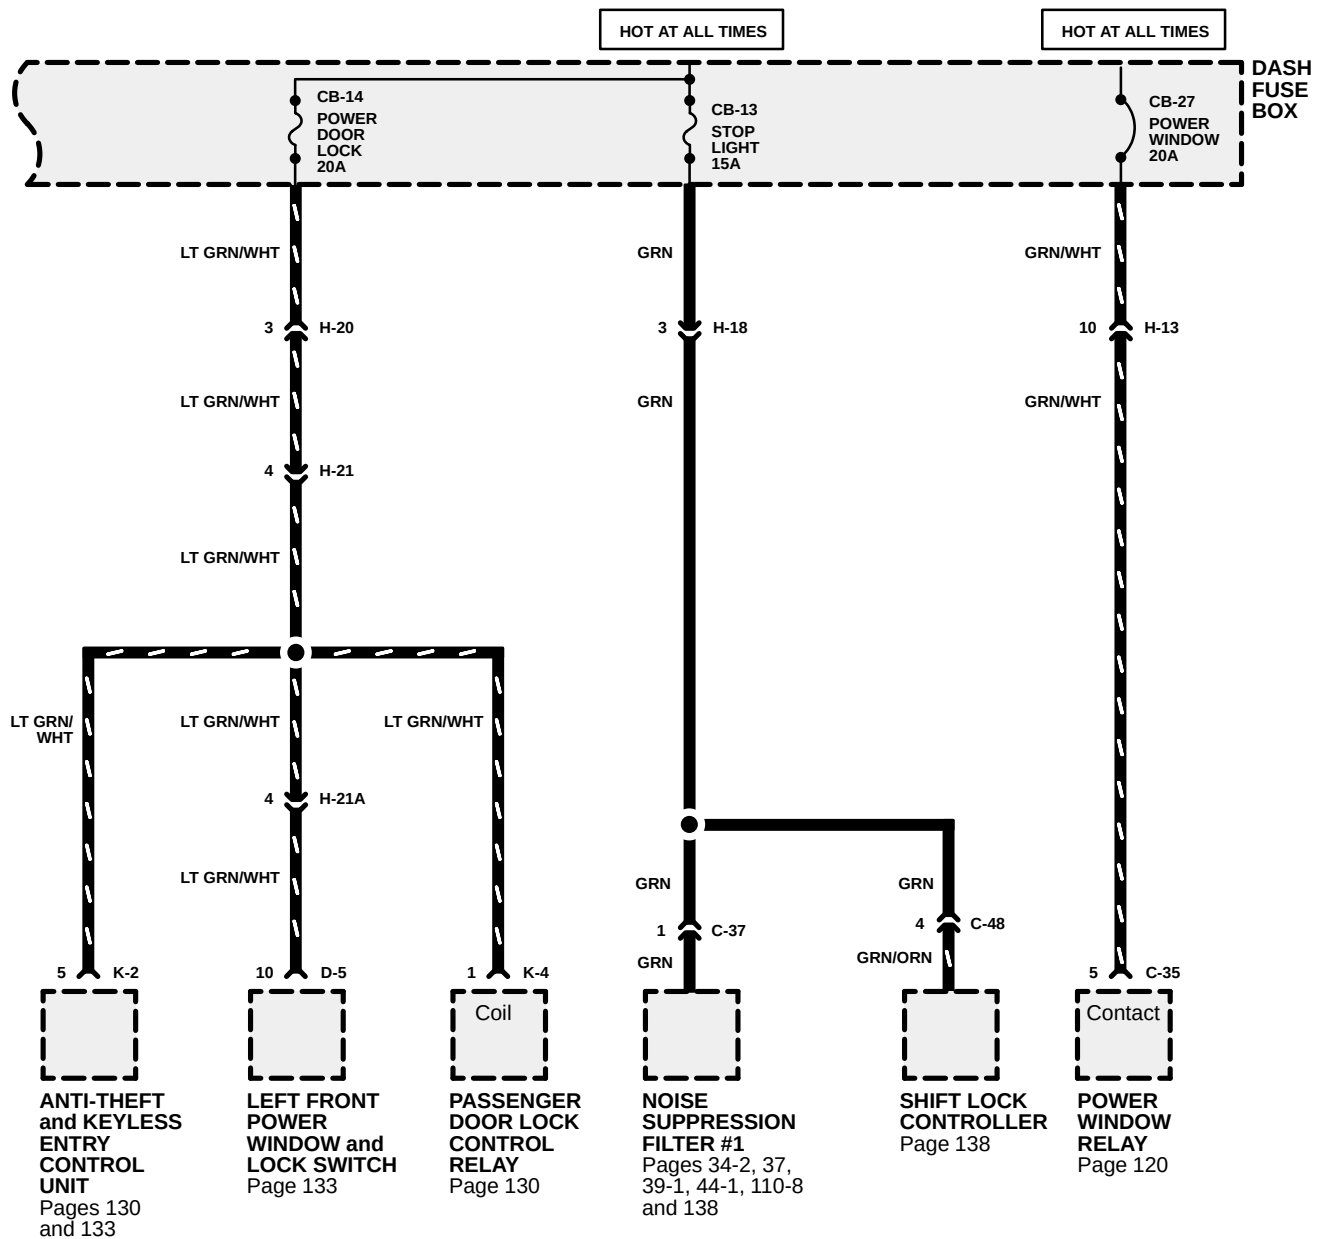


DASH FUSE BOX

Circuit Schematic

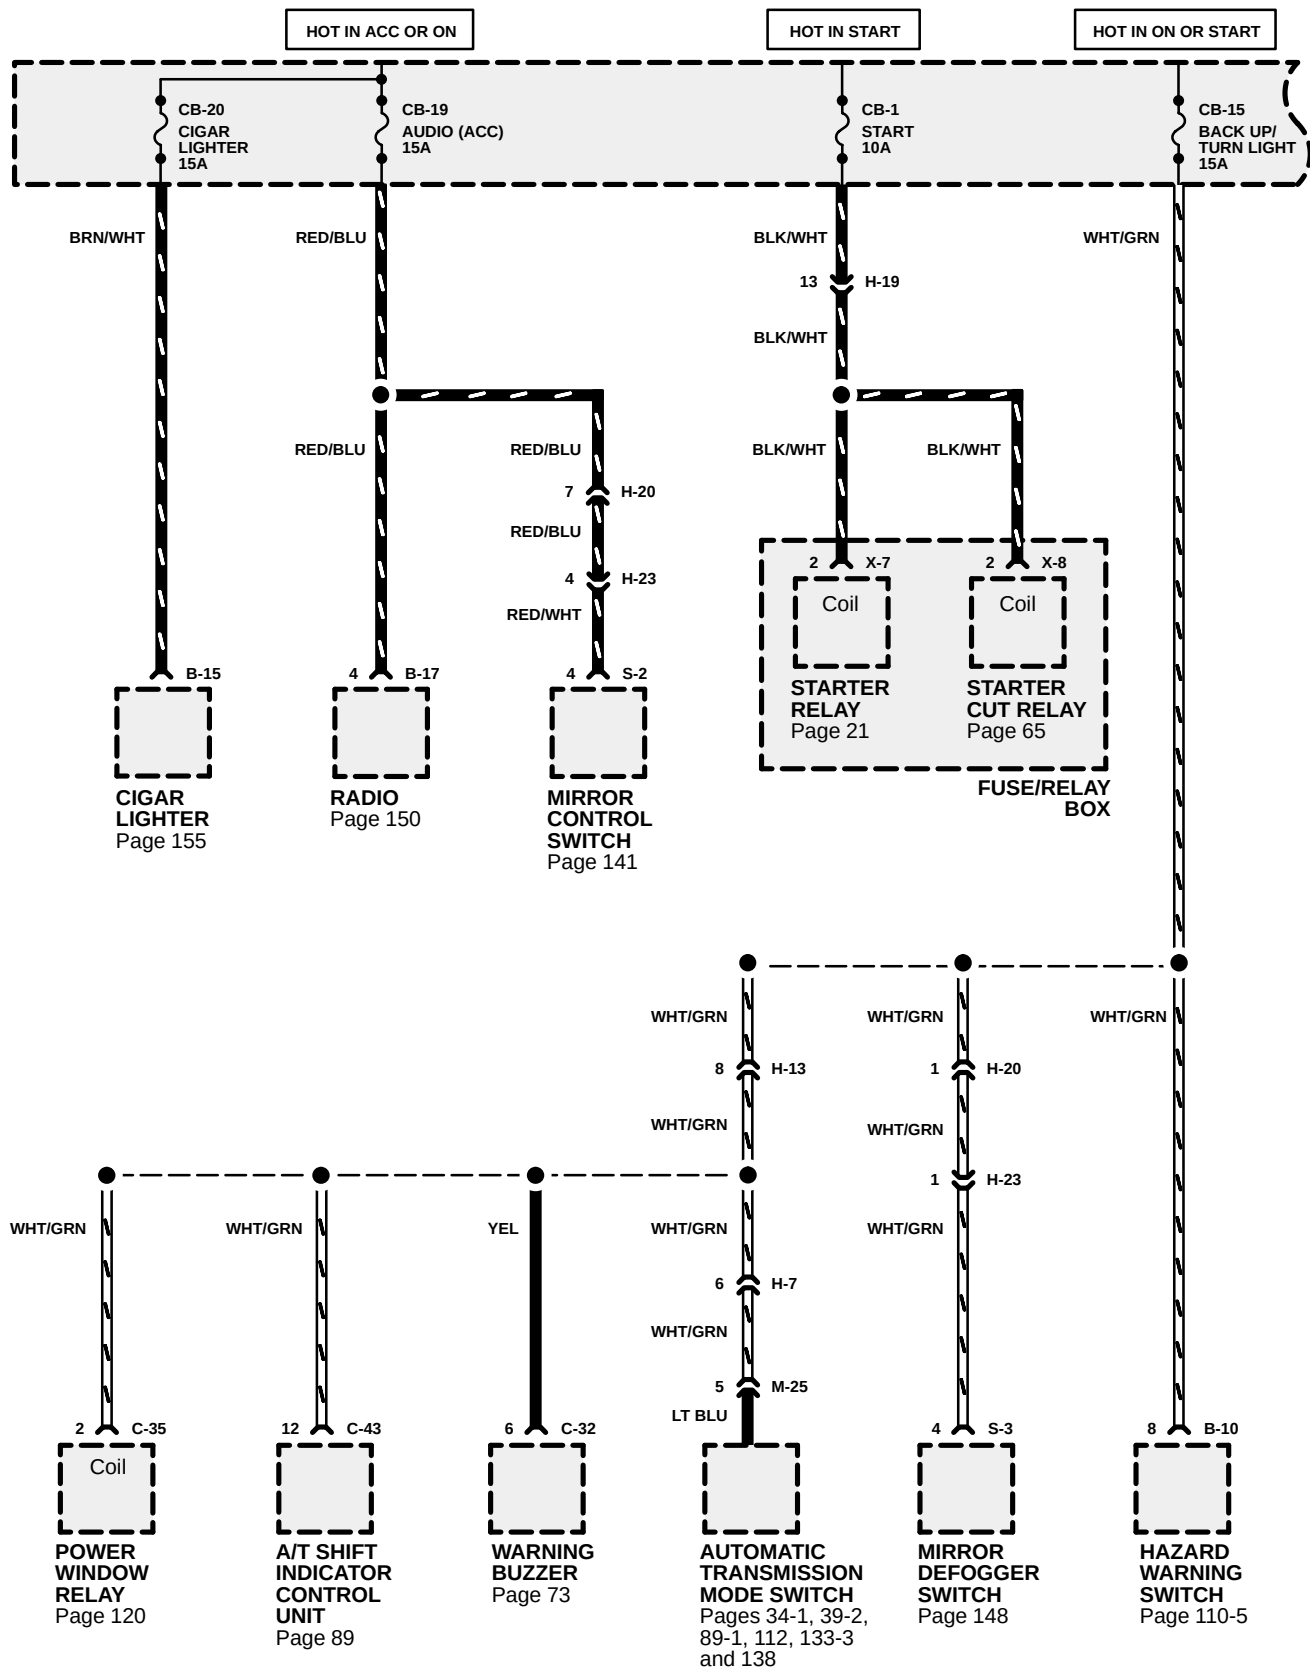


DASH FUSE BOX

Circuit Schematic

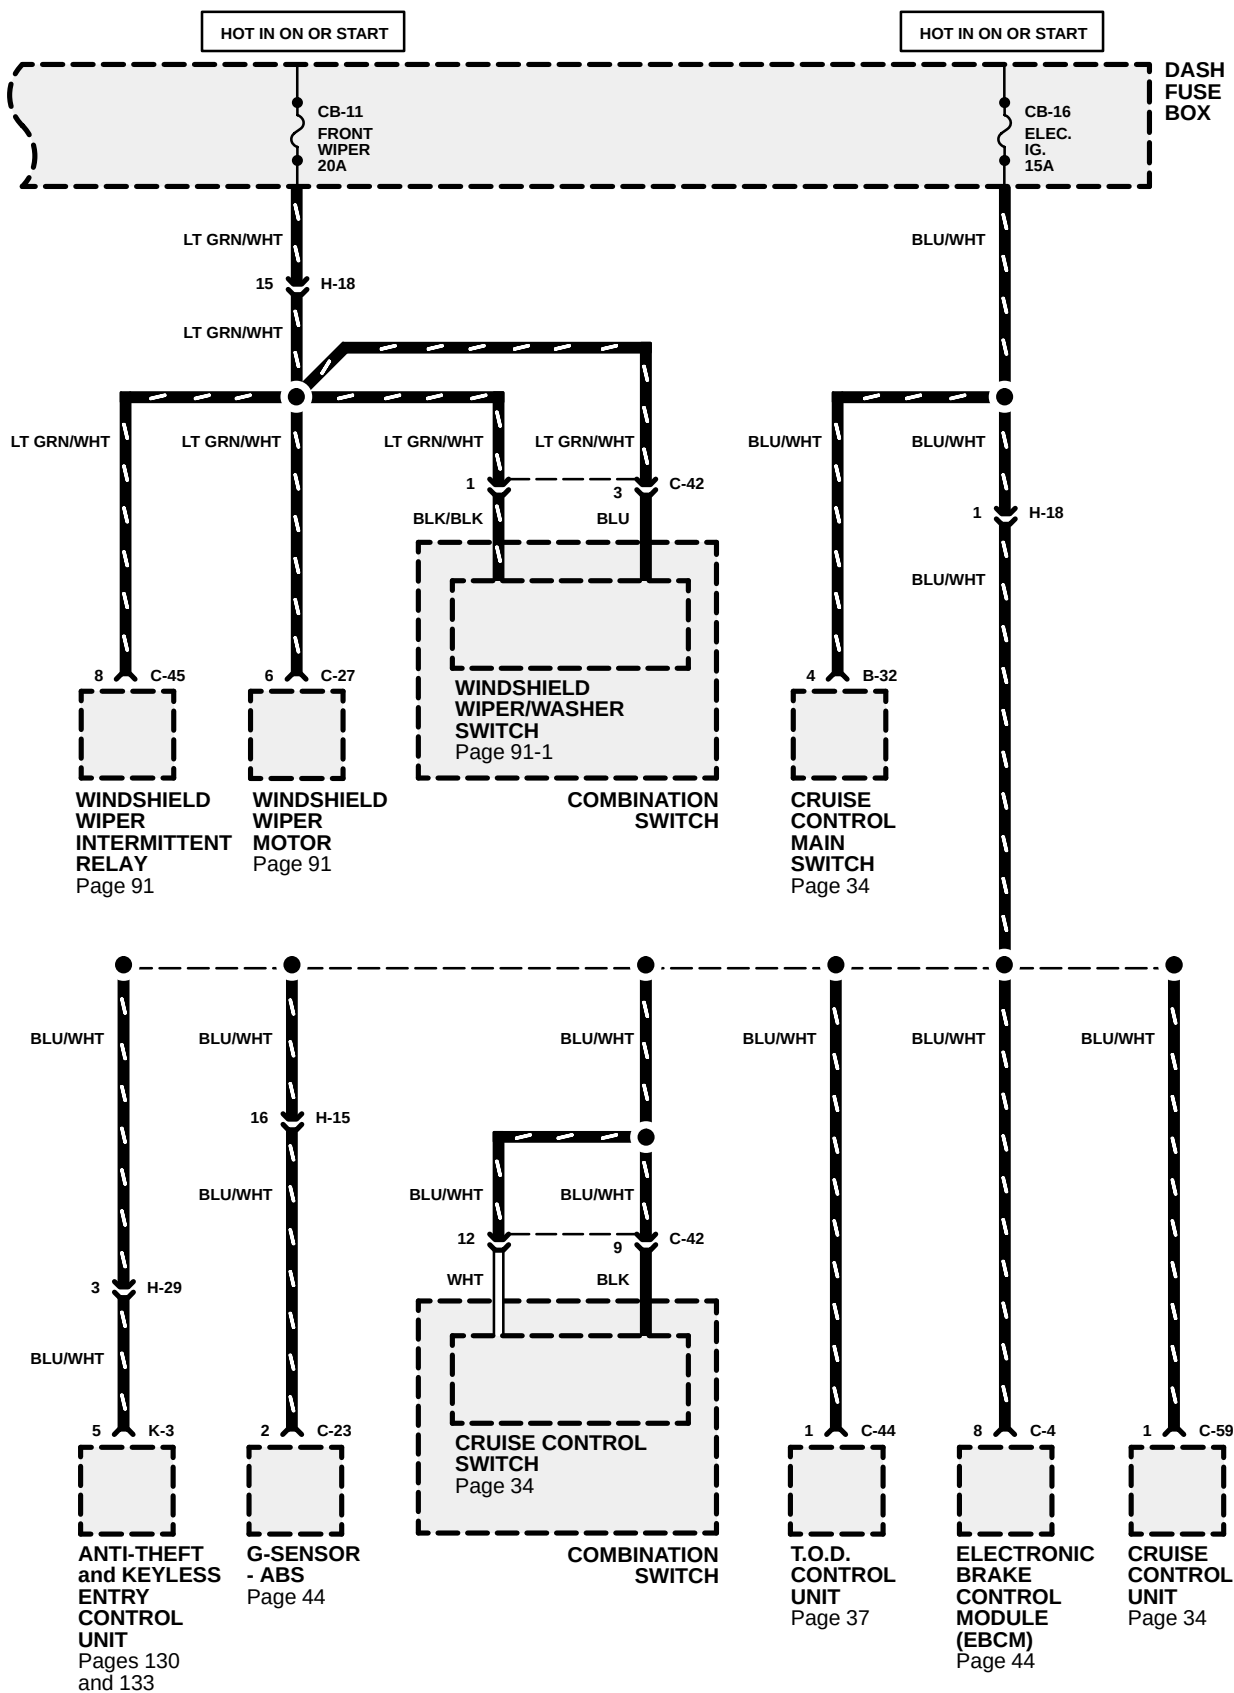


DASH FUSE BOX

Circuit Schematic

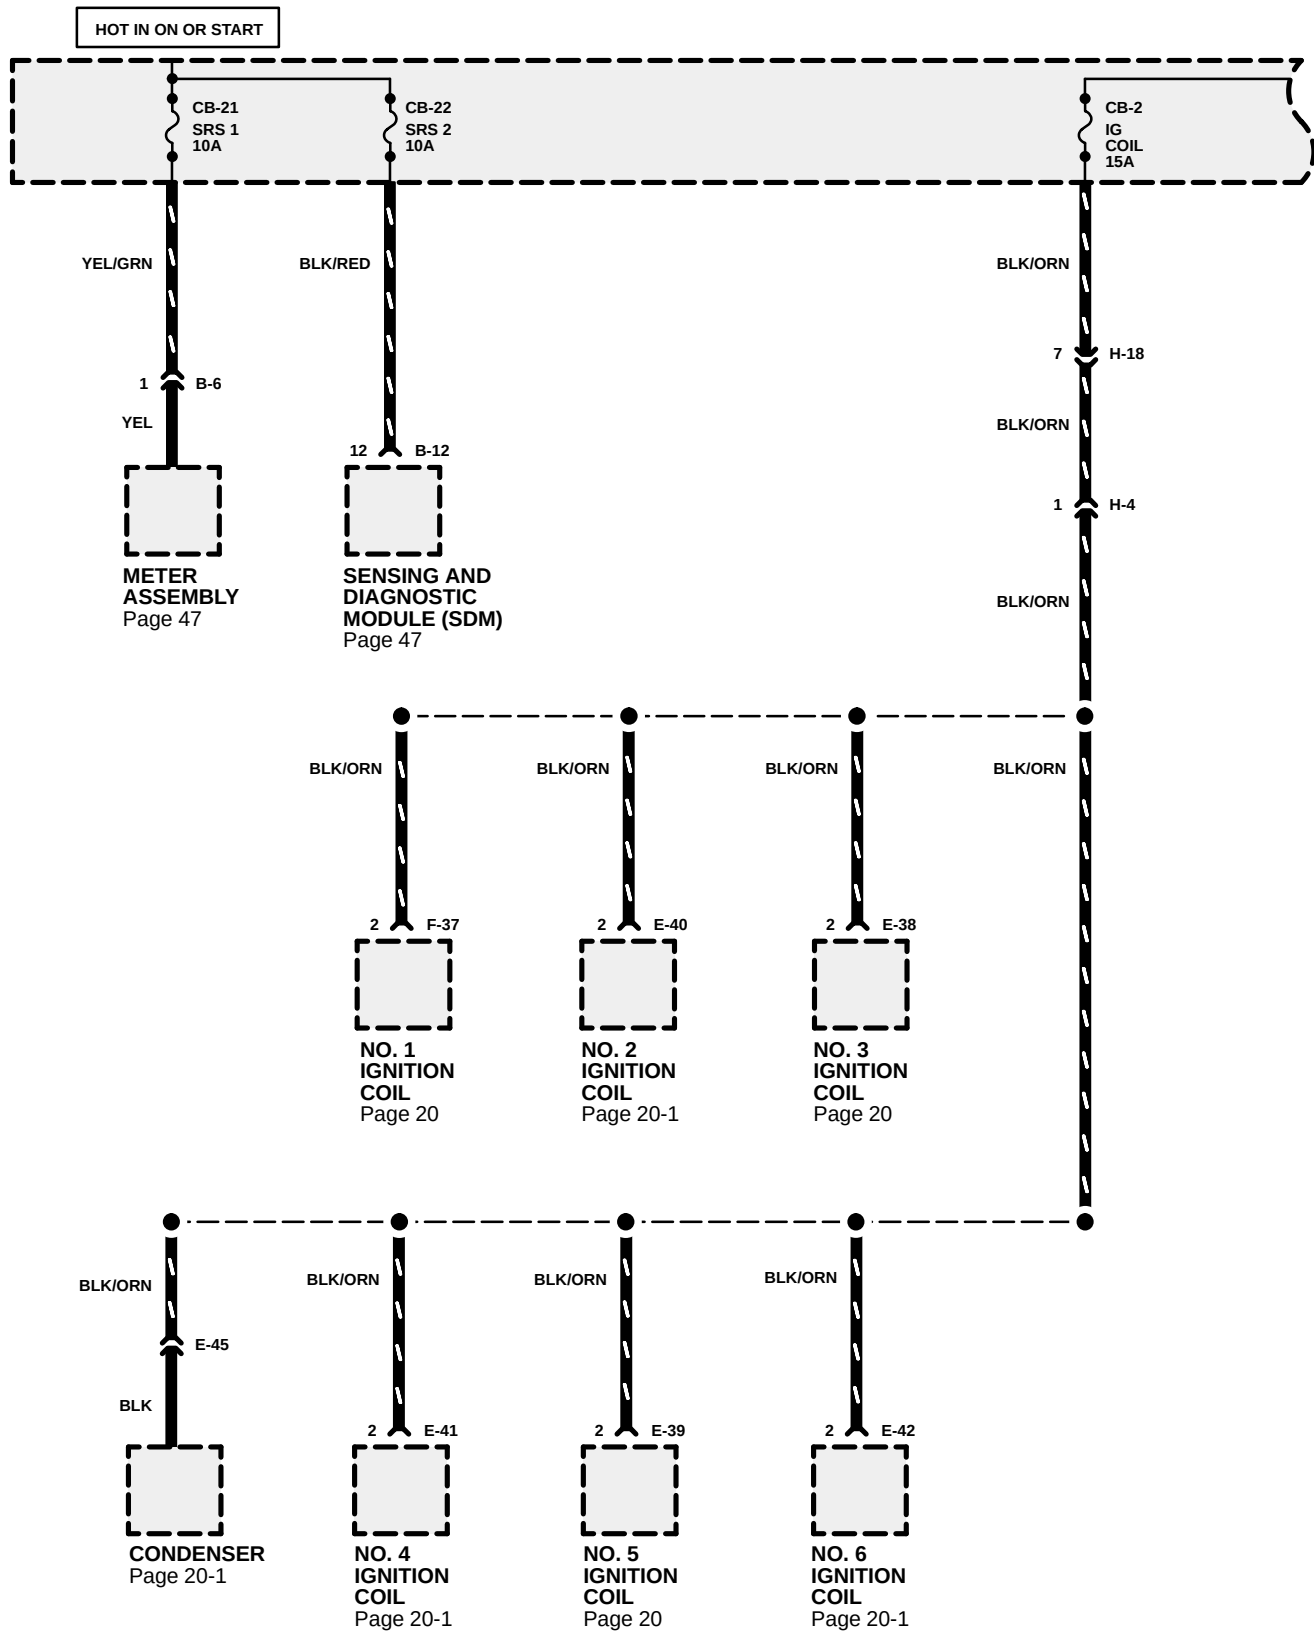

DASH FUSE BOX

Circuit Schematic

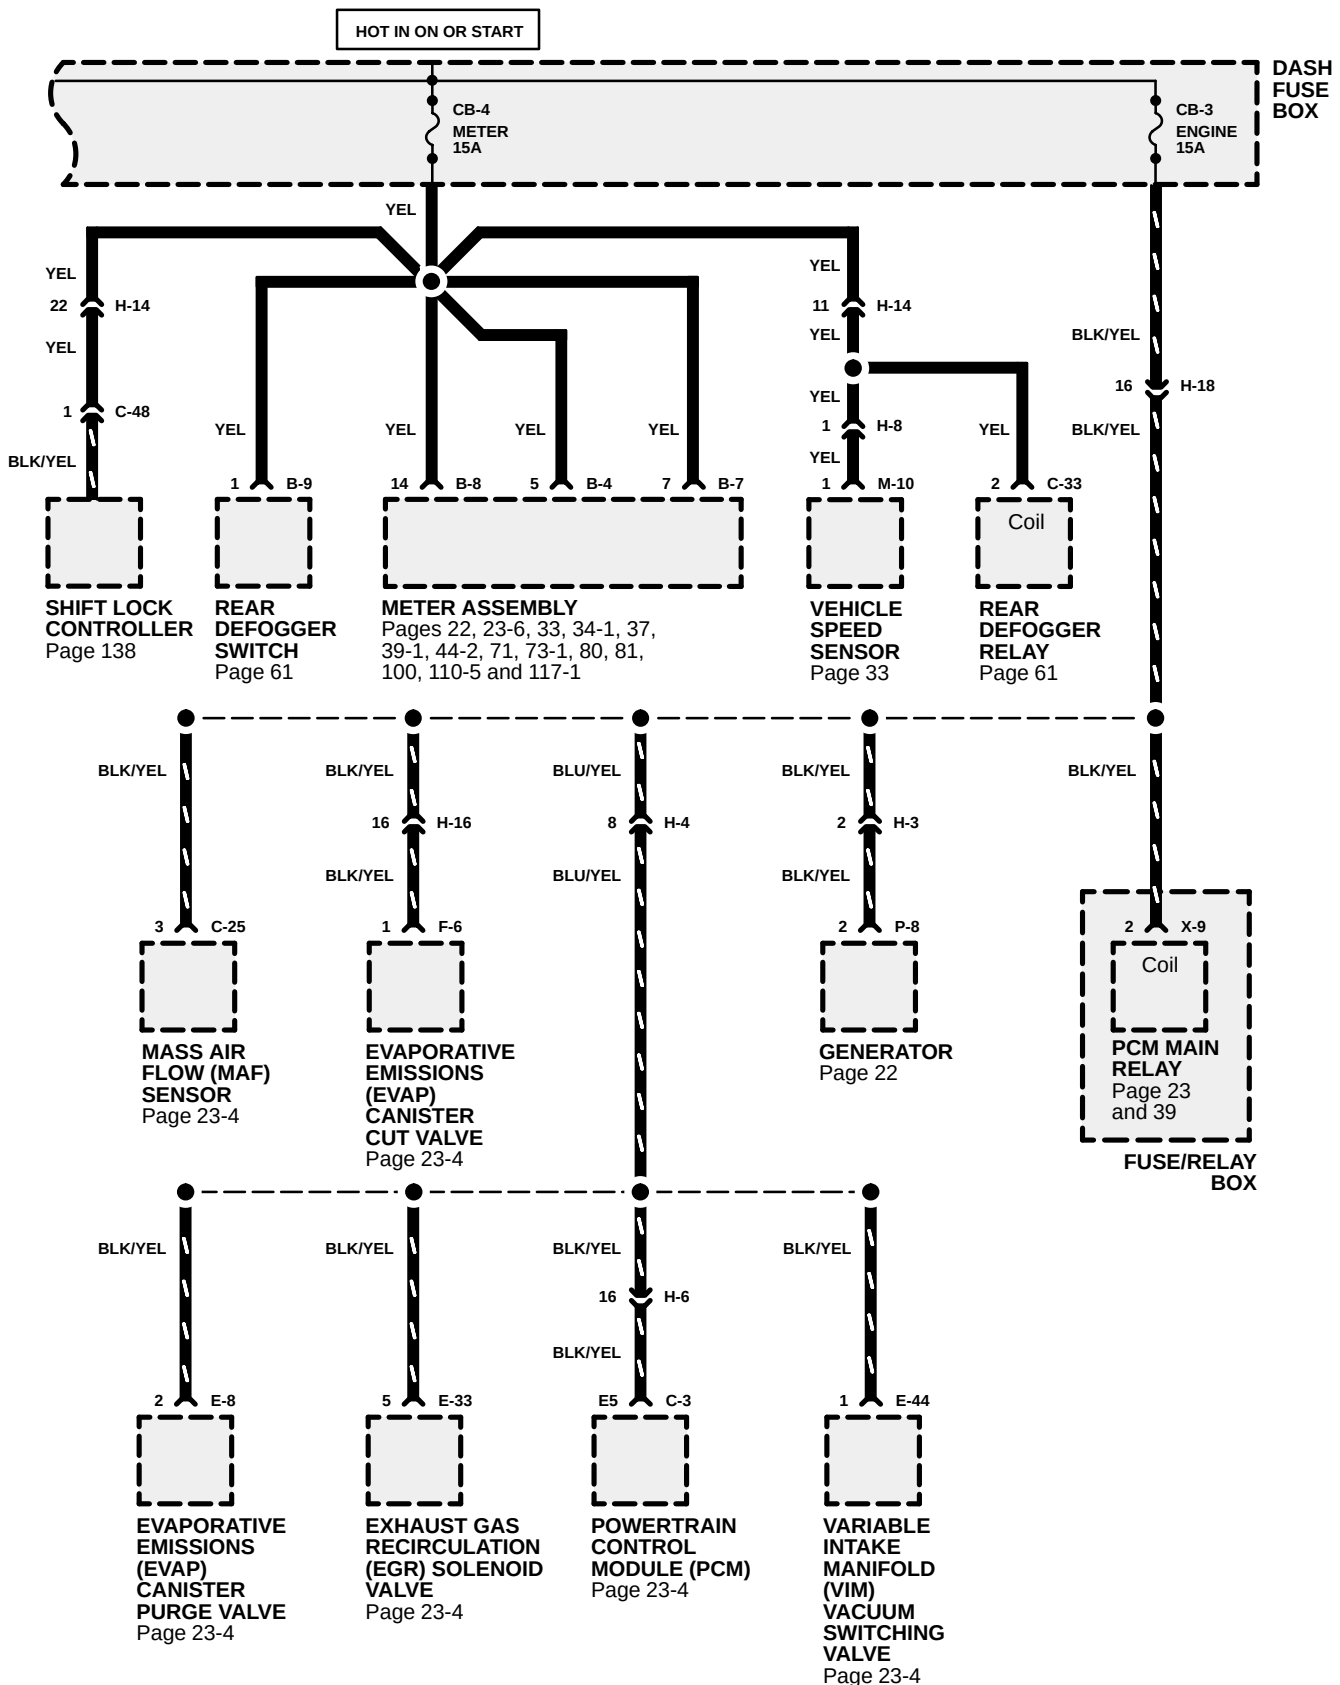

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Automatic Heater-A/C Control	
Unit Center of I/P	51
A/T Shift Indicator Control	
Unit Below I/P, left of steering column	45
Anti-theft and Keyless Entry	
Control Unit Below I/P, left of steering column	45
Automatic Transmission	
Mode Switch Underneath vehicle, on left side of transmission	78
Noise Suppression Filter #1 ..	Behind left kick panel
Condenser	Top right front of engine
Cruise Control Unit	Behind right kick panel
Dash Fuse Box	Behind left I/P side trim panel
Electronic Brake Control	
Module (EBCM)	In right rear of engine compartment
Evaporative Emission (EVAP)	
Canister Cut Valve	Underneath vehicle, above right side of rear axle
Evaporative Emission (EVAP)	
Canister Purge Valve	Top left front of engine
Exhaust Gas Recirculation	
(EGR) Solenoid Valve	Top right rear of engine
Fuse/Relay Box	Right side of engine compartment, on inner fender panel
Generator	Lower right front of engine
Mass Air Flow (MAF) Sensor ..	Left front corner of engine compartment
No. 1 Ignition Coil	Right side of engine
No. 2 Ignition Coil	Left side of engine
No. 3 Ignition Coil	Right side of engine
No. 4 Ignition Coil	Left side of engine
No. 5 Ignition Coil	Right side of engine
No. 6 Ignition Coil	Left side of engine
PCM Main Relay	Right side of engine compartment, in fuse/relay box
Power Window Relay	Behind left kick panel
Powertrain Control Module	
(PCM)	Behind front console
Rear Defogger Relay	Behind left kick panel
Sensing and Diagnostic	
Module (SDM)	Below center of I/P
Shift Lock Controller	Below front console
Starter Cut Relay	Right side of engine compartment, in fuse/relay box
T.O.D. Control Unit	Below right front seat
Taillight Relay	Behind left kick panel
Variable Intake Manifold (VIM)	
Vacuum Switching Valve ...	On left rear of engine
Vehicle Speed Sensor	
(VSS)	Beneath vehicle, on rear of transfer case
Warning Buzzer	Behind left kick panel
Windshield Wiper Intermittent	
Relay	Behind right kick panel

ASH FUSE BOX

Component Location Index

<u>Connector</u>		<u>Photo No.</u>
B-4 (7-WHT)	Behind left side of I/P, on rear of meter assembly	49
B-6 (2-YEL)	Behind left side of I/P, on rear of meter assembly	49
B-7 (10-WHT)	Behind left side of I/P, on rear of meter assembly	49
B-8 (16-BLK)	Behind left side of I/P, on rear of meter assembly	49
C-37 (4-BLK)	Behind lower left of I/P	44
C-40 (8-BRN)	Behind lower left I/P, right of steering column	47
C-42 (14-BLK)	Behind lower left I/P, right of steering column	47
C-48 (6-WHT)	Below center console	60
E-45 (1-BLK)	Top right front of engine	29
H-3 (2-BLK)	Right side of engine compartment, on bracket	22
H-4 (16-BLU)	Left rear of engine compartment on bracket	15
H-6 (16-BLK)	Left rear of engine compartment on bracket	15
H-7 (16-BLK)	Lower left front of engine compartment	13
H-8 (6-BLU)	Lower left front of engine compartment	13
H-10 (6-CLR)	Below left side of I/P, above left kick panel	45
H-12 (3-WHT)	Behind right side of I/P	
H-13 (22-WHT)	Behind left side of I/P, above left kick panel on bracket	42
H-14 (22-BLU)	Behind left side of I/P, above left kick panel on bracket	42
H-15 (18-BLK)	Behind left side of I/P, above left kick panel on bracket	42
H-16 (20-WHT)	In floor, below right front seat	66
H-18 (20-WHT)	Behind I/P right side panel	58
H-19 (22-WHT)	Behind I/P right side panel	58
H-20 (15-WHT)	Behind left side of I/P, above left kick panel on bracket	42
H-21 (8-WHT)	Behind left kick panel, in access hole	39
H-21A (8-WHT)	Behind left kick panel, in access hole	39
H-23 (13-BLK)	Below center console	63
H-29 (8-WHT)	Behind left side of I/P, above left kick panel on bracket	42
L-2 (2-WHT)	Above center of roof	71
M-25 (8-BLK)	On left side of transmission	77