


AUTOMATIC A/C CONTROLS

Component Index

A/C Compressor Relay	Heater-A/C Relay
A/C Triple Pressure Switch	In Car Sensor
Ambient Sensor	Intake Actuator
Anti-theft and Keyless Entry Control Unit	Max-Hi Relay
Automatic Heater A/C Control Unit	Mix Actuator
Automatic Transmission Mode Switch	Mode Actuator
Blower Motor	Power Transistor
Condenser Fan	Powertrain Control Module (PCM)
Condenser Fan Relay	Starter Cut Relay
Dash Fuse Box	Thermo Switch Relay
Fuse/Relay Box	Thermo Unit
Generator	


AUTOMATIC A/C (BLOWER CONTROLS)

Circuit Schematic

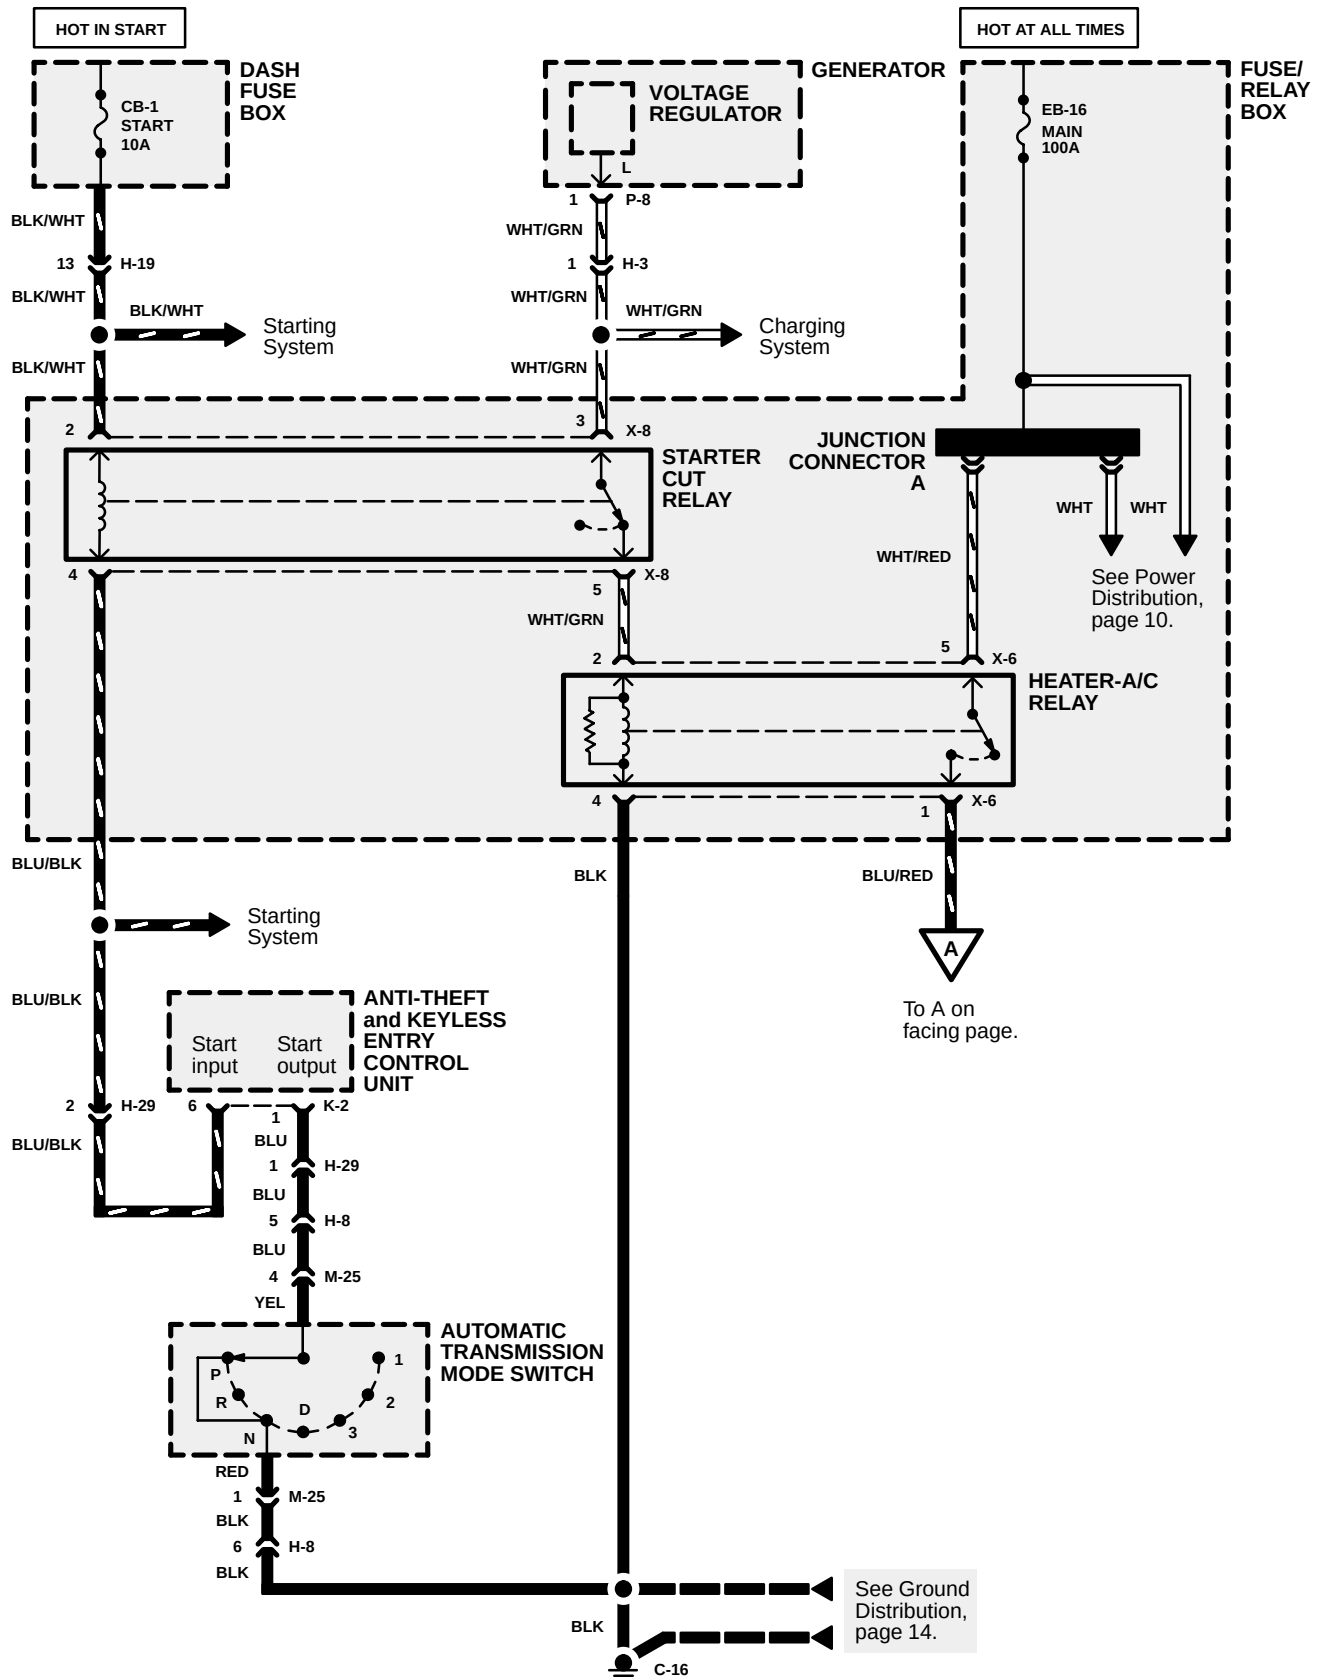


AUTOMATIC A/C (BLOWER CONTROLS)

Circuit Schematic

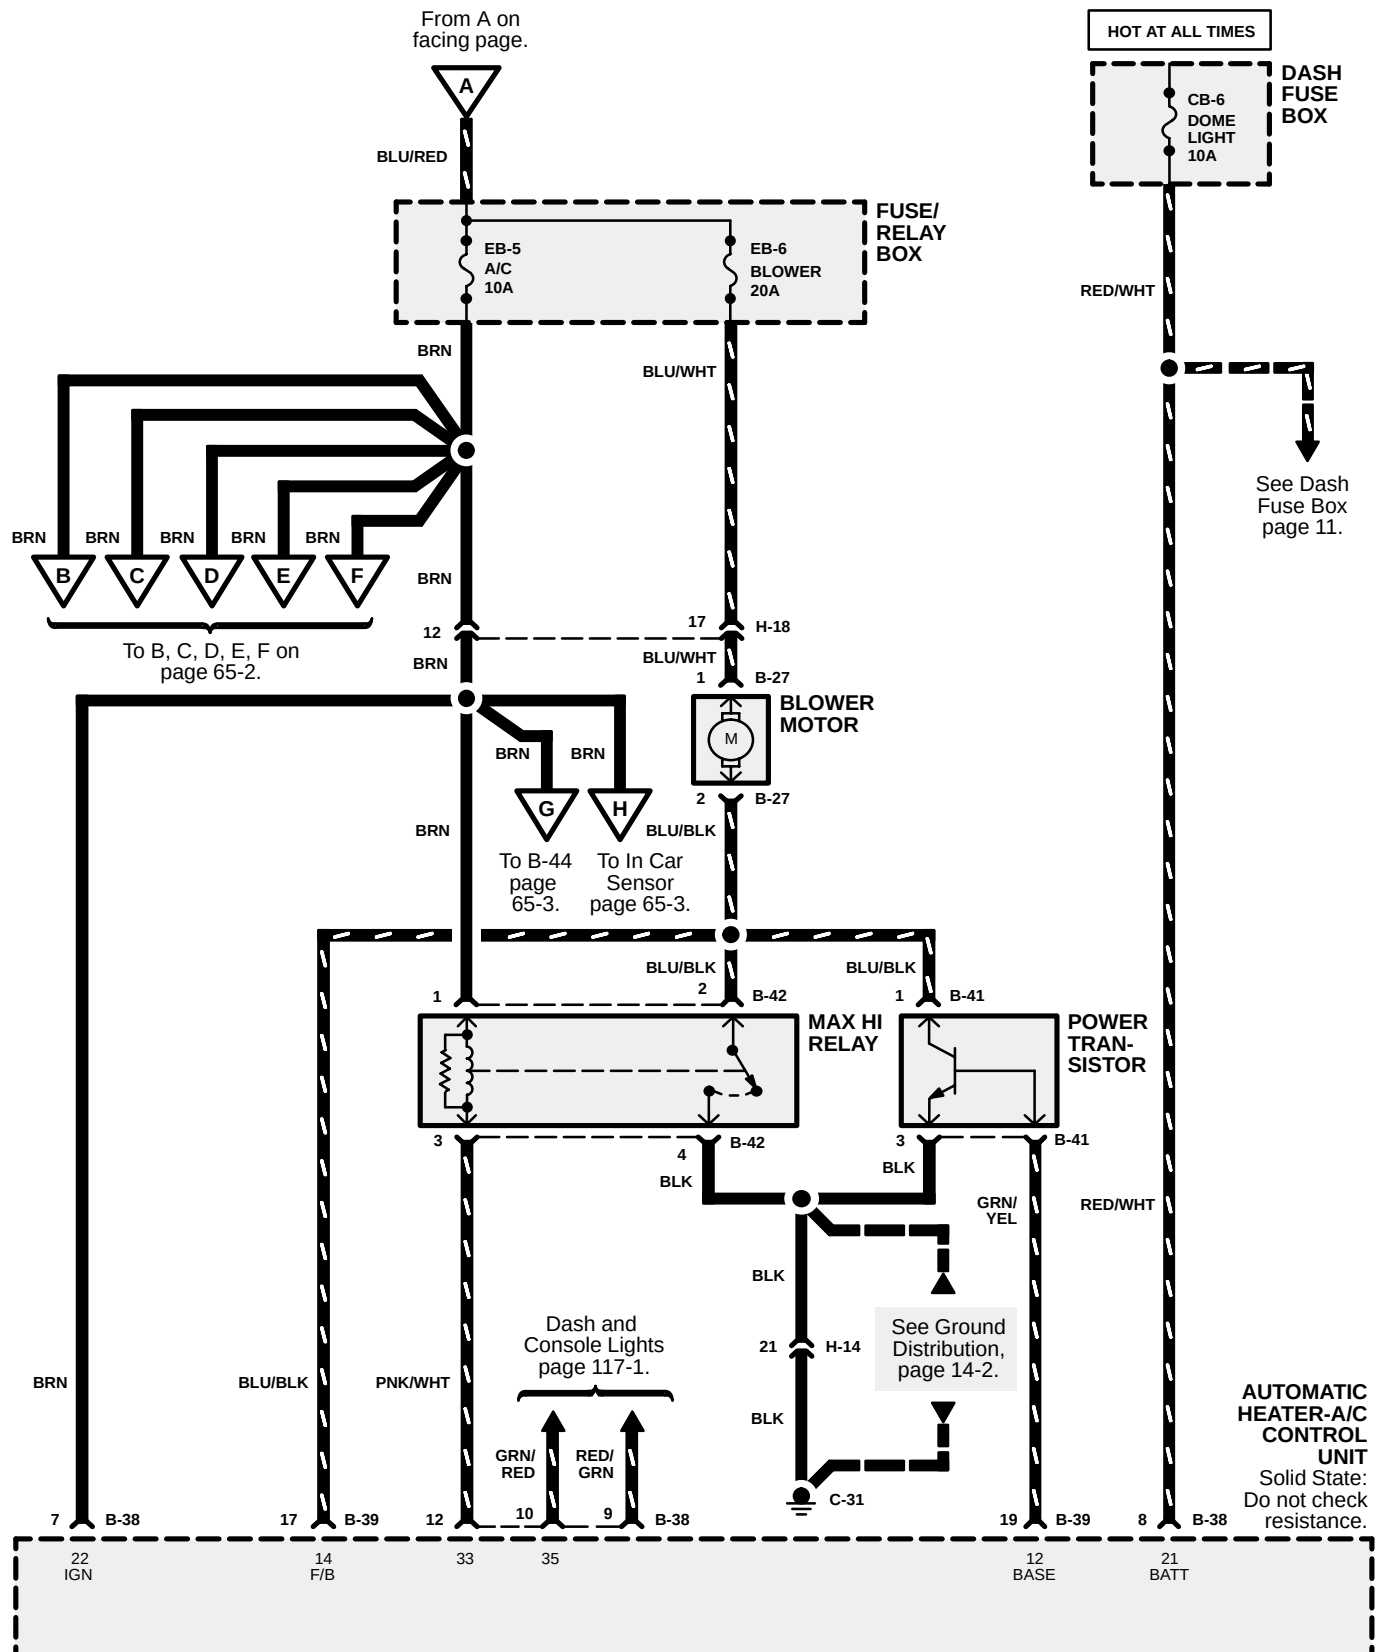


AUTOMATIC A/C (COMPRESSOR CONTROLS)

Circuit Schematic

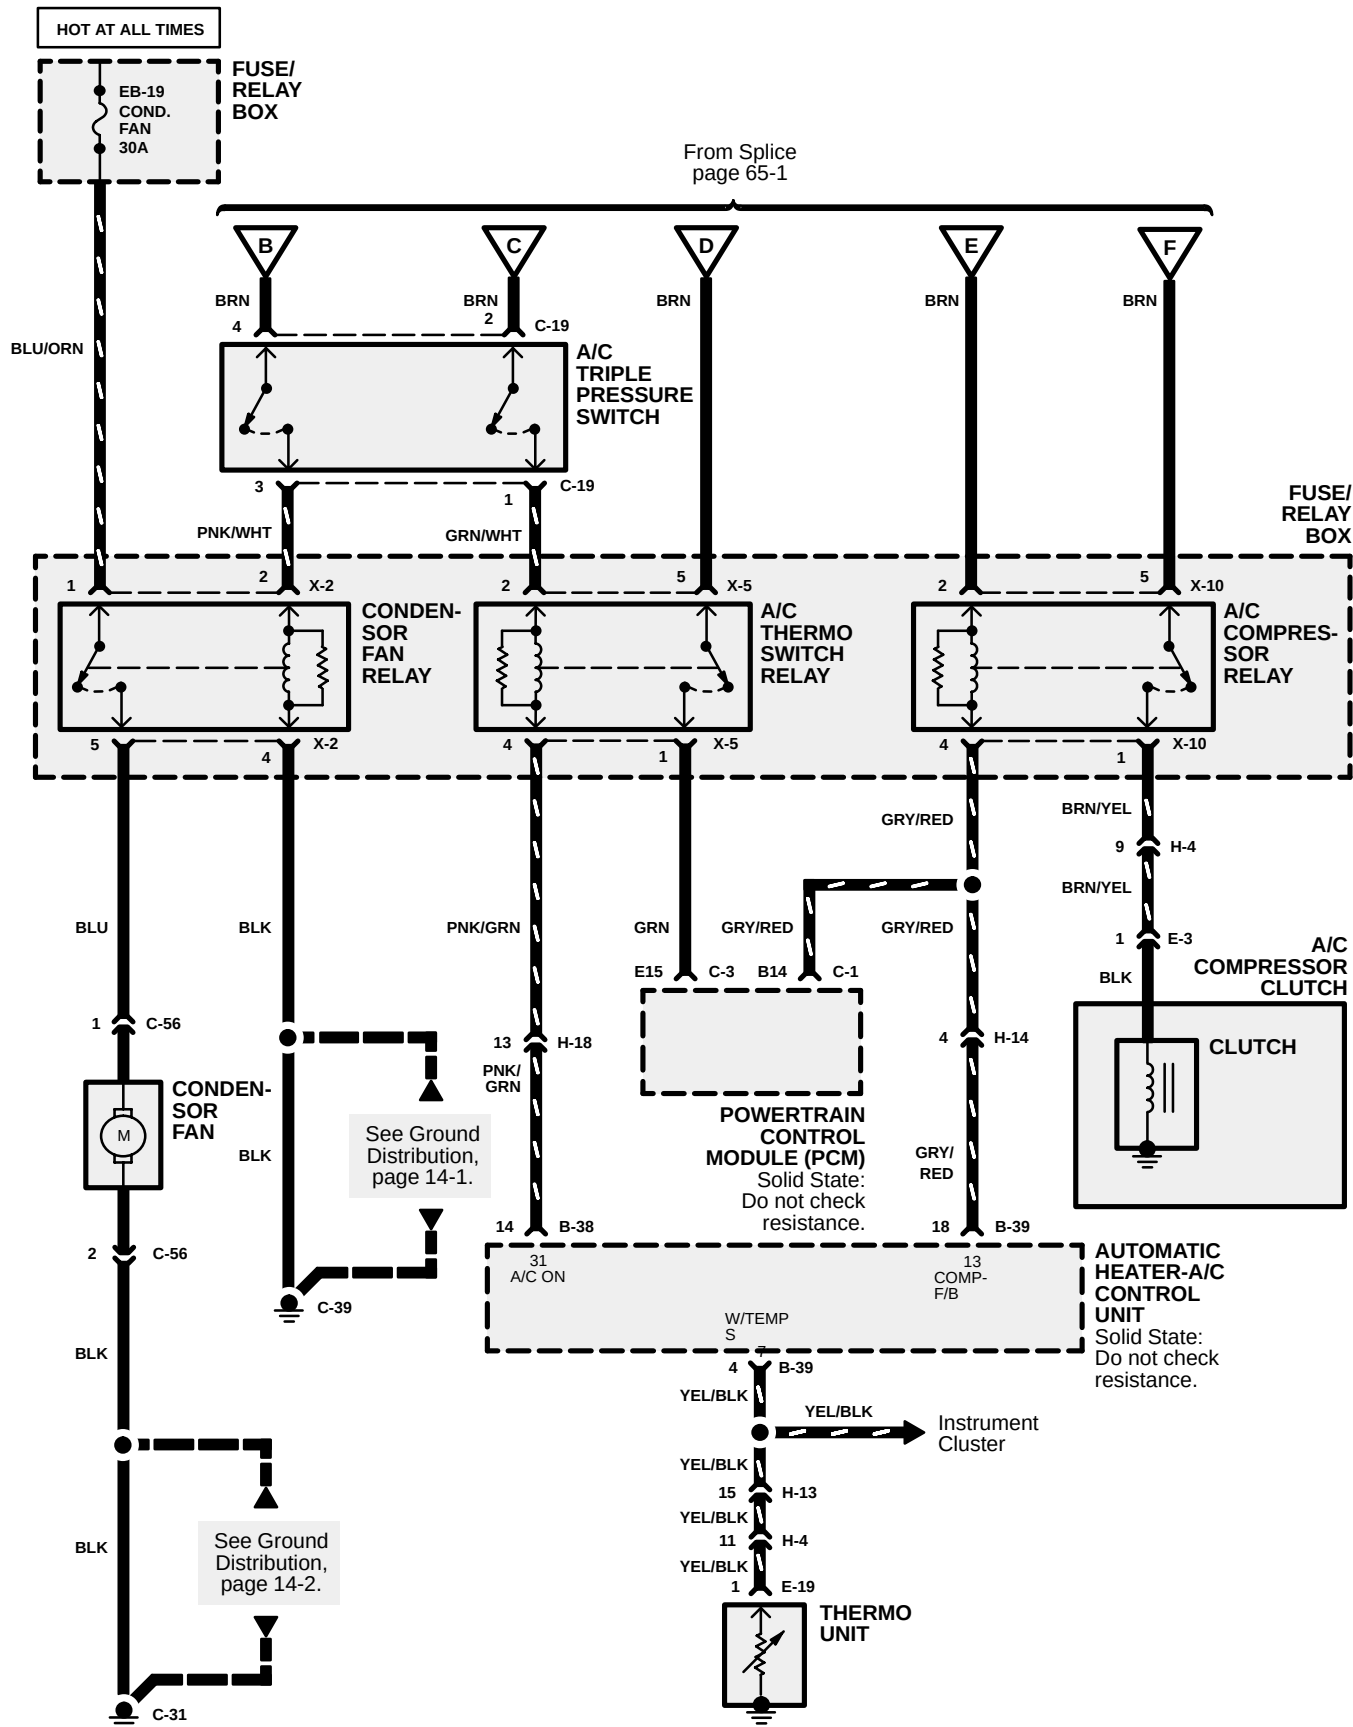

AUTOMATIC A/C (AIR DELIVERY CONTROLS)

Circuit Schematic

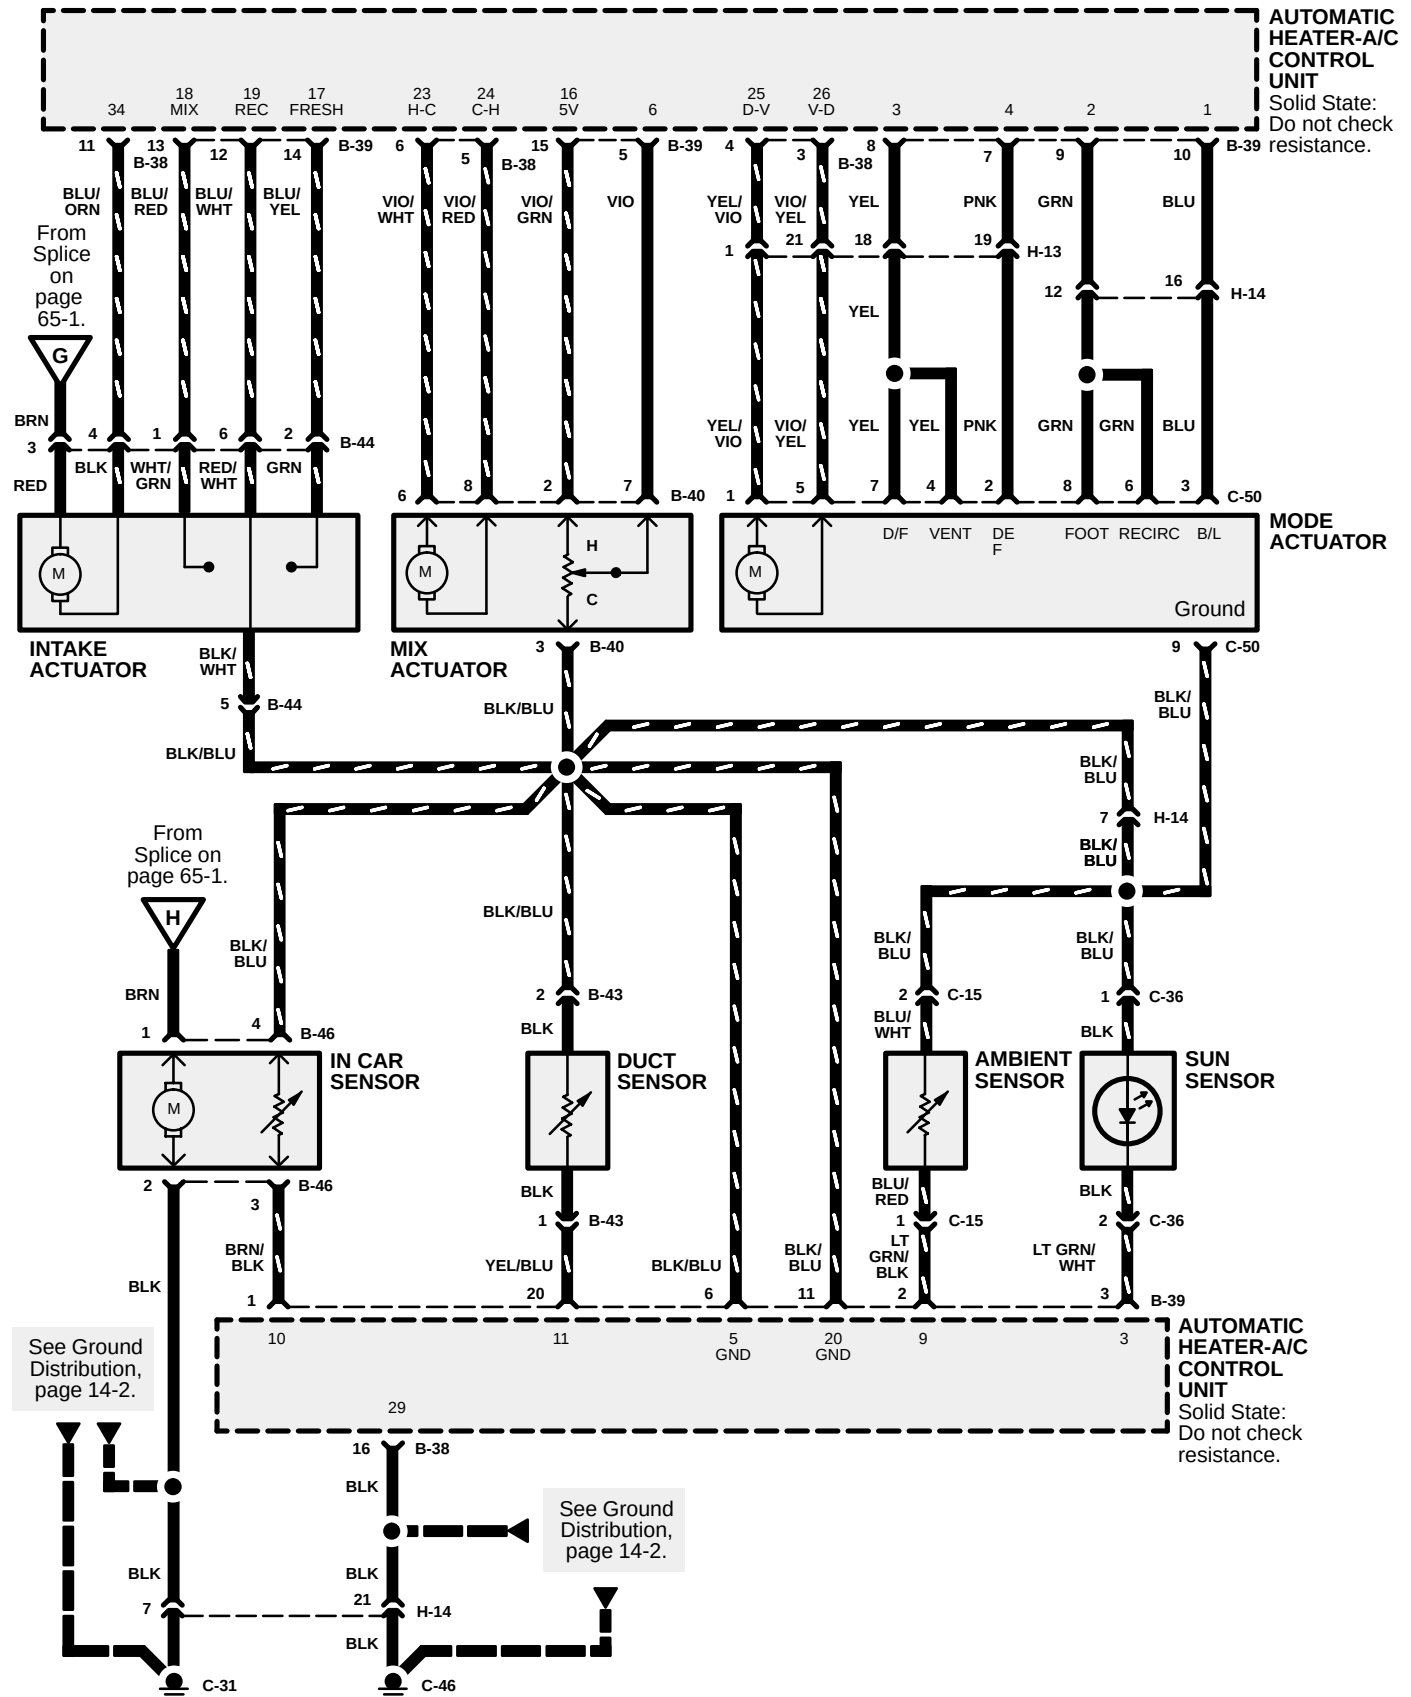

COMPONENT LOCATION INDEX

Component Location Index

Component	Photo No.
A/C Compressor Relay	Right side of engine compartment, in fuse/relay box 20
A/C Triple Pressure Switch	Behind left side of radiator grille 7
Ambient Sensor	Left front of vehicle 7
Anti-theft and Keyless Entry	
Control Unit	Below I/P left of steering column 45
Automatic Heater A/C Control	
Unit	Behind center of I/P 51
Automatic Transmission Mode	
Switch	Underneath vehicle, on left side of transmission 78
Blower Motor	Below right side of I/P 56
Condenser Fan	On right front of radiator 9
Condenser Fan Relay	Right side of engine compartment, in fuse/relay box 19
Dash Fuse Box	Behind left I/P side trim panel 36
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 18
Generator	Lower right front of engine 11
Heater-A/C Relay	Right side of engine compartment, in fuse/relay box 20
In Car Sensor	Center of I/P 51
Intake Actuator	Right side of I/P 55
Max-Hi Relay	Right side of I/P 55
Mix Actuator	Behind center of I/P 90
Mode Actuator	Right side of driver's footwell 91
Power Transistor	Right side of I/P 55
Powertrain Control Module	
(PCM)	Behind front console 52
Starter Cut Relay	Right side of engine compartment, in fuse/relay box 20
Thermo Switch Relay	Right side of engine compartment, in fuse/relay box 21
Thermo Unit	Top left front of engine 26
Connector	
B-43 (2-WHT)	Right side of I/P 55
B-44 (6-WHT)	Right side of I/P 55
C-56 (2-BLK)	Behind front grille, below condenser fan 9
E-3 (1-BLK)	Lower left side of engine compartment 5
H-3 (2-BLK)	Right side of engine compartment, on bracket 22
H-4 (16-BLU)	Left rear of engine compartment on bracket 15
H-8 (6-BLU)	Lower left front of engine compartment 13
H-13 (22-WHT)	Behind left side of I/P, above left kick panel on bracket 42
H-14 (22-BLU)	Behind left side of I/P, above left kick panel on bracket 42
H-18 (20-WHT)	Behind I/P right side panel 58
H-19 (22-WHT)	Behind I/P right side panel 58
H-29 (8-WHT)	Behind left side of I/P, above left kick panel on bracket 42
Junction Connector A	Right side of engine compartment, in fuse/relay box
M-25 (8-BLK)	On left side of transmission 77
Ground	
C-16	Left rear of engine compartment, on inner fender panel 16
C-31	Behind right kick panel 57
C-39	Right rear of engine compartment on inner fender 23
C-46	Behind left kick panel 40