


SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Component Index

- [Anti-theft and Keyless Entry Control Unit](#)
- [Dash Fuse Box](#)
- [Left Door Switch](#)
- [Taillight Relay](#)
- [Warning Buzzer](#)


SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Circuit Schematic

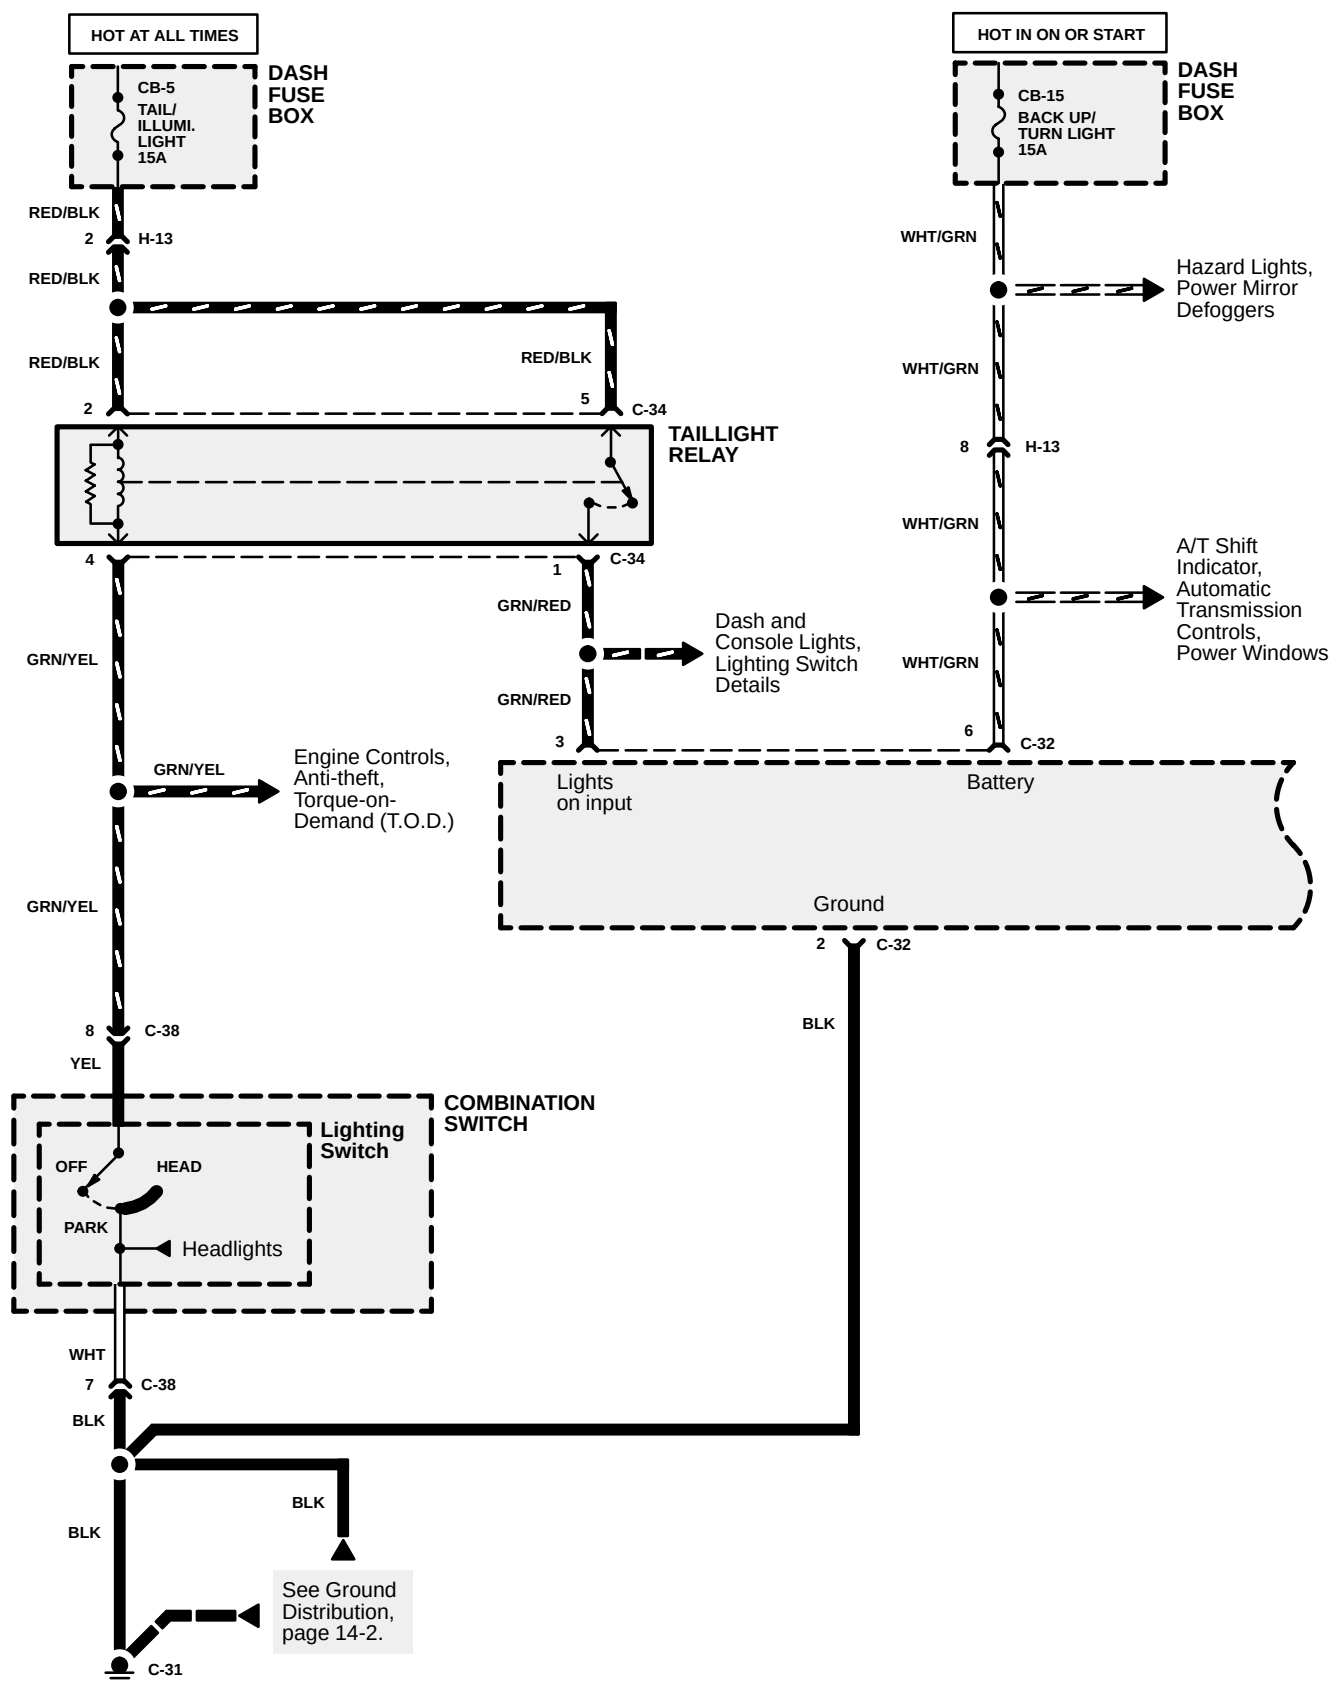

SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Circuit Schematic

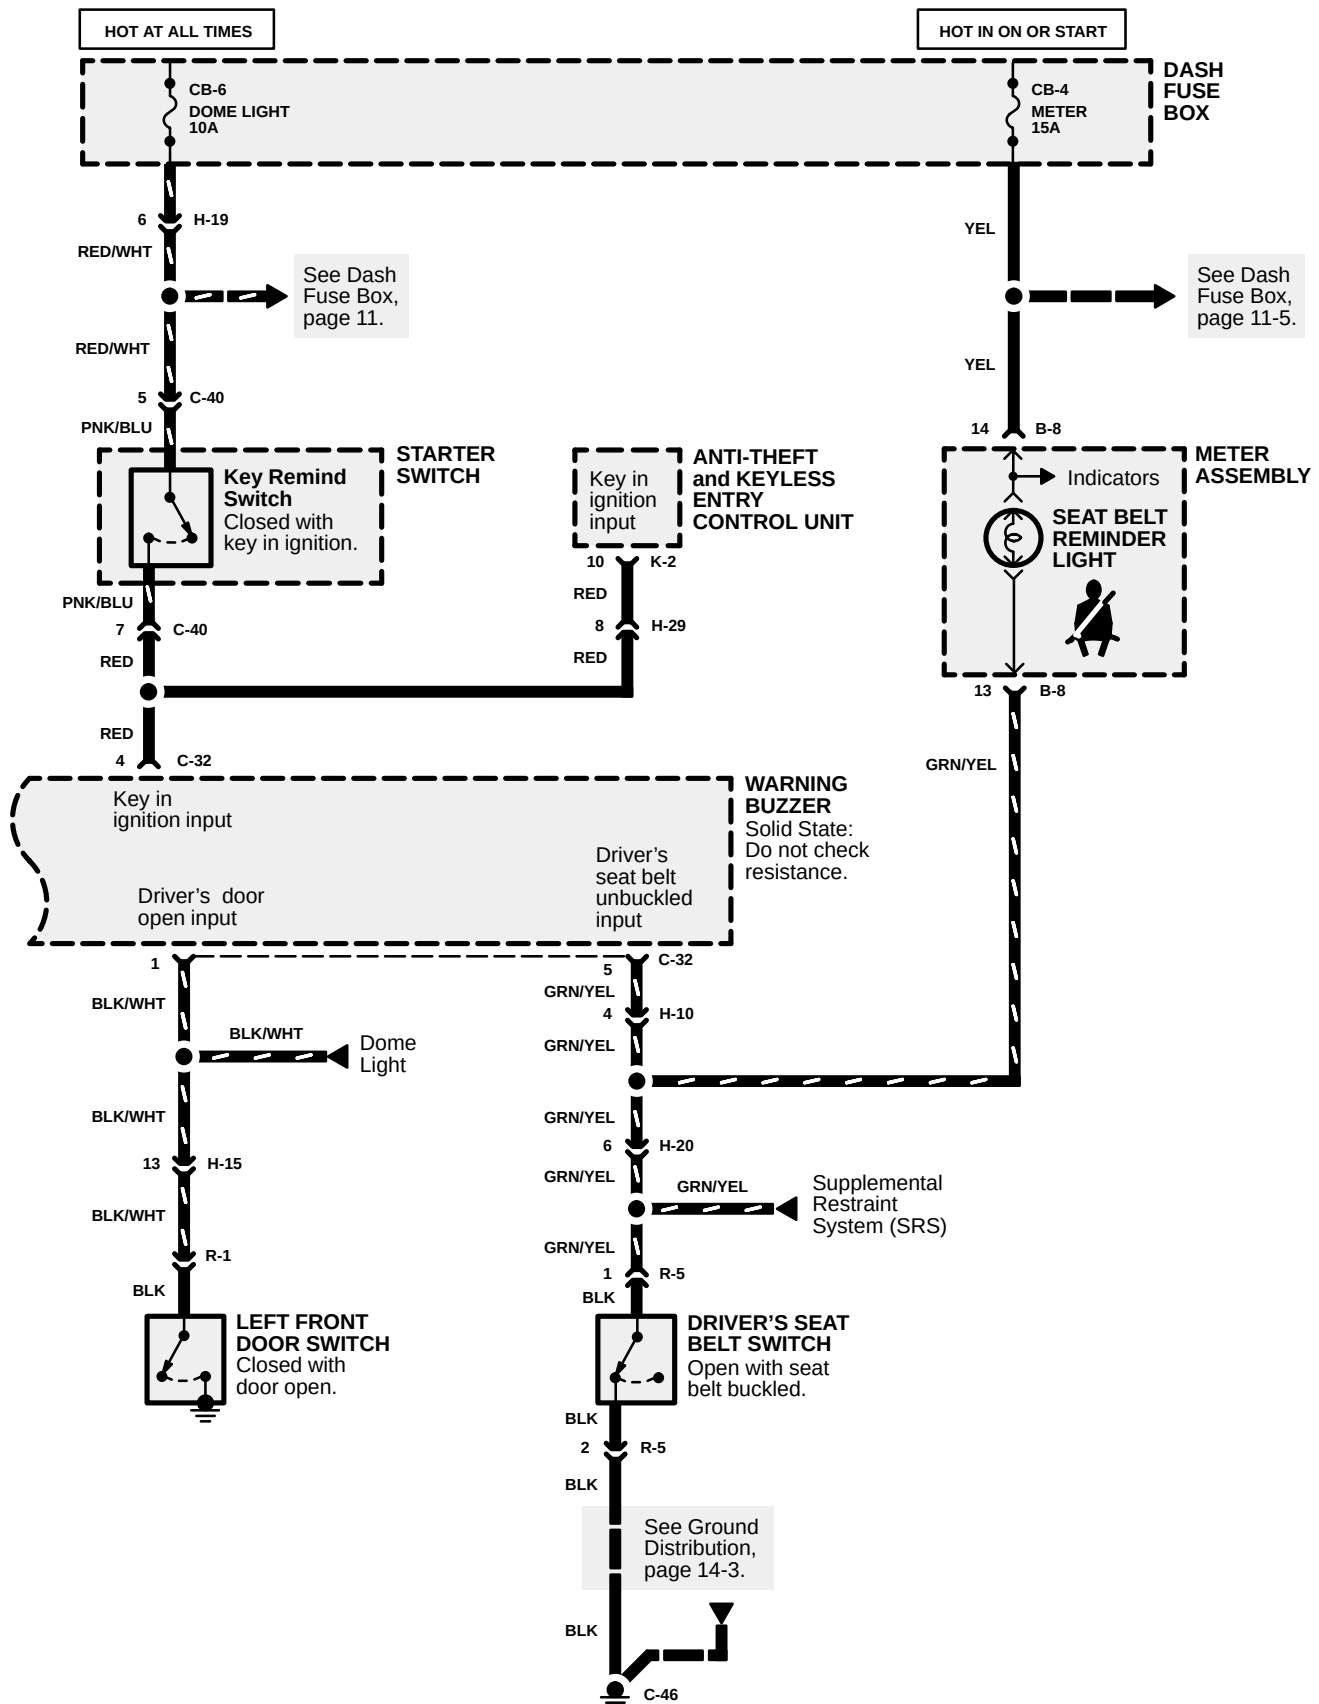

SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

Component

Photo No.

Anti-theft and Keyless

Entry Control Unit	Below I/P left of steering column	45
Dash Fuse Box	Behind left I/P side trim panel	36
Fuse/Relay Box	Right side of engine compartment, on inner fender panel	18
Left Door Switch	Near left door striker	70
Taillight Relay	Behind left kick panel	41
Warning Buzzer	Behind left kick panel	40

Connector

B-8 (16-BLK)	Behind left side of I/P, on rear of meter assembly	49
C-38 (16-WHT)	Behind lower left I/P, right of steering column	47
C-40 (8-BRN)	Behind lower left I/P, right of steering column	47
H-10 (6-CLR)	Below left side of I/P, above left kick panel	45
H-13 (22-WHT)	Behind left side of I/P, above left kick panel on bracket	42
H-15 (18-BLK)	Behind left side of I/P, above left kick panel on bracket	42
H-19 (22-WHT)	Behind I/P right side panel	58
H-20 (15-WHT)	Behind left side of I/P, above left kick panel on bracket	42
H-29 (8-WHT)	Behind left side of I/P, above left kick panel on bracket	42
R-1 (1-CLR)	In left door pillar, behind left door switch	
R-5 (2-BLK/WHT)	Under driver seat	65

Ground

C-31	Behind right kick panel	57
C-46	Behind left kick panel	40

Circuit Operation

Key-In Ignition Warning

The warning buzzer sounds when the key remind switch is closed, with the starter switch in the OFF position, and the key left in.

Seat Belt Warning

With the starter switch in ON or START, voltage is applied to the seat belt reminder light from the METER fuse CB-4. If the driver does not fasten his or her seat belt, the switch remains closed, which grounds the circuit, illuminating the seat belt reminder light.

Lights-on Warning

With the lighting switch in HEAD or PARK, the warning buzzer sounds when the starter switch is in the OFF position.