

Master Index	Power Distribution	Ground Distribution	Harness Routing Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------

TURN AND HAZARD LIGHTS


Component Index

- [Dash Fuse Box](#)
- [Flasher Unit](#)
- [Fuse/Relay Box](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------


TURN AND HAZARD LIGHTS

Circuit Schematic

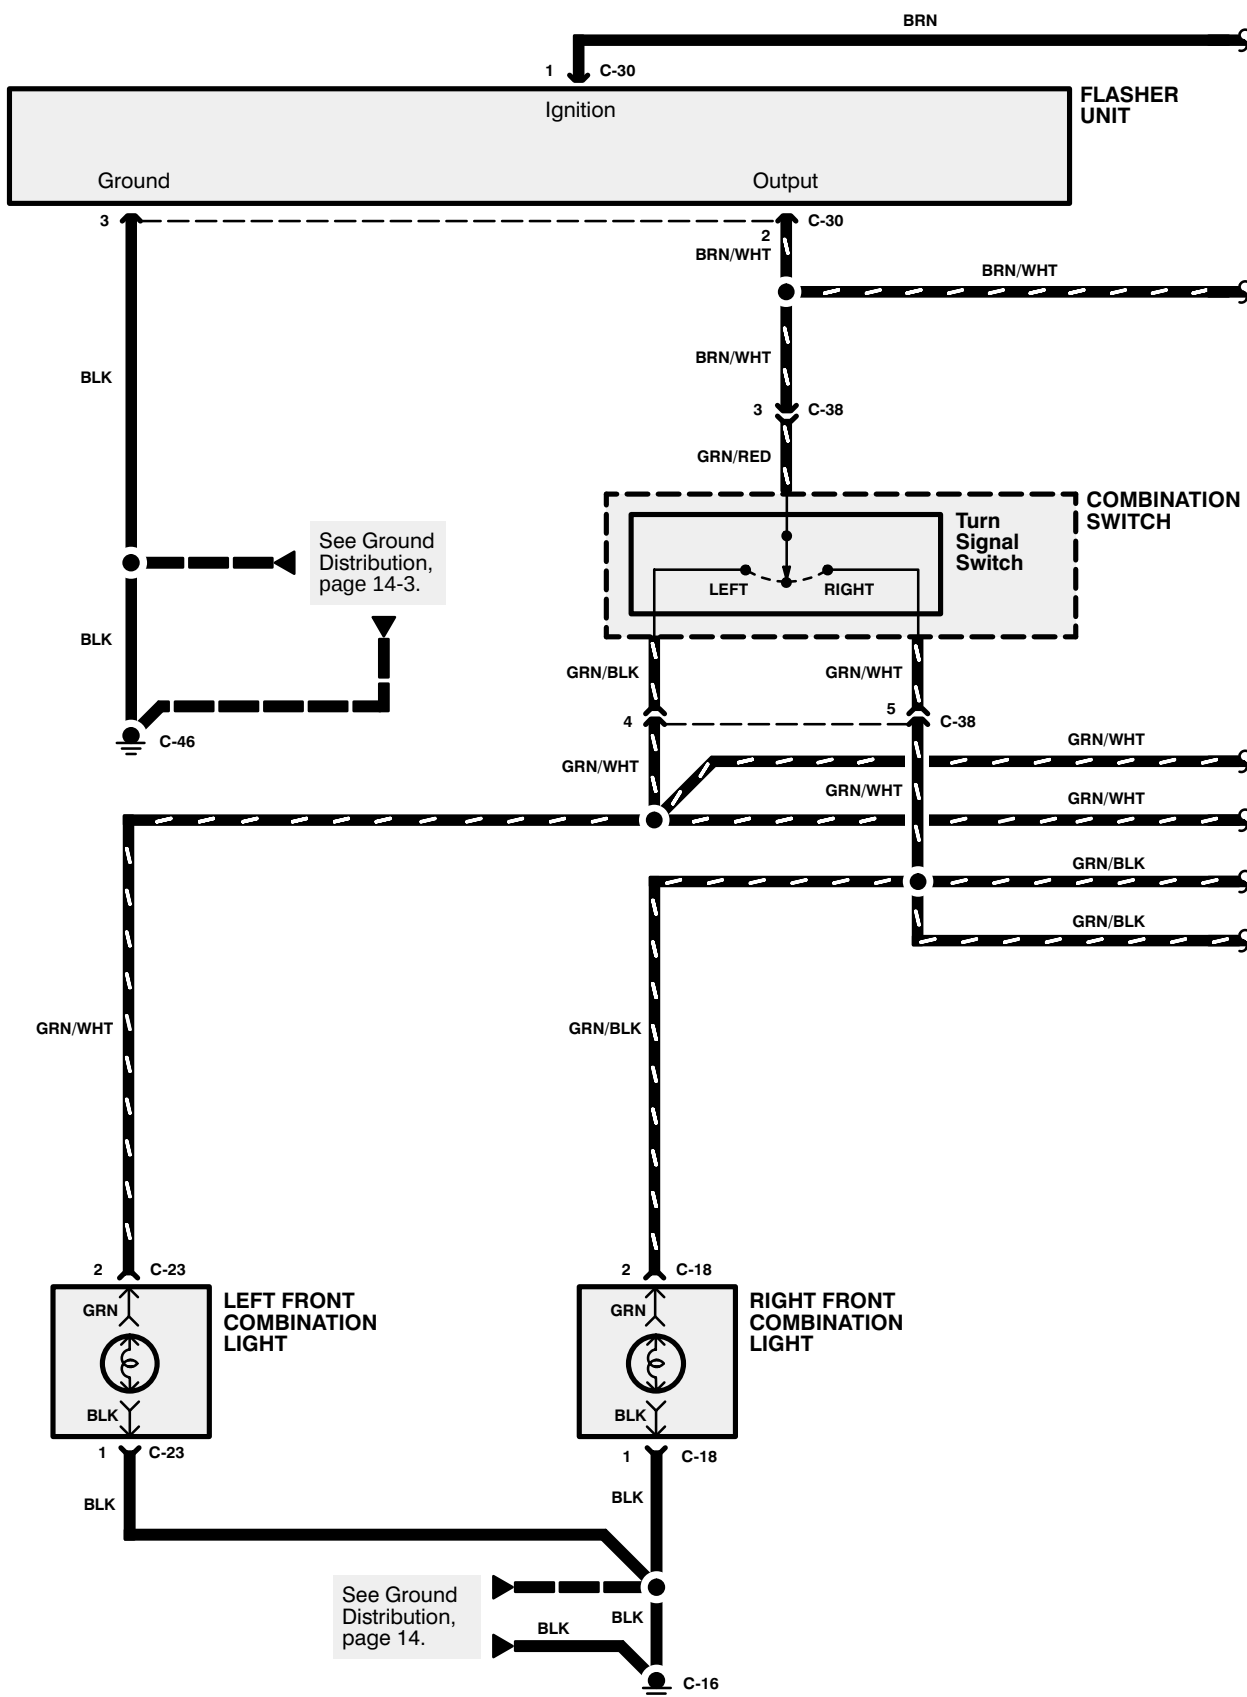

TURN AND HAZARD LIGHTS

Circuit Schematic

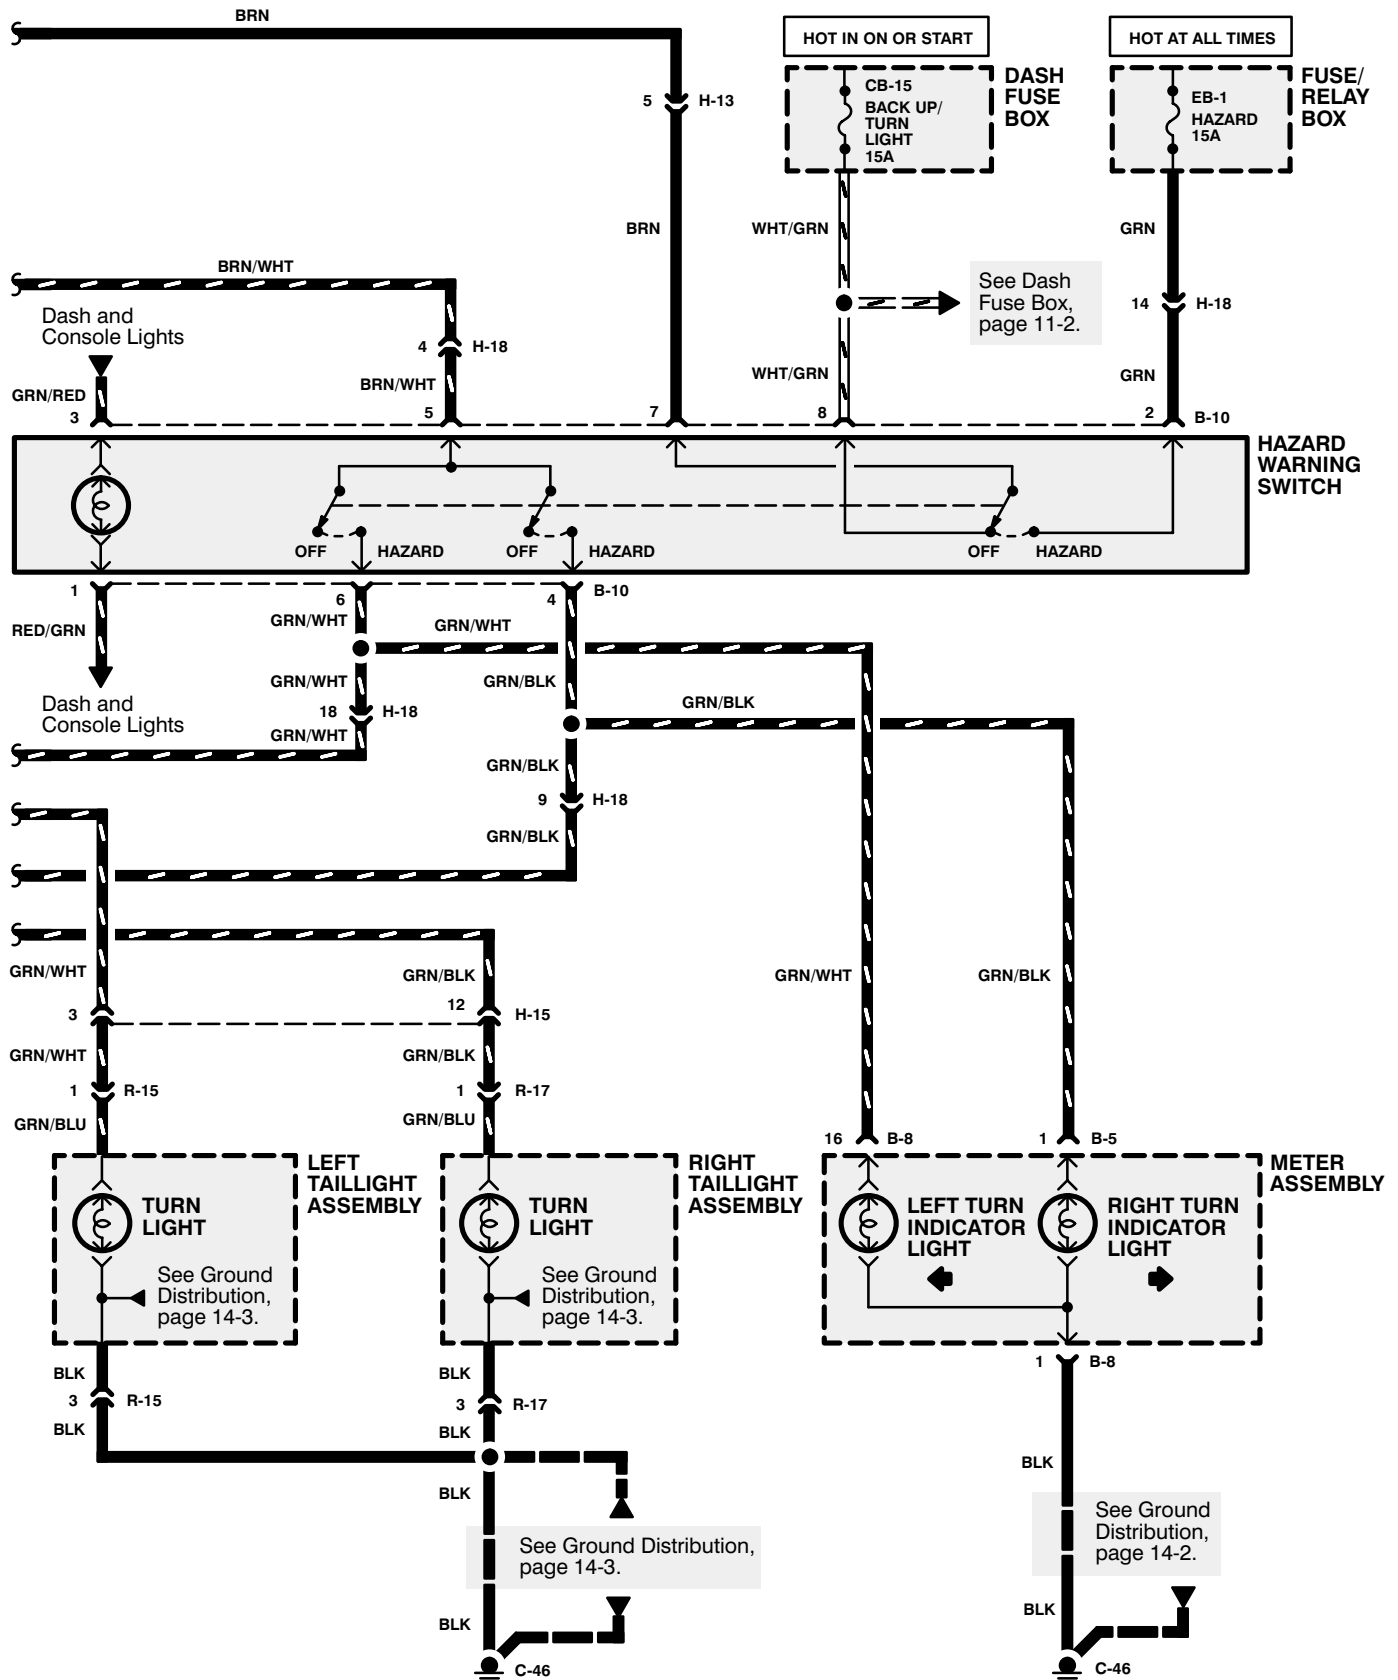

TURN AND HAZARD LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Dash Fuse Box	Behind left I/P side trim panel 36
Flasher Unit	Behind left side of I/P, above left kick panel 43
Fuse/Relay Box	Right side of engine compartment, on inner 18
Connector	
B-5 (16-WHT)	Behind left side of I/P, on rear of meter assembly 49
B-8 (16-BLK)	Behind left side of I/P, on rear of meter assembly 49
C-18 (2-GRY)	On right front combination light 1
C-23 (2-GRY)	On left front combination light 1
C-38 (16-WHT)	Behind lower left I/P, right of steering column 47
H-13 (22-WHT)	Behind left side of I/P, above left kick panel on bracket 42
H-15 (18-BLK)	Behind left side of I/P, above left kick panel on bracket 42
H-18 (20-WHT)	Behind I/P right side panel 58
R-15 (6-WHT)	Left rear of cargo compartment, behind trim panel 73
R-17 (6-WHT)	Right rear of cargo compartment, behind trim 74
Ground	
C-16	Left rear of engine compartment, on inner fender 16
C-46	Behind left kick panel 40

Circuit Operation

Turn Operation

With the starter switch in ON or START, battery voltage is applied to the hazard warning switch from the BACK UP/ TURN LIGHT fuse CB-15. When the hazard warning switch is in the OFF position, battery voltage is applied to the flasher unit. The flasher units output is pulsing voltage which is directed to either the LEFT or RIGHT position on the turn signal switch and causes the turn lights and turn indicator lights to flash in either direction.

Hazard Operation

Battery voltage is applied to the hazard warning switch at all times from the HAZARD fuse EB-1. When the hazard warning switch is in the hazard position, battery voltage is applied to the flasher unit. The flasher unit's output is pulsing voltage which is directed to the hazard warning switch and causes the turn lights and turn indicator lights to flash in both directions.