


BACK UP LIGHTS

Component Index

- [Automatic Transmission Mode Switch](#)
- [Dash Fuse Box](#)

BACK UP LIGHTS

Circuit Schematic

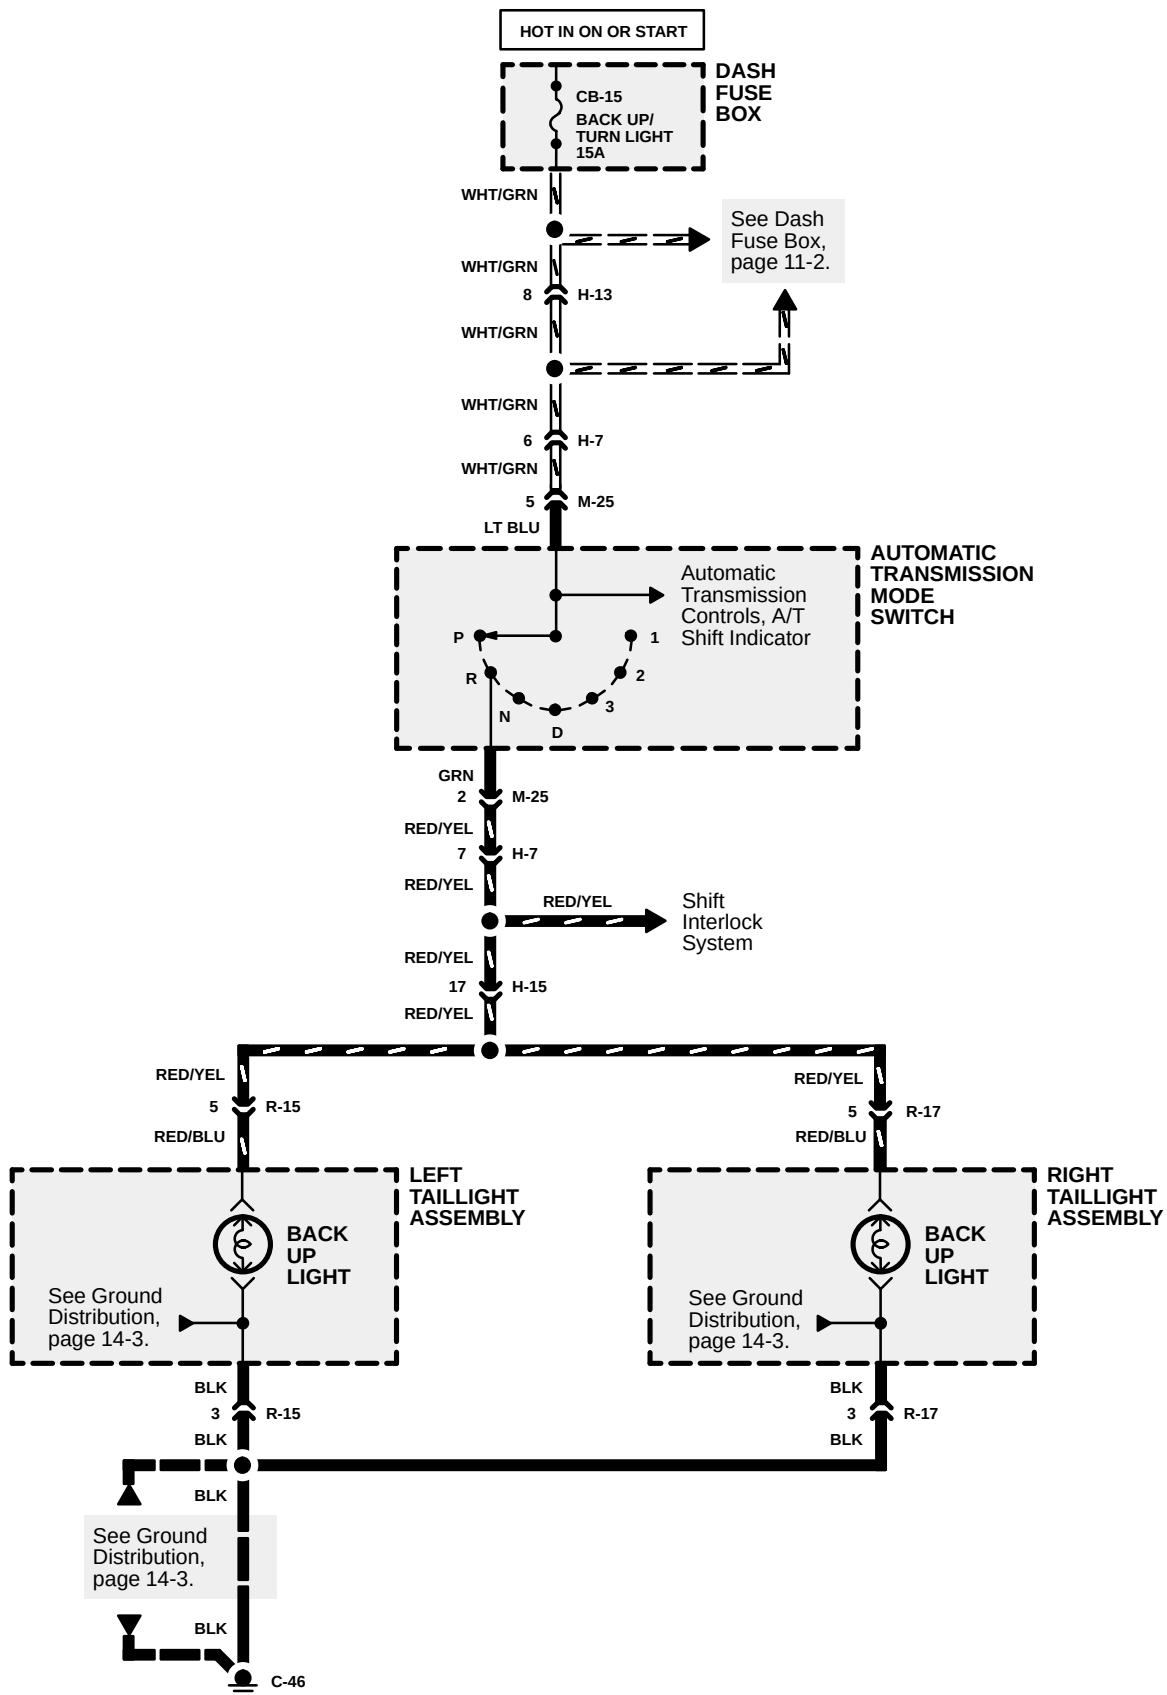

BACK UP LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

Component

Photo No.

Automatic Transmission Mode

Switch	Underneath vehicle, on left side of transmission	78
Dash Fuse Box	Behind left I/P side trim panel	36

Connector

H-7 (16-BLK)	Lower left front of engine compartment	13
H-13 (22-WHT)	Behind left side of I/P, above left kick panel on bracket	42
H-15 (18-BLK)	Behind left side of I/P, above left kick panel on bracket	42
M-25 (8-BLK)	On left side of transmission	77
R-15 (6-WHT)	Left rear of cargo compartment, behind trim panel	73
R-17 (6-WHT)	Right rear of cargo compartment, behind trim panel	74

Ground

C-46	Behind left kick panel	40
------------	------------------------------	----

Circuit Operation

With the starter switch in ON, battery voltage is applied through the BACK UP/TURN LIGHT fuse CB-15 to the automatic transmission mode switch. With the transmission in reverse, the automatic transmission mode switch closes and battery voltage is applied to the back up lights and they go on.