


DASH AND CONSOLE LIGHTS

Component Index

- [Automatic Heater-A/C Control Unit](#)
- [Dash Fuse Box](#)
- [Shift Lock Controller](#)
- [Taillight Relay](#)


DASH AND CONSOLE LIGHTS

Circuit Schematic

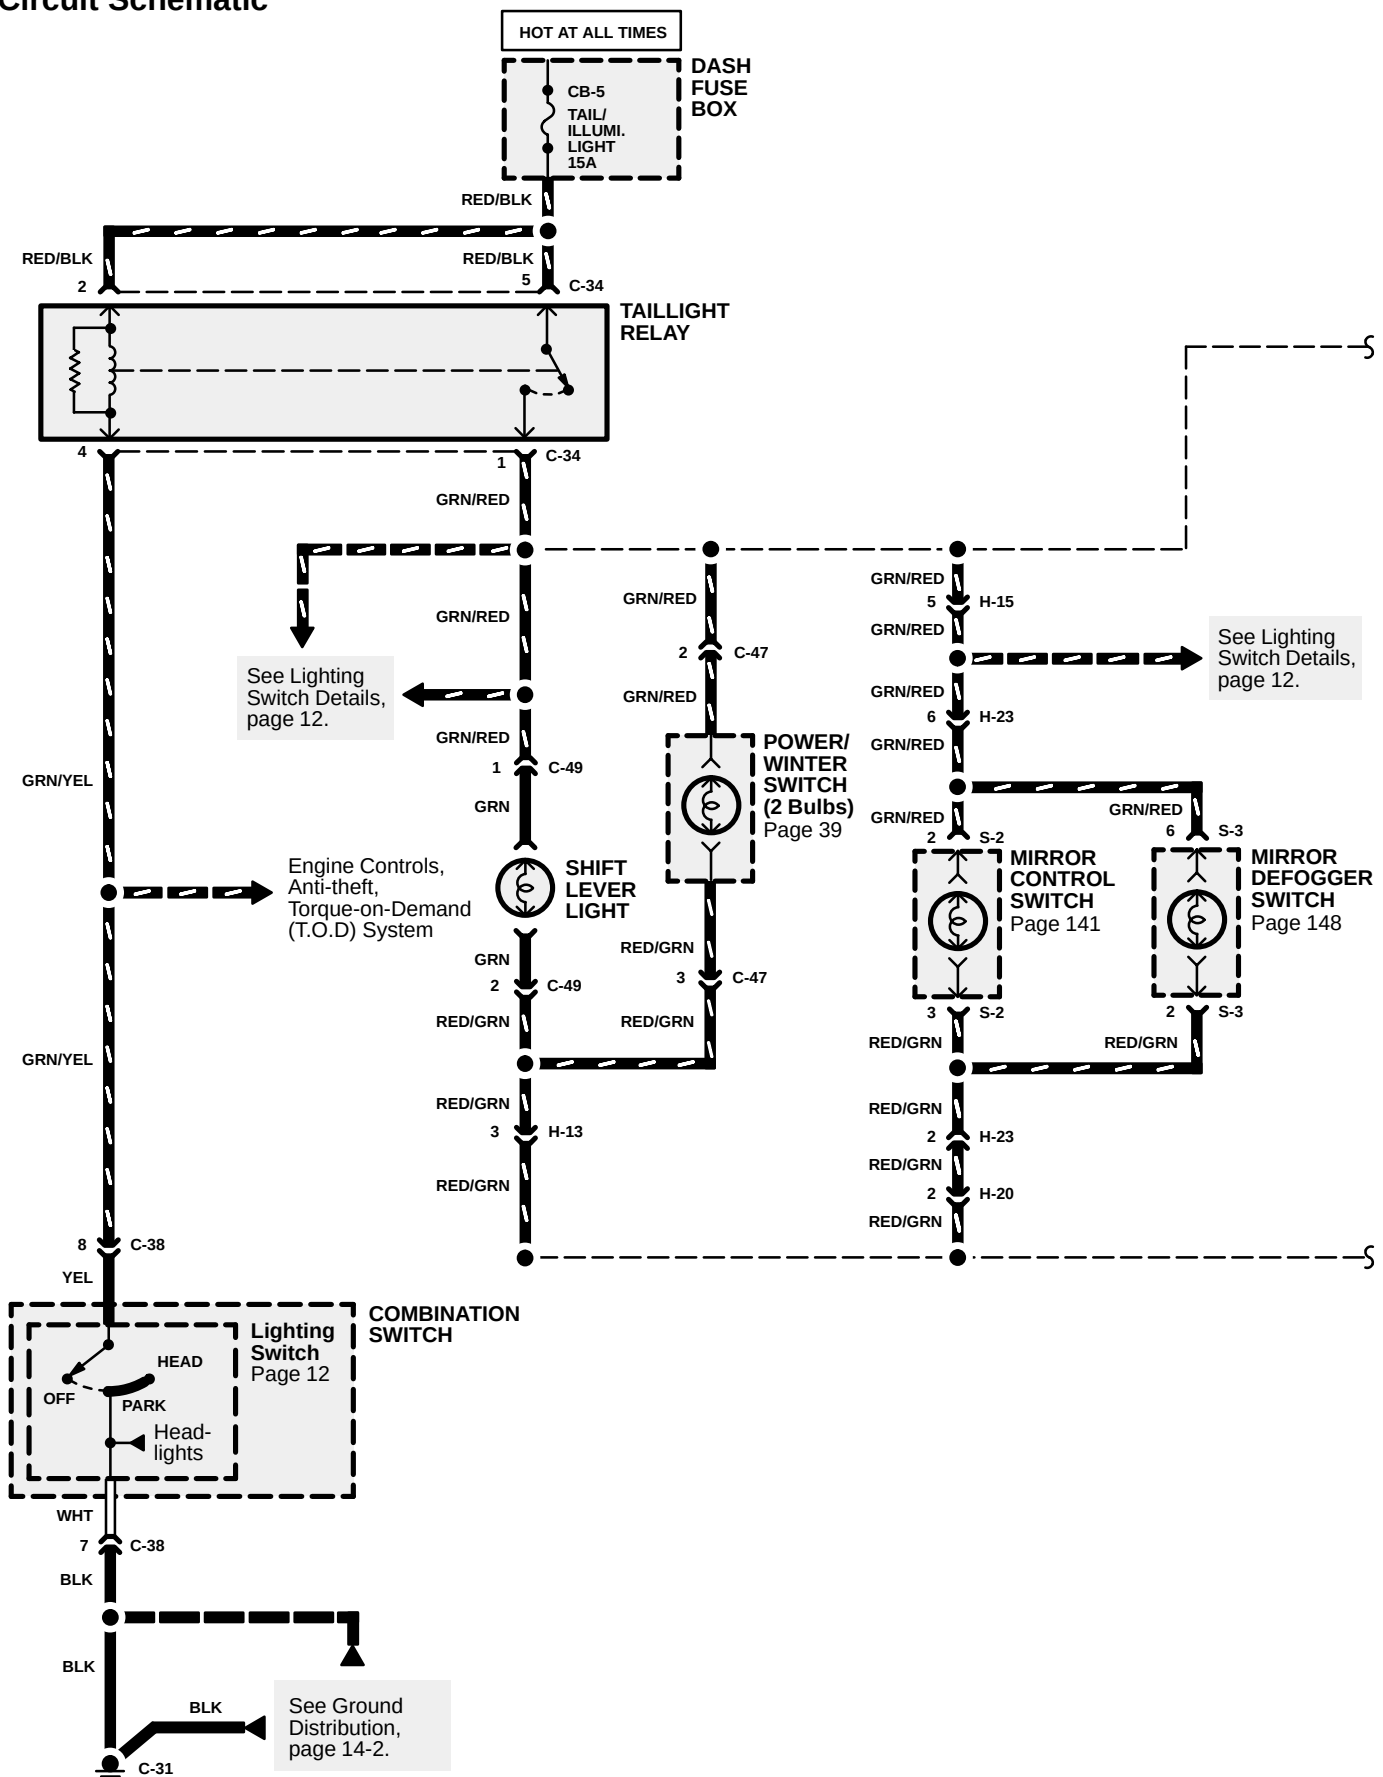

DASH AND CONSOLE LIGHTS

Circuit Schematic

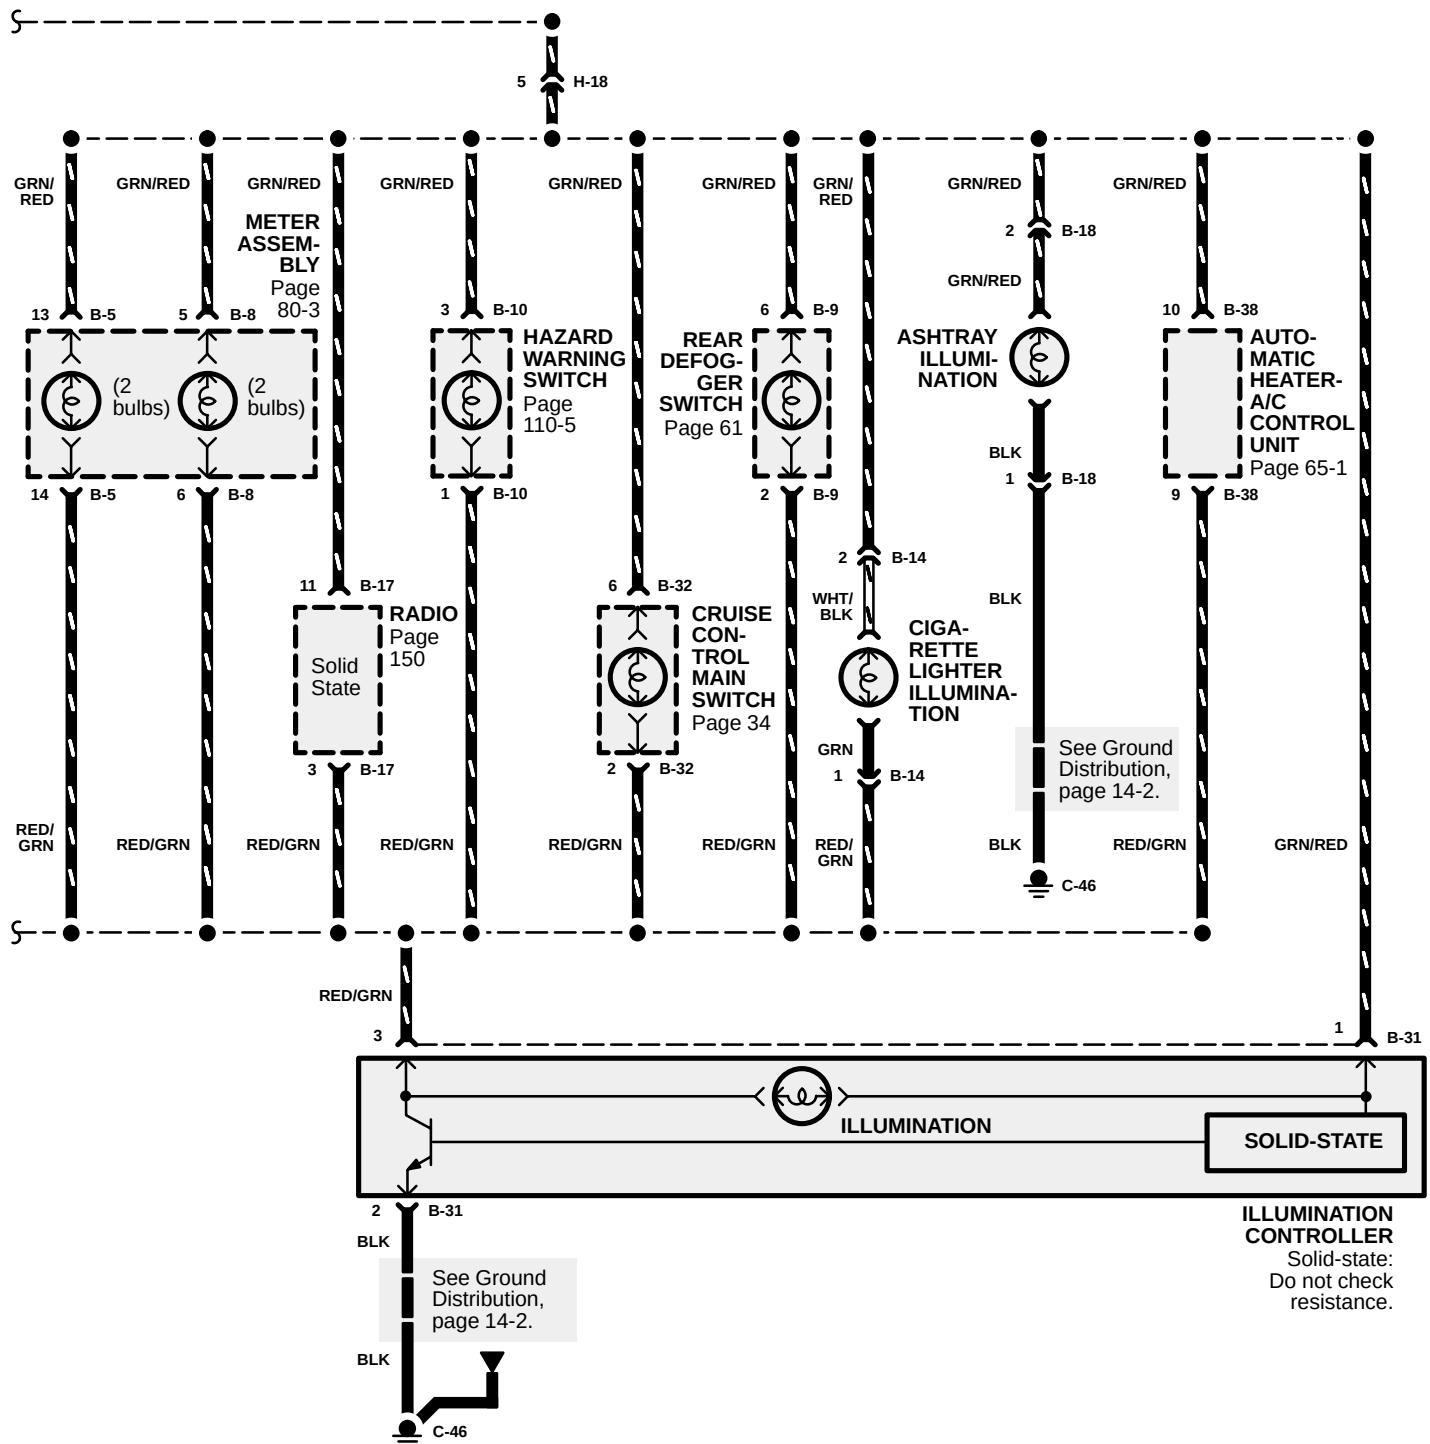

DASH AND CONSOLE LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Automatic Heater-A/C Control	
Unit Center of I/P	51
Dash Fuse Box Behind left I/P side trim panel	36
Shift Lock Controller Below front console	61
Taillight Relay Behind left kick panel	41
<u>Connector</u>	
B-5 (16-WHT) Behind left side of I/P, on rear of meter assembly	49
B-8 (16-BLK) Behind left side of I/P, on rear of meter assembly	49
B-14 (2-BRN) Behind front console	
B-18 (2-CLR) Behind front console	
B-33 (2-CLR) Behind center of I/P	51
C-38 (16-WHT) Behind lower left I/P, right of steering column	47
C-47 (6-BLK) Below rear of center console	60
C-49 (2-BLK) Below rear of center console	60
H-13 (22-WHT) Behind left side of I/P, above left kick panel on bracket	42
H-18 (20-WHT) Behind I/P right side panel	58
H-20 (15-WHT) Behind left side of I/P, above left kick panel on bracket	42
H-23 (13-BLK) Below center console	63
<u>Ground</u>	
C-31 Behind right kick panel	57
C-46 Behind left kick panel	40

Circuit Operation

The TAIL/ILLUMI. LIGHT fuse CB-5 applies battery voltage at all times to the taillight relay. When the lighting switch is in the HEAD or PARK position, the lighting switch provides ground to the taillight relay. The taillight relay energizes, providing battery voltage to the dash and console lights. The brightness of the lights is controlled by the illumination controller. The illumination controller is a solid-state device which controls the ground path provided to the lights.