


Anti-lock brake system (ABS)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

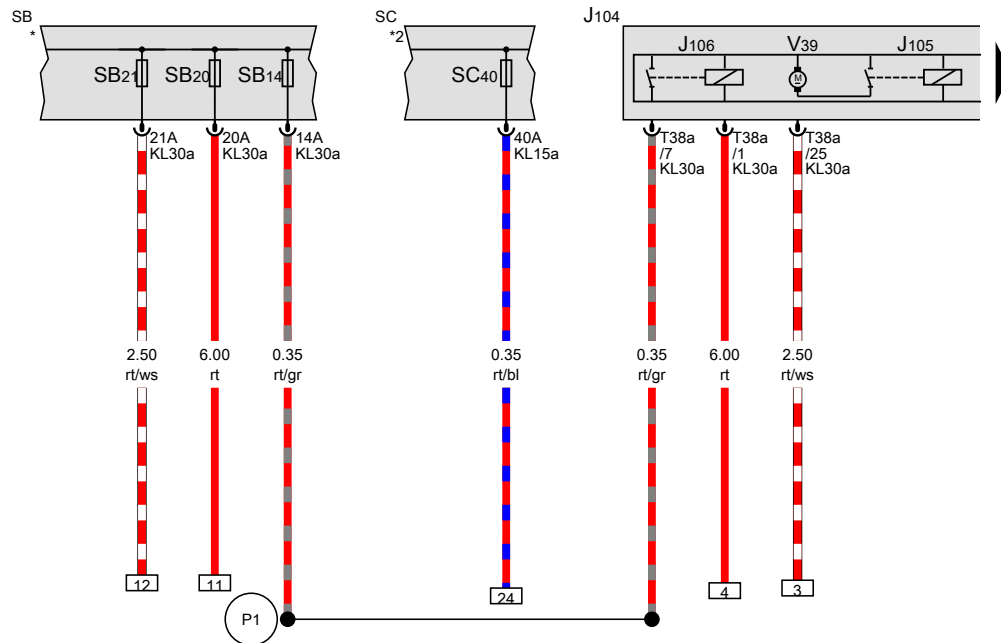

ABS control unit, Fuse holder B, Fuse holder C

- J104 ABS control unit
- J105 ABS return flow pump relay
- J106 ABS solenoid valve relay
- SB Fuse holder B
- SB14 Fuse 14 on fuse holder B
- SB20 Fuse 20 on fuse holder B
- SB21 Fuse 21 on fuse holder B
- SC Fuse holder C
- SC40 Fuse 40 on fuse holder C
- T38a 38-pin connector, brown
- V39 ABS return flow pump

P1 Positive connection (30), in battery fuse holder


* see applicable current flow diagram for fuses in engine compartment

*2 see applicable current flow diagram for fuses in interior



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

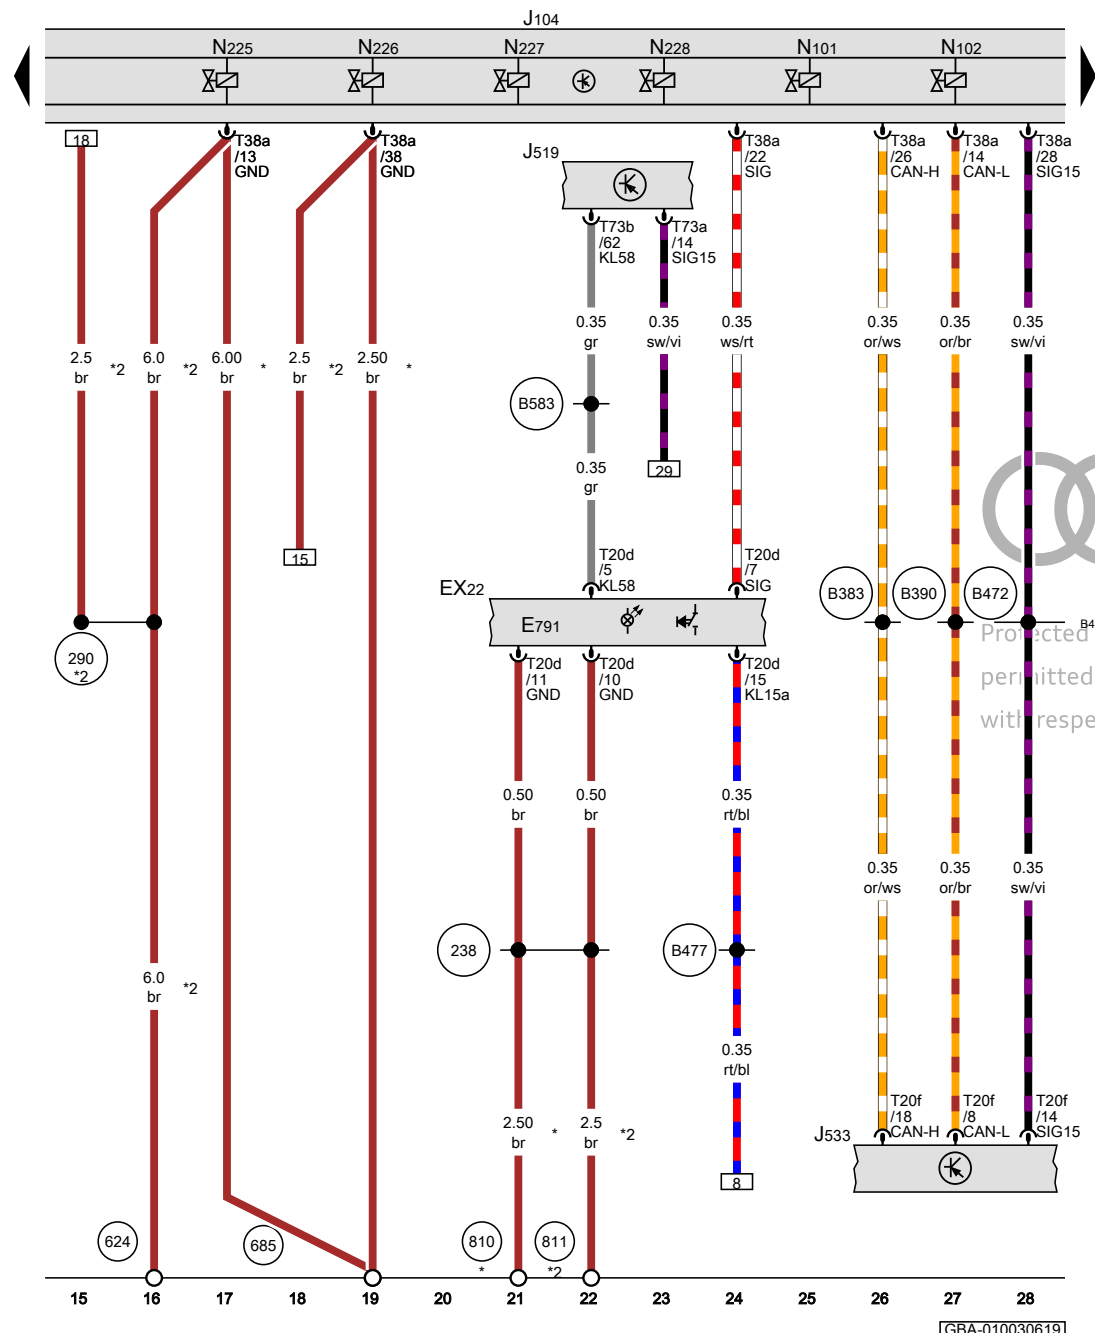

Centre switch module in dash panel, ABS control unit, Onboard supply control unit, Data bus diagnostic interface

- EX22 Centre switch module in dash panel
- E791 Operating unit 1 for driver and convenience functions
- J104 ABS control unit
- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- N101 Front left ABS inlet valve
- N102 Front left ABS outlet valve
- N225 Vehicle stabilization program switch valve 1
- N226 Vehicle stabilization program switch valve 2
- N227 Vehicle stabilization program high-pressure valve 1
- N228 Vehicle stabilization program high-pressure valve 2
- T20d 20-pin connector, black
- T20f 20-pin connector, red
- T38a 38-pin connector, brown
- T73a 73-pin connector, black
- T73b 73-pin connector, black

- 238 Earth connection 1, in interior wiring harness
- 290 Earth connection 1, in second battery wiring harness
- 624 Earth point, starter battery
- 685 Earth point 1, on front of right longitudinal member
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- B390 Connection 1 (powertrain CAN bus, low), in main wiring harness
- B472 Connection 8, in main wiring harness
- B477 Connection 13, in main wiring harness
- B583 Positive connection (58), in interior wiring harness
- * For left-hand drive models
- *2 For right-hand drive models

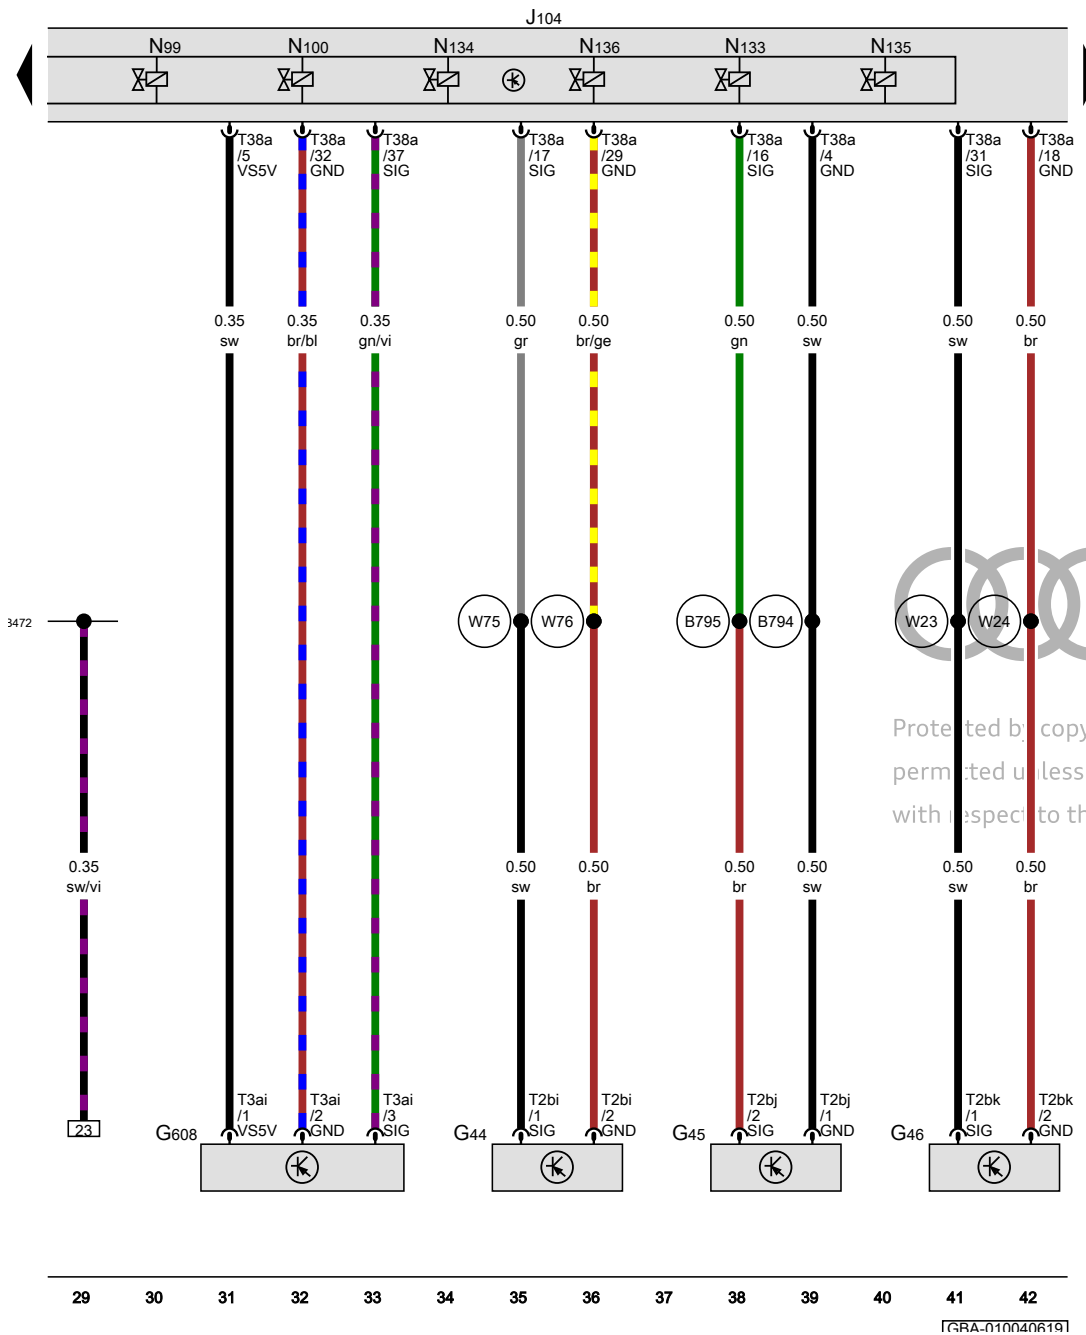


Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Vacuum sender, ABS control unit

- G44 Rear right speed sensor
- G45 Front right speed sensor
- G46 Rear left speed sensor
- G608 Vacuum sender
- J104 ABS control unit
- N99 Front right ABS inlet valve
- N100 Front right ABS outlet valve
- N133 Rear right ABS inlet valve
- N134 Rear left ABS inlet valve
- N135 Rear right ABS outlet valve
- N136 Rear left ABS outlet valve
- T2bi 2-pin connector, black
- T2bj 2-pin connector, black
- T2bk 2-pin connector, black
- T3ai 3-pin connector, black
- T38a 38-pin connector, brown
- B472 Connection 8, in main wiring harness
- B794 Connection 3 (sensor), in main wiring harness
- B795 Connection 4 (sensor), in main wiring harness
- W23 Connection 1 (sensor), in rear wiring harness
- W24 Connection 2 (sensor), in rear wiring harness
- W75 Connection 3 (sensor), in rear wiring harness
- W76 Connection 4 (sensor), in rear wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. Audi AG does not accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

16BA-0100406101

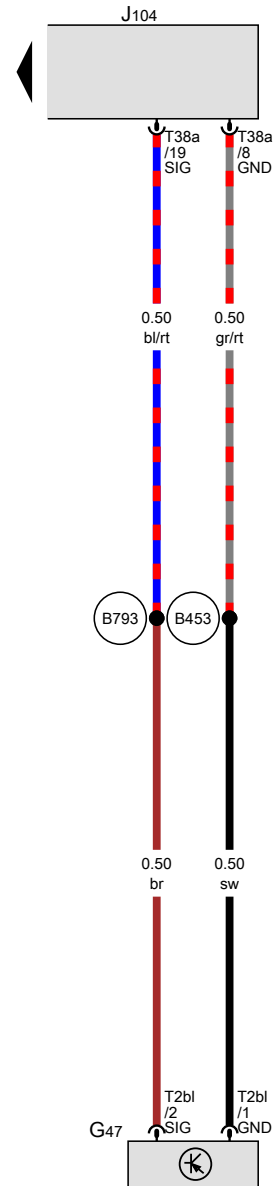

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Front left speed sensor, ABS control unit

- G47 Front left speed sensor
- J104 ABS control unit
- T2bl 2-pin connector, black
- T38a 38-pin connector, brown

- B453 Connection 1 (sensor), in main wiring harness
- B793 Connection 2 (sensor), in main wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

43 44 45 46 47 48 49 50 51 52 53 54 55 56

[6BA-010050610]