

# BODY

## CONTENTS

page

|                       |   |
|-----------------------|---|
| BODY COMPONENTS ..... | 1 |
|-----------------------|---|

## BODY COMPONENTS

### INDEX

page

page

|                          |   |                          |   |
|--------------------------|---|--------------------------|---|
| REMOVAL AND INSTALLATION |   | FORWARD IP CONSOLE ..... | 1 |
| FLOOR CONSOLE .....      | 1 |                          |   |

## REMOVAL AND INSTALLATION

### FLOOR CONSOLE

#### REMOVAL

- (1) Remove gear shift knob, refer to Group 21, Transaxle for proper procedure.
- (2) Disengage clips holding PRNDL/boot to floor console (Fig. 1).
- (3) Disengage PRNDL wire connector.
- (4) Separate PRNDL/boot from console.
- (5) Remove screws holding rearward end of console to floor bracket.
- (6) Remove screws holding forward end of console to front IP console.
- (7) Separate floor console from vehicle.

#### INSTALLATION

Reverse the preceding operation.

### FORWARD IP CONSOLE

#### REMOVAL

- (1) Remove floor console.

- (2) Remove instrument cluster bezel, refer to Group 8E, Instrument Panel and Gauges for proper procedure.

- (3) Remove screws holding storage bin forward IP console (Fig. 1).

- (4) Separate storage bin from console.

- (5) Remove screws holding forward IP console to gear selector mount bracket.

- (6) Remove screws holding IP console to instrument panel at each side of HVAC control.

- (7) Remove screws holding IP console to instrument panel at each side of storage bin area.


- (8) Remove screws holding IP console to instrument panel support braces.

- (9) Separate forward IP console from vehicle.

#### INSTALLATION

Reverse the preceding operation.

## REMOVAL AND INSTALLATION (Continued)

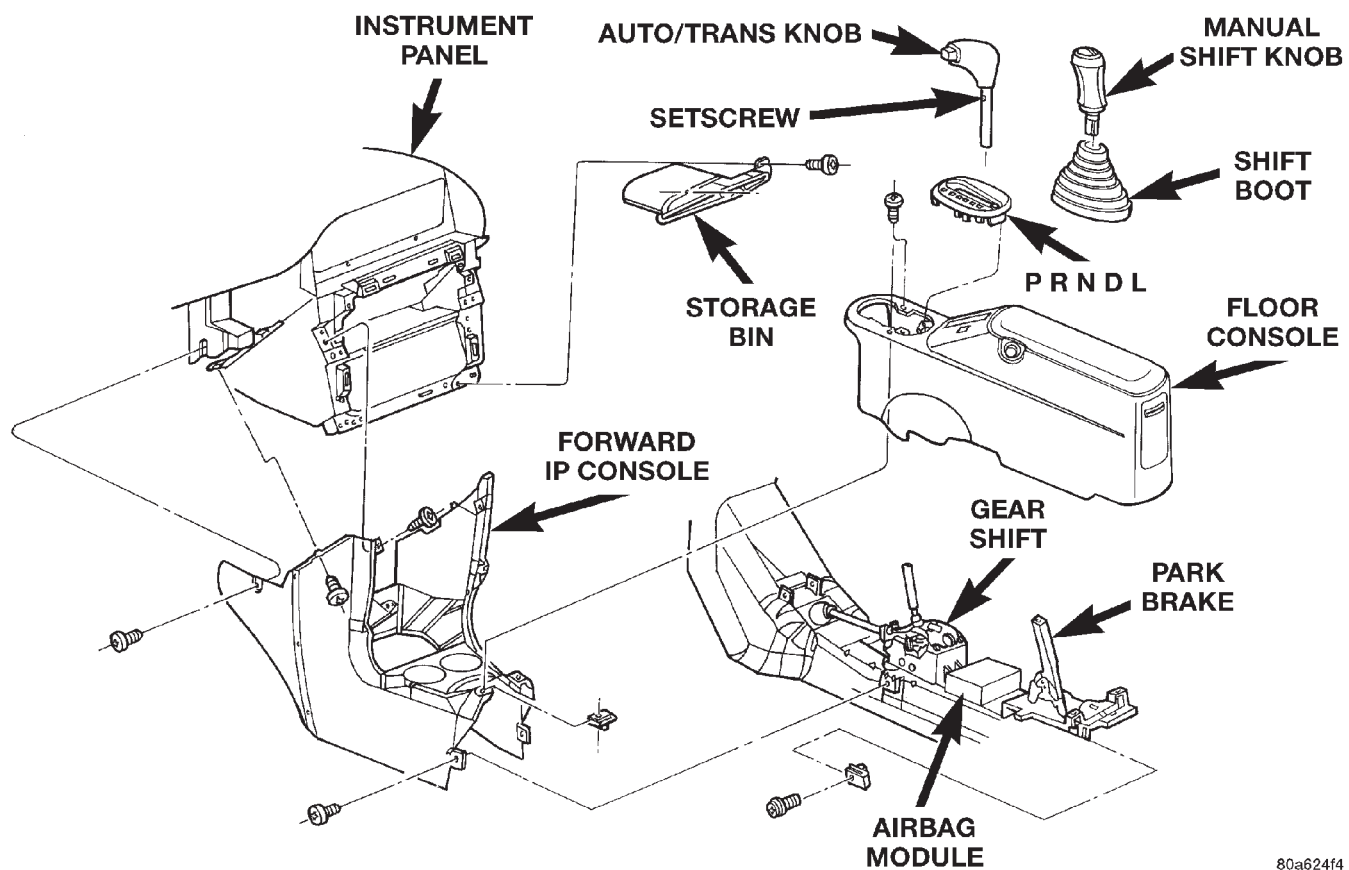

80a624f4

*Fig. 1 Floor Console*