

POWER SOURCE


General Information

This section provides secure, reliable and efficient power for all electrical equipment on the vehicle. The power source distribution consists of the following components: battery, engine compartment fuse and relay box, instrument panel fuse and relay box , ignition switch, fuse and relay.

Power Source Distribution (For 1.5T Model)

Circuit Diagram (Page 1 of 13)


MT

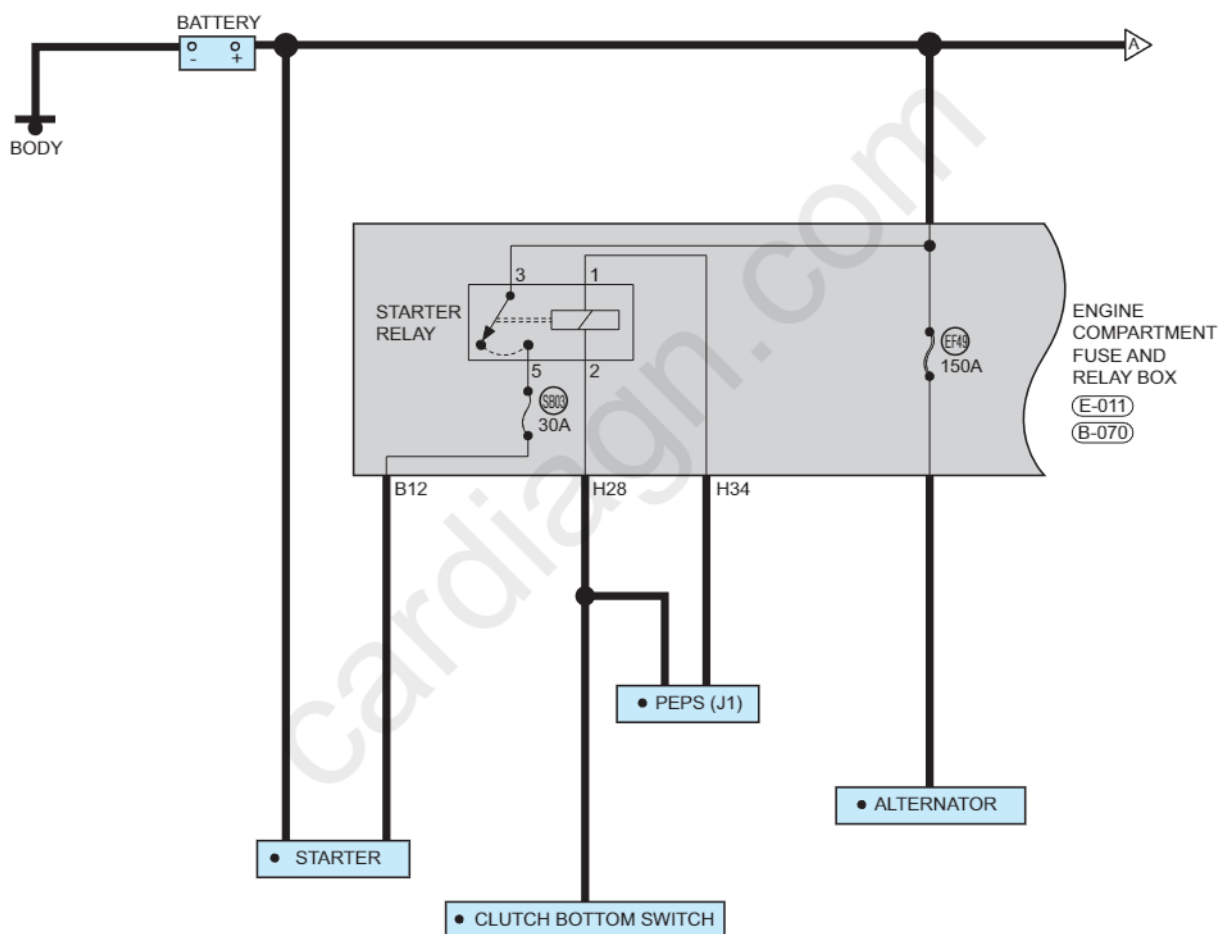

ET15100011

Circuit Diagram (Page 2 of 13)

CVT

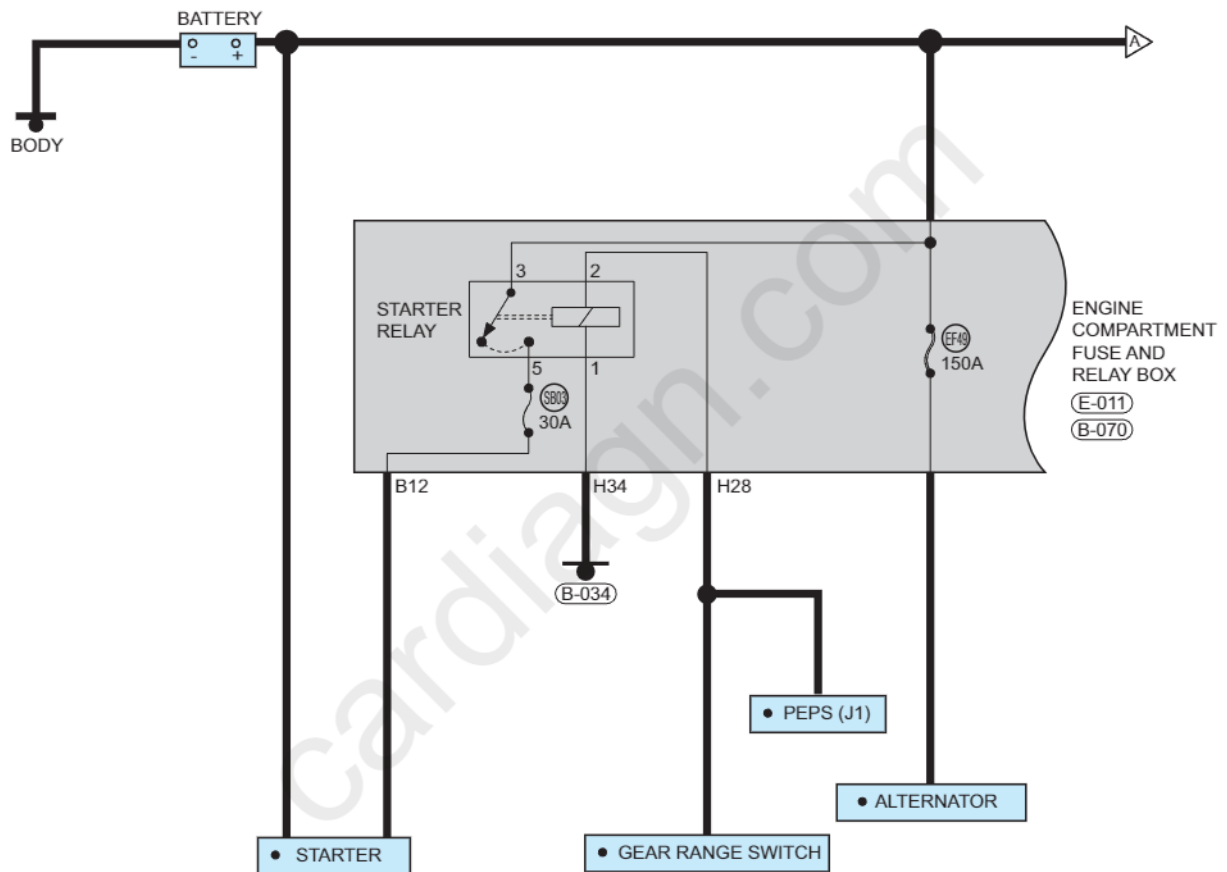


10

ET15100021




Circuit Diagram (Page 3 of 13)

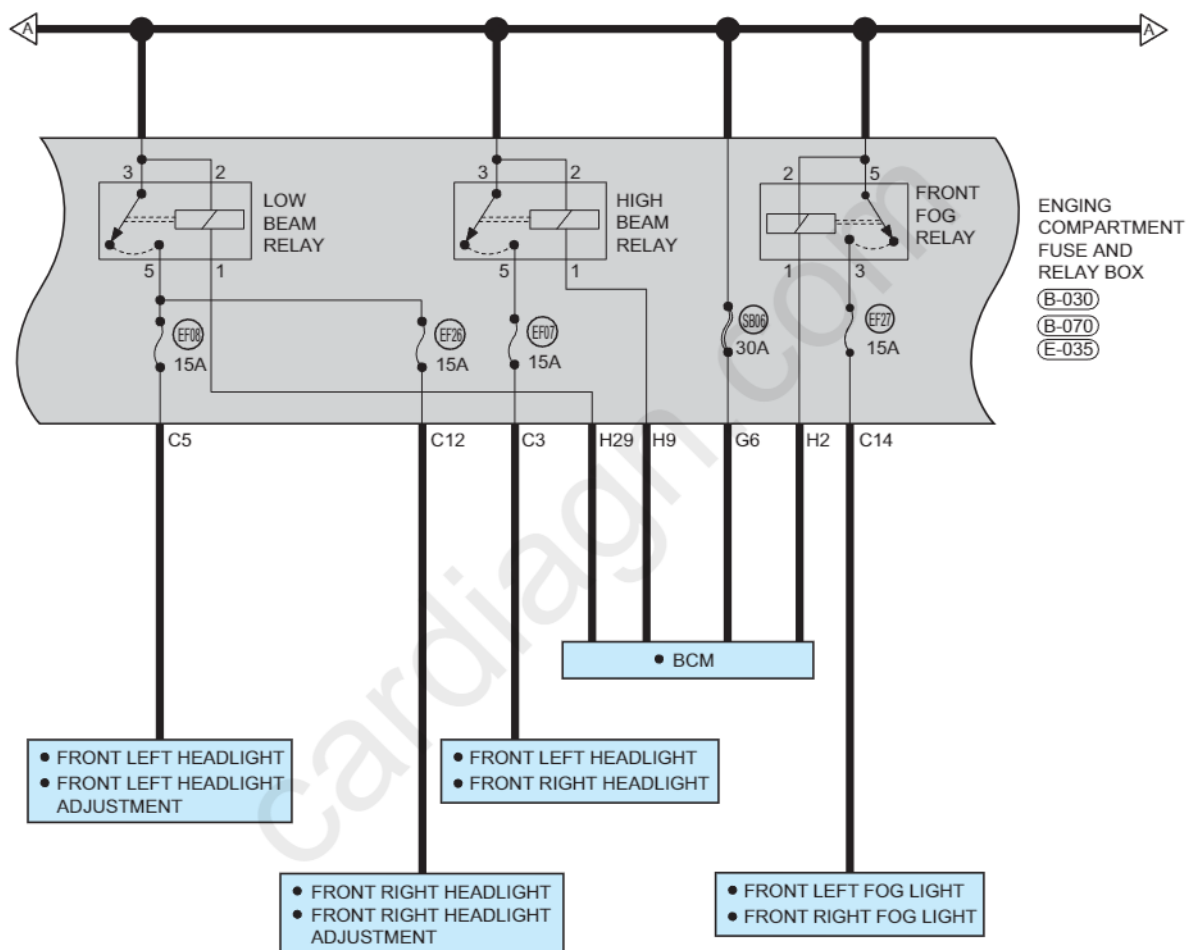


ET15100030

Circuit Diagram (Page 4 of 13)

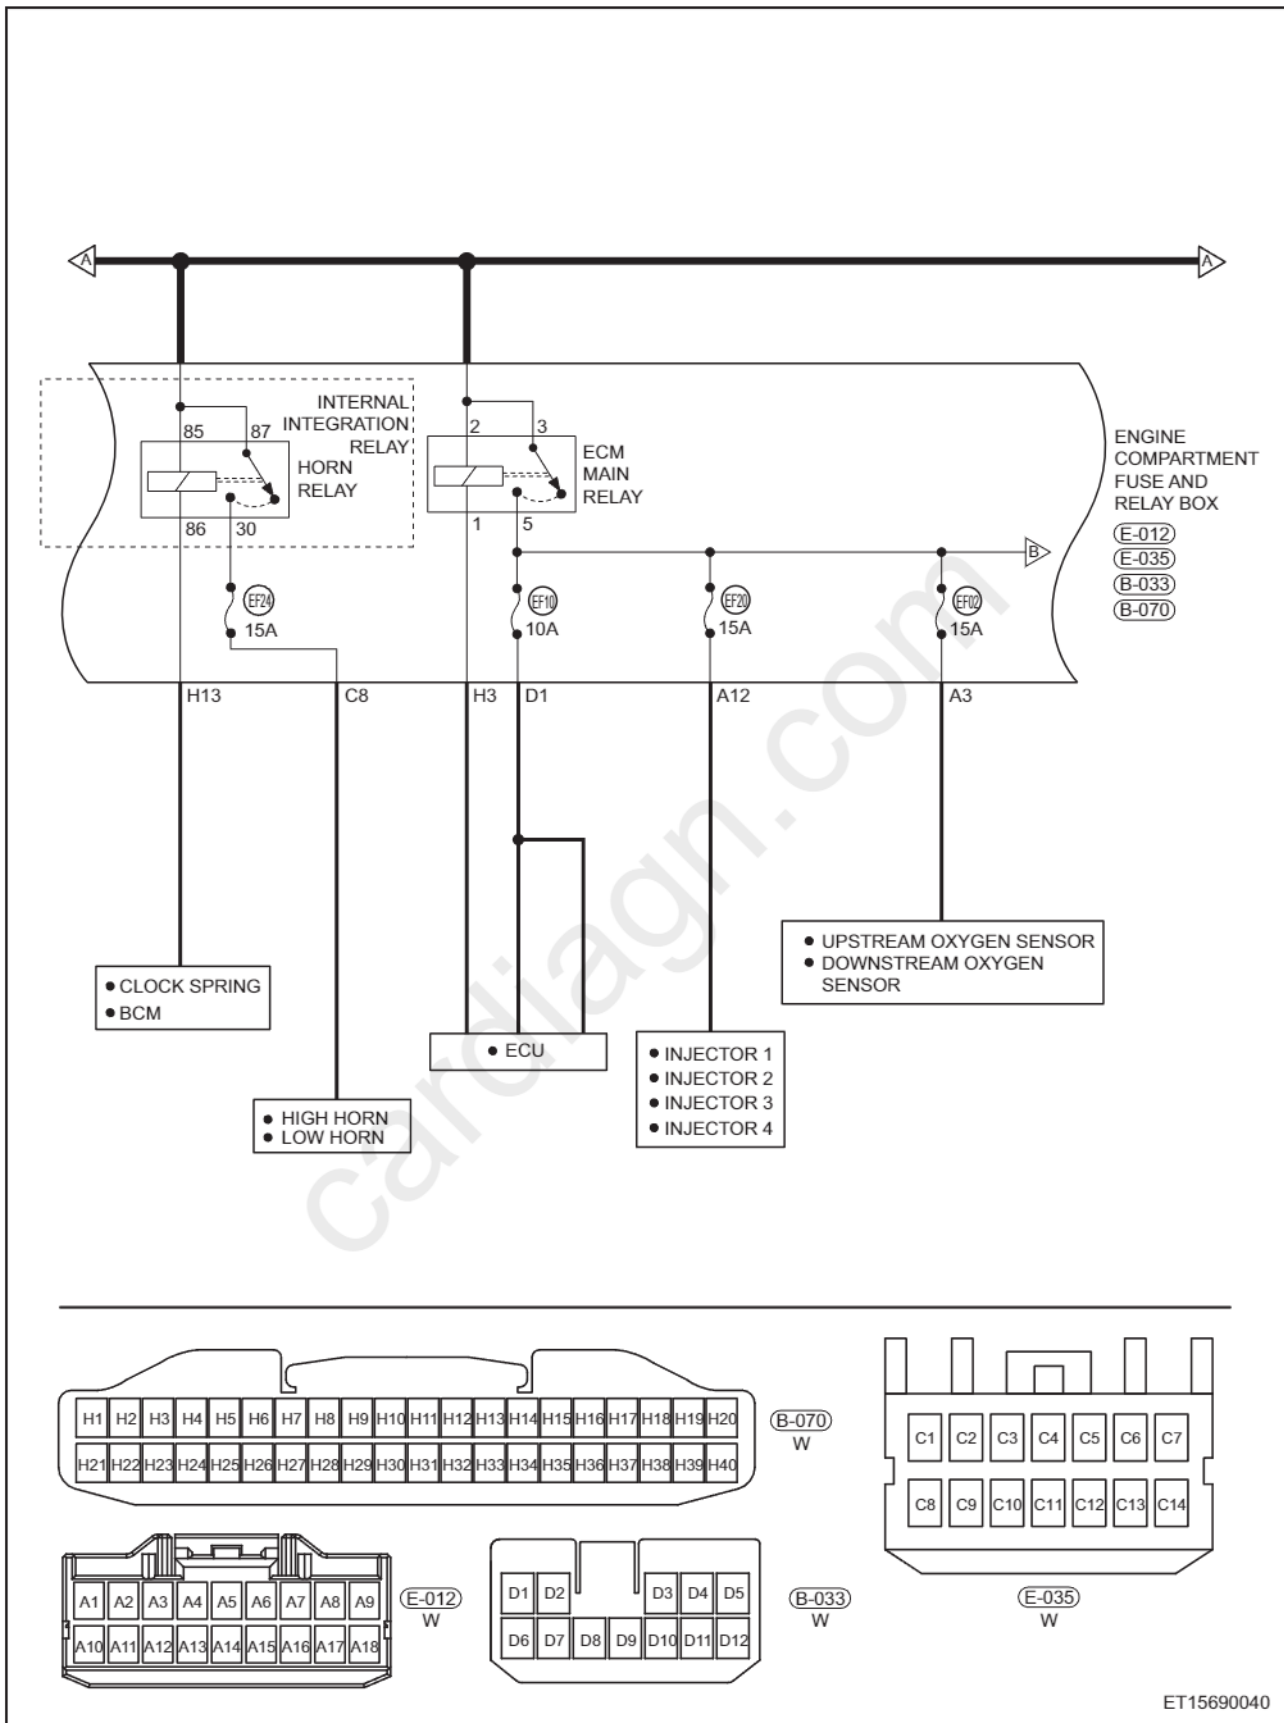


Circuit Diagram (Page 5 of 13)

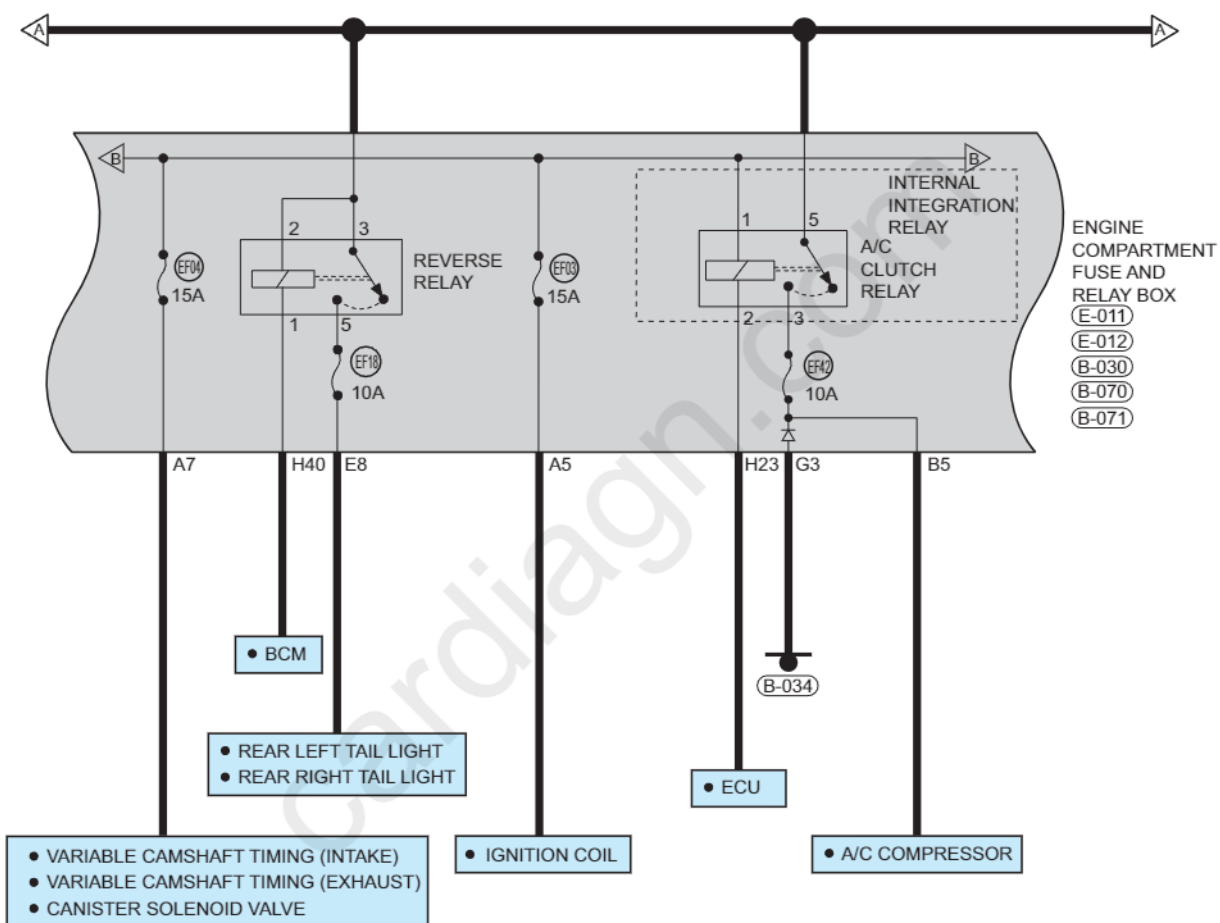

ET15690050

Circuit Diagram (Page 6 of 13)

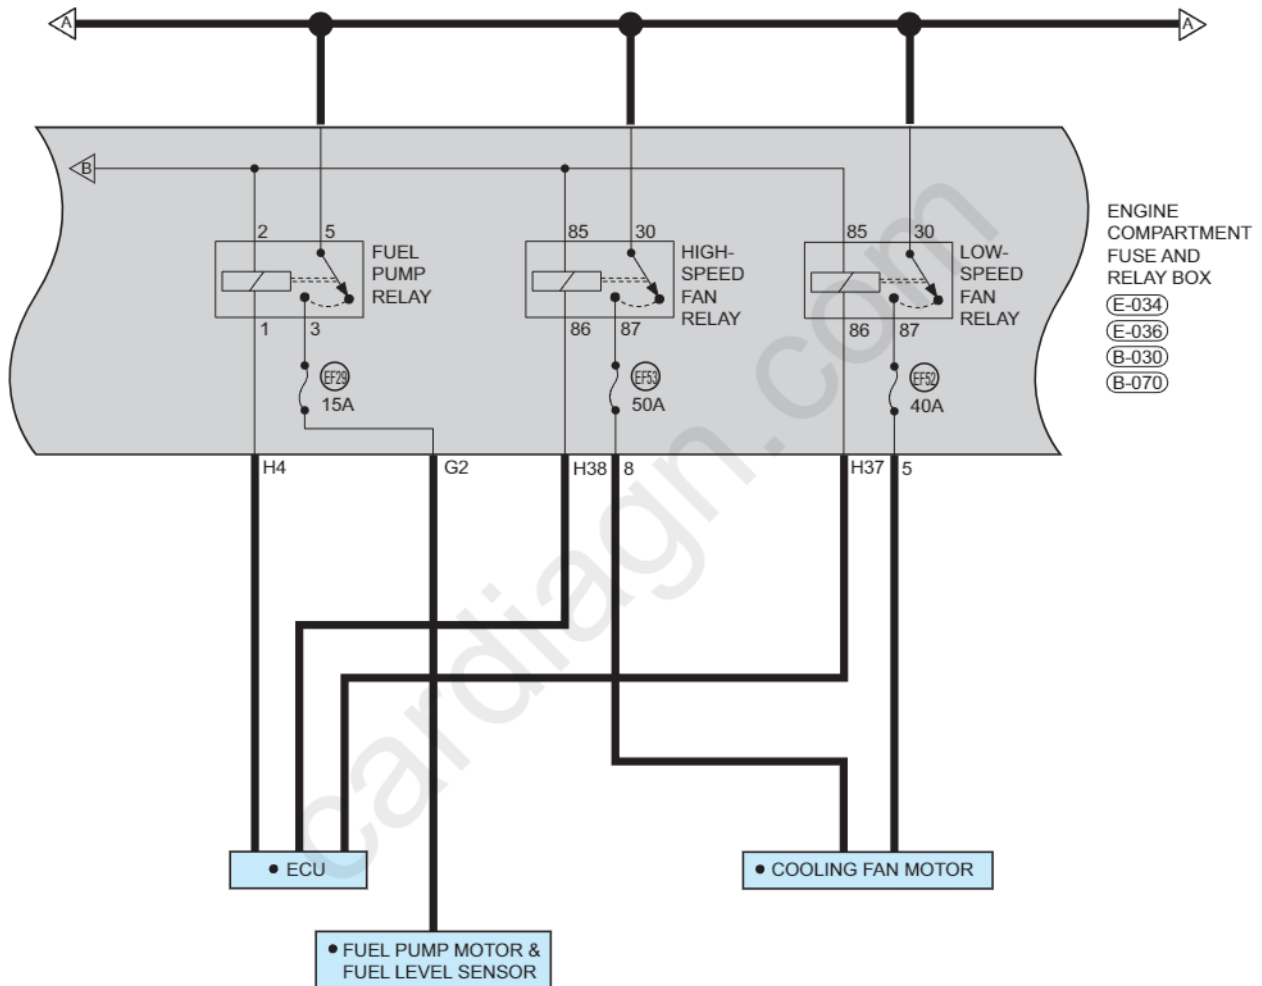


10

ET15100060




Circuit Diagram (Page 7 of 13)

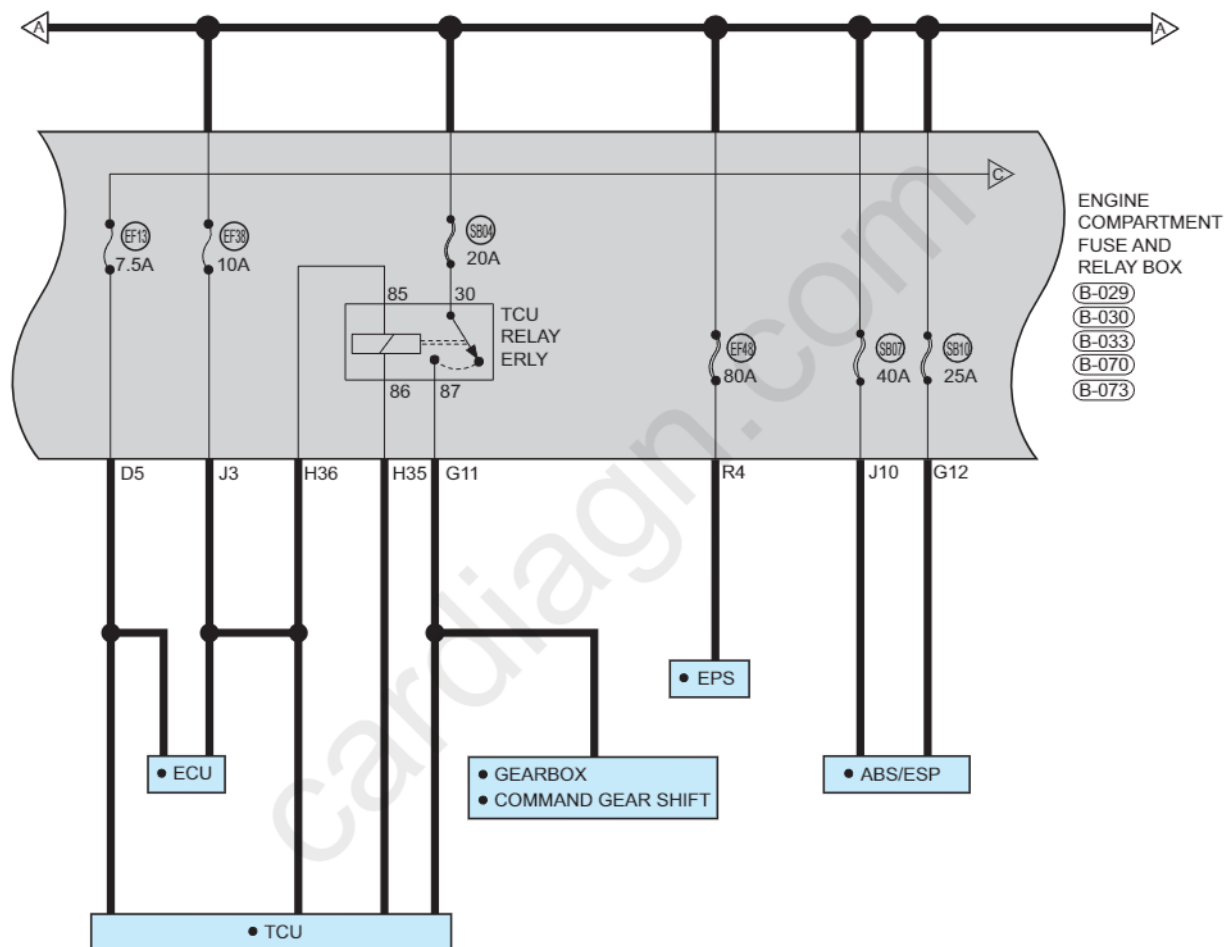

10

ET15100070

Circuit Diagram (Page 8 of 13)

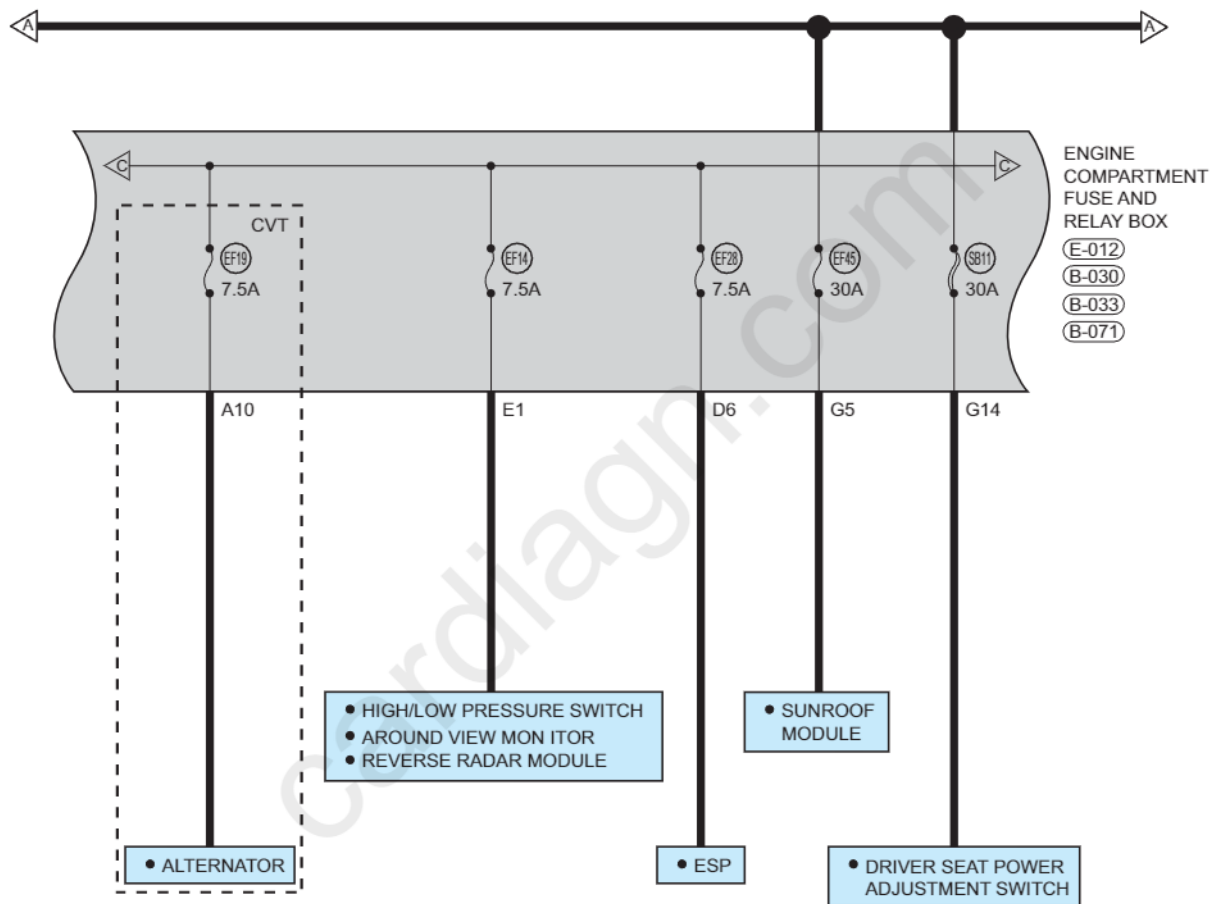


10

ET15100080




Circuit Diagram (Page 9 of 13)

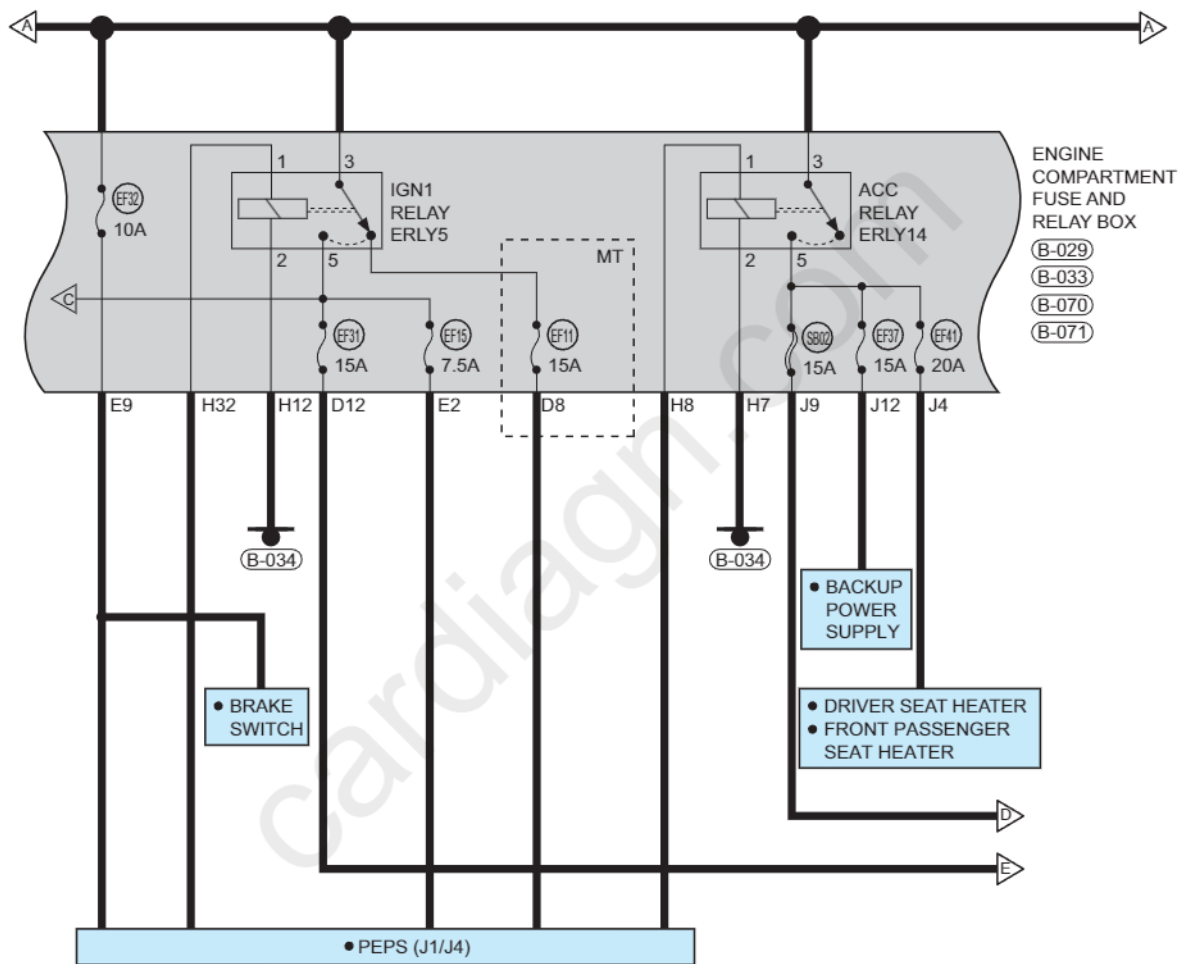


ET15100090

Circuit Diagram (Page 10 of 13)

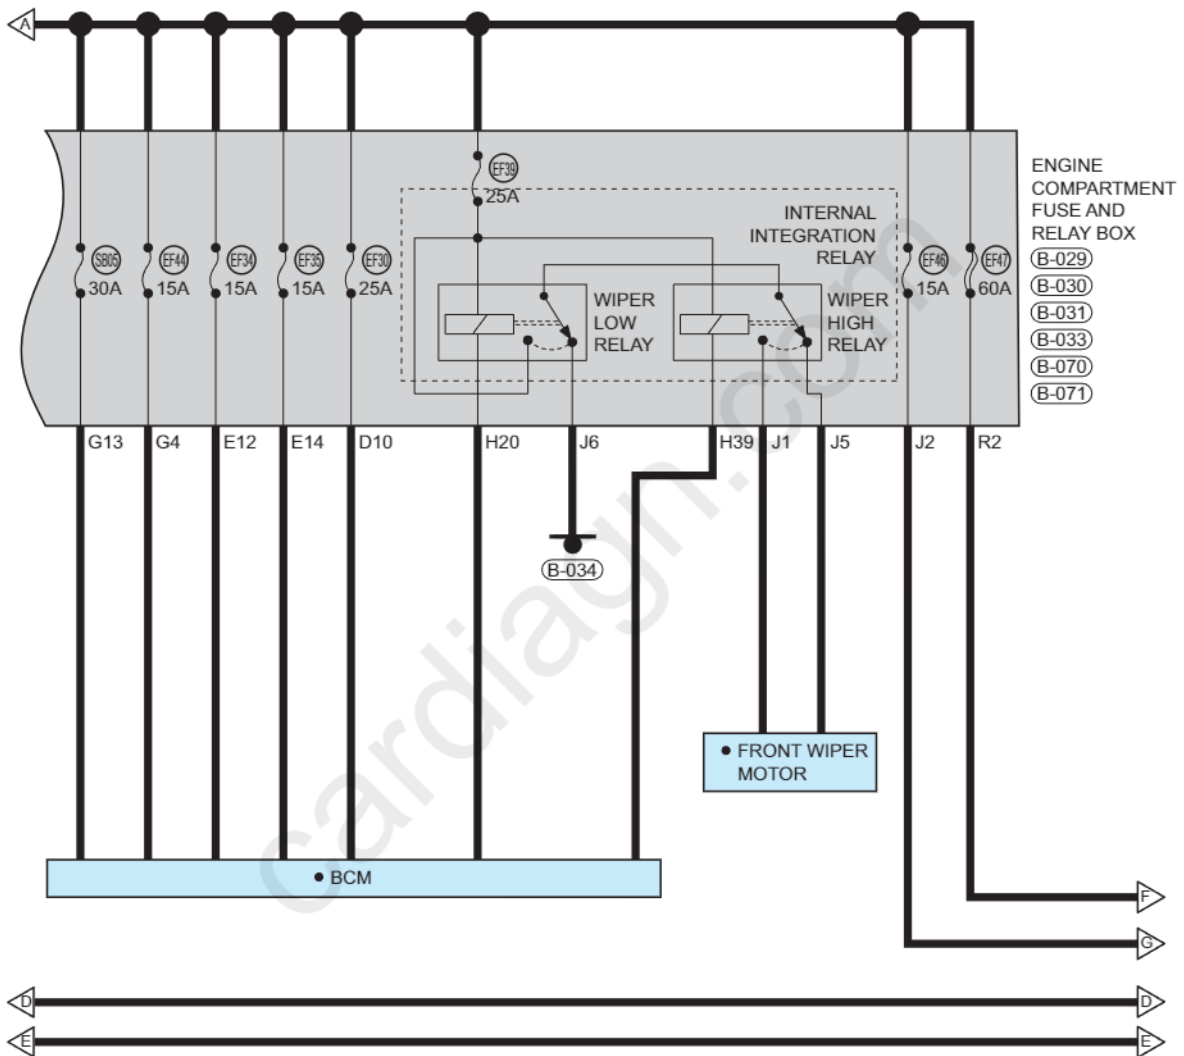


Circuit Diagram (Page 11 of 13)

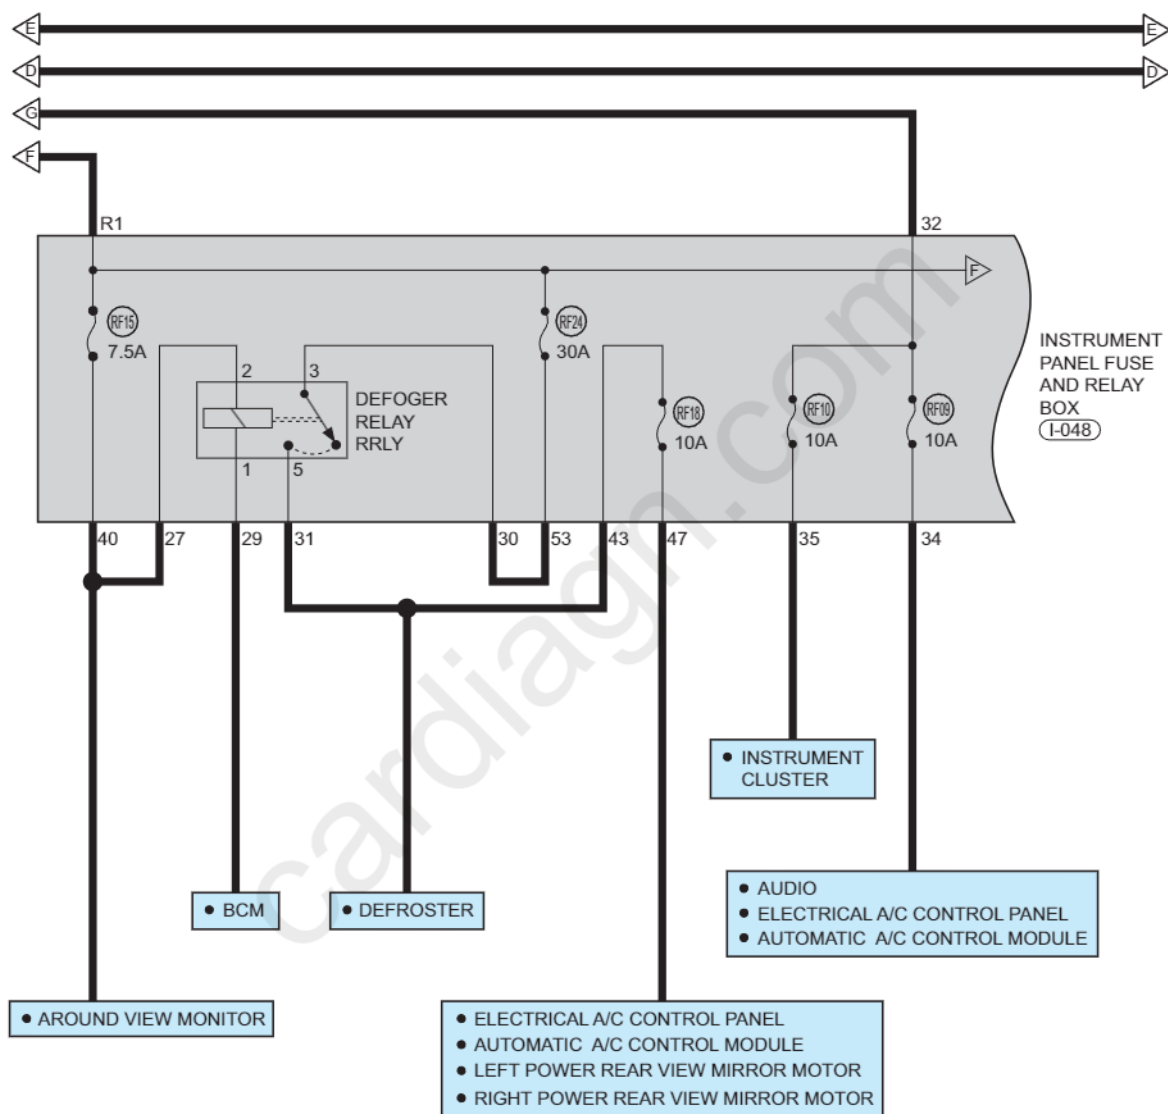

ET15110110


Circuit Diagram (Page 12 of 13)

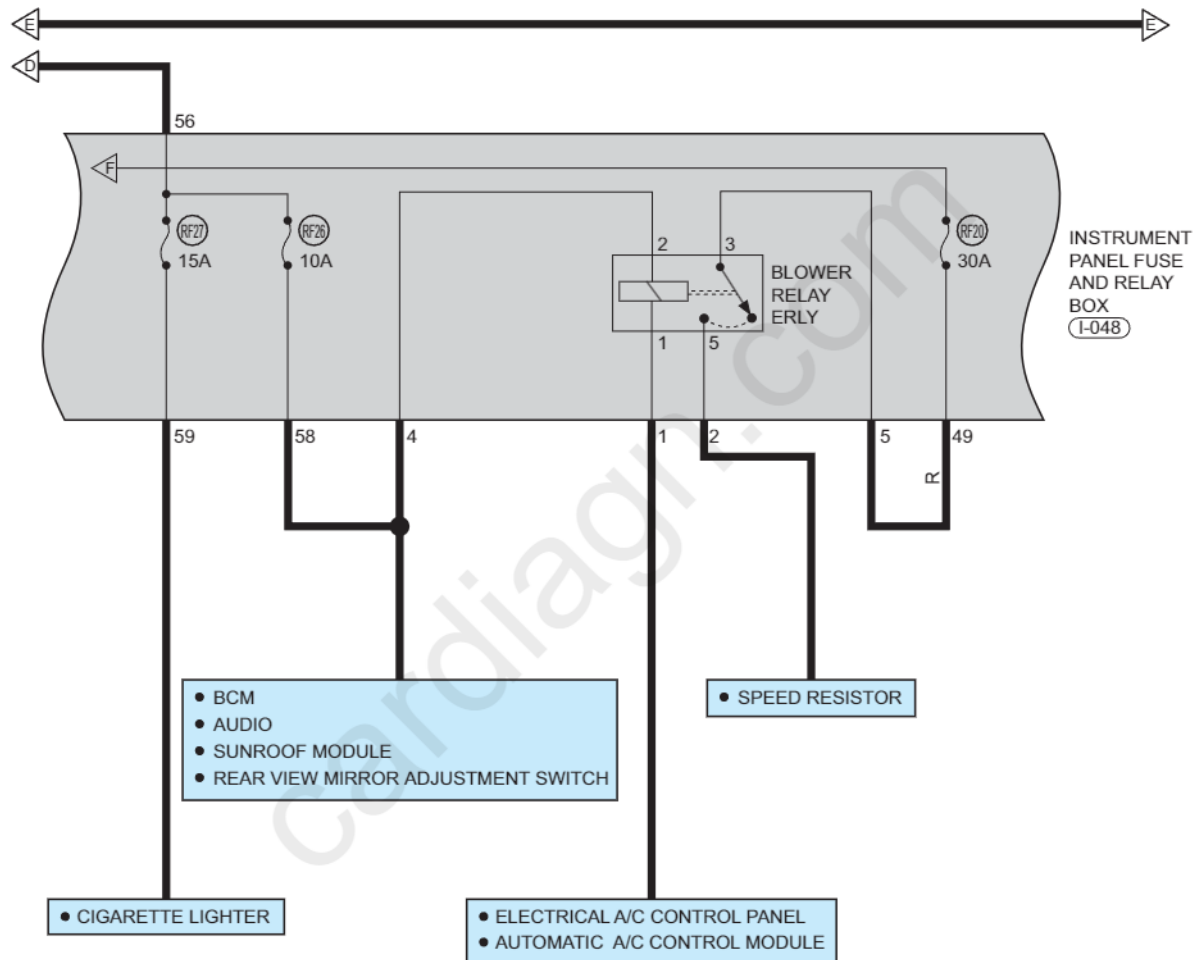

10

ET15100120

Circuit Diagram (Page 13 of 13)

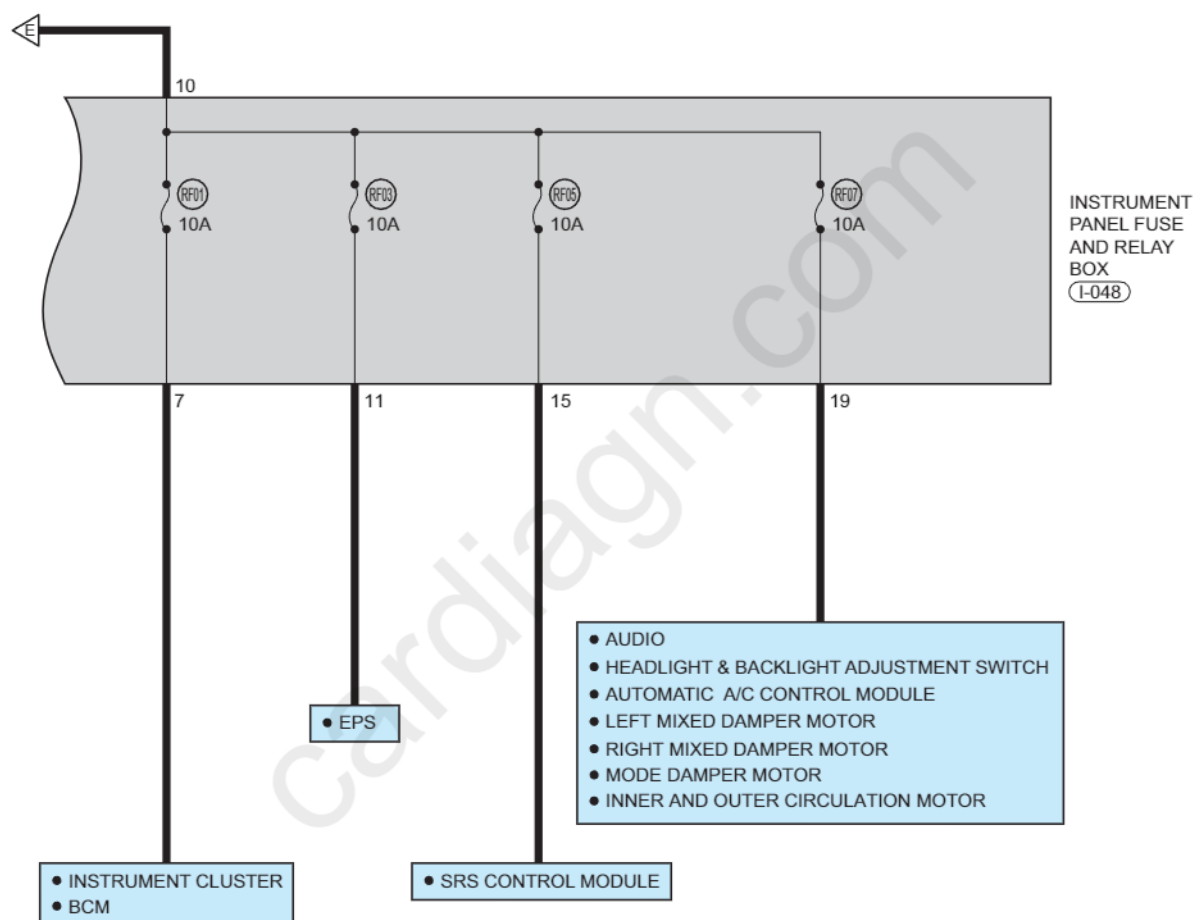

10

ET15100130

