

GENERAL INFORMATION

HOW TO USE THIS MANUAL	GI- 1	ARRANGEMENT OF PARTS	GI- 5
RANGE OF TOPICS	GI- 1	CLEANING OF PARTS	GI- 5
SERVICING PROCEDURE	GI- 1	REASSEMBLY	GI- 5
SYMBOLS	GI- 3	ADJUSTMENT	GI- 6
ADVISORY MESSAGES	GI- 3	RUBBER PARTS AND TUBING	GI- 6
TEXT SEQUENCE	GI- 3	HOSE CLAMPS	GI- 6
UNITS	GI- 4	TORQUE FORMULAS	GI- 6
FUNDAMENTAL PROCEDURES	GI- 5	WISE	GI- 6
PREPARATION OF TOOLS AND		ELECTRICAL SYSTEM	GI- 7
MEASURING EQUIPMENT	GI- 5	CONNECTORS	GI- 7
SPECIAL SERVICE TOOLS	GI- 5	NEW STANDARDS	GI- 8
DISASSEMBLY	GI- 5	ABBREVIATIONS	GI-10
INSPECTION DURING REMOVAL,			
DISASSEMBLY	GI- 5		

HOW TO USE THIS MANUAL


RANGE OF TOPICS

- This manual contains the procedures for performing all of the required service operations. The procedures are divided into the following five basic operations.
 - (1) Removal/Installation
 - (2) Disassembly/Assembly
 - (3) Replacement
 - (4) Inspection
 - (5) Adjustment
- Simple operations which can be performed easily just by looking at the vehicle, such as removal/installation of parts, jacking, vehicle lift, cleaning of parts, and visual inspection, have been omitted.

SERVICING PROCEDURE

Inspection, Adjustment

- The procedures for inspections and adjustments are divided into steps. Important points in regard to the location and contents of the procedures are explained in detail and are shown in the illustrations.

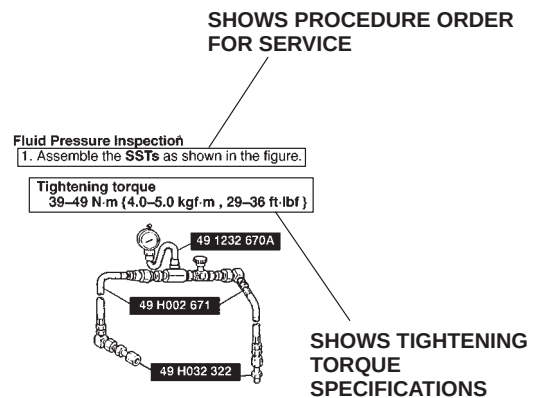

Caution

- Connect the gauge set from under the vehicle to prevent contact with the drive belt and the cooling fan.