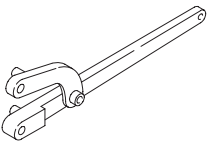
 
 


SPECIAL TOOLS

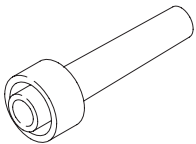
 
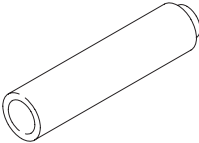
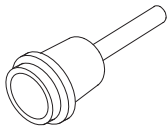
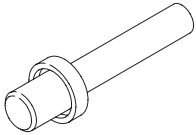
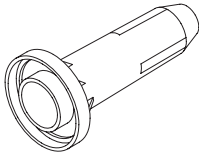
Transfer Box

Mazda Tool Number

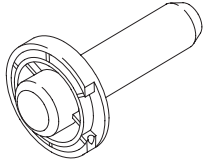
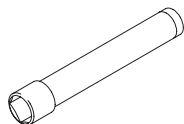
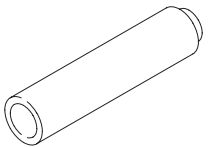
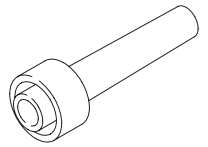
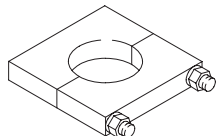
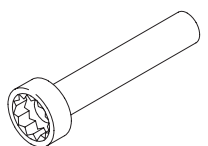
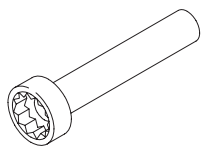
Ford Tool Number

49 S120 710	Universal Flange Holding Wrench 205-072 (15-030A)	
49 0839 425C	Remover, Bearing/Gear 205-310 (15-091)	
	Remover, Bearing/Gear 205-311 (15-092)	

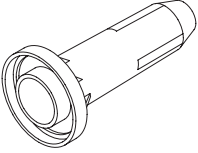
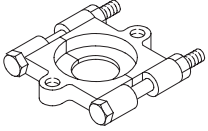
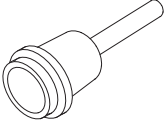
SPECIAL TOOLS

49 F401 331	Installer, Extension Housing Oil Seal 307-028 (17-002)	
	Remover/Installer, Lower Arm Bushing 204-058 (14-027)	
	Remover, Bearing/Gear 205-310 (15-091)	
	Installer, Driver Pinion Bearing 205-068 (15-042)	
	Installer, Differential Double Lip Oil Seal 308-203 (16-066)	
49 0727 415	Installer, Differential Bearing 205-082 (15-037)	
	Installer, Torque Converter Oil Seal 307-273 (17-052)	

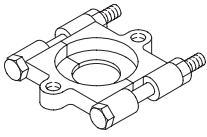
SPECIAL TOOLS

49 0727 415	Installer, Halfshaft Oil Seal 308-119 (16-071)	
	Socket, Output Shaft Nut 308-108 (16-039)	
49 0727 415	Installer, Drive Pinion Bearing 205-068 (15-042)	
	Installer, Extension Housing Oil Seal 307-028 (17-002)	
49 G030 370	Support Plate, Gear Removal 308-198 (16-063)	
49 G030 797	Socket, Guide Sleeve 308-109 (16-040A)	
49 G026 102	Socket, Guide Sleeve 308-109 (16-040A)	

SPECIAL TOOLS

49 0258 749	Installer, Torque Converter Oil Seal 307-273 (17-052)	
49 S231 395A	Spreader, Transfer Chain 308-423 (16-094)	Graphic not available
49 0500 330	Remover, Bearing/Gear 205-310 (15-091)	
	Depth Gauge Commercially available	Not applicable
49 U017 3A0A	Adjustment Tool, Transfer Case 308-424 (16-095)	Graphic not available
	Commercially available	Not applicable
49 F401 336B	Installer, Differential Double Lip Oil Seal 308-203 (16-066)	

SPECIAL TOOLS

49 0636 145	Remover, Bearing/Gear 205-310 (15-091)	
-------------	---	---