 
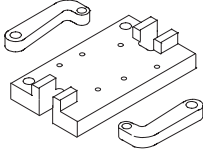 
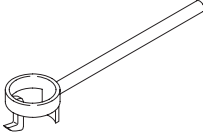 
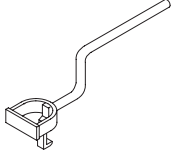 


SPECIAL TOOLS

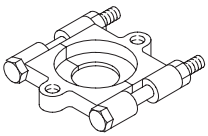 
 
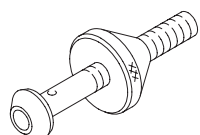 
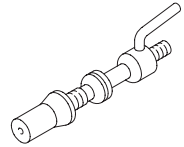 
 
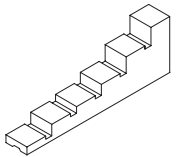 
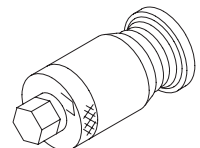 
Rear Axle

Mazda Tool Number

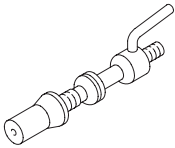 
 
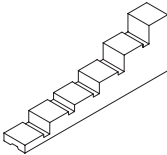 
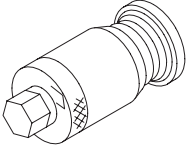 
Ford Tool Number

49 S120 645A	Holding Tool, Rear Axle Shaft 205-496 (15-112)	Graphic not available
49 0603 635A	Wrench, Rear Axle Shaft Bearing 205-497 (15-113)	Graphic not available
49 S126 204	Remover, Bearing/Gear 205-311 (15-092)	
T57L-500-B	Mounting Bracket, Engine/Differential 205-329 (15-105-A)	
308-047 (T77F-1102-A)	Remover, Rear Wheel Hub Oil Seal 205-174 (15-072)	
	Remover, Oil Seal 303-112 (21-051)	

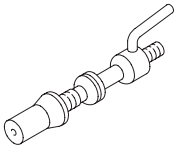 
 
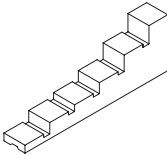 
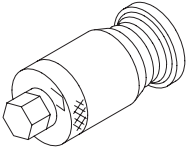 
SPECIAL TOOLS

205-D064 (D84L-1123-A)	Remover, Bearing/Gear 205-310 (15-091)	
	Remover, Bearing/Gear 205-311 (15-092)	
205-456	Adjustment Gauge, Drive Pinion 205-058 (15-019)	
205-110 (T76P-4020-A10)	Gauge, Master Pinion 205-059 (15-020)	
	Holding Fixture, Dial Indicator Gauge 205-044 (15-008)	
	Adapter for 205-044 (Step Gauge) 205-044-02 (15-008-03A)	
	Installer, Differential Bearing 205-062 (15-023)	

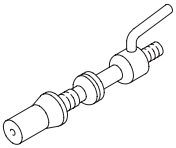 
 
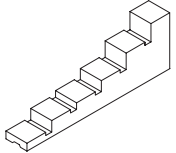 
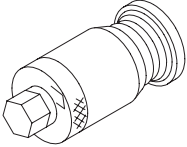 
SPECIAL TOOLS

205-457	Gauge, Master Pinion 205-059 (15-020)	
	Holding Fixture, Dial Indicator Gauge 205-044 (15-008)	
	Adapter for 205-044 (Step Gauge) 204-044-03A (15-008-03A)	
	Installer, Differential Bearing 205-062 (15-023)	

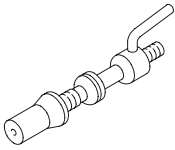 
 
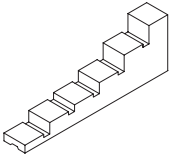 
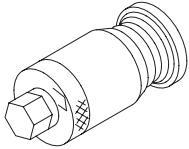 
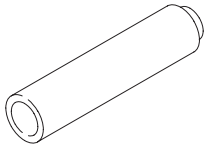 
SPECIAL TOOLS

205-105 (T76P-4020-A3)	Gauge, Master Pinion 205-059 (15-020)	
	Holding Fixture, Dial Indicator Gauge 205-044 (15-008)	
	Adapter for 205-044 (Step Gauge) 204-044-03A (15-008-03A)	
	Installer, Differential Bearing 205-062 (15-023)	

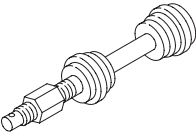 
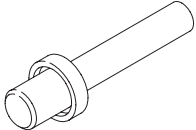 
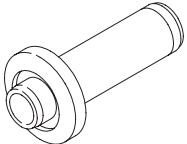 
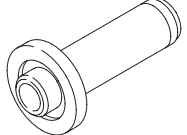 
SPECIAL TOOLS

205-109 (T76P-4020-A9)	Gauge, Master Pinion 205-059 (15-020)	
	Holding Fixture, Dial Indicator Gauge 205-044 (15-008)	
	Adapter for 205-044 (Step Gauge) 204-044-03A (15-008-03A)	
	Installer, Differential Bearing 205-062 (15-023)	

 
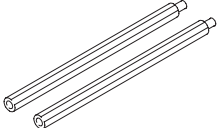 
 
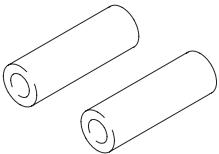 
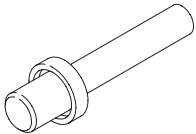 
SPECIAL TOOLS

205-111 (T76P-4020-A11)	Gauge, Master Pinion 205-059 (15-020)	
	Holding Fixture, Dial Indicator Gauge 205-044 (15-008)	
	Adapter for 205-044 (Step Gauge) 204-044-03A (15-008-03A)	
	Installer, Differential Bearing 205-062 (15-023)	
205-090 (T75L-1165-B)	Installer, Drive Pinion Bearing 205-068 (15-042)	

SPECIAL TOOLS

205-024 (T76P-4616-A)	Installer, Differential Bearing Cone 205-066 (15-033)	
	Adapter for 205-066 205-066-02 (15-033-02A)	
	Adapter for 205-066 205-066-03 (15-033-03)	
205-092 (T57L-1165-DA)	Installer, Differential Bearing 205-081 (15-032)	
205-007 (T56T-4676-B)	Installer, Drive Pinion Oil Seal 205-077 (15-047A)	
	Installer, Drive Pinion Oil Seal 205-115 (15-058)	

SPECIAL TOOLS

49 S126 205	Adapter for 205-311 (Extension) 205-311-02 (15-092-02)	
	Adapter for 205-311 (Extension) 205-311-03 (15-092-03)	
49 S126 208	Remover, Bearing/Gear 205-310 (15-091)	
	Adapter for 205-311 (Extension) 205-311-04 (15-092-04)	
49 S120 748	Commercially available	Not applicable
49 F027 004	Commercially available	Not applicable
49 U027 003	Installer, Differential Bearing 205-082 (15-037)	

SPECIAL TOOLS

49 H025 001	Commercially available	Not applicable
T83T-4205-A1	Not essential	Not applicable
T83T-4205-A2	Not essential	Not applicable
T83T-4205-A3	Not essential	Not applicable
T83T-4205-A4	Not essential	Not applicable