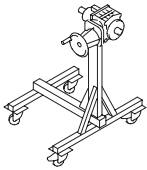
 
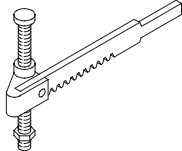
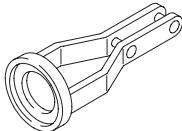
 
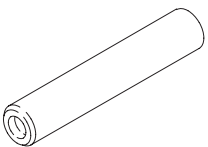
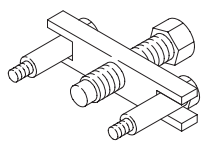
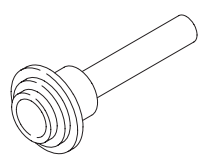


SPECIAL TOOLS



 

Engine

Mazda Tool Number	Ford Tool Number	
49 L010 1A0	Mounting Stand 303-435 (21-187)	
	Mounting Plate for 303-435-06 303-435-11 (21-146C)	
49 S013 102	Commercially available	Not applicable
49 S010 1A0	Commercially available	Not applicable
49 9014 001	Commercially available	Not applicable
49 0636 100B	Compressor, Valve Spring 303-060 (21-024)	
49 B012 0A2	Adapter for 303-060 303-060-02 (21-024-02)	


SPECIAL TOOLS

49 S120 170	Pliers, Valve Stem Oil Seal 303-508 (21-211)	
49 L012 0A0A	Installer, Intake Valve Stem Oil Seal 303-247 (21-130A)	
49 0249 010A	Commercially available	Not applicable
49 G011 001	Commercially available	Not applicable
49 S015 1A1	Commercially available	Not applicable
49 S120 215A	Remover, Crankshaft Timing Pulley 303-249 (21-132)	
49 S010 301	Installer, Driver Pinion Oil Seal 204-088 (14-030)	

SPECIAL TOOLS

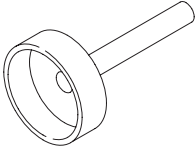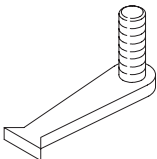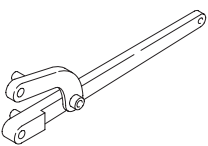49 0259 749	Commercially available	Not applicable
49 S010 001	Installer, Timing Cover Oil Seal 303-427 (21-178)	
49 S011 103	Installer, Wheel Speed Sensor Ring 205-307 (15-089)	
49 S011 102A	Locking Tool, Flywheel 303-254 (21-135)	
	Socket, Cylinder Head Bolt 303-393 (21-168)	
49 E011 1A0	Universal Flange Holding Wrench 205-072 (15-030A)_	
49 0187 280	Commercially available	Not applicable

SPECIAL TOOLS

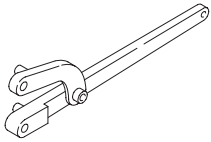49 G014 001	Wrench, Oil Filter Use OTC tool GV 6883	Not applicable
49 L011 2A0	Adapter for 205-047-07 205-047-05 (15-011-06)	Graphic not available
	Adapter for 205-047-07 205-047-06 (15-011-07)	Graphic not available
	Adapter for 205-047-07 205-047-07 (15-011-08)	Graphic not available
49 S120 710	Universal Flange Holding Wrench 205-072 (15-030A)	
49 S011 103	Installer, Wheel Speed Sensor Ring 205-307 (15-089)	