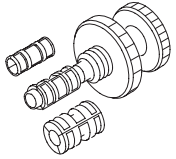
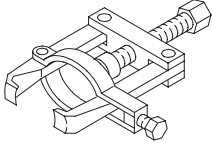
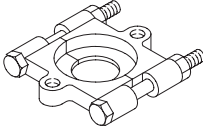
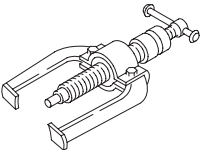
 


SPECIAL TOOLS

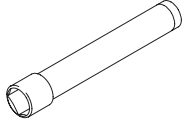
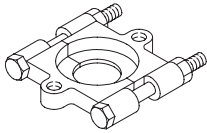
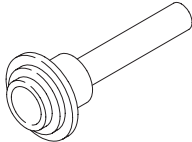
Transmission

Mazda Tool Number

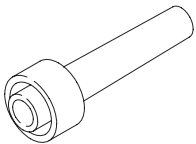
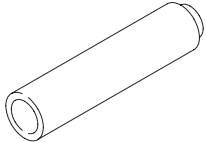
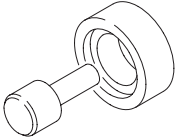
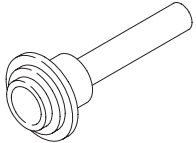
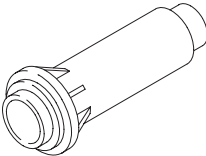
Ford Tool Number

49 SE01 310A	Aligner, Clutch Plate 308-204 (16-067)	
49 0839 425C	Remover, Mainshaft Needle Bearing Sleeve 308-191 (16-056)	
	Remover, Bearing/Gear 205-310 (15-091)	
	Thrust Pad for 205-071 307-115 (17-019)	
	Remover, Drop Arm 204-015 (14-008)	
	Remover, Bearing/Gear 205-311 (15-092)	
	Center Screw 205-034 (15-002)	Graphic not available

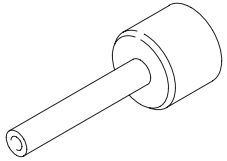
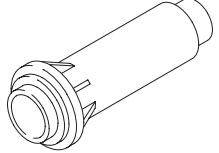
SPECIAL TOOLS

49 H017 101	Adapter for 307-272 307-272-01 (17-061-01)	Graphic not available
49 1243 465A	Socket, Output Shaft Nut 308-108 (16-039)	
49 0710 520	Remover, Bearing/Gear 205-310 (15-091)	
49 F027 005	Adapter for 205-066 205-066-03 (15-033-03)	
49 F027 007	Installer, Drive Pinion Oil Seal 204-088 (14-030)	

SPECIAL TOOLS

49 F401 331	Installer, Extension Housing Oil Seal 307-028 (17-002)	
	Installer, Drive Pinion Bearing 205-068 (15-042)	
	Remover/Installer, Lower Arm Bushing 204-058 (14-027)	
	Installer, Drive Pinion Oil Seal 204-088 (14-030)	
49 0862 350	Commercially available	Not applicable
49 F017 101	Holding Tool, Synchronizer Ring 308-422 (16-093)	Graphic not available
49 G030 795	Installer, Oil Pump Oil Seal 307-032 (17-010A)	

SPECIAL TOOLS

49 F401 335A	Installer, Input Shaft Oil Seal 307-210 (17-041)	
49 U027 003	Installer, Oil Pump Oil Seal 307-032 (17-010A)	
49 S120 440	Screwdriver	Not applicable
49 S017 401	Gears	Not applicable