

FUEL AND EMISSION CONTROL SYSTEMS

(WL, WL Turbo, WL-3, WLT-3)

ENGINE TUNE-UP	F2- 2	EGR CONTROL SOLENOID VALVE	
ENGINE TUNE-UP PREPARATION	F2- 2	INSPECTION	F2-33
IDLE SPEED ADJUSTMENT	F2- 2	INTAKE SHUTTER VALVE ACTUATOR	
IDLE-UP SPEED ADJUSTMENT	F2- 2	INSPECTION	F2-34
INJECTION TIMING ADJUSTMENT	F2- 4	EGR PIPE, EGR VALVE REMOVAL/ INSTALLATION	F2-34
INTAKE-AIR SYSTEM	F2- 5	CONTROL SYSTEM	F2-37
VACUUM HOSE ROUTING DIAGRAM	F2- 5	COMPONENT PARTS	F2-37
INTAKE-AIR SYSTEM		POWERTRAIN CONTROL MODULE (PCM)	
REMOVAL/INSTALLATION	F2- 7	REMOVAL/INSTALLATION	F2-39
TURBOCHARGER INSPECTION	F2- 10	POWERTRAIN CONTROL MODULE (PCM)	
GLOW PLUG REMOVAL/INSTALLATION ..	F2- 11	INSPECTION	F2-41
GLOW PLUG INSPECTION	F2- 11	MASS AIR FLOW (MAF)/INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION	
GLOW PLUG RELAY			F2-49
REMOVAL/INSTALLATION	F2- 12	INTAKE AIR TEMPERATURE (IAT) SENSOR	
GLOW PLUG RELAY INSPECTION	F2-12	NO.2 INSPECTION	F2-50
GLOW PLUG CORD INSPECTION	F2-13	NE SENSOR INSPECTION	F2-50
ACCELERATOR PEDAL		ENGINE COOLANT TEMPERATURE (ECT)	
REMOVAL/INSTALLATION	F2-13	SENSOR INSPECTION	F2-51
ACCELERATOR PEDAL COMPONENT		FUEL TEMPERATURE SENSOR	
DISASSEMBLY/ASSEMBLY	F2-14	INSPECTION	F2-51
ACCELERATOR CABLE		PUMP SPEED SENSOR INSPECTION	F2-52
INSPECTION/ADJUSTMENT	F2-15	CONTROL SLEEVE (CS) SENSOR	
IDLING KNOB, IDLING CABLE INSPECTION	F2-15	INSPECTION	F2-52
FUEL SYSTEM	F2-16	TIMER POSITION SENSOR INSPECTION .	F2-53
BEFORE REPAIR PROCEDURE	F2-16	INJECTION PUMP EPROM INSPECTION .	F2-53
AFTER REPAIR PROCEDURE	F2-16	TDC SENSOR REMOVAL/INSTALLATION .	F2-54
FUEL TANK REMOVAL/INSTALLATION	F2-17	TDC SENSOR INSPECTION	F2-54
FUEL FILTER DISASSEMBLY/ASSEMBLY ..	F2-19	EGR VALVE POSITION SENSOR	
FUEL FILTER AIR BLEEDING	F2-20	INSPECTION	F2-55
SEDIMENTOR WATER DRAINING	F2-20	BOOST SENSOR INSPECTION	F2-55
SEDIMENTOR SWITCH INSPECTION	F2-20	PCM CONTROL RELAY INSPECTION	F2-56
FUEL WARMER INSPECTION	F2-21	ACCELERATOR POSITION SENSOR	
FUEL INJECTION PUMP (FIP) INSPECTION	F2-21	INSPECTION	F2-56
FUEL INJECTION PUMP (FIP)		ACCELERATOR POSITION SENSOR	
REMOVAL/INSTALLATION	F2-22	ADJUSTMENT	F2-56
INJECTION NOZZLE		IDLE SWITCH INSPECTION	F2-57
REMOVAL/INSTALLATION	F2-23	IDLE SWITCH ADJUSTMENT	F2-58
INJECTION NOZZLE		CONTROL LEVER POSITION SENSOR	
DISASSEMBLY/ASSEMBLY	F2-24	INSPECTION	F2-59
INJECTION NOZZLE INSPECTION	F2-24	CLUTCH SWITCH INSPECTION	F2-60
FUEL SHUT OFF (FSO) SOLENOID		NEUTRAL SWITCH INSPECTION	F2-61
INSPECTION	F2-25	ON-BOARD DIAGNOSTIC SYSTEM	F2-62
ELECTRONIC GOVERNOR INSPECTION ..	F2-26	DTC READING PROCEDURE	F2-62
FUEL CUT VALVE (FCV)		AFTER REPAIR PROCEDURE	F2-62
REMOVAL/INSTALLATION	F2-26	OBD READ/CLEAR DIAGNOSTIC TEST	
FUEL CUT VALVE (FCV) INSPECTION	F2-26	RESULTS	F2-66
FICD SOLENOID VALVE NO.1, NO.2		OBD PARAMETER IDENTIFICATION (PID)	
INSPECTION	F2-27	ACCESS	F2-66
TIMER CONTROL VALVE (TCV)		ON-BOARD DIAGNOSTIC TEST	F2-67
INSPECTION	F2-28	TROUBLESHOOTING	F2-118
EXHAUST SYSTEM	F2-29	FOREWORD	F2-118
EXHAUST SYSTEM INSPECTION	F2-29	INTERMITTENT CONCERN	
EXHAUST SYSTEM		TROUBLESHOOTING	F2-118
REMOVAL/INSTALLATION	F2-29	TROUBLESHOOTING ITEM TABLE	F2-120
EMISSION SYSTEM	F2-31	QUICK DIAGNOSIS CHART	F2-121
ROLLOVER VALVE INSPECTION	F2-31	SYSTEM INSPECTION	F2-151
EVAPORATIVE CHAMBER INSPECTION ...	F2-31		
EGR VALVE INSPECTION	F2-32		
EGR SOLENOID VALVE INSPECTION	F2-32		
EGR SOLENOID VALVE (VENT) INSPECTION			
.....	F2-33		