

CLUTCH FLUID, CLUTCH PEDAL

- 1.Repeat steps 4 and 5 until only clean fluid is seen.
- 2.Tighten the bleeder screw.

Tightening torque

5.9—8.8 N·m {60—90 kgf·cm, 52—78 in·lbf}

- 3.Add fluid to the MAX mark.
- 4.Check for correct clutch operation.

CLUTCH PEDAL


CLUTCH PEDAL INSPECTION/ADJUSTMENT

Clutch Pedal Height

1. Measure the distance from the upper surface of the pedal pad to the carpet.

Pedal height

241.6—246.6 mm {9.52—9.70 in}

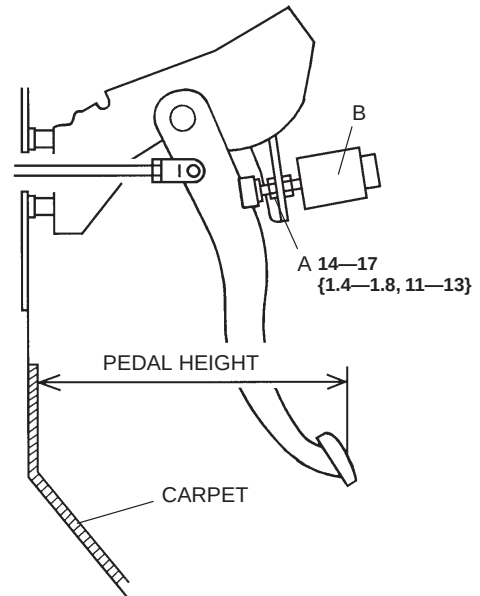

N·m {kgf·m, ft·lbf}

- 2.If necessary, adjust the pedal height by turning stopper bolt A and clutch switch (or adjust bolt) B.


CLUTCH PEDAL

Clutch Pedal Free Play

1. Depress the clutch pedal by hand until clutch resistance is felt, and measure the pedal free play.

Pedal free play

3.0—8.0 mm {0.12—0.31 in}

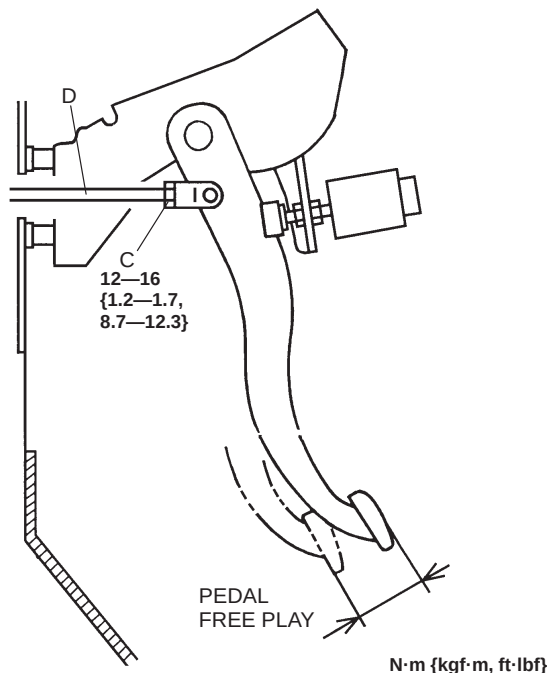


2. If necessary, adjust the pedal free play by turning locknut C and adjusting push rod D.

Clutch Release Point Inspection

1. Without depressing the clutch pedal, slowly shift the shift lever into reverse position until the gears contact.
2. Gradually depress the clutch pedal and measure the stroke distance from the point the gear noise stops (release point) up to the full stroke end position.

Standard distance

A: 14.6—37.5 mm {0.58—1.47 in}
(reference value)

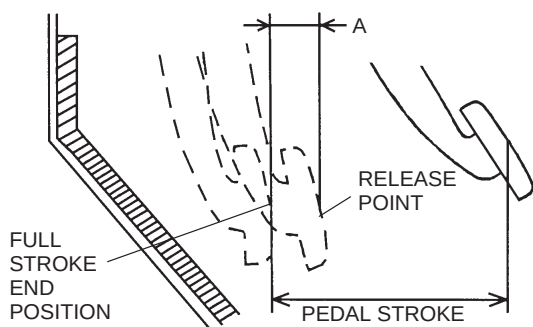

3. If the clutch pedal disengagement stroke is outside of the specification, adjust the pedal height and pedal free play, and verify the pedal stroke.


Pedal stroke

146.5—151.5 mm {5.8—5.9 in}
(reference value)

CLUTCH PEDAL REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.
4. After installation, adjust the clutch pedal.
(Refer to CLUTCH PEDAL INSPECTION/ADJUSTMENT)

L.H.D.

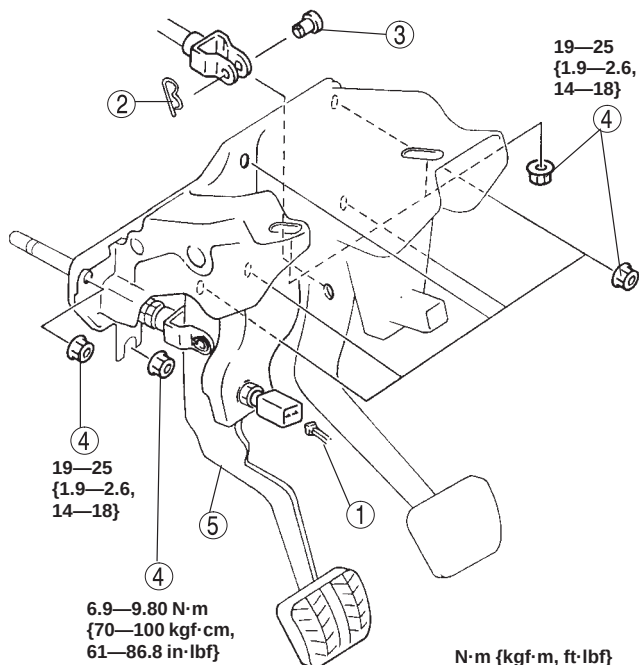

1	Clutch switch connector (G6, F2 CIS)
2	Spring pin
3	Clevis pin
4	Nut
5	Clutch pedal component

R.H.D.

G6, F2 CIS, F2 Carb

- Refer to section F1, F3, or F4, INTAKE-AIR SYSTEM, ACCELERATOR PEDAL REMOVAL/INSTALLATION.

WL, WL Turbo

- Refer to section F2, INTAKE-AIR SYSTEM, ACCELERATOR PEDAL REMOVAL/INSTALLATION.