

PROPELLER SHAFT


PROPELLER SHAFT (4×2)	L-1
PROPELLER SHAFT REMOVAL/	
INSTALLATION	L-1
PROPELLER SHAFT INSPECTION	L-2
FRONT PROPELLER SHAFT (4×4)	L-2
FRONT PROPELLER SHAFT REMOVAL/	
INSTALLATION	L-2

FRONT PROPELLER SHAFT INSPECTION ..	L-3
FRONT PROPELLER SHAFT	
DISASSEMBLY/ASSEMBLY	L-3
REAR PROPELLER SHAFT (4×4)	L-5
REAR PROPELLER SHAFT REMOVAL/	
INSTALLATION	L-5
REAR PROPELLER SHAFT INSPECTION	L-5

PROPELLER SHAFT (4×2)

PROPELLER SHAFT REMOVAL/INSTALLATION


1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.

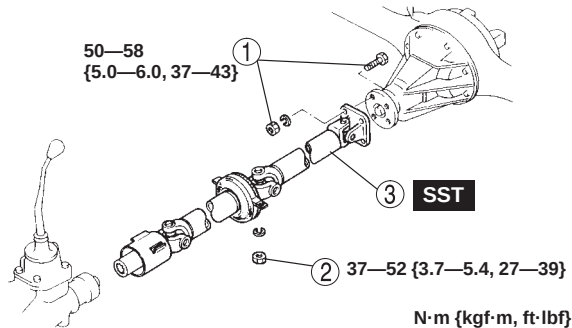


1	Bolt, nut
2	Nut + Installation Note
3	Propeller shaft + Removal Note + Installation Note

Propeller Shaft Removal Note

1. Before removing the propeller shaft, put marks on the yoke and the companion flange on the propeller shaft tag side for proper reinstallation.

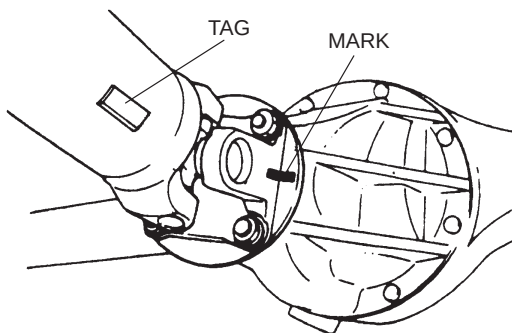


2. Remove the propeller shaft from the extension housing and immediately install the **SST** to prevent oil leakage.

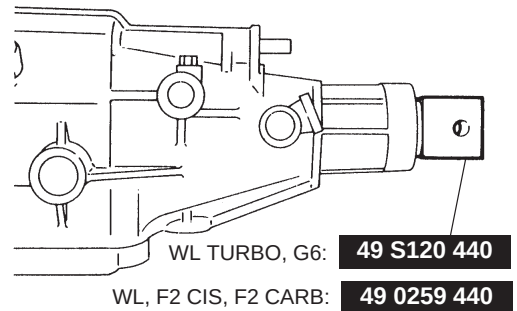

Propeller Shaft Installation Note

- Align the marks made during removal, and install the propeller shaft. If installing a new propeller shaft, align the differential companion flange precast marking with the tag on the propeller shaft.

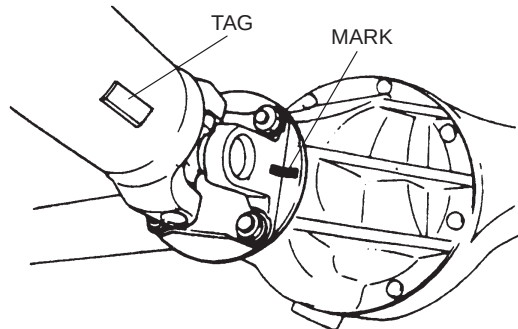

Nut Installation Note

- Tighten the center bearing installation nuts with the vehicle *unloaded.

*unloaded...Fuel tank is full; engine coolant and engine oil are at specified levels; spare tire, jack and tools are in designated position.