


ENGINE SPEED SENSING POWER STEERING

AIR BLEEDING

1. Inspect the fluid level. (Refer to ENGINE SPEED SENSING POWER STEERING, POWER STEERING FLUID INSPECTION, Fluid Level Inspection.)
2. Jack up the front of the vehicle and support it on safety stands.
3. Turn the steering wheel fully to the left and right several times with the engine not running.
4. Reinspect the fluid level. If it has dropped, add fluid.
5. Repeat Steps 3 and 4 until the fluid level stabilizes.
6. Lower the vehicle.
7. Start the engine and let it idle.
8. Turn the steering wheel fully to the left and right several times.
9. Verify that the fluid is not foamy and that the fluid level has not dropped.
10. Add fluid as necessary and repeat Steps 8 and 9.

R.H.D.

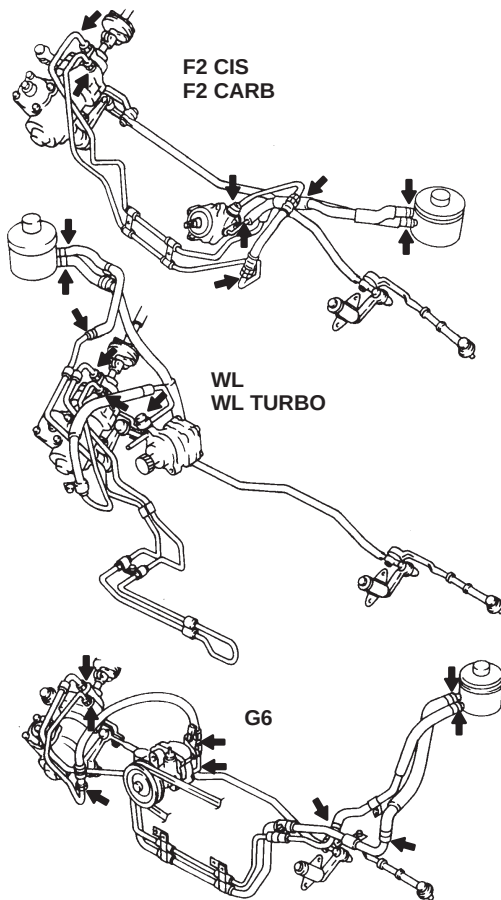

POWER STEERING FLUID INSPECTION

Fluid Level Inspection

- Inspect the power steering fluid level. Add fluid to the specified level as necessary.

Fluid specification

ATF M-III or equivalent (e.g. Dexron® II)

Fluid Leakage Inspection

Caution

- To prevent damage to the steering system, do not keep the steering wheel in the fully turned position for more than 5 seconds.

1. Start the engine and let it idle. Turn the steering wheel fully to the left and right to apply fluid pressure.

Note

- The points where fluid leakage may occur are indicated in the figure.

2. Inspect for fluid leakage.

L.H.D.

