


ENGINE SPEED SENSING POWER STEERING

POWER STEERING OIL PUMP (WL, WL TURBO) DISASSEMBLY/ASSEMBLY

1. The following procedure is for replacement of the O-rings only. Replace the pump component if other repairs are necessary.
2. Disassemble in the order indicated in the table.
3. Assemble in the reverse order of disassembly.

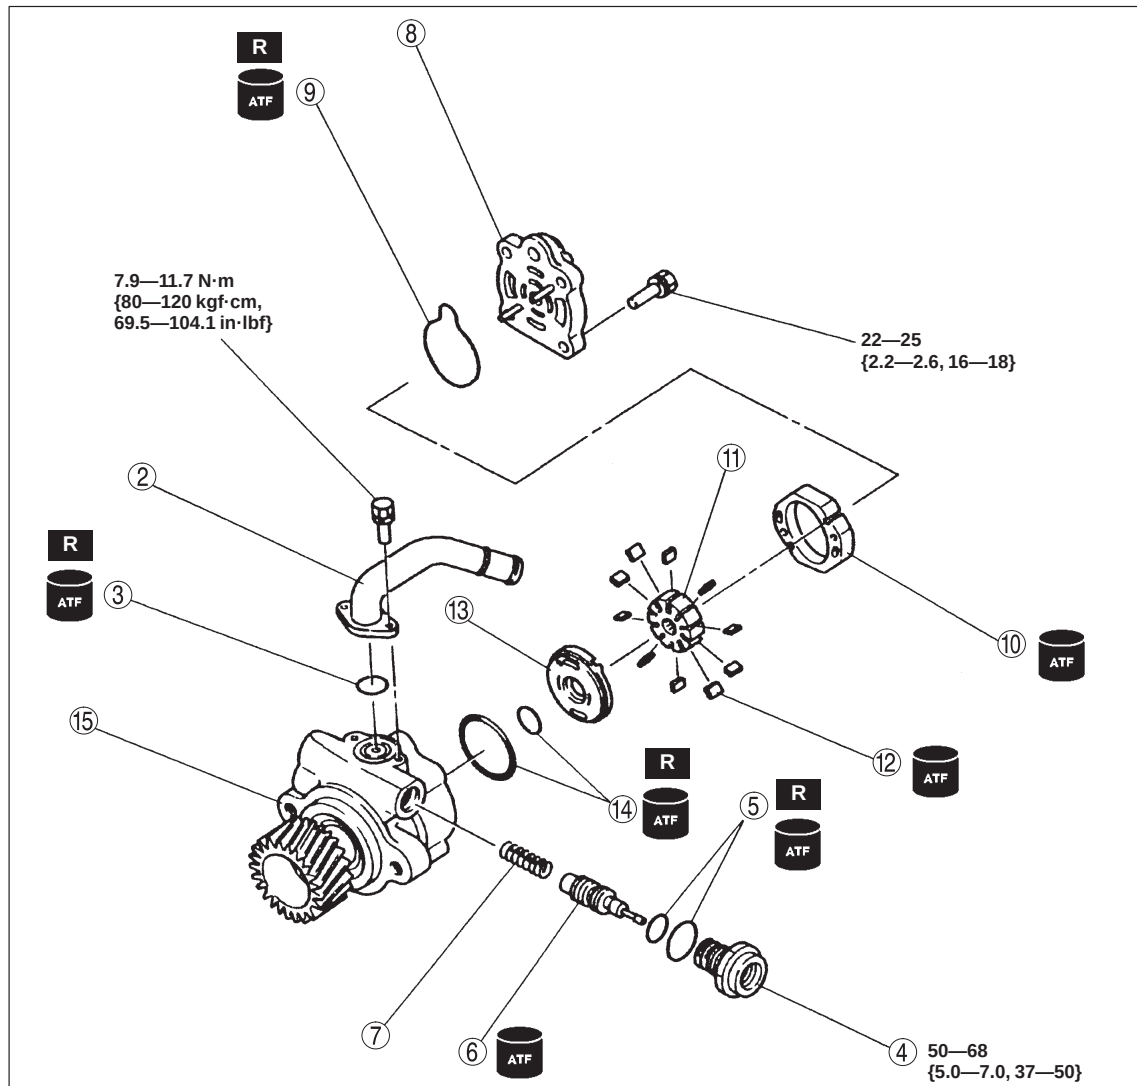

N·m {kgf·m, ft·lbf}

1	Power steering oil pump component + ENGINE SPEED SENSING POWER STEERING, POWER STEERING OIL PUMP (G6) REMOVAL/INSTALLATION, Power Steering Oil Pump Component Disassembly Note
2	Suction pipe
3	O-ring
4	Connector
5	O-ring
6	Control valve
7	Spring
8	Rear body + ENGINE SPEED SENSING POWER STEERING, POWER STEERING OIL PUMP (G6) REMOVAL/INSTALLATION, Rear Body Assembly Note
9	O-ring

10	Cam ring + ENGINE SPEED SENSING POWER STEERING POWER STEERING OIL PUMP (G6) REMOVAL/INSTALLATION, Cam Ring Assembly Note
11	Rotor
12	Vane + ENGINE SPEED SENSING POWER STEERING, POWER STEERING OIL PUMP (G6) REMOVAL/INSTALLATION, Vane Assembly Note
13	Side plate + ENGINE SPEED SENSING POWER STEERING, POWER STEERING OIL PUMP (G6) REMOVAL/INSTALLATION, Side Plate Assembly Note
14	O-ring
15	Front body