

BODY

BONNET	S- 3	DOOR LOCK ACTUATOR	
BONNET REMOVAL/INSTALLATION	S- 3	REMOVAL/INSTALLATION	S-16
BONNET ADJUSTMENT	S- 4	DOOR LOCK ACTUATOR INSPECTION	
FRONT FENDER PANEL	S- 4	(VEHICLES BUILT UP TO 07/2002)	S-22
FRONT FENDER PANEL		DOOR LOCK ACTUATOR INSPECTION	
REMOVAL/INSTALLATION	S- 4	(VEHICLES BUILT FROM 08/2002)	S-22
DOOR	S- 5	DOOR LOCK TIMER UNIT	
FRONT DOOR REMOVAL/INSTALLATION ...	S- 5	REMOVAL/INSTALLATION	S-22
FRONT DOOR DISASSEMBLY/ASSEMBLY ..	S- 6	DOOR LOCK TIMER UNIT INSPECTION	
FRONT DOOR ADJUSTMENT	S- 7	(VEHICLES BUILT UP TO 07/2002)	S-23
REAR DOOR REMOVAL/INSTALLATION	S- 7	DOOR LOCK TIMER UNIT INSPECTION	
REAR DOOR DISASSEMBLY/ASSEMBLY ...	S- 8	(VEHICLES BUILT FROM 08/2002)	S-24
REAR DOOR ADJUSTMENT	S- 9	KEYLESS UNIT REMOVAL/INSTALLATION ..	S-25
DOOR LOCK STRIKER		KEYLESS UNIT DISASSEMBLY/ASSEMBLY .	S-25
REMOVAL/INSTALLATION	S- 9	KEYLESS UNIT INSPECTION	S-26
REGULATOR HANDLE REMOVAL	S- 9	TRANSMITTER BATTERY REPLACEMENT .	S-27
REGULATOR HANDLE INSTALLATION	S- 9	TRANSMITTER BATTERY INSPECTION	S-27
POWER WINDOW SYSTEM	S-10	FUEL-FILLER LID AND OPENER	S-29
POWER WINDOW MAIN SWITCH		FUEL-FILLER LID	
REMOVAL/INSTALLATION	S-10	REMOVAL/INSTALLATION	S-29
POWER WINDOW MAIN SWITCH		FUEL-FILLER LID ADJUSTMENT	S-29
INSPECTION (VEHICLES BUILT		BUMPER	S-29
UP TO 07/2002)	S-10	FRONT BUMPER	
POWER WINDOW MAIN SWITCH		REMOVAL/INSTALLATION	S-29
INSPECTION (VEHICLES BUILT		FRONT BUMPER	
FROM 08/2002)	S-13	DISASSEMBLY/ASSEMBLY	S-29
POWER WINDOW SUBSWITCH		REAR BUMPER	
REMOVAL/INSTALLATION		REMOVAL/INSTALLATION	S-30
(VEHICLES BUILT UP TO 07/2002)	S-15	REAR BUMPER DISASSEMBLY/ASSEMBLY ..	S-30
POWER WINDOW SUBSWITCH		EXTERIOR ATTACHMENT	S-30
REMOVAL/INSTALLATION		RADIATOR GRILLE	
(VEHICLES BUILT FROM 08/2002)	S-15	REMOVAL/INSTALLATION	S-30
POWER WINDOW SUBSWITCH INSPECTION		COWL GRILLE	
(VEHICLES BUILT UP TO 07/2002)	S-16	REMOVAL/INSTALLATION	S-30
POWER WINDOW SUBSWITCH INSPECTION		WINDSHIELD GARNISH	
(VEHICLES BUILT FROM 08/2002)	S-16	REMOVAL/INSTALLATION	S-30
FRONT POWER WINDOW REGULATOR		SIDE PROTECTOR REMOVAL	S-32
REMOVAL/INSTALLATION	S-16	SIDE PROTECTOR INSTALLATION	S-32
FRONT POWER WINDOW REGULATOR		SIDE PROTECTOR INSTALLATION	
DISASSEMBLY/ASSEMBLY	S-17	(STRETCH CAB – 4 DOOR)	S-33
REAR POWER WINDOW REGULATOR		OVER FENDER REMOVAL/INSTALLATION	
REMOVAL/INSTALLATION	S-17	(VEHICLES BUILT UP TO 07/2002)	S-33
REAR POWER WINDOW REGULATOR		OVER FENDER REMOVAL/INSTALLATION	
DISASSEMBLY/ASSEMBLY	S-17	(VEHICLES BUILT FROM 08/2002)	S-34
POWER WINDOW MOTOR INSPECTION		TAILGATE	
(VEHICLES BUILT UP TO 07/2002)	S-18	DISASSEMBLY/ASSEMBLY	S-35
POWER WINDOW MOTOR INSPECTION		TAILGATE ADJUSTMENT	S-35
(VEHICLES BUILT FROM 08/2002)	S-18	ROPE HOOK REMOVAL/INSTALLATION	S-36
POWER DOOR LOCK SYSTEM	S-20	MOLDING	S-36
DOOR KEY CYLINDER SWITCH		WINDSHIELD UPPER MOLDING	
REMOVAL/INSTALLATION	S-20	REMOVAL	S-36
DOOR KEY CYLINDER SWITCH		WINDSHIELD UPPER MOLDING	
INSPECTION	S-20	INSTALLATION	S-36
DOOR LOCK-LINK SWITCH		WINDSHIELD SIDE MOLDING REMOVAL ...	S-36
REMOVAL/INSTALLATION	S-20	WINDSHIELD SIDE MOLDING	
DOOR LOCK-LINK SWITCH INSPECTION		INSTALLATION	S-36
(VEHICLES BUILT UP TO 07/2002)	S-20	FRONT BELTLINE MOLDING	
DOOR LOCK-LINK SWITCH INSPECTION		REMOVAL/INSTALLATION	S-36
(VEHICLES BUILT FROM 08/2002)	S-21	REAR BELTLINE MOLDING	
		REMOVAL/INSTALLATION	S-37

ROOF MOLDING	
REMOVAL/INSTALLATION	S-37
OUTSIDE MIRROR	S-37
MANUAL OUTSIDE MIRROR	
REMOVAL/INSTALLATION	S-37
POWER OUTSIDE MIRROR	
REMOVAL/INSTALLATION	S-37
POWER OUTSIDE MIRROR INSPECTION ..	S-37
POWER OUTSIDE MIRROR SWITCH	
REMOVAL/INSTALLATION	S-38
POWER OUTSIDE MIRROR SWITCH	
INSPECTION	S-38
REARVIEW MIRROR	S-39
REARVIEW MIRROR	
REMOVAL/INSTALLATION	S-39
REAR WINDOW DEFROSTER	S-39
REAR WINDOW DEFROSTER SWITCH	
REMOVAL/INSTALLATION	S-39
REAR WINDOW DEFROSTER SWITCH	
INSPECTION	S-39
FILAMENT INSPECTION	S-39
FILAMENT REPAIR	S-40
REAR WINDOW DEFROSTER RELAY	
REMOVAL/INSTALLATION	S-40
REAR WINDOW DEFROSTER RELAY	
INSPECTION	S-40
WINDOW GLASS	S-41
WINDSHIELD REMOVAL	S-41
WINDSHIELD INSTALLATION	S-42
QUARTER WINDOW GLASS	
REMOVAL/INSTALLATION	S-44
QUARTER WINDOW GLASS	
REMOVAL/INSTALLATION (STRETCH CAB	
- 4 DOOR)	S-45
REAR WINDOW GLASS REMOVAL	S-45
REAR WINDOW GLASS INSTALLATION	S-45
DASHBOARD AND CONSOLE	S-47
DASHBOARD REMOVAL/INSTALLATION ...	S-47
DASHBOARD DISASSEMBLY/ASSEMBLY ..	S-48
DASHBOARD MEMBER	
REMOVAL/INSTALLATION	S-49
COLUMN COVER	
REMOVAL/INSTALLATION	S-49
FRONT CONSOLE	
REMOVAL/INSTALLATION	S-49
FRONT CONSOLE	
DISASSEMBLY/ASSEMBLY	S-49
REAR CONSOLE	
REMOVAL/INSTALLATION	S-49
REAR CONSOLE	
DISASSEMBLY/ASSEMBLY	S-50
GLOVE COMPARTMENT	
REMOVAL/INSTALLATION	S-50
METER HOOD	
REMOVAL/INSTALLATION	S-50
TRIM	S-51
A-PILLAR TRIM	
REMOVAL/INSTALLATION	
(VEHICLES BUILT UP TO 07/2002)	S-51
A-PILLAR TRIM	
REMOVAL/INSTALLATION	
(VEHICLES BUILT FROM 08/2002)	S-51
B-PILLAR TRIM	
REMOVAL/INSTALLATION	
(VEHICLES BUILT UP TO 07/2002)	S-51
B-PILLAR TRIM	
REMOVAL/INSTALLATION	
(VEHICLES BUILT FROM 08/2002)	S-51
B-PILLAR LOWER TRIM	
REMOVAL/INSTALLATION	S-52
B-PILLAR UPPER TRIM	
REMOVAL/INSTALLATION	S-52
ROOF SIDE TRIM	
REMOVAL/INSTALLATION	
(STRETCH CAB - 4 DOOR)	S-52
FRONT SIDE TRIM	
REMOVAL/INSTALLATION	S-52
FRONT SCUFF PLATE	
REMOVAL/INSTALLATION	S-53
REAR SCUFF PLATE	
REMOVAL/INSTALLATION	S-53
REAR SCUFF PLATE	
REMOVAL/INSTALLATION	
(STRETCH CAB - 4 DOOR)	S-53
C-PILLAR TRIM REMOVAL/INSTALLATION ..	S-53
QUARTER UPPER TRIM	
REMOVAL/INSTALLATION	S-53
QUARTER LOWER TRIM	
REMOVAL/INSTALLATION	S-54
BACK UPPER TRIM	
REMOVAL/INSTALLATION	S-54
BACK LOWER TRIM	
REMOVAL/INSTALLATION	S-54
FRONT DOOR TRIM	
REMOVAL/INSTALLATION	S-55
REAR DOOR TRIM	
REMOVAL/INSTALLATION	S-55
REAR ACCESS PANEL TRIM	
REMOVAL/INSTALLATION	
(STRETCH CAB - 4 DOOR)	S-55
HEADLINER	S-56
HEADLINER REMOVAL/INSTALLATION	S-56
FLOOR COVERING	S-56
FLOOR COVERING	
REMOVAL/INSTALLATION	S-56
SEAT BELT	S-58
SEAT BELT REMOVAL/INSTALLATION	S-58
SEAT BELT REMOVAL/INSTALLATION	
(STRETCH CAB - 4 DOOR)	S-60
SEAT BELT INSPECTION	S-60
BUCKLE REMOVAL/INSTALLATION	S-60
SEAT	S-62
FRONT SEAT REMOVAL/INSTALLATION ...	S-62
FRONT SEAT DISASSEMBLY/ASSEMBLY ...	S-63
CABLE ADJUSTMENT	S-65
REAR SEAT REMOVAL/INSTALLATION	S-65
REAR SEAT DISASSEMBLY/ASSEMBLY	S-65
SEAT WARMER SWITCH REMOVAL	S-68
SEAT WARMER SWITCH INSTALLATION ...	S-68
SEAT WARMER SWITCH INSPECTION	S-68
SEAT WARMER UNIT INSPECTION	S-68
BODY SHELL (STRETCH CAB - 4 DOOR)	S-69
REAR ACCESS PANEL	
REMOVAL/INSTALLATION	S-69
REAR ACCESS PANEL	
DISASSEMBLY/ASSEMBLY	S-70
STRIKER REMOVAL/INSTALLATION	S-70
TROUBLESHOOTING (POWER WINDOW	
SYSTEM)	S-71
INTERMITTENT CONCERN	
TROUBLESHOOTING	S-71

BASIC POWER WINDOW SYSTEM	
INSPECTION	S-72
AUTOMATIC MODE FUNCTION	
INSPECTION	S-72
AUTOMATIC WINDOW RETURN	
FUNCTION INSPECTION	S-73
IG OFF TIMER	
FUNCTION INSPECTION	S-73
IG OFF TIMER	
FUNCTION INSPECTION	S-73
TROUBLESHOOTING INDEX	S-74
NO.1 DRIVER-SIDE FRONT WINDOW	
DOES NOT GO UP AND DOWN	
IN AUTOMATIC MODE	S-74
NO.2 DRIVER-SIDE FRONT WINDOW	
DOES NOT REVERSE, EVEN WHEN	
ENCOUNTERING A FOREIGN OBJECT	
IN ITS PATH	S-76
NO.3 DRIVER-SIDE FRONT WINDOW	
REVERSES, EVEN THOUGH THE GLASS	

DOES NOT ENCOUNTER A FOREIGN	
OBJECT WHILE IT IS GOING UP	
IN AUTOMATIC MODE	S-77
TROUBLESHOOTING (KEYLESS ENTRY	
SYSTEM)	S-78
FOREWORD	S-78
KEYLESS ENTRY SYSTEM CHECK	
SHEET	S-78
KEYLESS ENTRY SYSTEM PRELIMINARY	
INSPECTION	S-79
ON-BOARD DIAGNOSTIC FUNCTION	S-80
TROUBLESHOOTING INDEX	S-81
NO.1 ONE OR MORE ON-BOARD	
DIAGNOSTIC FUNCTIONS	
INOPERATIVE	S-81
NO.2 ALL ON-BOARD DIAGNOSTIC	
FUNCTIONS INOPERATIVE	S-82
NO.3 TRANSMITTER CODE CANNOT	
BE REPROGRAMMED	S-84


BONNET

Warning

- Removing the bonnet without supporting it can be dangerous. The bonnet may fall and injure you. Always perform these procedures together with at least another person.

BONNET REMOVAL/INSTALLATION

1. Pull out the windshield washer pipe.
2. To remove the bonnet hinge, remove the front fender panel. (Refer to FRONT FENDER PANEL REMOVAL/INSTALLATION.)
3. To remove the bonnet lock, remove the radiator grille.
4. Remove in the order indicated in the table.
5. Install in the reverse order of removal.
6. Adjust the bonnet. (Refer to BONNET ADJUSTMENT.)

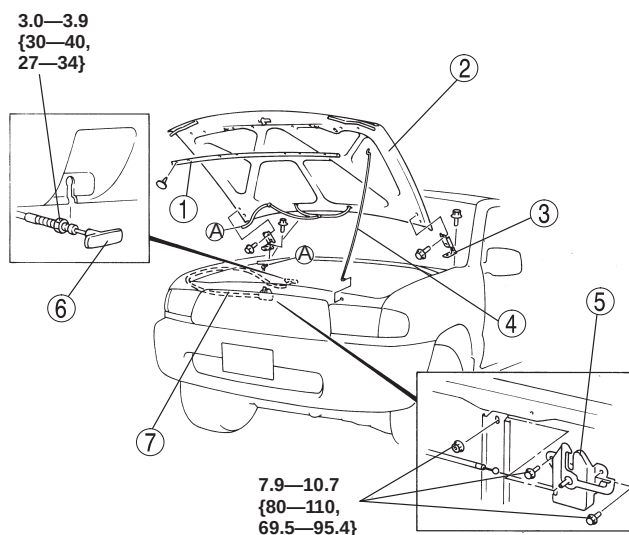

N·m {kgf·cm, in·lbf}

1	Shroud seal weatherstrip
2	Bonnet
3	Bonnet hinge
4	Bonnet stay
5	Bonnet lock
6	Bonnet release lever
7	Bonnet release cable