



BONNET/FRONT FENDER PANEL

BONNET ADJUSTMENT

1. Measure the gap and height between the bonnet and the body.

Clearance


- a: 2.7—5.3 mm {0.11—0.20 in}
- b: -1.8—0.8 mm {-0.07—0.03 in} (sec. A—A)
- c: -2.3—0.8 mm {-0.09—0.03 in} (sec. B—B)
- d: -2.3—0.3 mm {-0.09—0.01 in} (sec. C—C)
- e: 6.0—10.0 mm {0.24—0.39 in}
- f: 7.0—13.0 mm {0.28—0.51 in}

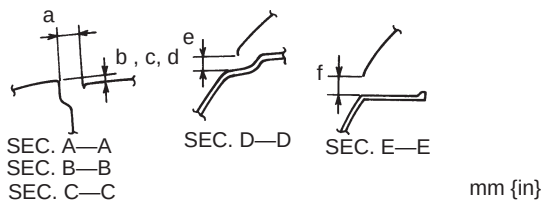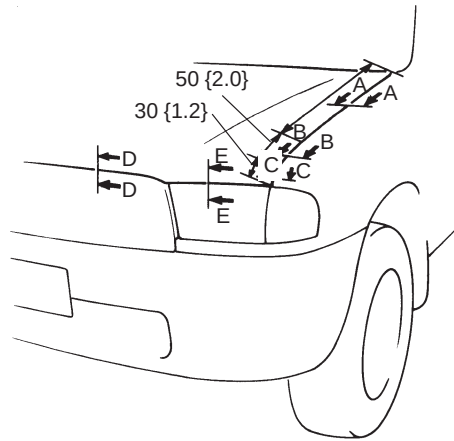

2. If not as specified, adjust the gap and height. (Refer to Gap Adjustment.) (Refer to Height Adjustment.)

Gap Adjustment


1. Loosen the bonnet installation bolts and reposition the bonnet.

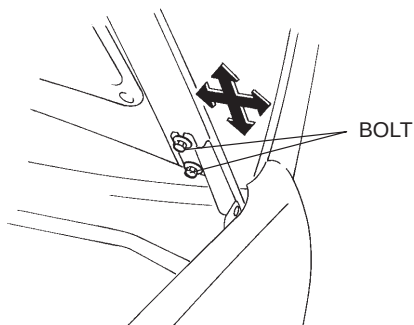

2. Tighten the bonnet installation bolts.

Height Adjustment

1. Loosen the bonnet lock installation bolts and move the bonnet lock to reposition the bonnet.

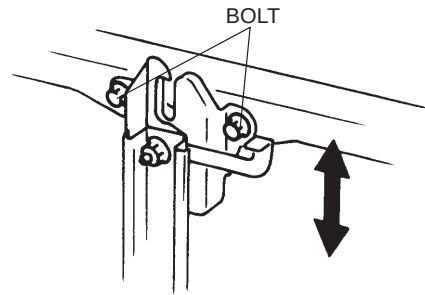


2. Tighten the bonnet lock installation bolts.

FRONT FENDER PANEL

FRONT FENDER PANEL REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the front side turn light.
3. Remove the front bumper.
4. Remove the front turn light.
5. Remove the front flap.
6. Remove in the order indicated in the table.
7. Install in the reverse order of removal.

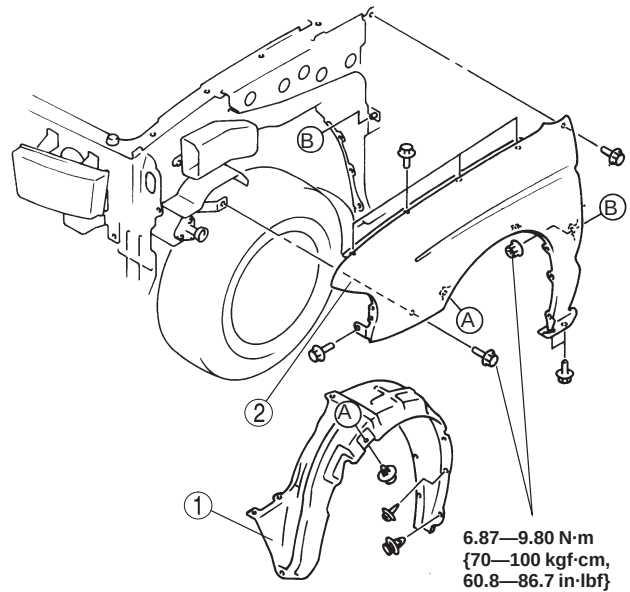


1	Mud guard
2	Front fender panel

DOOR

DOOR

FRONT DOOR REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the door screen. (Refer to FRONT DOOR DISASSEMBLY/ASSEMBLY.)
3. To remove the front door hinge, remove the front fender panel. (Refer to FRONT FENDER PANEL, FRONT FENDER PANEL REMOVAL/INSTALLATION.)
4. To remove the checker, remove the speaker. (Refer to section T, AUDIO, SPEAKER REMOVAL/INSTALLATION.)
5. Remove in the order indicated in the table.
6. Install in the reverse order of removal.
7. Adjust the front door. (Refer to FRONT DOOR ADJUSTMENT.)

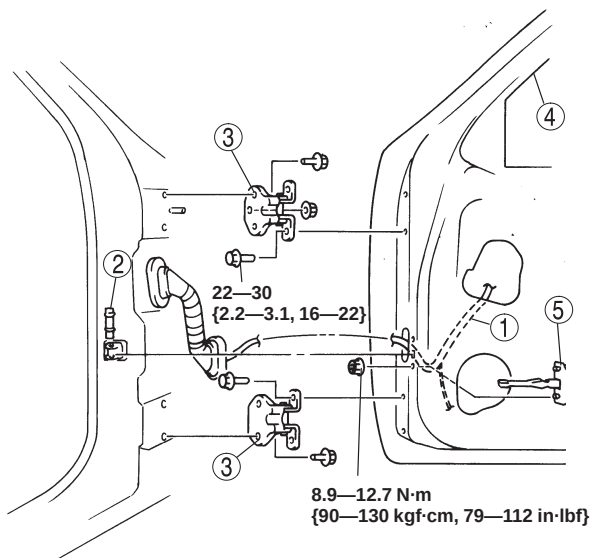

N·m {kgf·m, ft·lbf}


1	Front door harness + Removal Note
2	Checker pin
3	Front door hinge
4	Front door
5	Checker

Front Door Harness Removal Note

1. Disconnect the connectors indicated in the table, if equipped.

Symbol	Connector name	
	Driver's side	Passenger's side
A	Door lock-link switch	Door lock actuator
B	Power window main switch	Power window subswitch
C	Power outside mirror	←
D	Front power window regulator	←
E	Speaker	←

2. Disengage the clips.

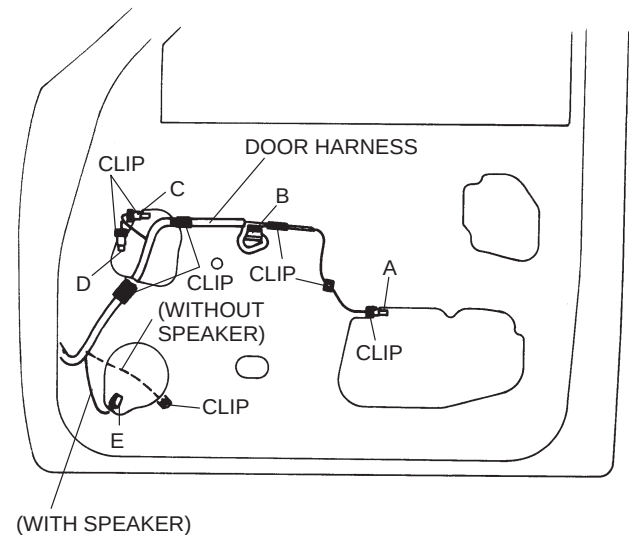

3. Remove the rubber boot and pull out the door harness.