


DOOR


FRONT DOOR DISASSEMBLY/ASSEMBLY

1. Raise the rear edge of the front door glass **80 mm {3.1 in}** from the fully lowered position.
2. Disconnect the negative battery cable.
3. Remove the front door trim. (Refer to TRIM, FRONT DOOR TRIM REMOVAL/INSTALLATION.)
4. To remove the inner handle, peel off the door screen partially.
5. Disassemble in the order indicated in the table.
6. Assemble in the reverse order of disassembly.

WITHOUT POWER WINDOW SYSTEM AND POWER DOOR LOCK SYSTEM

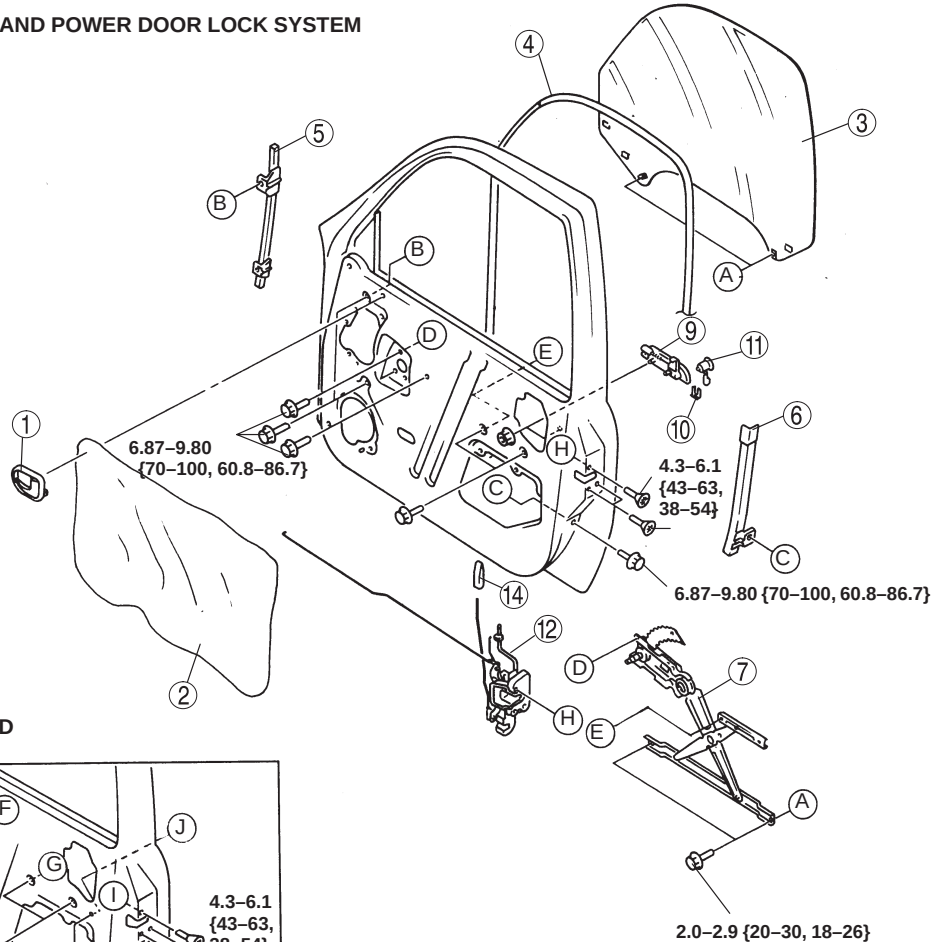

WITH POWER WINDOW SYSTEM AND POWER DOOR LOCK SYSTEM

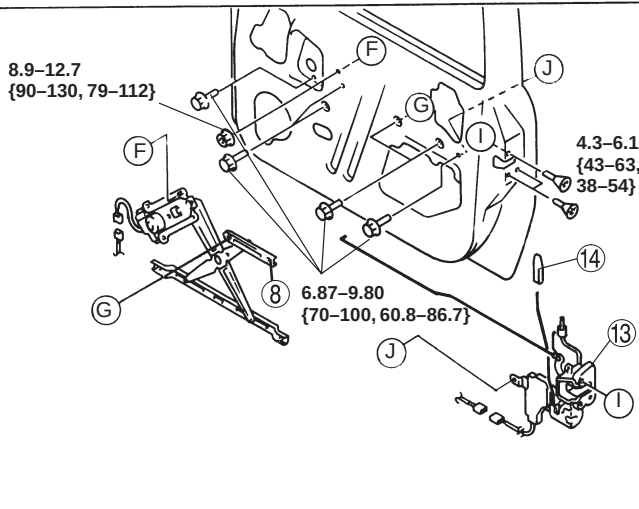

N·m {kgf·cm, in·lbf}

1	Inner handle
2	Door screen
3	Front door glass
4	Glass run channel
5	Front glass guide
6	Rear glass guide
7	Front manual window regulator

8	Front power window regulator
9	Outer handle
10	Retainer
11	Door key cylinder
12	Front door lock (manual)
13	Front door lock (power)
14	Door lock knob



DOOR

FRONT DOOR ADJUSTMENT

1. Measure the clearance between the door and the body.

Clearance

- a: 4.0—6.0 mm {0.16—0.23 in}
- b: -1.5—1.0 mm {-0.059—0.039 in}
- c: -2.0—0.5 mm {-0.078—0.019 in}
- d: 4.5—8.5 mm {0.18—0.33 in}
- e: 1.2 mm {0.047 in}
- f: 3.5—6.5 mm {0.14—0.25 in}
- g: 2.7 mm {0.11 in}
- h: 5.5 mm {0.22 in}

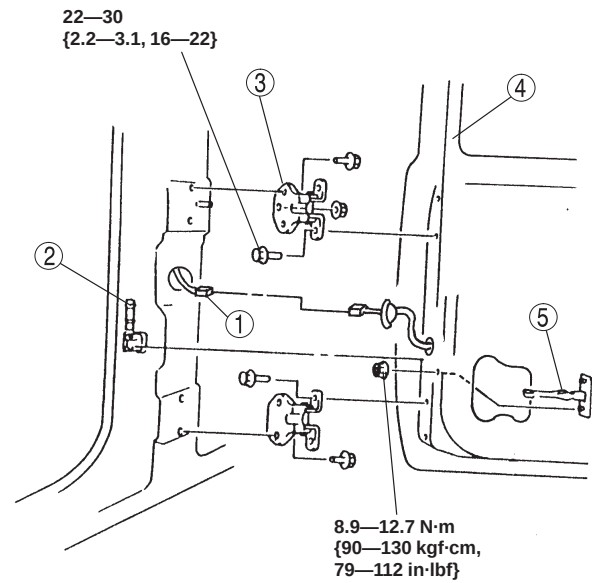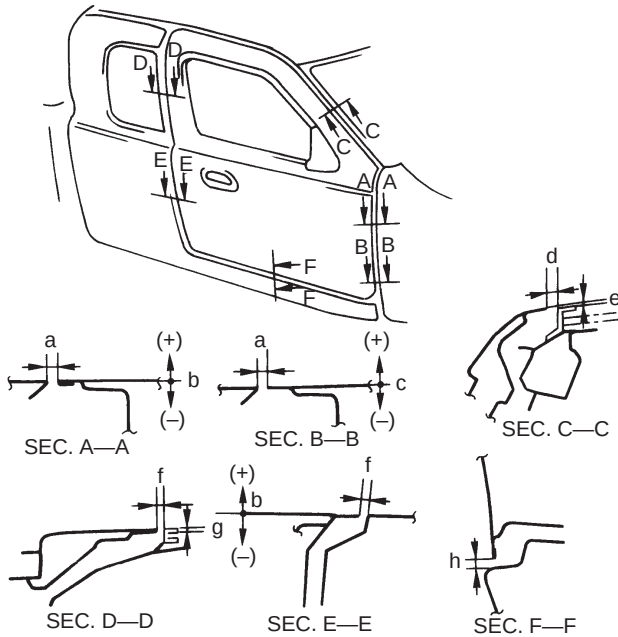

N·m {kgf·m, ft·lbf}

1	Connector
2	Checker pin
3	Rear door hinge
4	Rear door
5	Checker

2. If not as specified, loosen the door hinge installation bolts or the door lock striker installation screws, and move them to reposition the door. (Refer to FRONT DOOR REMOVAL/INSTALLATION.) (Refer to DOOR LOCK STRIKER REMOVAL/INSTALLATION.)
3. Tighten the bolts or the screws.

REAR DOOR REMOVAL/INSTALLATION


1. Disconnect the negative battery cable.
2. Remove the door screen. (Refer to REAR DOOR DISASSEMBLY/ASSEMBLY.)
3. To remove the checker, remove the ashtray bracket. (Refer to REAR DOOR DISASSEMBLY/ASSEMBLY.)
4. Remove in the order indicated in the table.
5. Install in the reverse order of removal.
6. Adjust the rear door. (Refer to REAR DOOR ADJUSTMENT.)

DOOR


REAR DOOR DISASSEMBLY/ASSEMBLY

1. Close the rear door glass completely.
2. Disconnect the negative battery cable.
3. Remove the rear door trim. (Refer to TRIM, REAR DOOR TRIM REMOVAL/INSTALLATION.)
4. Disassemble in the order indicated in the table.
5. Assemble in the reverse order of disassembly.

WITH POWER WINDOW SYSTEM

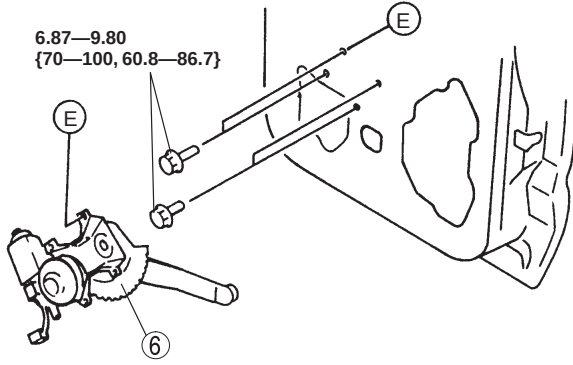

WITHOUT POWER WINDOW SYSTEM

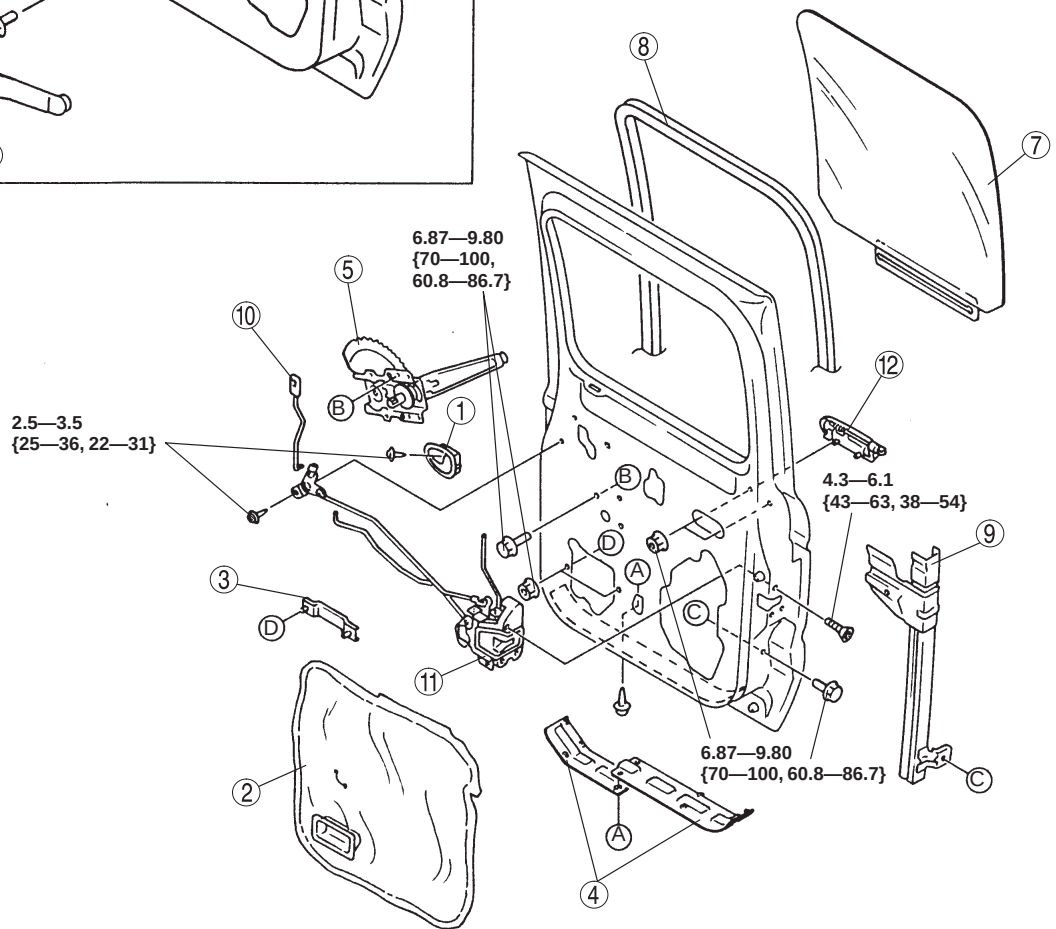

N·m {kgf·cm, in·lbf}


1	Inner handle
2	Door screen
3	Ashtray bracket
4	Glass hole lid
5	Rear manual window regulator
6	Rear power window regulator

7	Rear door glass + Removal Note
8	Glass run channel
9	Glass guide
10	Door lock knob
11	Rear door lock
12	Outer handle

DOOR

Rear Door Glass Removal Note

- Draw out the rear door glass through the glass hole.

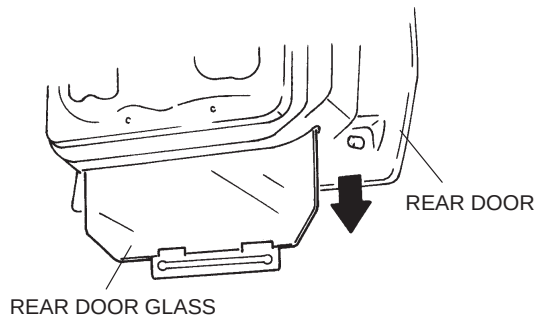


REAR DOOR ADJUSTMENT

1. Measure the clearance between the door and the body.

Clearance


- a: 3.5—6.5 mm {0.14—0.25 in}
- b: -1.5—1.0 mm {-0.059—0.039 in}
- c: 5.5 mm {0.22 in}

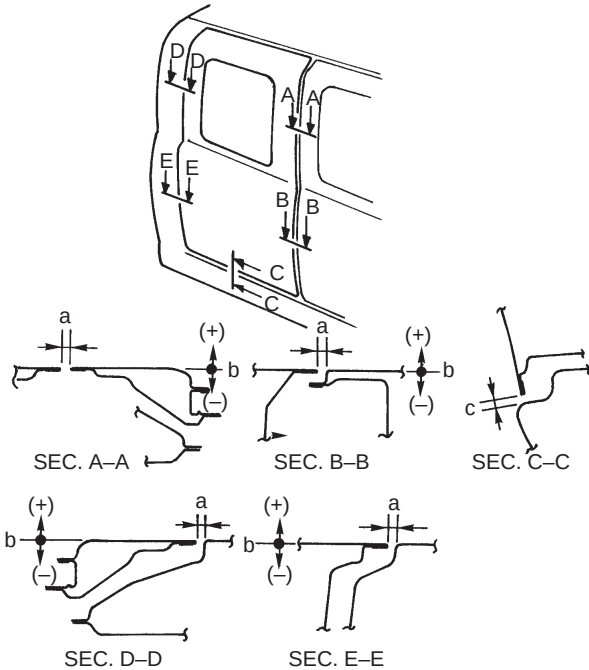

2. If not as specified, loosen the door hinge installation bolts or the door lock striker installation screws, and move them to reposition the door. (Refer to REAR DOOR REMOVAL/INSTALLATION.) (Refer to DOOR LOCK STRIKER REMOVAL/INSTALLATION.)
3. Tighten the bolts or screws.

DOOR LOCK STRIKER REMOVAL/INSTALLATION


1. Remove the screws.
2. Remove the door lock striker.

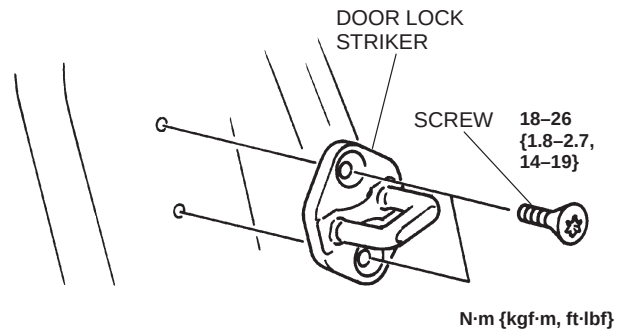

3. Install in the reverse order of removal.

REGULATOR HANDLE REMOVAL

1. Remove the regulator handle clip using a rag as shown.

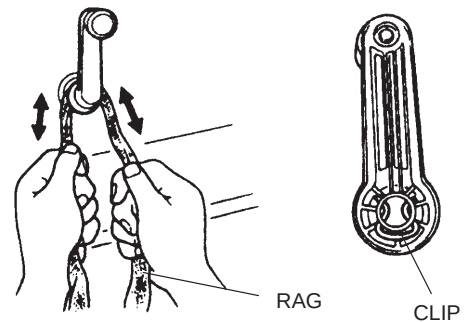

2. Remove the regulator handle.

REGULATOR HANDLE INSTALLATION

1. Install the clip in the regulator handle.
2. Set the door glass at the fully raised position and push the regulator handle on as shown.

