


FUEL-FILLER LID AND OPENER, BUMPER

FUEL-FILLER LID AND OPENER

FUEL-FILLER LID REMOVAL/INSTALLATION

1. Remove as indicated in the table.
2. Install in the reverse order of removal.

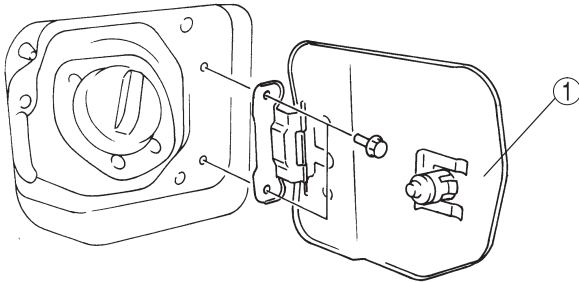


1	Fuel-filler lid
---	-----------------

FUEL-FILLER LID ADJUSTMENT

1. Measure the gap and height between the fuel-filler lid and the body.

Clearance

- a: 3.5—5.5 mm {0.14—0.21 in}
b: -0.5—2.0 mm {-0.01—0.07 in}

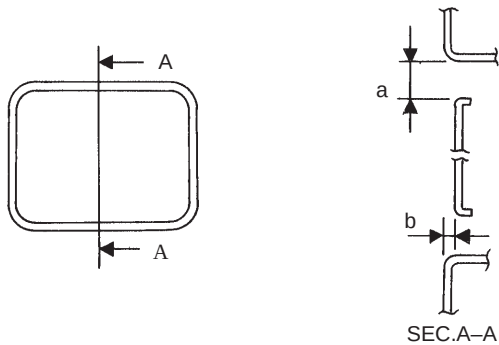


2. If not as specified, loosen the fuel-filler lid installation bolts and reposition the fuel-filler lid.
3. Tighten the fuel-filler lid installation bolts.

BUMPER

FRONT BUMPER REMOVAL/INSTALLATION


1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.

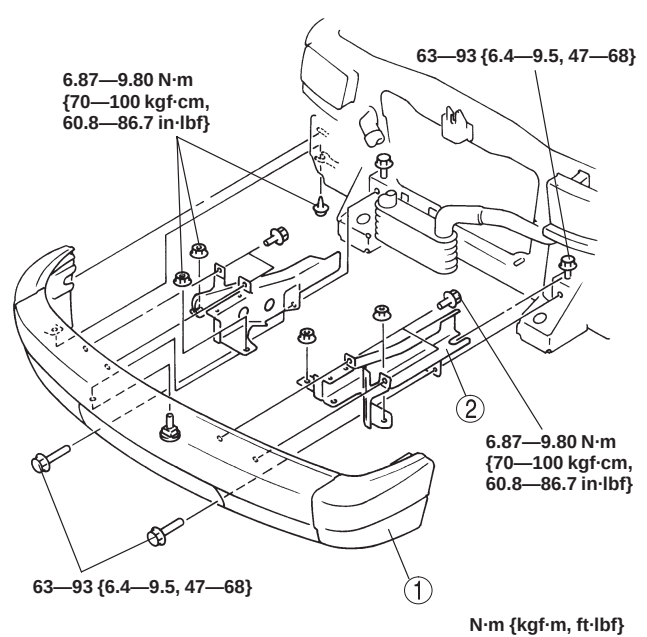

1	Front bumper
2	Front bumper stay

FRONT BUMPER DISASSEMBLY/ASSEMBLY

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

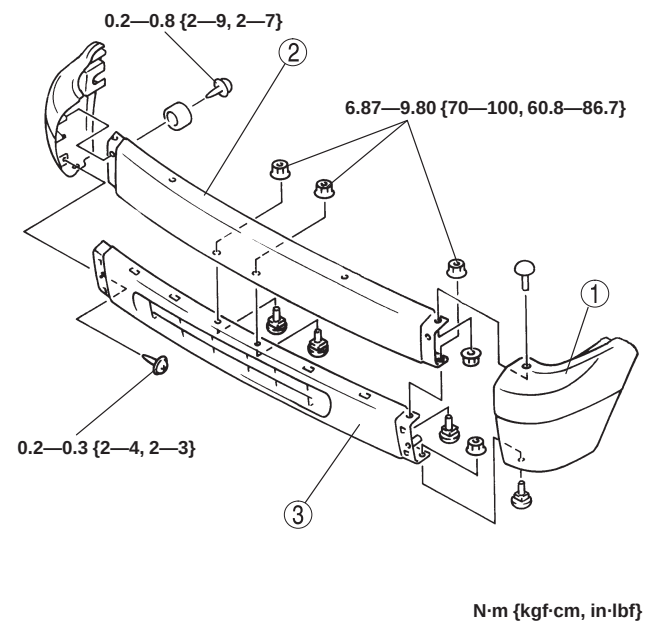

1	Front bumper side fascia
2	Front bumper upper fascia
3	Front bumper lower fascia