


BUMPER

REAR BUMPER REMOVAL/INSTALLATION With Step

1. Remove the bolts, then remove the rear bumper.

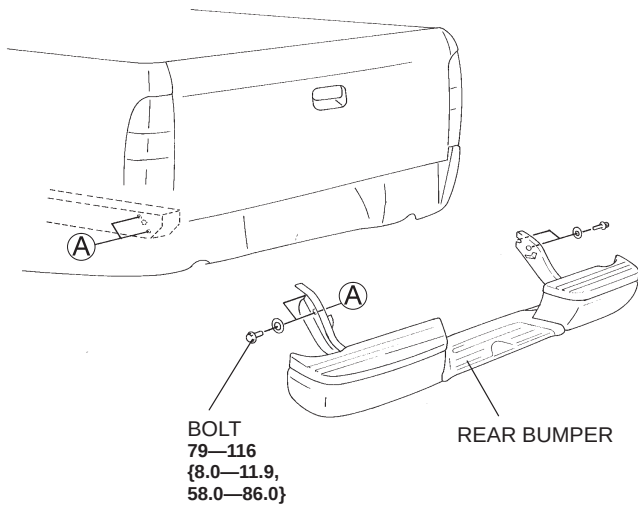


N·m {kgf·m, ft·lbf}

2. Install in the reverse order of removal.

Without Step


1. Disconnect the negative battery cable.
2. Disconnect the rear fog light connector.
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

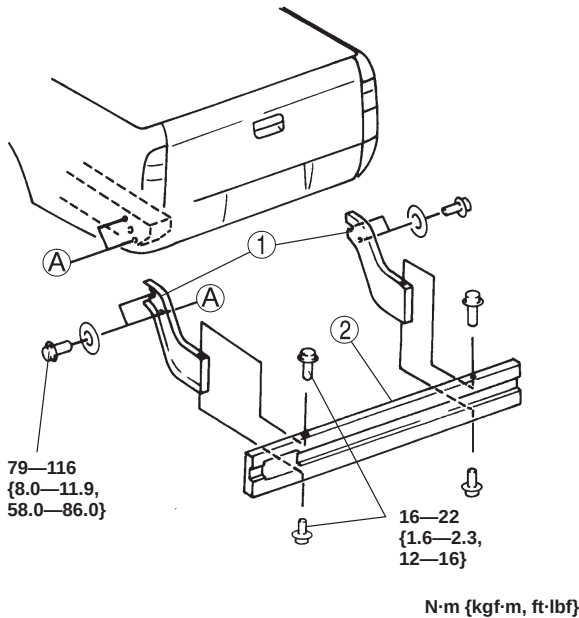

1	Rear bumper stay
3	Rear bumper fascia

REAR BUMPER DISASSEMBLY/ASSEMBLY With Step


1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

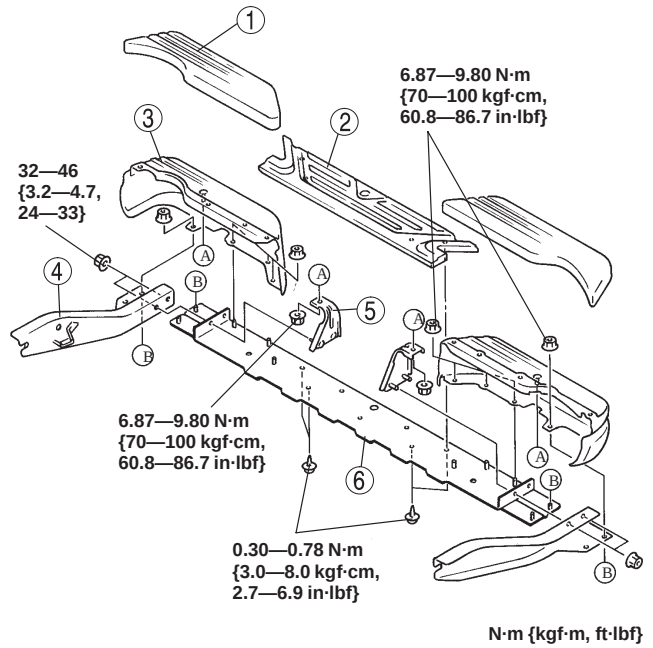

1	Side bumper step + Removal Note
2	Center bumper step + Removal Note
3	Rear bumper fascia
4	Rear bumper stay
5	Rear bracket
6	Set plate

Side Bumper Step Removal Note


1. Disengage clips A using pliers.
2. Pull the side bumper step upward, then remove it.

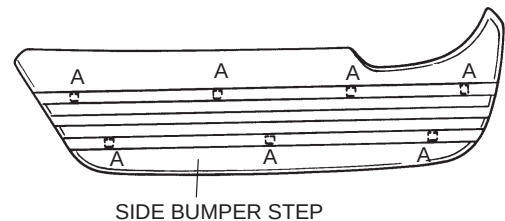

Center Bumper Step Removal Note

1. Remove the screws.
2. Disengage clips A using pliers.
3. Disengage clips B, then remove the center bumper step.


BUMPER, EXTERIOR ATTACHMENT

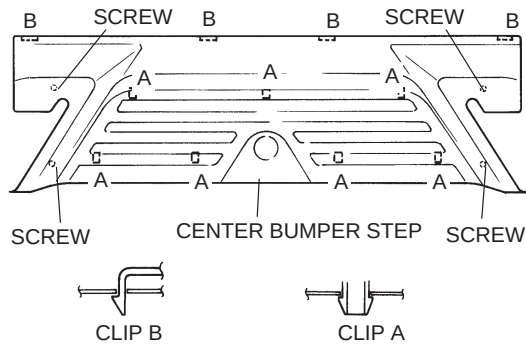

EXTERIOR ATTACHMENT

RADIATOR GRILLE REMOVAL/INSTALLATION


1. Pull the radiator grille toward you, then disengage clips A to remove the radiator grille.

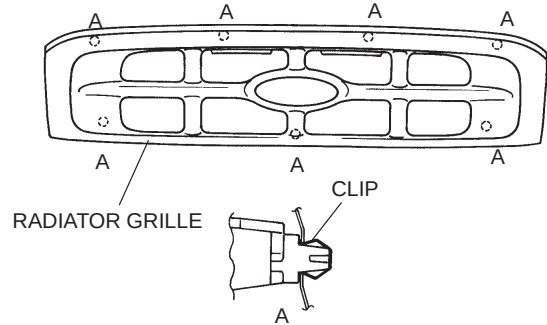

2. Install in the reverse order of removal.

COWL GRILLE REMOVAL/INSTALLATION

1. Remove the windshield wiper arm and blade. (Refer to section T, WIPER AND WASHER, WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
2. Remove the weatherstrip.
3. Remove the screws, then remove the cowl grille.

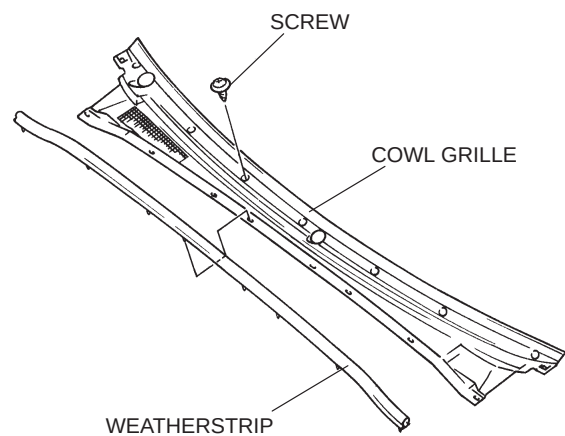

4. Install in the reverse order of removal.

WINDSHIELD GARNISH REMOVAL/INSTALLATION

1. Remove the screws.
2. Pull the windshield garnish upward, then disengage hook A from the cowl grille.