
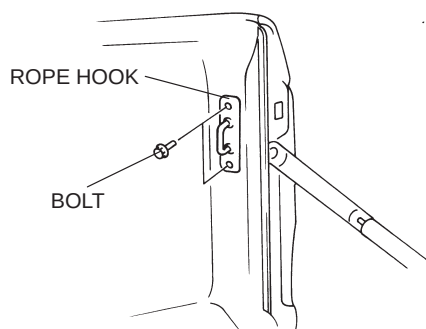


EXTERIOR ATTACHMENT, MOLDING

ROPE HOOK REMOVAL/INSTALLATION

1. Remove the screws and bolts, then remove the rope hook.

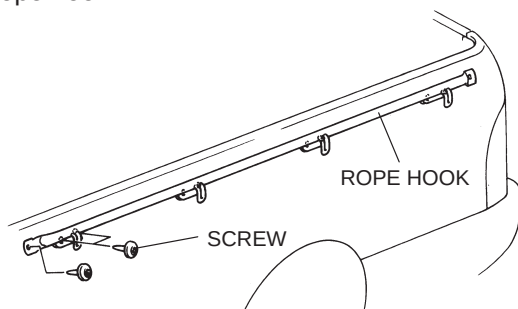

2. Install in the reverse order of removal.

MOLDING

WINDSHIELD UPPER MOLDING REMOVAL

- Remove the windshield upper molding from the windshield. (Refer to WINDOW GLASS, WINDSHIELD REMOVAL.)

WINDSHIELD UPPER MOLDING INSTALLATION

- Install the windshield upper molding to the windshield. (Refer to WINDOW GLASS, WINDSHIELD INSTALLATION.)

WINDSHIELD SIDE MOLDING REMOVAL

- Remove the windshield side molding from the windshield. (Refer to WINDOW GLASS, WINDSHIELD REMOVAL.)


WINDSHIELD SIDE MOLDING INSTALLATION

- Install the windshield side molding to the windshield. (Refer to WINDOW GLASS, WINDSHIELD INSTALLATION.)


FRONT BELTLINE MOLDING REMOVAL/INSTALLATION

1. Lower the front door glass fully.
2. Remove the manual outside mirror or the power outside mirror. (Refer to OUTSIDE MIRROR, MANUAL OUTSIDE MIRROR REMOVAL/INSTALLATION.) (Refer to OUTSIDE MIRROR, POWER OUTSIDE MIRROR REMOVAL/INSTALLATION.)
3. Pull the rear end of the front beltline molding to disengage the hook.

FRONT BELTLINE MOLDING

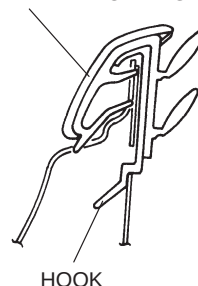

4. Pull the front beltline molding upward, then remove clips A.

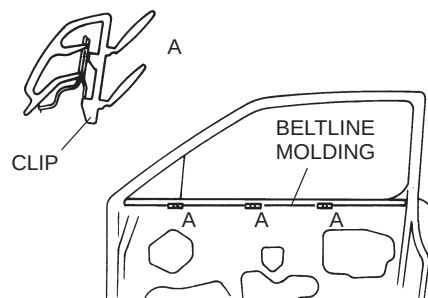


5. Install in the reverse order of removal.


MOLDING, OUTSIDE MIRROR

REAR BELTLINE MOLDING REMOVAL/INSTALLATION

1. Lower the rear door glass fully.
2. Pull the rear end of the rear beltline molding to disengage the hook.

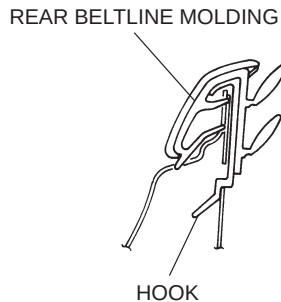


3. Pull the rear beltline molding upward, then remove clips A.

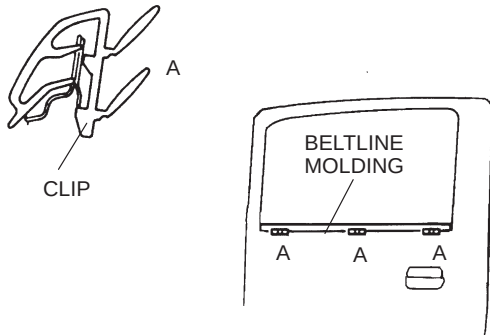

4. Install in the reverse order of removal.

ROOF MOLDING REMOVAL/INSTALLATION

1. Pull the rear edge of roof molding upward, then disengage clips A.

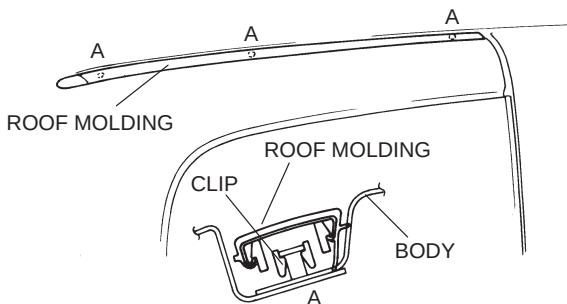


2. Install in the reverse order of removal.

OUTSIDE MIRROR

MANUAL OUTSIDE MIRROR REMOVAL/INSTALLATION


1. Remove the inner garnish.
2. Remove the front door trim. (Refer to TRIM, FRONT DOOR TRIM REMOVAL/INSTALLATION.)
3. Remove the screws.
4. Remove the manual outside mirror.

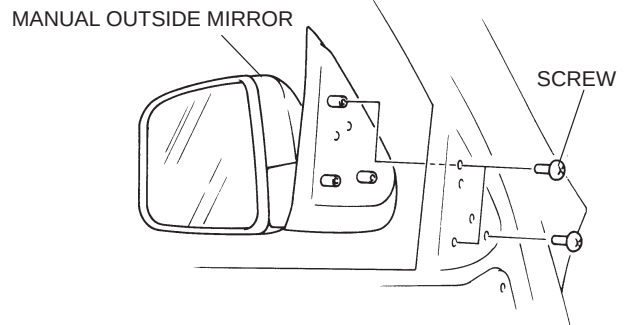

5. Install in the reverse order of removal.

POWER OUTSIDE MIRROR REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the inner garnish.
3. Remove the front door trim. (Refer to TRIM, FRONT DOOR TRIM REMOVAL/INSTALLATION.)
4. Partially peel off the door screen.
5. Disconnect the power outside mirror connector.
6. Remove the screws.
7. Remove the power outside mirror.

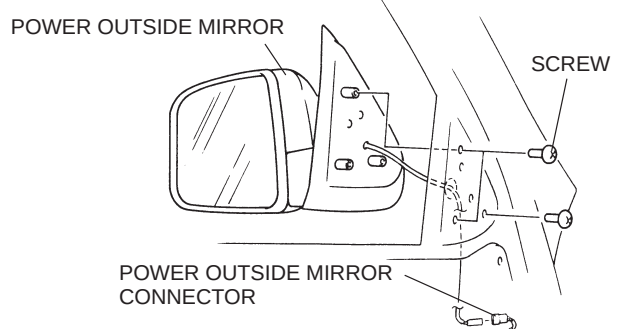

8. Install in the reverse order of removal.

POWER OUTSIDE MIRROR INSPECTION

1. Disconnect the negative battery cable.
2. Remove the inner garnish.
3. Remove the front door trim. (Refer to TRIM, FRONT DOOR TRIM REMOVAL/INSTALLATION.)
4. Partially peel off the door screen.
5. Disconnect the power outside mirror connector.
6. Apply battery positive voltage to the power outside mirror and inspect the operation of the power outside mirror.